




## Safety Information

- Use only the power supply provided with this product or the manufacturer's authorized replacement power supply.
- Connect the power supply cord to an electrical outlet that is near the product and easily accessible.
- Refer service or repairs, other than those described in the user documentation, to a professional service person.


**CAUTION:** Do not use the fax feature during a lightning storm. Do not set up this product or make any electrical or cabling connections, such as the power supply cord or telephone, during a lightning storm.

## 1 Unpack your All-In-One

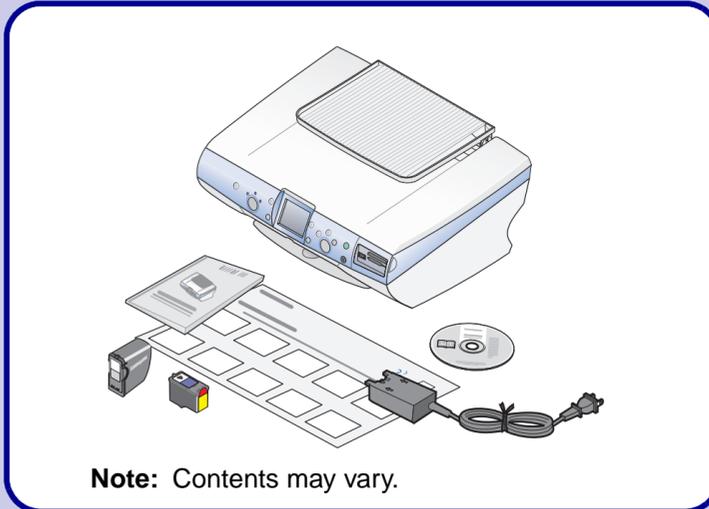

## 2 Prepare your All-In-One


1 Connect the power cord.

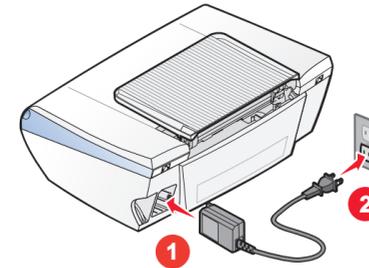

2 Make sure the Power light is on.




3 Press the right arrow button to scroll to your language, and then press **Select**

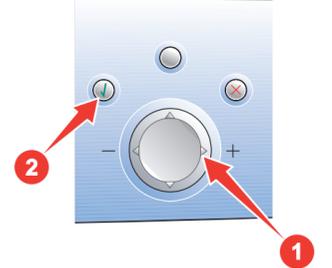


## 3 Load paper


1 Lift the paper support and extend the paper exit tray.

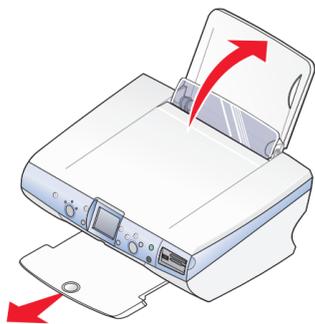

2 Load plain paper.

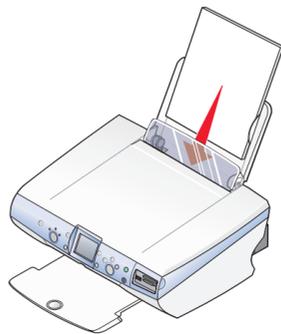


3 Lower the paper feed guard, squeeze the paper guide, and slide it to the left edge of the paper.

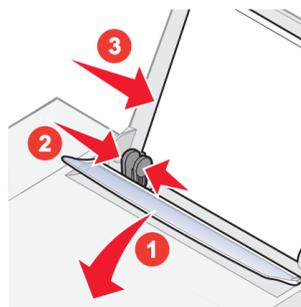


## 4 Prepare the print cartridges

1 Remove the photo cartridge from the print cartridge storage unit.

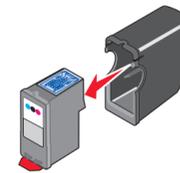


2 Remove the sticker and tape from the print cartridges.

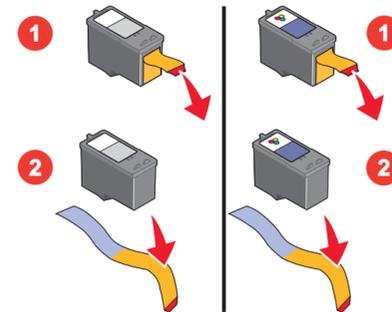


**Warning:** Do not touch the copper contact area on the back or the metal print cartridge nozzles on the bottom.

## 5 Install the print cartridges


1 Lift the scanner unit.

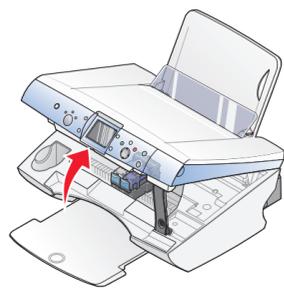


2 Open the cartridge lids, insert the cartridges, and snap the lids closed.

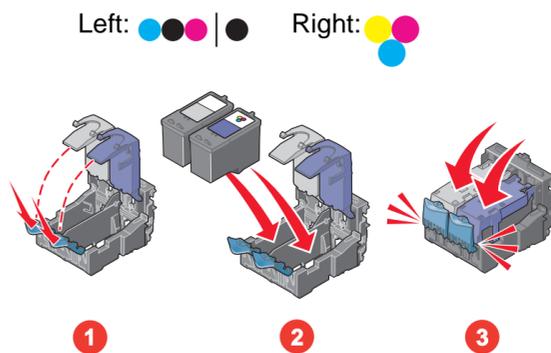

3 Close the scanner unit.

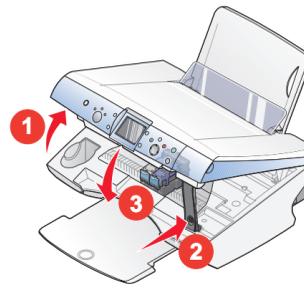


4 Press **Select** to print an alignment page.

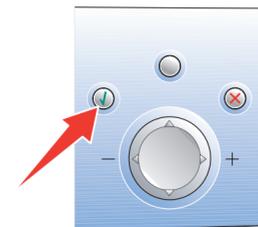


You may discard the alignment page after it prints.

### Cartridge storage

1 Keep a new or partially used cartridge in the storage area of your print cartridge storage unit:

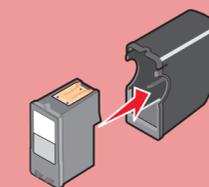

2 Place the stored cartridge in the storage area of your All-In-One.

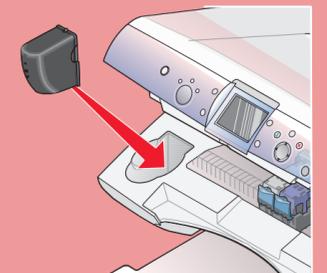

If you are using your All-In-One with a computer, continue with "Install the software"...


# 6 Install the software

## Windows


**1** Make sure your computer is on.



**2** Connect the USB cable.

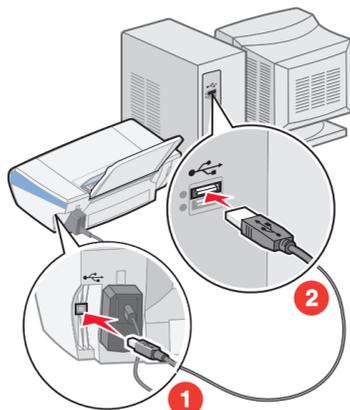

**3** Click **Cancel** on all New Hardware screens.

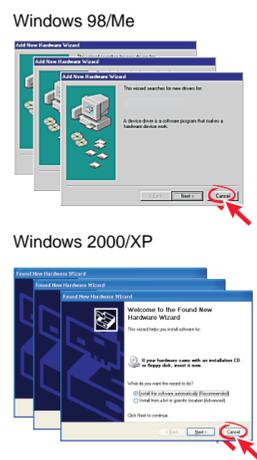


**Note:** Do not continue until all New Hardware windows are canceled.

**To prevent errors during installation:**


- 1 Close all open programs.
- 2 Temporarily disable any anti-virus software. For help, refer to your program documentation, or contact the software manufacturer for support.

**Important:** After installation is complete, remember to re-enable your anti-virus software.

**4** Insert the CD.

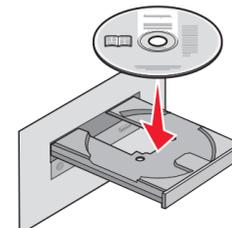

**5** Click **Install** and follow the instructions on your screen to complete the installation.

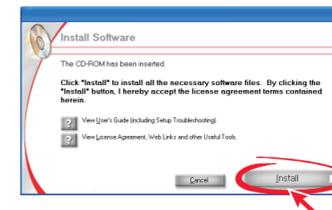

**If this installation screen does not appear:**


- 1 Click Cancel on any New Hardware screens.
- 2 Eject and reinsert the All-In-One software CD. If the All-In-One software install screen does not appear:
  - a From your desktop, double-click **My Computer** (In Windows XP, click **Start** → **My Computer**).
  - b Double-click the CD-ROM drive icon. If necessary, double-click **setup.exe**.
  - c When the All-In-One software installation screen appears, click **Install**.
  - d Follow the instructions on the screen.

## Macintosh

**1** Make sure your computer is on.



**2** Connect the USB cable.

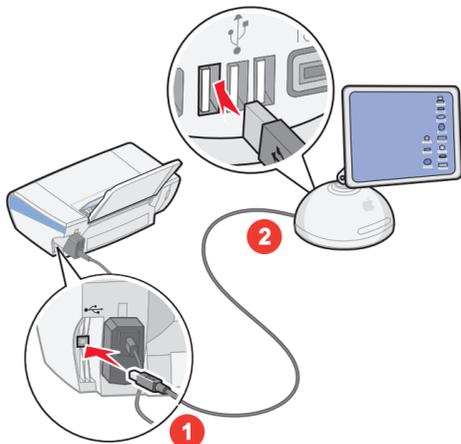


**To prevent errors during installation:**


- 1 Close all open programs.
- 2 Temporarily disable any anti-virus software. For help, refer to your program documentation, or contact the software manufacturer for support.

**Important:** After installation is complete, remember to re-enable your anti-virus software.

**3** Insert the CD.

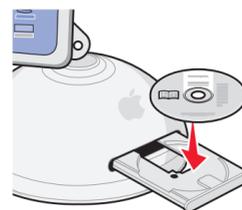

**If the installation screen does not appear automatically, double-click:**

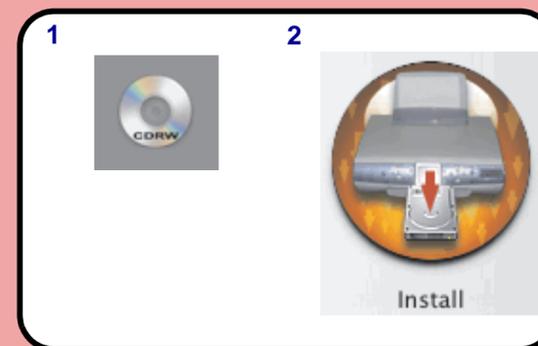

## Setup troubleshooting

Symptom	Diagnosis	Solution
The Power light is not lit	Is the power cord pushed all the way into the All-In-One?	Disconnect the power cord from the wall outlet, and then from the All-In-One. Reconnect the power cord by pushing it all the way into the connector on the All-In-One, and then into the wall outlet.
	Is the All-In-One connected to a working electrical outlet?	Connect the All-In-One to an electrical outlet that other electrical devices have been using.
Software will not install	Is your operating system compatible with the All-In-One?	The All-In-One supports these operating systems: <ul style="list-style-type: none"> <li>• Windows 98, Windows Me, Windows 2000, and Windows XP</li> <li>• Mac OS X versions 10.1.5, 10.2.3–10.2.8, and 10.3.0–10.3.4</li> </ul>
The control panel displays text in the wrong language	Did you select a language?	<ol style="list-style-type: none"> <li>1 Press <b>Menu</b>.</li> <li>2 Press the down arrow button until you reach the last item.</li> <li>3 Press the up arrow button twice.</li> <li>4 Press the right arrow button until the language you want appears on the display.</li> <li>5 Press <b>Select</b>.</li> </ol> <p><b>Note:</b> Press <b>Menu</b> to see the new language displayed.</p>

## Need more ink?

To order cartridges, visit [www.lexmark.com](http://www.lexmark.com).

Photo cartridge	Black cartridge	Color cartridge
• 31	• 32 • 34	• 33 • 35

You can insert a photo cartridge or a black cartridge into the left carrier. You can insert a color cartridge into the right carrier.

## Have a question?

- Refer to your *User's Guide*.
- Visit our Web site: <http://support.lexmark.com/>.
- Call us at 1-800-332-4120.  
Monday–Friday (9:00 AM–9:00 PM EST)  
Saturday (Noon–6:00 PM EST)

**Note:** Phone number and support times may change without notice.

Record the following information (located on your store receipt and the back of your printer) and have it ready when you contact us so that we may serve you faster:

Machine Type number \_\_\_\_\_

Serial number \_\_\_\_\_

Date purchased \_\_\_\_\_

Store where purchased \_\_\_\_\_