

# Menu Map

## Menus list

### Paper Menu

Default Source  
Paper Size/Type  
Configure MP  
Substitute Size  
Paper Texture  
Paper Weight  
Paper Loading  
Custom Types  
Custom Names<sup>1</sup>  
Universal Setup

### Reports

Menu Settings Page  
Device Statistics  
Network Setup Page<sup>2</sup>  
Profiles List  
Print Fonts  
Print Directory  
Print Demo  
Asset Report

### Network/Ports

Active NIC  
Standard Network<sup>3</sup>  
Reports  
Network Card  
TCP/IP  
IPv6  
Wireless  
AppleTalk  
Standard USB  
Parallel<sup>4</sup>  
SMTP Setup

### Security

Miscellaneous Security Settings<sup>4</sup>  
Confidential Print  
Erase Temporary Data Files<sup>4</sup>  
Security Audit Log  
Set Date and Time

### Settings

General Settings  
Flash Drive Menu<sup>4</sup>  
Print Settings

### Help

Print All Guides  
Print Quality  
Media Guide  
Print Defects Guide  
Menu Map  
Information Guide  
Connection Guide  
Moving Guide  
Supplies Guide


<sup>1</sup> This menu appears only in touch-screen printer models.

<sup>2</sup> Depending on the printer setup, this menu item appears as Network Setup Page or Network [x] Setup Page.

<sup>3</sup> Depending on the printer setup, this menu item appears as Standard Network or Network [x].

<sup>4</sup> This feature is available only in select printer models.

## Using the printer control panel

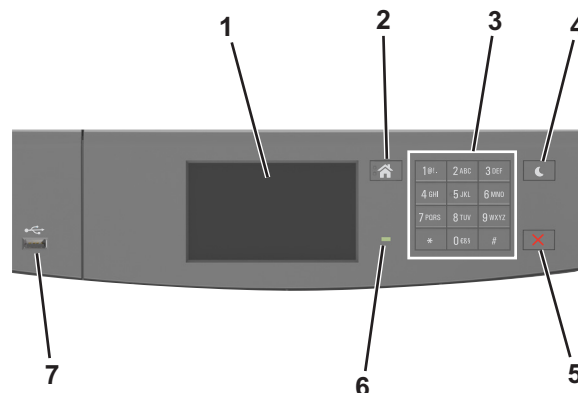

	Use the	To
1	Display	View the printer status and messages. Set up and operate the printer.
2	Home button	Go to the home screen.
3	Keypad	Enter numbers, letters, or symbols.
4	Sleep button	Enable Sleep mode or Hibernate mode. The following actions wake the printer from Sleep mode: <ul style="list-style-type: none"> <li>• Touching the screen</li> <li>• Pressing any hard button</li> <li>• Opening a tray or the front door</li> <li>• Sending a print job from the computer</li> <li>• Performing a power-on reset using the main power switch</li> <li>• Attaching a device to a USB port</li> </ul>
5	Stop or cancel button	Stop all printer activities.
6	Indicator light	Check the status of the printer.
7	USB port	Connect a USB Bluetooth adapter or a flash drive to the printer. <b>Note:</b> Only the front USB port supports flash drives.

## Understanding the colors of the indicator and Sleep button lights

The colors of the indicator and Sleep button lights on the printer control panel signify a certain printer status or condition.

Indicator light	Printer status
Off	The printer is off or in Hibernate mode.
Blinking green	The printer is warming up, processing data, or printing.
Solid green	The printer is on, but idle.
Blinking red	The printer requires user intervention.

Sleep button light	Printer status
Off	The printer is idle or in Ready state.
Solid amber	The printer is in Sleep mode.
Blinking amber	The printer is waking from or entering Hibernate mode.
Blinking amber for 0.1 second, then goes completely off for 1.9 seconds in pulsing pattern	The printer is in Hibernate mode.

## Understanding the home screen

When the printer is turned on, the display shows a basic screen, referred to as the home screen. Use the home screen buttons and icons to initiate an action.

**Note:** Your home screen may vary depending on your home screen customization settings, administrative setup, and active embedded solutions.





Touch		To
1	Change Language	Change the primary language of the printer.
2	Bookmarks	Create, organize, and save a set of bookmarks (URLs) into a tree view of folders and file links. <b>Note:</b> The tree view does not include bookmarks created within Forms and Favorites, and the ones in the tree are not usable in Forms and Favorites.
3	Held Jobs	Display all current held jobs.
4	USB	View, select, or print photos and documents from a flash drive. <b>Note:</b> This icon appears only when you return to the home screen while a memory card or flash drive is connected to the printer.
5	Menus	Access printer menus. <b>Note:</b> These menus are available only when the printer is in ready state.
6	Status message bar	<ul style="list-style-type: none"> <li>Show the current printer status such as <b>Ready</b> or <b>Busy</b>.</li> <li>Show printer conditions such as <b>Imaging unit low</b> or <b>Cartridge Low</b>.</li> <li>Show intervention messages and the instructions on how to clear them.</li> </ul>
7	Status/Supplies	<ul style="list-style-type: none"> <li>Show a printer warning or error message whenever the printer requires intervention to continue processing.</li> <li>View more information on the printer warning or message, and on how to clear it.</li> </ul>
8	Tips	View a context-sensitive help information.

This may also appear on the home screen:

Touch	To
Search Held Jobs	Search current held jobs.
Jobs by user	Access print jobs saved by user.
Profiles and Solutions	Access profiles and solutions.

## Features

Feature	Description
<p>Attendance message alert</p> 	<p>If an attendance message affects a function, then this icon appears and the red indicator light blinks.</p>
<p>Warning</p> 	<p>If an error condition occurs, then this icon appears.</p>
<p>Printer IP address Example: 123 . 123 . 123 . 123</p>	<p>The IP address of your printer is located at the top left corner of the home screen and appears as four sets of numbers separated by periods. You can use the IP address when accessing the Embedded Web Server to view and remotely configure printer settings even when you are not physically near the printer.</p>