

# Menu map

## Menus list

A number of menus are available to make it easy for you to change printer settings. This diagram shows the items available under each menu.

### Supplies

Replace Supply  
Cyan Cartridge  
Magenta Cartridge  
Yellow Cartridge  
Black Cartridge  
Cyan Photoconductor  
Magenta Photoconductor  
Yellow Photoconductor  
Black Photoconductor  
Waste Toner Box  
Fuser  
Transfer Module

### Paper Menu

Default Source  
Paper Size/Type  
Configure MP  
Substitute Size  
Paper Texture  
Paper Weight  
Paper Loading  
Custom Types  
Universal Setup

### Reports

Menu Settings Page  
Device Statistics  
Network Setup Page  
Network <x> Setup Page  
Wireless Setup Page<sup>1</sup>  
Profiles List  
Netware Setup Page  
Print Fonts  
Print Directory  
Asset Report

### Settings

General Settings  
Setup Menu  
Finishing Menu  
Quality Menu  
Utilities Menu  
XPS Menu  
PDF Menu  
PostScript Menu  
PCL Emul Menu  
HTML Menu  
Image Menu  
PictBridge Menu  
Flash Drive Menu

### Security

Miscellaneous Security Setting  
Confidential Print  
Disk Wiping  
Security Audit Log  
Set Date/Time

### Network/Ports

Active NIC  
Standard Network<sup>2</sup>  
Standard USB  
Parallel <x>  
Serial <x>  
SMTP Setup

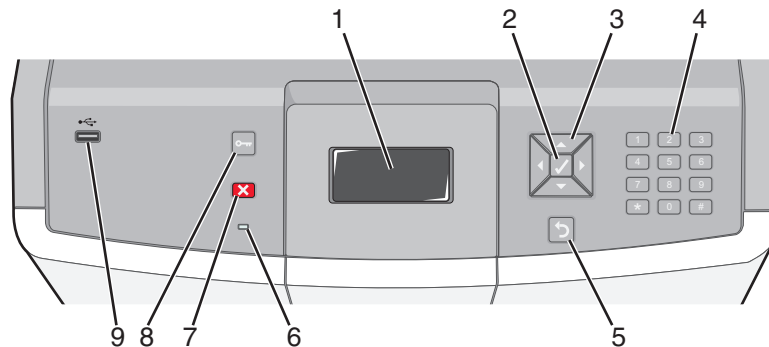 
### Help


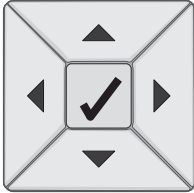 
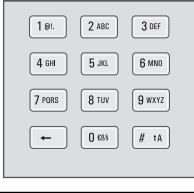 
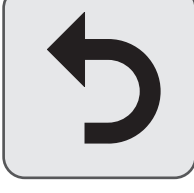 
Print All  
Color Quality  
Print Quality  
Printing Guide  
Media Guide  
Print Defects  
Menu Map  
Information Guide  
Connection Guide  
Moving Guide  
Supplies Guide



<sup>1</sup>Only appears on wireless models.

<sup>2</sup>Depending on the printer setup, this menu item appears as Standard Network, Wireless Network, or Network <x>.

## Understanding the printer control panel



Control panel item		Description	
1	Display		The display shows messages and pictures that communicate the status of the printer.
2	Select		Pressing <input checked="" type="checkbox"/> initiates action on a menu item.
3	Navigation buttons		Press the up or down arrow button to scroll through menu lists. Press the left or right arrow button to scroll through values or text that rolls to another screen.
4	Numeric keypad		Consists of the numbers 0–9, characters A through Z, an <b>↑A</b> , and a backspace button <b>Note:</b> The <b>↑A</b> key functions as Caps Lock.
5	Back		Returns the display to the previous screen
6	Indicator light		Indicates the printer status: <ul style="list-style-type: none"> <li>• Off—The power is off, or the printer is in Eco Mode.</li> <li>• Blinking green—The printer is warming up, processing data, or printing.</li> <li>• Solid green—The printer is on, but idle.</li> <li>• Solid red—Operator intervention is needed.</li> </ul>

Control panel item		Description
7	Stop	 Stops all printer activity A list of options is offered once <b>Stopped</b> appears on the display.
8	Menu	 Opens the menu index <b>Note:</b> These menus are available only when the printer is in the <b>Ready</b> state.
9	USB Direct port	Insert a USB flash drive to send data to the printer. Insert a USB cable from a digital camera to print photos with a PictBridge-enabled digital camera.