

# Menu map

## Menus list

### Supplies Menu

Replace Supply  
 Cyan Cartridge  
 Magenta Cartridge  
 Yellow Cartridge  
 Black Cartridge  
 Cyan Photoconductor  
 Magenta Photoconductor  
 Yellow Photoconductor  
 Black Photoconductor  
 Waste Toner Bottle  
 Fuser  
 Transfer Module

### Paper Menu

Default Source  
 Paper Size/Type  
 Configure MP  
 Substitute Size  
 Paper Texture  
 Paper Weight  
 Paper Loading  
 Custom Types  
 Custom Names  
 Universal Setup

### Reports

Menu Settings Page  
 Device Statistics  
 Network Setup Page  
 Network [x] Setup Page  
 Profiles List  
 Print Fonts  
 Print Directory  
 Asset Report

### Settings

General Settings  
 Flash Drive Menu  
 Print Settings

### Security

Miscellaneous Security Settings  
 Confidential Print  
 Disk Wiping<sup>1</sup>  
 Security Audit Log  
 Set Date and Time

### Network/Ports

Active NIC  
 Standard Network<sup>2</sup>  
 Standard USB  
 Parallel [x]  
 Serial [x]  
 SMTP Setup


### Help

Print All Guides  
 Color Quality  
 Print Quality  
 Printing Guide  
 Media Guide  
 Print Defects Guide  
 Menu Map  
 Information Guide  
 Connection Guide  
 Moving Guide  
 Supplies Guide

<sup>1</sup> This menu appears only when a printer hard disk is installed.

<sup>2</sup> Depending on the printer setup, this menu appears as Standard Network, Wireless Network, or Network [x].

## Using the touch-screen printer control panel

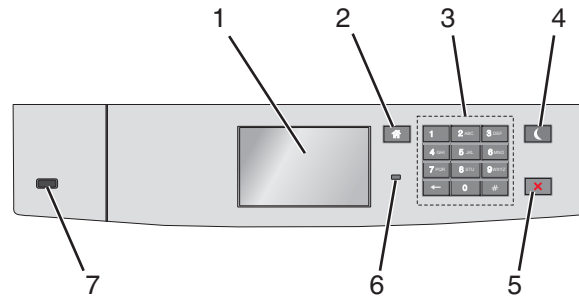

Use the		To
1	Display	Show the printer status. Allow printer setup and operation.
2	Home button	Return to the home screen.
3	Keypad	Enter numbers, letter, or symbols.
4	Sleep button	<p>Enable Sleep mode.</p> <p>The following are the statuses based on the indicator light and the Sleep button:</p> <ul style="list-style-type: none"> <li>• Entering or waking from Sleep mode <ul style="list-style-type: none"> <li>– The indicator light is illuminated solid green.</li> <li>– The sleep button is unilluminated.</li> </ul> </li> <li>• Operating in Sleep mode <ul style="list-style-type: none"> <li>– The indicator light is illuminated solid green.</li> <li>– The sleep button is illuminated solid amber.</li> </ul> </li> <li>• Entering or waking from Hibernate mode <ul style="list-style-type: none"> <li>– The indicator light is illuminated solid green.</li> <li>– The sleep button is illuminated blinking amber.</li> </ul> </li> <li>• Operating in Hibernate mode <ul style="list-style-type: none"> <li>– The indicator light is unilluminated.</li> <li>– The sleep button is blinking amber for 0.1 of a second, then goes completely unilluminated for 1.9 seconds in pulsing pattern.</li> </ul> </li> </ul> <p>The following actions wake the printer from Sleep mode:</p> <ul style="list-style-type: none"> <li>• Touching the screen or pressing any hard button</li> <li>• Opening Tray 1 or loading paper in the multipurpose feeder</li> <li>• Opening a door or cover</li> <li>• Sending a print job from the computer</li> <li>• Performing a power-on reset with the main power switch</li> <li>• Attaching a device to a USB port</li> </ul>
5	Stop/Cancel button	<p>Stop all printer activity.</p> <p><b>Note:</b> A list of options is displayed when <b>Stopped</b> appears on the display.</p>

Use the	To
6 Indicator light	Check the status of the printer. <ul style="list-style-type: none"> <li>• <b>Off</b>—The printer is off.</li> <li>• <b>Blinking green</b>—The printer is warming up, processing data, or printing.</li> <li>• <b>Solid green</b>—The printer is on, but idle.</li> <li>• <b>Blinking red</b>—The printer requires operator intervention.</li> </ul>
7 USB port	Connect a flash drive to the printer.

## Understanding the home screen

When the printer is turned on, the display shows a basic screen, referred to as the home screen. Use the home screen buttons and icons to initiate an action.

**Note:** Your home screen, icons, and the buttons may vary depending on your home screen customization settings, administrative setup, and active embedded solutions.





Touch	To
1 Change Language	Change the primary language of the printer.
2 Bookmarks	Create, organize, and save a set of bookmarks (URLs) into a tree view of folders and file links. <p><b>Note:</b> The tree view does not include bookmarks created within Forms and Favorites, and the ones in the tree are not usable in Forms and Favorites.</p>
3 Held Jobs	Display all current held jobs.
4 USB or USB Thumbdrive	View, select, or print photos and documents from a flash drive. <p><b>Note:</b> This icon appears only when you return to the home screen while a memory card or flash drive is connected to the printer.</p>
5 Menus	Access printer menus. <p><b>Note:</b> These menus are available only when the printer is in the Ready state.</p>
6 Status message bar	<ul style="list-style-type: none"> <li>• Show the current printer status such as <b>Ready</b> or <b>Busy</b>.</li> <li>• Show printer conditions such as <b>Fuser missing</b> or <b>Cartridge Low</b>.</li> <li>• Show intervention messages and the instructions on how to clear them.</li> </ul>

Touch		To
7	Status/Supplies	<ul style="list-style-type: none"> <li>• Display a warning or error message whenever the printer requires intervention to continue processing.</li> <li>• Access the messages screen for more information on the message, and how to clear it.</li> </ul>
8	Tips	View a context-sensitive help information.

This may also appear on the home screen:

Touch	To
Search Held Jobs	Search current held jobs.

## Features

Feature	Description
Attendance message alert 	If an attendance message affects a function, then this icon appears and the red indicator light blinks.
Warning 	If an error condition occurs, then this icon appears.
Printer IP address Example: 123 . 123 . 123 . 123	The IP address of your network printer is located at the top left corner of the home screen and appears as four sets of numbers separated by periods. You can use the IP address when accessing the Embedded Web Server so you can view and remotely configure printer settings even when you are not physically near the printer.