

# **CX310 Series**

### **User's Guide**

September 2014 www.lexmark.com

Machine type(s):

7527

Model(s):

211, 231

Contents 2

# **Contents**

Safety information	6
Learning about the printer	8
Finding information about the printer	
Selecting a location for the printer	
Printer configurations	10
Understanding the basic functions of the scanner	11
Using the ADF and scanner glass	12
Using the printer control panel	12
Understanding the colors of the Sleep button and indicator lights	13
Additional printer setup	14
Installing internal options	14
Installing hardware options	20
Attaching cables	22
Setting up the printer software	23
Networking	24
Verifying printer setup	28
Loading paper and specialty media	29
Setting the paper size and type	29
Configuring Universal paper settings	29
Loading the 250-sheet tray	29
Loading the manual feeder	32
Loading the 650-sheet duo tray	33
Loading the multipurpose feeder	34
Linking and unlinking trays	37
Paper and specialty media guide	40
Using specialty media	40
Paper guidelines	43
Supported paper sizes, types, and weights	46
Printing	50
Printing a document	50

Printing from a mobile device	52
Printing confidential and other held jobs	52
Printing information pages	54
Canceling a print job	54
Copying	55
Making copies	55
Copying photos	56
Copying on specialty media	56
Customizing copy settings	58
Placing information on copies	62
Canceling a copy job	63
Understanding the copying options	63
E-mailing	66
Setting up the printer to e-mail	66
Creating an e-mail shortcut	67
E-mailing a document	67
Canceling an e-mail	68
Scanning	69
Scanning to an FTP address	69
Scanning to a computer	71
Understanding the printer menus	73
Menus list	73
Supplies menu	74
Paper menu	74
Reports menu	84
Network/Ports	84
Security menu	92
Settings menu	94
Saving money and the environment	121
Saving paper and toner	121
Saving energy	
Recycling	125

Securing the printer	127
Using the security lock feature	127
Statement of Volatility	127
Erasing volatile memory	128
Erasing non-volatile memory	128
Finding printer security information	128
Maintaining the printer	129
Storing supplies	129
Cleaning printer parts	129
Checking the status of parts and supplies	131
Estimated number of remaining pages	131
Ordering supplies	132
Replacing supplies	134
Moving the printer	152
Managing the printer	154
Finding advanced networking and administrator information	154
Checking the virtual display	154
Setting up e-mail alerts	154
Viewing reports	154
Configuring supply notifications from the Embedded Web Server	155
Copying printer settings to other printers	156
Restoring factory default settings	156
Clearing jams	157
Avoiding jams	157
Understanding jam messages and locations	158
[x]-page jam, clear standard bin [203.xx]	160
[x]-page jam, open front door to clear fuser [202.xx]	163
[x]-page jam, open front door [20y.xx]	166
[x]-page jam, open front door to clear duplex [23y.xx]	167
[x]-page jam, open tray [x] [24y.xx]	168
[x]-page jam, clear manual feeder [251.xx]	169
[x]-page jam, clear multipurpose feeder [250.xx]	170
[x]-page jam, open automatic feeder top cover. [28y.xx]	171

Troubleshooting	173
Understanding the printer messages	173
Solving printer problems	186
Solving print problems	192
Solving copy problems	218
Solving scanner problems	221
Embedded Web Server does not open	225
Contacting customer support	227
Notices	228
Product information	228
Edition notice	228
Power consumption	232
Index	242

Safety information 6

# **Safety information**

Connect the power cord directly to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.



**CAUTION—POTENTIAL INJURY:** Do not use this product with extension cords, multioutlet power strips, multioutlet extenders, or other types of surge or UPS devices. The power rating capacity of these types of accessories can be easily overloaded by a laser printer and may result in poor printer performance, property damage, or potential fire.

Do not place or use this product near water or wet locations.



**CAUTION—POTENTIAL INJURY:** This product uses a laser. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

This product uses a printing process that heats the print media, and the heat may cause the media to release emissions. You must understand the section in your operating instructions that discusses the guidelines for selecting print media to avoid the possibility of harmful emissions.



**CAUTION—HOT SURFACE:** The inside of the printer might be hot. To reduce the risk of injury from a hot component, allow the surface to cool before touching.



**CAUTION—POTENTIAL INJURY:** The lithium battery in this product is not intended to be replaced. There is a danger of explosion if a lithium battery is incorrectly replaced. Do not recharge, disassemble, or incinerate a lithium battery. Discard used lithium batteries according to the manufacturer's instructions and local regulations.



**CAUTION—POTENTIAL INJURY:** The printer weight is greater than 18 kg (40 lb) and requires two or more trained personnel to lift it safely.



**CAUTION—POTENTIAL INJURY:** Before moving the printer, follow these guidelines to avoid personal injury or printer damage:

- Turn the printer off using the power switch, and then unplug the power cord from the electrical outlet.
- Disconnect all cords and cables from the printer before moving it.
- Lift the printer off the optional tray, and then set it aside instead of trying to lift the tray and printer at the same time.

**Note:** Use the handholds located on both sides of the printer to lift it.

Use only the power cord provided with this product or the manufacturer's authorized replacement.

Use only the telecommunications (RJ-11) cord provided with this product or a 26 AWG or larger replacement when connecting this product to the public switched telephone network.



**CAUTION—SHOCK HAZARD:** If you are accessing the controller board or installing optional hardware or memory devices sometime after setting up the printer, then turn the printer off, and unplug the power cord from the electrical outlet before continuing. If you have any other devices attached to the printer, then turn them off as well, and unplug any cables going into the printer.



**CAUTION—SHOCK HAZARD:** Make sure that all external connections (such as Ethernet and telephone system connections) are properly installed in their marked plug-in ports.

This product is designed, tested, and approved to meet strict global safety standards with the use of specific manufacturer's components. The safety features of some parts may not always be obvious. The manufacturer is not responsible for the use of other replacement parts.

Safety information 7



**CAUTION—POTENTIAL INJURY:** Do not cut, twist, bind, crush, or place heavy objects on the power cord. Do not subject the power cord to abrasion or stress. Do not pinch the power cord between objects such as furniture and walls. If any of these things happen, a risk of fire or electrical shock results. Inspect the power cord regularly for signs of such problems. Remove the power cord from the electrical outlet before inspecting it.

Refer service or repairs, other than those described in the user documentation, to a service representative.



**CAUTION—SHOCK HAZARD:** To avoid the risk of electrical shock when cleaning the exterior of the printer, unplug the power cord from the electrical outlet and disconnect all cables from the printer before proceeding.



**CAUTION—TIPPING HAZARD:** Floor-mounted configurations require additional furniture for stability. You must use either a printer stand or printer base if you are using multiple input options. If you purchased a multifunction printer (MFP) that scans, copies, and faxes, then you may need additional furniture. For more information, see <a href="https://www.lexmark.com/multifunctionprinters">www.lexmark.com/multifunctionprinters</a>.



**CAUTION—POTENTIAL INJURY:** To reduce the risk of equipment instability, load each tray separately. Keep all other trays closed until needed.

SAVE THESE INSTRUCTIONS.

# **Learning about the printer**

# Finding information about the printer

What are you looking for?	Find it here
Initial setup instructions:  Connecting the printer Installing the printer software	Setup documentation—The setup documentation came with the printer and is also available at <a href="http://support.lexmark.com">http://support.lexmark.com</a> .
Additional setup and instructions for using the printer:  • Selecting and storing paper and specialty media  • Loading paper  • Configuring printer settings  • Viewing and printing documents and photos  • Setting up and using the printer software  • Configuring the printer on a network  • Caring for and maintaining the printer  • Troubleshooting and solving problems	User's Guide and Quick Reference Guide—The guides are available at <a href="http://support.lexmark.com">http://support.lexmark.com</a> .  Note: These guides are also available in other languages.
Information on setting up and configuring the accessibility features of your printer	Lexmark Accessibility Guide—This guide is available at <a href="http://support.lexmark.com">http://support.lexmark.com</a> .
Help using the printer software	Windows or Mac Help—Open a printer software program or application, and then click Help.  Click  to view context-sensitive information.  Notes:  Help is automatically installed with the printer software.  The printer software is located in the printer program folder or on the desktop, depending on your operating system.

What are you looking for?	Find it here
The latest supplemental information, updates, and customer support:	Lexmark support Web site— http://support.lexmark.com
Documentation     Driver downloads	<b>Note:</b> Select your country or region, and then select your product to view the appropriate support site.
<ul> <li>Live chat support</li> <li>E-mail support</li> <li>Voice support</li> </ul>	Support telephone numbers and hours of operation for your country or region can be found on the support Web site or on the printed warranty that came with your printer.
	Record the following information (located on the store receipt and at the back of the printer), and have it ready when you contact customer support so that they may serve you faster:
	Machine Type number
	Serial number
	Date purchased
	Store where purchased
Warranty information	Warranty information varies by country or region:
	<ul> <li>In the U.S.—See the Statement of Limited Warranty included with this printer, or go to <a href="http://support.lexmark.com">http://support.lexmark.com</a>.</li> </ul>
	In other countries and regions—See the printed warranty that came with this printer.

### Selecting a location for the printer




**CAUTION—POTENTIAL INJURY:** The printer weight is greater than 18 kg (40 lb) and requires two or more trained personnel to lift it safely.

When selecting a location for the printer, leave enough room to open trays, covers, and doors. If you plan to install any options, then leave enough room for them also. It is important to:

- Set up the printer near a properly grounded and easily accessible electrical outlet.
- Make sure airflow in the room meets the latest revision of the ASHRAE 62 standard or the CEN Technical Committee 156 standard.
- Provide a flat, sturdy, and stable surface.
- Keep the printer:
  - Clean, dry, and free of dust.
  - Away from stray staples and paper clips.
  - Away from the direct airflow of air conditioners, heaters, or ventilators.
  - Free from direct sunlight and humidity extremes.
- Observe the recommended temperatures and avoid fluctuations:

Ambient temperature	15.6 to 32.2°C (60 to 90°F)
Storage temperature	-40 to 43°C (-40 to 110°F)

Allow the following recommended amount of space around the printer for proper ventilation:

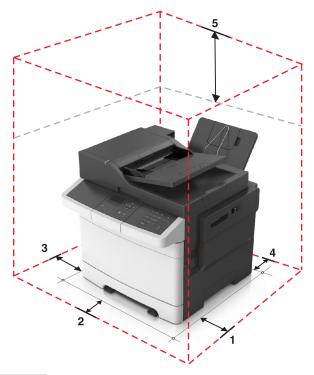


1	Right side	304.8 mm (12 in.)
2	Front	508 mm (20 in.)
3	Left side	76.2 (3 in.)
4	Rear	101.6 mm (4 in.)
5	Тор	291.7 mm (11.5 in.)

### **Printer configurations**



**CAUTION—TIPPING HAZARD:** Floor-mounted configurations require additional furniture for stability. You must use either a printer stand or printer base if you are using multiple input options. If you purchased a multifunction printer (MFP) that scans, copies, and faxes, then you may need additional furniture. For more information, see <a href="https://www.lexmark.com/multifunctionprinters">www.lexmark.com/multifunctionprinters</a>.

#### **Basic models**

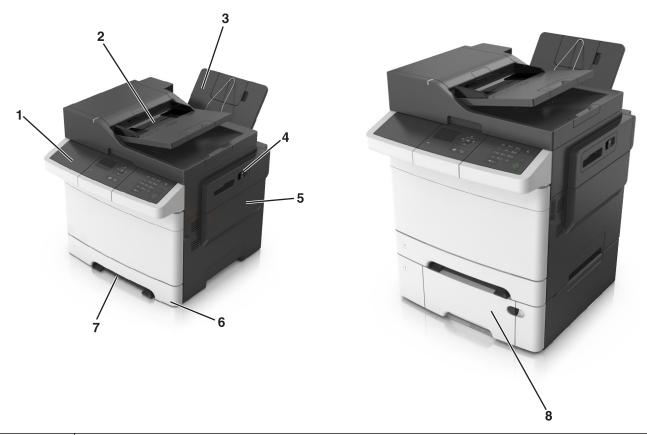


1	Printer control panel
2	Automatic document feeder (ADF)
3	Standard bin
4	Top door latch
5	Right side cover
6	Standard 250-sheet tray (Tray 1)
7	Manual feeder
8	Optional 650-sheet duo tray with integrated multipurpose feeder (Tray 2)

# Understanding the basic functions of the scanner

- Make quick copies or set the printer to perform specific copy jobs.
- Scan documents and send them to your computer, an e-mail address, or an FTP destination.
- Scan documents and send them to another printer (PDF through an FTP).

### Using the ADF and scanner glass

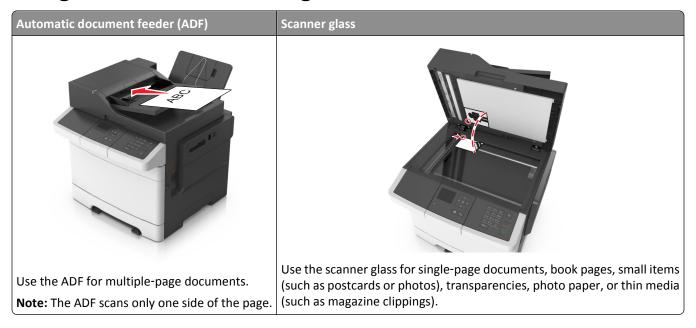

#### Using the ADF


- Load the document into the ADF tray faceup, short edge first.
- Load up to 50 sheets of plain paper into the ADF tray.
- Scan sizes from 105 x 148 mm (4.1 x 5.8 inches) wide to 216 x 368 mm (8.5 x 14.5 inches) long.
- Scan media weights from 52 to 120 g/m² (14–32 lb).
- Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.

### Using the scanner glass

When using the scanner glass:

- Place the document facedown on the scanner glass in the corner with the green arrow.
- Scan or copy documents up to 216 x 296.9 mm (8.5 x 11.69 inches).
- Copy books up to 12.7 mm (0.5 inch) thick.

### Using the printer control panel

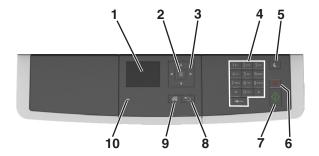

	Use the	То	
1	Display	<ul><li>View printing, copying, e-mailing, and scanning options.</li><li>View printer status and error messages.</li></ul>	
2	Select button	<ul><li>Select menu options.</li><li>Save settings.</li></ul>	
3	Arrow buttons	Scroll through menus or settings on the display.	
4	Keypad	Enter numbers, letters, or symbols.	
5	Sleep button	Enable Sleep mode or Hibernate mode.	
6	Cancel button	Stop all printer activity.	
7	Start button	Start a job, depending on which mode is selected.	
8	Back button	Return to the previous screen.	
9	Home button	Go to the home screen.	
10	Indicator light	Check the status of the printer.	

# Understanding the colors of the Sleep button and indicator lights

The colors of the Sleep button and indicator lights on the printer control panel signify a certain printer status or condition.

Indicator light	Printer status
Off	The printer is off or in Hibernate mode.
Blinking green	The printer is warming up, processing data, or printing.
Solid green	The printer is on, but idle.
Blinking red	The printer requires user intervention.

Sleep button light	Printer status
Off	The printer is off, idle or in Ready state.
Solid amber	The printer is in Sleep mode.
Blinking amber	The printer is entering or waking from Hibernate mode.
Blinking amber for 0.1 second, then goes completely off for 1.9 seconds in a slow, pulsing pattern	The printer is in Hibernate mode.

# **Additional printer setup**

### **Installing internal options**



**CAUTION—SHOCK HAZARD:** If you are accessing the controller board or installing optional hardware or memory devices sometime after setting up the printer, then turn the printer off, and unplug the power cord from the electrical outlet before continuing. If you have any other devices attached to the printer, then turn them off as well, and unplug any cables going into the printer.

**Warning—Potential Damage:** Controller board electronic components are easily damaged by static electricity. Touch something metal on the printer before touching any controller board electronic components or connectors.

### **Available internal options**

- Memory card
  - DDR3 DIMM
- Flash memory
  - Fonts
  - Firmware
    - Forms and Barcode
    - Prescribe
    - IPDS

#### Accessing the controller board

4

**CAUTION—SHOCK HAZARD:** If you are accessing the controller board or installing optional hardware or memory devices sometime after setting up the printer, then turn the printer off, and unplug the power cord from the electrical outlet before continuing. If you have any other devices attached to the printer, then turn them off as well, and unplug any cables going into the printer.

**1** Access the controller board at the back of the printer.

Note: This task requires a flat-head screwdriver.

**2** Turn the screws counterclockwise to remove them.




3 Slightly open the controller board access cover, and then shift to the right to remove it.




**4** Locate the appropriate connector on the controller board.


**Warning—Potential Damage:** Controller board electronic components are easily damaged by static electricity. Touch something metal on the printer before touching any controller board electronic components or connectors.

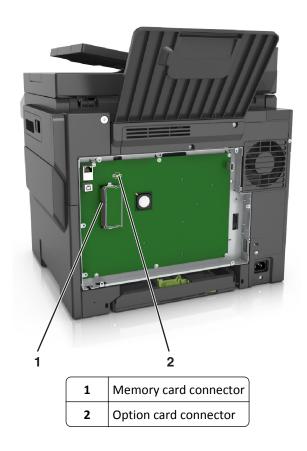

**5** Reattach the cover.

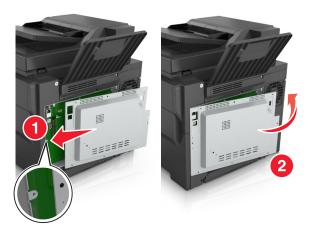

**6** Turn the screws clockwise to lock the cover.

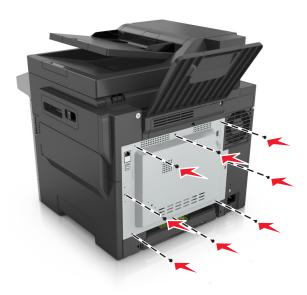

### Installing a memory card




**CAUTION—SHOCK HAZARD:** If you are accessing the controller board or installing optional hardware or memory devices sometime after setting up the printer, then turn the printer off, and unplug the power cord from the electrical outlet before continuing. If you have any other devices attached to the printer, then turn them off as well, and unplug any cables going into the printer.


- 1 Access the controller board.
  For more information, see "Accessing the controller board" on page 15.
- **2** Unpack the memory card.

**Warning—Potential Damage:** Do not touch the connection points along the edge of the card. Doing so may cause damage.

**3** Align the notch (1) on the memory card with the ridge (2) on the connector.

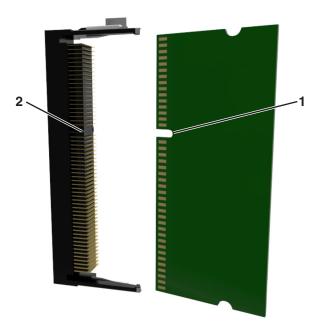

**4** Push the memory card straight into the connector, and then push the card toward the controller board wall until it *clicks* into place.

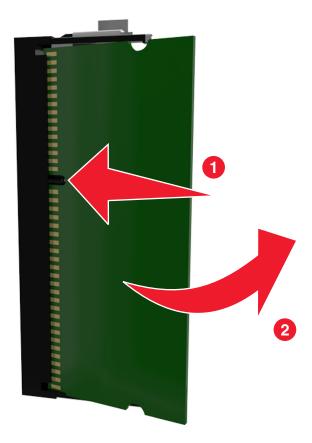

**5** Close the controller board access cover.


#### Installing an optional card




**CAUTION—SHOCK HAZARD:** If you are accessing the controller board or installing optional hardware or memory devices sometime after setting up the printer, then turn the printer off, and unplug the power cord from the electrical outlet before continuing. If you have other devices attached to the printer, then turn them off as well, and unplug any cables going into the printer.

**Warning—Potential Damage:** Controller board electronic components are easily damaged by static electricity. Touch a metal surface on the printer before touching any controller board electronic components or connectors.

- 1 Access the controller board.
  For more information, see <u>"Accessing the controller board" on page 15.</u>
- **2** Unpack the optional card.
  - Warning—Potential Damage: Avoid touching the connection points along the edge of the card.
- 3 Holding the card by its sides, align the plastic pins (1) on the card with the holes (2) on the controller board.

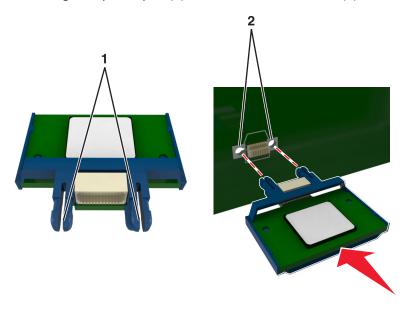

**4** Push the card firmly into place as shown in the illustration.

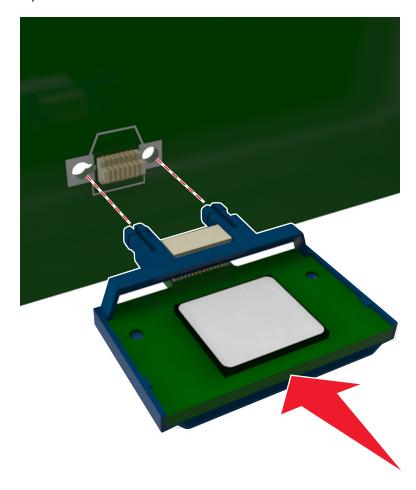

**Warning—Potential Damage:** Improper installation of the card may cause damage to the card and the controller board.

Note: The entire length of the connector on the card must touch and be flushed against the controller board.

**5** Close the controller board access door.

**Note:** When the printer software and any hardware options are installed, it may be necessary to manually add the options in the printer driver to make them available for print jobs. For more information, see <u>"Adding available options in the print driver" on page 23</u>.

### **Installing hardware options**

#### Order of installation

 $\triangle$ 

**CAUTION—POTENTIAL INJURY:** The printer weight is greater than 18 kg (40 lb) and requires two or more trained personnel to lift it safely.



**CAUTION—SHOCK HAZARD:** If you are accessing the controller board or installing optional hardware or memory devices sometime after setting up the printer, then turn the printer off, and unplug the power cord from the electrical outlet before continuing. If you have any other devices attached to the printer, then turn them off as well, and unplug any cables going into the printer.

Install the printer and any optional tray in the following order:

- Optional 650-sheet duo tray with integrated multipurpose feeder (Tray 2)
- Printer

#### Installing a 650-sheet duo tray

The printer supports an optional 650-sheet duo tray (Tray 2) with an integrated multipurpose feeder.




**CAUTION—POTENTIAL INJURY:** The printer weight is greater than 18 kg (40 lb) and requires two or more trained personnel to lift it safely.



**CAUTION—SHOCK HAZARD:** If you are accessing the controller board or installing optional hardware or memory devices sometime after setting up the printer, then turn the printer off, and unplug the power cord from the electrical outlet before continuing. If you have any other devices attached to the printer, then turn them off as well, and unplug any cables going into the printer.

1 Unpack the optional 650-sheet duo tray, and then remove all packing material and the dust cover.

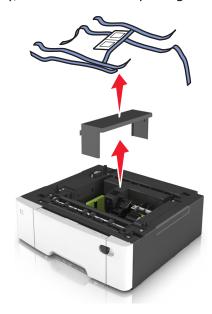

**2** Place the tray in the location chosen for the printer.

**3** Align the printer with the 650-sheet duo tray, and then lower the printer into place.



4 Install the dust cover.



**Note:** When the printer software and any options are installed, it may be necessary to manually add the options in the printer driver to make them available for print jobs. For more information, see <u>"Adding available options in the print driver" on page 23</u>.

### **Attaching cables**

Connect the printer to the computer using a USB cable or to the network using an Ethernet cable.

Make sure to match the following:

- The USB symbol on the cable with the USB symbol on the printer
- The appropriate Ethernet cable to the Ethernet port

**Warning—Potential Damage:** Do not touch the USB cable, any network adapter, or the printer in the area shown while actively printing. Loss of data or a malfunction can occur.



	Use the	То
1	USB printer port	Connect the printer to a computer.
2	Ethernet port	Connect the printer to an Ethernet network.
3	USB wireless port	Attach an optional wireless network adapter.
4	Security lock port	Lock the system controller board.
5	Printer power cord socket	Connect the printer to a properly grounded electrical outlet.

### Setting up the printer software

### Installing the printer

- 1 Obtain a copy of the software installer package.
- **2** Run the installer, and then follow the instructions on the computer screen.
- **3** For Macintosh users, add the printer.

**Note:** Obtain the printer IP address from the TCP/IP section in the Network/Ports menu.

### Adding available options in the print driver

#### For Windows users

**1** Open the printers folder.

#### In Windows 8

From the Search charm, type **run**, and then navigate to:

Run > type control printers > OK

#### In Windows 7 or earlier

- a Click , or click Start and then click Run.
- **b** Type control printers.
- c Press Enter, or click OK.
- **2** Select the printer you want to update, and then do either of the following:
  - For Windows 7 or later, select **Printer properties**.
  - For earlier versions, select **Properties**.
- 3 Navigate to the Configuration tab, and then select **Update Now Ask Printer**.
- **4** Apply the changes.

#### For Macintosh users

- 1 From System Preferences in the Apple menu, navigate to your printer, and then select Options & Supplies.
- 2 Navigate to the list of hardware options, and then add any installed options.
- 3 Apply the changes.

### **Networking**

#### Notes:

- Purchase a MarkNet<sup>TM</sup> N8352 wireless network adapter before setting up the printer on a wireless network. For information on installing the wireless network adapter, see the instruction sheet that came with the adapter.
- A Service Set Identifier (SSID) is a name assigned to a wireless network. Wired Equivalent Privacy (WEP), Wi-Fi Protected Access (WPA), WPA2, and 802.1X RADIUS are types of security used on a network.

### Preparing to set up the printer on an Ethernet network

To configure your printer to connect to an Ethernet network, organize the following information before you begin:

**Note:** If your network automatically assigns IP addresses to computers and printers, continue on to installing the printer.

- A valid, unique IP address for the printer to use on the network
- The network gateway
- The network mask
- A nickname for the printer (optional)

**Note:** A printer nickname can make it easier for you to identify your printer on the network. You can choose to use the default printer nickname, or assign a name that is easier for you to remember.

You will need an Ethernet cable to connect the printer to the network and an available port where the printer can physically connect to the network. Use a new network cable when possible to avoid potential problems caused by a damaged cable.

#### Preparing to set up the printer on a wireless network

#### Notes:

- Make sure your wireless network adapter is installed in your printer and working properly. For more information, see the instruction sheet that came with the wireless network adapter.
- Make sure your access point (wireless router) is turned on and is working properly.

Make sure you have the following information before setting up the printer on a wireless network:

- **SSID**—The SSID is also referred to as the network name.
- Wireless Mode (or Network Mode)—The mode is either infrastructure or ad hoc.
- Channel (for ad hoc networks)—The channel defaults to automatic for infrastructure networks.

Some ad hoc networks will also require the automatic setting. Check with your system support person if you are not sure which channel to select.

- **Security Method**—There are four basic options for Security Method:
  - WEP key
    - If your network uses more than one WEP key, then enter up to four in the provided spaces. Select the key currently in use on the network by selecting the default WEP transmit key.
  - WPA or WPA2 preshared key or passphrase
    - WPA includes encryption as an additional layer of security. The choices are AES or TKIP. Encryption must be set for the same type on the router and on the printer, or the printer will not be able to communicate on the network.
  - 802.1X-RADIUS

If you are installing the printer on an 802.1X network, then you may need the following:

- Authentication type
- Inner authentication type
- 802.1X user name and password
- Certificates
- No security

If your wireless network does not use any type of security, then you will not have any security information.

Note: We do not recommend using an unsecured wireless network.

#### **Notes:**

- If you do not know the SSID of the network that your computer is connected to, then launch the wireless utility
  of the computer network adapter, and then look for the network name. If you cannot find the SSID or the
  security information for your network, then see the documentation that came with the access point, or contact
  your system support person.
- To find the WPA/WPA2 preshared key or passphrase for the wireless network, see the documentation that
  came with the access point, see the Embedded Web Server associated with the access point, or consult your
  system support person.

### Connecting the printer using the Wireless Setup Wizard

Before you begin, make sure that:

• A wireless network adapter is installed in the printer and is working properly. For more information, see the instruction sheet that came with the wireless network adapter.

- An Ethernet cable is disconnected from the printer.
- Active NIC is set to Auto. To set this to Auto, navigate to:

**Note:** Make sure to turn off the printer, then wait for at least five seconds, and then turn the printer back on.

1 From the printer control panel, navigate to:

2 Select a wireless connection setup.

Use	То
Search for networks	Show available wireless connections.
	<b>Note:</b> This menu item shows all broadcast secured or unsecured SSIDs.
Enter a network name	Manually type the SSID.
	<b>Note:</b> Make sure to type the correct SSID.
Wi-Fi Protected Setup	Connect the printer to a wireless network using Wi-Fi Protected Setup.

3 Press OK , and then follow the instructions on the printer display.


### Connecting the printer to a wireless network using Wi-Fi Protected Setup

Before you begin, make sure that:

- The access point (wireless router) is Wi-Fi Protected Setup (WPS) certified or WPS-compatible. For more information, see the documentation that came with your access point.
- A wireless network adapter is installed in the printer and is working properly. For more information, see the instruction sheet that came with the wireless network adapter.

#### Using the Push Button Configuration (PBC) method

1 From the printer control panel, navigate to:

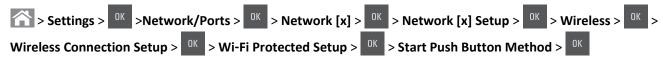

**2** Follow the instructions on the printer display.

#### Using the Personal Identification Number (PIN) method

1 From the printer control panel, navigate to:



- 2 Copy the eight-digit WPS PIN.
- **3** Open a Web browser, and then type the IP address of your access point in the address bar.

#### **Notes:**

- The IP address appears as four sets of numbers separated by periods, such as 123.123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 4 Access the WPS settings. For more information, see the documentation that came with your access point.
- **5** Enter the eight-digit PIN, and then save the setting.

#### Connecting the printer to a wireless network using the Embedded Web Server

Before you begin, make sure that:

- Your printer is connected temporarily to an Ethernet network.
- A wireless network adapter is installed in your printer and working properly. For more information, see the instruction sheet that came with the wireless network adapter.
- **1** Open a Web browser, and then type the printer IP address in the address field.

#### Notes:

- View the printer IP address on the printer control panel. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings > Network/Ports > Wireless.
- **3** Modify the settings to match the settings of your access point (wireless router).

**Note:** Make sure to enter the correct SSID, security method, preshared key or passphrase, network mode, and channel.

- 4 Click Submit.
- **5** Turn off the printer, and then disconnect the Ethernet cable. Then wait for at least five seconds, and then turn the printer back on.
- **6** To verify if your printer is connected to the network, print a network setup page. Then in the Network Card [x] section, see if the status is Connected.

### Verifying printer setup

When all hardware and software options are installed and the printer is turned on, verify that the printer is set up correctly by printing the following:

- **Menu settings page**—Use this page to verify that all printer options are installed correctly. If an option you installed is not listed, then it is not installed correctly. Remove the option, and then install it again.
- Network setup page—If your printer has networking support, then use this page to verify that the network
  connection is working. This page also provides important information that aids network printing configuration.

#### Printing a menu settings page

Print a menu settings page to view the current menu settings and to verify if the printer options are installed correctly.

From the printer control panel, navigate to:



**Note:** If you have not changed any menu settings, then the menu settings page lists all the factory default settings. Settings saved from the menus replace the factory default settings as *user default settings*. A user default setting remains in effect until you access the menu again, select another value, and save it.

### Printing a network setup page

If the printer is attached to a network, then print a network setup page to verify the network connection. This page also provides important information that aids network printing configuration.

**1** From the printer control panel, navigate to:



Note: If an optional internal print server is installed, then Print Network [x] Setup Page appears.

2 Check the first section of the network setup page, and confirm that the status is Connected.

If the status is **Not Connected**, then the LAN drop may not be active, or the network cable may be malfunctioning. Consult your system support person for a solution, and then print another network setup page.

# Loading paper and specialty media

Proper selection and loading of media can improve how reliably documents print. For more information, see <u>"Avoiding jams" on page 157</u> and <u>"Storing paper" on page 45</u>.

### Setting the paper size and type

- 1 From the printer control panel, navigate to:
  - > Settings > OK > Paper Menu > OK > Paper Size/Type > OK
- 2 Press the up or down arrow button to select the tray or feeder, and then press
- **3** Press the up or down arrow button to select the paper size, and then press OK.
- **4** Press the up or down arrow button to select the paper type, and then press of to change the settings.

### **Configuring Universal paper settings**

The Universal paper size is a user-defined setting that lets you print on paper sizes that are not preset in the printer menus.

#### Notes:

- The smallest supported Universal size is 76 x 127 mm (3 x 5 inches) and is loaded only in the multipurpose feeder and manual feeder.
- The largest supported Universal size is 215.9 x 359.9 mm (8.5 x 14.17 inches) and is loaded only in the multipurpose feeder and manual feeder.
- 1 From the printer control panel, navigate to:
  - > Settings > OK > Paper Menu > OK > Universal Setup > OK
- 2 Press the up or down arrow buttons to scroll to Units of Measure, Portrait Height, or Portrait Width, and then press
  OK
  .
- **3** Enter the preferred settings using the keypad, and then press
- 4 Press 🖳.

### Loading the 250-sheet tray

The printer has a 250-sheet tray (Tray 1) with an integrated manual feeder. The 250-sheet tray and the 650-sheet duo tray support the same paper sizes and types and are loaded in the same way.




**CAUTION—POTENTIAL INJURY:** To reduce the risk of equipment instability, load each tray separately. Keep all other trays closed until needed.

1 Pull out the tray completely.


**Note:** Do not remove trays while a job is printing or while **Busy** appears on the display. Doing so may cause a jam.



2 If the paper is longer than letter-size paper, then squeeze and then slide the length guide at the back of the tray to extend it.

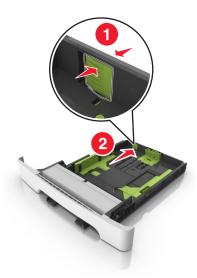


**3** Squeeze, and then slide the length guide tab to the correct position for the size of the paper being loaded.

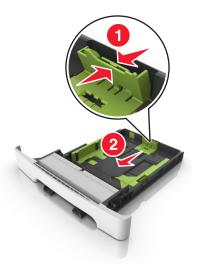


**Note:** Use the paper size indicators on the bottom of the tray to help position the guide.

**4** Squeeze, and then slide the width guide tab to the correct position for the size of the paper being loaded.

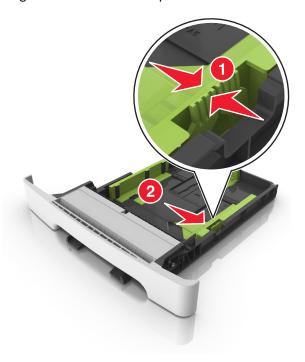


**Note:** Use the paper size indicators on the bottom of the tray to help position the guides.

**5** Flex the sheets back and forth to loosen them, and then fan them. Do not fold or crease the paper. Straighten the edges on a level surface.

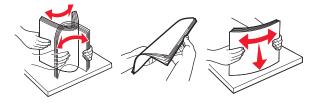

**6** Load the paper stack with the recommended printable side faceup.

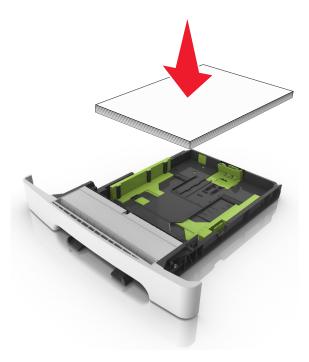

- 7 Place the paper guides securely against the edges of the paper.
- 8 Insert the tray.



**9** From the printer control panel, set the paper size and paper type in the Paper menu to match the paper loaded in the tray.

**Note:** Mixing paper sizes or paper types in a tray may cause jams.

### Loading the manual feeder

The standard 250-sheet tray has an integrated manual feeder that can be used to print on different types of paper one sheet at a time.

- **1** Load a sheet of paper into the manual feeder:
  - Printable side facedown for one-sided printing
  - Printable side faceup for two-sided (duplex) printing

Note: There are different ways for loading letterhead depending on the mode of printing.



• Load envelope with the flap side up and against the right side of the paper guide.



2 Feed paper into the manual feeder only to the point where its leading edge can contact the paper guides.

**Note:** To achieve the best possible print quality, use only high-quality media designed for laser printers.

**3** Adjust the paper guides to the width of the paper loaded.

Warning—Potential Damage: Do not force the paper into the feeder. Forcing the paper may cause jams.




# Loading the 650-sheet duo tray

The 650-sheet duo tray (Tray 2) consists of a 550-sheet tray and an integrated 100-sheet multipurpose feeder. The tray is loaded in the same way as the 250-sheet tray and supports the same paper types and sizes. The only differences are the look of the guide tabs and the location of the paper size indicators.




**CAUTION—POTENTIAL INJURY:** To reduce the risk of equipment instability, load each tray separately. Keep all other trays closed until needed.

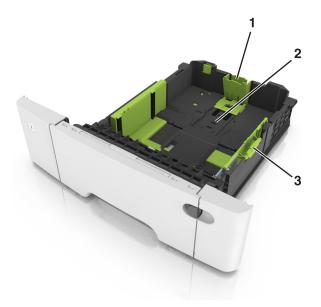

1	Length guide tab
2	Paper size indicator
3	Width guide tab

# Loading the multipurpose feeder

**1** Push the multipurpose feeder latch to the left.

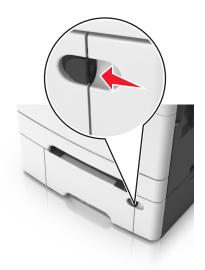

**2** Open the multipurpose feeder.



**3** Pull the multipurpose feeder extender.

**Note:** Guide the extender gently so that the multipurpose feeder is fully extended and open.



- 4 Prepare the paper for loading.
  - Flex the sheets of paper back and forth to loosen them, and then fan them. Do not fold or crease the paper. Straighten the edges on a level surface.



• Hold transparencies by the edges, and then fan them. Straighten the edges on a level surface.

Note: Avoid touching the printable side of transparencies. Be careful not to scratch them.




• Flex a stack of envelopes back and forth to loosen them, and then fan them. Straighten the edges on a level surface.

**Warning—Potential Damage:** Never use envelopes with stamps, clasps, snaps, windows, coated linings, or self-stick adhesives. These envelopes may severely damage the printer.



**5** Locate the maximum paper fill indicator and tab.

**Note:** Make sure the paper or specialty media is below the maximum paper fill indicator located on the paper guides.

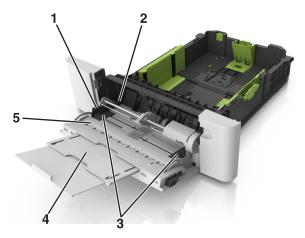

1	Width guide tab
2	Maximum paper fill indicator
3	Width guide
4	Feeder extender
5	Paper size indicator

- **6** Load the paper, and then adjust the width guide to lightly touch the edge of the paper stack.
  - Load paper, card stock, and transparencies with the recommended printable side facedown and the top edge entering the printer first.



• Load envelopes with the flap side up and against the right side of the paper guide.



#### Notes:

- Do not load or close the multipurpose feeder while a job is printing.
- Load only one size and type of paper at a time.
- Paper should lie flat in the multipurpose feeder. Make sure the paper fits loosely in the multipurpose feeder and is not bent or wrinkled.
- **7** From the printer control panel, set the paper size and type in the Paper menu to match the paper loaded in the tray.

## **Linking and unlinking trays**

The printer links trays when the specified paper size and type are the same. When a linked tray becomes empty, paper feeds from the next linked tray. To prevent trays from linking, assign a unique custom paper type name.

## Linking and unlinking trays

**Note:** This feature applies only in network printers.

1 Open a Web browser, and then type the printer IP address in the address field.

#### Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings > Paper Menu.
- **3** Change the tray settings to specify the paper size and type for the tray.
  - To link trays, make sure the paper size and type for the tray match with that of the other tray.
  - To unlink trays, make sure the paper size or type for the tray does not match with that of the other tray.
- 4 Click Submit.

**Warning—Potential Damage:** Paper loaded in the tray should match the paper type name assigned in the printer. The temperature of the fuser varies according to the specified paper type. Printing issues may occur if settings are not properly configured.

### Creating a custom name for a paper type

#### **Using the Embedded Web Server**

1 Open a Web browser, and then type the printer IP address in the address field.

#### Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings > Paper Menu > Custom Names.
- **3** Select a custom name, and then type a new custom paper type name.
- 4 Click Submit.
- 5 Click **Custom Types**, and then verify if the new custom paper type name has replaced the custom name.

### Using the printer control panel

1 From the printer control panel, navigate to:



- **2** Select a custom name, and then type a new custom paper type name.
- **3** Press OK .
- 4 Press Custom Types, and then verify if the new custom paper type name has replaced the custom name.

### Assigning a custom paper type name

#### **Using the Embedded Web Server**

1 Open a Web browser, and then type the printer IP address in the address field.

#### Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings > Paper Menu > Custom Names.
- **3** Type a name for the paper type, and then click **Submit**.
- 4 Select a custom type, and then verify that the correct paper type is associated with the custom name.

**Note:** Plain Paper is the factory default paper type for all user-defined custom names.

### Using the printer control panel

1 From the printer control panel, navigate to:

2 Type a name for the paper type, and then press OK

### Assigning a custom paper type

### **Using the Embedded Web Server**

1 Open a Web browser, and then type the printer IP address in the address field.

#### Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings > Paper Menu > Custom Types.
- **3** Select a custom paper type name, and then select a paper type.

Note: Paper is the factory default paper type for all user-defined custom names.

4 Click Submit.

#### Using the printer control panel

1 From the printer control panel, navigate to:



**2** Select a custom paper type name, and then select a paper type.

**Note:** Paper is the factory default paper type for all user-defined custom names.

**3** Press OK.

# Paper and specialty media guide

## Using specialty media

### Tips on using letterhead

- Use letterhead designed specifically for laser printers.
- Print a test page on the letterhead being considered for use before buying large quantities.
- Before loading letterhead, flex, fan, and straighten the stacks to prevent sheets from sticking together.
- Page orientation is important when printing on letterhead.

Source	Printing	Printable side	Paper orientation
Trays	One-sided	Faceup	Load the sheet with the top edge entering the printer first.
Trays	Two-sided	Facedown	Load the sheet with the bottom edge entering the printer first.
Manual feeder	One-sided	Facedown	Load the sheet with the top edge entering the printer first.

**Note:** Check with the manufacturer or vendor to determine whether or not the preprinted letterhead is acceptable for laser printers.

Source	Printing	Printable side	Paper orientation
Manual feeder	Two-sided	Faceup	Load the sheet with the bottom edge entering the printer first.
Multipurpose feeder	One-sided	Facedown	Load the sheet with the top edge entering the printer first.
Multipurpose feeder	Two-sided	Faceup	Load the sheet with the bottom edge entering the printer first.

**Note:** Check with the manufacturer or vendor to determine whether or not the preprinted letterhead is acceptable for laser printers.

### Tips on using transparencies

Print a test page on the transparencies being considered for use before buying large quantities.

- From the printer control panel, set the paper size, type, texture, and weight in the Paper menu to match the transparencies loaded in the tray.
- Print a test page on the transparencies being considered for use before buying large quantities.
- Feed transparencies from the 250-sheet tray, manual feeder, or multipurpose feeder.
- Use transparencies designed specifically for laser printers.
- Avoid getting fingerprints on the transparencies to prevent print quality problems.
- Before loading transparencies, flex, fan, and straighten the stacks to prevent sheets from sticking together.

### Tips on using envelopes

- From the printer control panel, set the paper size, type, texture, and weight in the Paper menu to match the envelopes loaded in the tray.
- Print samples on the envelopes being considered for use before buying large quantities.
- Use envelopes designed specifically for laser printers.
- For best performance, use envelopes made from 90-g/m² (24-lb) paper or 25% cotton.
- Use only new envelopes from undamaged packages.
- To optimize performance and minimize jams, do not use envelopes that:
  - Have excessive curl or twist.
  - Are stuck together or damaged in any way.
  - Have windows, holes, perforations, cutouts, or embossing.
  - Have metal clasps, string ties, or folding bars.
  - Have an interlocking design.
  - Have postage stamps attached.
  - Have any exposed adhesive when the flap is in the sealed or closed position.
  - Have bent corners.
  - Have rough, cockle, or laid finishes.
- Adjust the width guides to fit the width of the envelopes.
- Before loading the envelopes on the tray, flex and fan the envelopes to loosen them. Straighten the edges on a level surface.

Note: A combination of high humidity (over 60%) and high printing temperature may wrinkle or seal envelopes.

### Tips on using labels

- From the printer control panel, set the paper size, type, texture, and weight in the Paper menu to match the labels loaded in the tray.
- Print samples on labels being considered for use before buying large quantities.
- For more information on label printing, characteristics, and design, see the Card Stock & Label Guide at http://support.lexmark.com.
- Use labels designed specifically for laser printers.
- Do not use labels with slick backing material.
- Use full label sheets. Partial sheets may cause labels to peel off during printing, resulting in a jam. Partial sheets also contaminate the printer and the cartridge with adhesive, and could void the printer and toner cartridge warranties.
- Do not use labels with exposed adhesive.
- Before loading labels on the tray, flex and fan labels to loosen them. Straighten the edges on a level surface.

### Tips on using card stock

Card stock is heavy, single-ply specialty media. Many of its variable characteristics, such as moisture content, thickness, and texture, can significantly affect print quality.

- From the printer control panel, set the paper size, type, texture, and weight in the Paper menu to match the card stock loaded in the tray.
- Print samples on the card stock being considered for use before buying large quantities.
- Specify the paper texture and weight from the tray settings to match the paper loaded in the tray.
- Preprinting, perforation, and creasing may significantly affect the print quality and cause jams or other paper feed problems.
- Before loading the card stock on the tray, flex and fan the card stock to loosen them. Straighten the edges on a level surface.

## **Paper guidelines**

Select the correct paper or specialty media to reduce printing problems. For the best print quality, try a sample of the paper or specialty media before buying large quantities.

### **Paper characteristics**

The following paper characteristics affect print quality and reliability. Consider these characteristics when evaluating new paper stock.

### Weight

The printer trays can automatically feed paper weights up to  $176\text{-g/m}^2$  (47-lb) bond grain long paper. The multipurpose feeder can automatically feed paper weights up to  $176\text{-g/m}^2$  (47-lb) bond grain long paper. Paper lighter than  $60\text{ g/m}^2$  (16 lb) might not be stiff enough to feed properly, causing jams. For best performance, use  $75\text{-g/m}^2$  (20-lb) bond grain long paper. For paper smaller than  $182 \times 257$  mm (7.2 x 10.1 inches), we recommend  $90\text{ g/m}^2$  (24 lb) or heavier paper.

**Note:** Duplex printing is supported from 60–105-g/m<sup>2</sup> (16–28-lb) bond grain long paper.

#### Curl

Curl is the tendency for paper to curl at its edges. Excessive curl can cause paper feeding problems. Curl can occur after the paper passes through the printer, where it is exposed to high temperatures. Storing paper unwrapped in hot, humid, cold, or dry conditions, even in the trays, can contribute to paper curling prior to printing and can cause feeding problems.

### **Smoothness**

Paper smoothness directly affects print quality. If paper is too rough, then toner cannot fuse to it properly. If paper is too smooth, then it can cause paper feeding or print quality issues. Always use paper between 100 and 300 Sheffield points; smoothness between 150 and 250 Sheffield points produces the best print quality.

#### **Moisture content**

The amount of moisture in paper affects both print quality and the ability of the printer to feed the paper correctly. Leave paper in its original wrapper until it is time to use it. This limits the exposure of paper to moisture changes that can degrade its performance.

Store paper in its original wrapper in the same environment as the printer for 24 to 48 hours before printing. Extend the time to several days if the storage or transportation environment is very different from the printer environment. Thick paper may also require a longer conditioning period.

#### **Grain direction**

Grain refers to the alignment of the paper fibers in a sheet of paper. Grain is either *grain long*, running the length of the paper, or *grain short*, running the width of the paper.

For 60–90-g/m<sup>2</sup> (16–24-lb) bond paper, grain long paper is recommended.

#### Fiber content

Most high-quality xerographic paper is made from 100% chemically treated pulped wood. This content provides the paper with a high degree of stability resulting in fewer paper feeding problems and better print quality. Paper containing fibers such as cotton can negatively affect paper handling.

### **Unacceptable paper**

The following paper types are not recommended for use with the printer:

- Chemically-treated papers used to make copies without carbon paper, also known as carbonless papers, carbonless copy paper (CCP), or no carbon required (NCR) paper
- Preprinted papers with chemicals that may contaminate the printer
- Preprinted papers that can be affected by the temperature in the printer fuser
- Preprinted papers that require a registration (the precise print location on the page) greater than ±2.4 mm (±0.9 inch), such as optical character recognition (OCR) forms

In some cases, registration can be adjusted with a software application to successfully print on these forms:

- Coated papers (erasable bond), synthetic papers, thermal papers
- Rough-edged, rough or heavily textured surface papers, or curled papers
- Recycled papers that fail EN12281:2002 (European)
- Paper weighing less than 60 g/m<sup>2</sup> (16 lb)
- Multiple-part forms or documents

### **Selecting paper**

Using the appropriate paper prevents jams and helps ensure trouble-free printing.

To help avoid paper jams and poor print quality:

- Always use new, undamaged paper.
- Before loading paper, know the recommended printable side of the paper. This information is usually indicated on the paper package.
- Do not use paper that has been cut or trimmed by hand.

- Do not mix paper sizes, types, or weights in the same tray; mixing results in jams.
- Do not use coated papers unless they are specifically designed for electrophotographic printing.

### Selecting preprinted forms and letterhead

Use these guidelines when selecting preprinted forms and letterhead:

- Use grain long for 60–90-g/m<sup>2</sup> (16–24-lb) paper.
- Use only forms and letterhead printed using an offset lithographic or engraved printing process.
- Avoid paper with rough or heavily textured surfaces.

Use inks that are not affected by the resin in toner. Inks that are oxidation-set or oil-based generally meet these requirements; latex inks might not.

When in doubt, contact your paper supplier.

### Using recycled paper and other office papers

As an environmentally conscious company, Lexmark supports the use of recycled office paper produced specifically for use in laser (electrophotographic) printers. In 1998, Lexmark presented to the US government a study demonstrating that recycled paper produced by major mills in the US fed as well as non-recycled paper. However, no blanket statement can be made that *all* recycled paper will feed well.

Lexmark consistently tests its printers with recycled paper (20–100% post-consumer waste) and a variety of test paper from around the world, using chamber tests for different temperature and humidity conditions. Lexmark has found no reason to discourage the use of today's recycled office papers, but generally the following property guidelines apply to recycled paper.

- Low moisture content (4–5%)
- Suitable smoothness (100–200 Sheffield units, or 140–350 Bendtsen units, European)

**Note:** Some much smoother papers (such as premium 24 lb laser papers, 50–90 Sheffield units) and much rougher papers (such as premium cotton papers, 200–300 Sheffield units) have been engineered to work very well in laser printers, despite surface texture. Before using these types of paper, consult your paper supplier.

- Suitable sheet-to-sheet coefficient of friction (0.4–0.6)
- Sufficient bending resistance in the direction of feed

Recycled paper, paper of lower weight (<60 g/m² [16 lb bond]) and/or lower caliper (<3.8 mils [0.1 mm]), and paper that is cut grain-short for portrait (or short-edge) fed printers may have lower bending resistance than is required for reliable paper feeding. Before using these types of paper for laser (electrophotographic) printing, consult your paper supplier. Remember that these are general guidelines only and that paper meeting these guidelines may still cause paper feeding problems in any laser printer (for example, if the paper curls excessively under normal printing conditions).

### Storing paper

Use these paper storage guidelines to help avoid jams and uneven print quality:

- For best results, store paper where the temperature is 21°C (70°F) and the relative humidity is 40 percent. Most label manufacturers recommend printing in a temperature range of 18–24°C (65–75°F) with relative humidity between 40 and 60 percent.
- Store paper in cartons, on a pallet or shelf, rather than on the floor.

- Store individual packages on a flat surface.
- Do not store anything on top of individual paper packages.
- Take paper out of the carton or wrapper only when you are ready to load it in the printer. The carton and wrapper help keep the paper clean, dry, and flat.

## Supported paper sizes, types, and weights

The following tables provide information on standard and optional paper sources and the sizes, types, and weights of paper they support.

**Note:** For an unlisted paper size, select the closest *larger* listed size.

### Supported paper sizes

**Note:** Your printer model may have a 650-sheet duo tray, which consists of a 550-sheet tray and an integrated 100-sheet multipurpose feeder. The integrated multipurpose feeder supports different paper sizes, types, and weights.

Paper size and	Standard	Manual feeder	650-shee	ADF	Scanner	Duplex	
dimension	250-sheet tray		550-sheet tray	Multipurpose feeder		glass	mode
A4 210 x 297 mm (8.3 x 11.7 in.)	<b>√</b> 1	<b>✓</b>	<b>√</b> 1	<b>√</b> 1	<b>√</b>	<b>✓</b>	<b>&gt;</b>
<b>A5</b> 148 x 210 mm (5.83 x 8.3 in.)	<b>√</b> 1	<b>✓</b>	√2	<b>√</b> 1	<b>✓</b>	<b>✓</b>	х
A6 105 x 148 mm (4.1 x 5.8 in.)	х	<b>✓</b>	х	<b>√</b> 1	х	<b>✓</b>	х
JIS B5 182 x 257 mm (7.2 x 10.1 in.)	<b>√</b> 1	<b>√</b>	<b>√</b> 1	<b>√</b> 1	<b>√</b>	<b>√</b>	х
Letter 216 x 279 mm (8.5 x 11 in.)	<b>√</b> 1	<b>✓</b>	<b>√</b> 1	<b>√</b> 1	<b>√</b>	<b>✓</b>	<b>✓</b>

<sup>&</sup>lt;sup>1</sup> The paper source supports paper size without size sensing.

 $<sup>^2</sup>$  Universal is supported in the standard 250-sheet tray only if the paper size is from 148 x 215.9 mm (5.83 x 8.5 in.) to 215.9 x 355.6 mm (8.5 x 14 in.).

 $<sup>^3</sup>$  Universal is supported in the multipurpose feeder and manual feeder only if the paper size is from 76.2 x 127 mm (3 x 5 in.) to 215.9 x 359.9 mm (8.5 x 14.17 in.).

<sup>&</sup>lt;sup>4</sup> Universal is supported in duplex mode only if the width is from 210 mm (8.27 in.) to 215.9 mm (8.5 in.), and the length is from 279.4 mm (11 in.) to 355.6 mm (14 in.).

Paper size and	Standard Manual		650-shee	ADF	Scanner	Duplex	
dimension	250-sheet tray	feeder	550-sheet tray	Multipurpose feeder		glass	mode
<b>Legal</b> 216 x 356 mm (8.5 x 14 in.)	<b>√</b> 1	<b>✓</b>	<b>√</b> 1	<b>√</b> 1	<b>✓</b>	х	<b>✓</b>
Executive 184 x 267 mm (7.3 x 10.5 in.)	<b>√</b> 1	<b>✓</b>	<b>√</b> 1	<b>\</b> 1	<b>✓</b>	<b>✓</b>	х
Oficio (Mexico) 216 x 340 mm (8.5 x 13.4 in.)	<b>√</b> 1	<b>√</b>	<b>√</b> 1	<b>√</b> 1	<b>√</b>	х	<b>√</b>
Folio 216 x 330 mm (8.5 x 13 in.)	<b>√</b> 1	<b>✓</b>	<b>√</b> 1	<b>\</b> 1	<b>✓</b>	х	<b>✓</b>
Statement 140 x 216 mm (5.5 x 8.5 in.)	х	<b>✓</b>	х	<b>√</b> 1	<b>✓</b>	<b>✓</b>	х
Universal 76 x 127 mm (3 x 5 in.) to 216 x 356 mm (8.5 x 14 in.)	Х	<b>√</b> 1,3	х	<b>√</b> 1,3	<b>√</b>	<b>✓</b>	х
Universal 148 x 210 mm (5.8 x 8.3 in) to 216 x 356 mm (8.5 x 14 in).	<b>√</b> 1,2	<b>✓</b>	<b>√</b> 1,2	<b>✓</b>	х	х	<b>\</b> 4
<b>7 3/4 Envelope</b> (Monarch) 98 x 191 mm (3.9 x 7.5 in.)	Х	<b>✓</b>	х	<b>\</b> 1	х	х	х
<b>9 Envelope</b> 98 x 225 mm (3.9 x 8.9 in.)	х	<b>√</b>	х	<b>√</b> 1	Х	х	Х
<b>10 Envelope</b> 105 x 241 mm (4.1 x 9.5 in.)	х	<b>√</b>	х	<b>√</b> 1	Х	х	Х

 $<sup>^{1}</sup>$  The paper source supports paper size without  $\emph{size sensing}$ .

 $<sup>^2</sup>$  Universal is supported in the standard 250-sheet tray only if the paper size is from 148 x 215.9 mm (5.83 x 8.5 in.) to 215.9 x 355.6 mm (8.5 x 14 in.).

 $<sup>^3</sup>$  Universal is supported in the multipurpose feeder and manual feeder only if the paper size is from 76.2 x 127 mm (3 x 5 in.) to 215.9 x 359.9 mm (8.5 x 14.17 in.).

<sup>&</sup>lt;sup>4</sup> Universal is supported in duplex mode only if the width is from 210 mm (8.27 in.) to 215.9 mm (8.5 in.), and the length is from 279.4 mm (11 in.) to 355.6 mm (14 in.).

Paper size and	Standard	Manual	650-shee	ADF	Scanner	Duplex	
dimension	250-sheet tray	feeder	550-sheet tray	Multipurpose feeder		glass	mode
DL Envelope	x	<b>&gt;</b>	x	<b>\</b> 1	х	х	х
110 x 220 mm (4.3 x 8.7 in.)		,		,			
C5 Envelope	х	<b>/</b>	х	<b>\</b> 1	Х	х	х
162 x 229 mm (6.4 x 9 in.)		·		·			
B5 Envelope	x	<b>&gt;</b>	x	<b>\</b> 1	Х	х	х
176 x 250 mm (6.9 x 9.8 in.)		·		,			
Other Envelope	х	<b>/</b>	х	<b>\</b> 1	Х	х	Х
98 x 162 mm (3.9 x 6.3 in.) up to 176 x 250 mm (6.9 x 9.8 in.)		•		,			

<sup>&</sup>lt;sup>1</sup> The paper source supports paper size without *size sensing*.

## Supported paper types and weights

- Your printer model may have a 650-sheet duo tray, which consists of a 550-sheet tray and an integrated 100-sheet multipurpose feeder. The integrated multipurpose feeder supports different paper sizes, types, and weights.
- Labels, transparencies, envelopes, and card stock always print at reduced speed.

 $<sup>^2</sup>$  Universal is supported in the standard 250-sheet tray only if the paper size is from 148 x 215.9 mm (5.83 x 8.5 in.) to 215.9 x 355.6 mm (8.5 x 14 in.).

 $<sup>^3</sup>$  Universal is supported in the multipurpose feeder and manual feeder only if the paper size is from 76.2 x 127 mm (3 x 5 in.) to 215.9 x 359.9 mm (8.5 x 14.17 in.).

<sup>&</sup>lt;sup>4</sup> Universal is supported in duplex mode only if the width is from 210 mm (8.27 in.) to 215.9 mm (8.5 in.), and the length is from 279.4 mm (11 in.) to 355.6 mm (14 in.).

Paper type	250-sheet tray	Manual feeder	650-sheet duo tray		ADF	Scanner glass	Duplex mode
	•		550-sheet tray	Multipurpose feeder			•
Paper Plain Recycled Glossy Bond Letterhead Preprinted Colored Light Heavy Rough/Cotto	<b>✓</b>	<b>✓</b>	<b>✓</b>	<b>✓</b>	<b>✓</b>	<b>✓</b>	<b>✓</b>
• Custom Type [x]  Card stock	,	,	,	,	,	,	X
	<b>√</b>	<b>✓</b>	<b>✓</b>	<b>✓</b>	<b>√</b>	<b>√</b>	
Transparencies	✓	✓	Х	✓	✓	✓	Х
• Paper	<b>✓</b>	<b>✓</b>	<b>✓</b>	<b>✓</b>	<b>√</b>	<b>✓</b>	х
Envelope	х	<b>√</b>	х	<b>/</b>	<b>√</b>	<b>√</b>	х

# **Printing**

## **Printing a document**

### **Printing a document**

- 1 From the Paper menu on the printer control panel, set the paper type and size to match the paper loaded.
- 2 Send the print job:

#### For Windows users

- a With a document open, click File > Print.
- **b** Click **Properties**, **Preferences**, **Options**, or **Setup**.
- **c** Adjust the settings, if necessary.
- d Click OK > Print.

#### For Macintosh users

- a Customize the settings in the Page Setup dialog:
  - 1 With a document open, choose File > Page Setup.
  - **2** Choose a paper size or create a custom size to match the paper loaded.
  - 3 Click OK.
- **b** Customize the settings in the Print dialog:
  - 1 With a document open, choose File > Print.

    If necessary, click the disclosure triangle to see more options.
  - 2 From the Print dialog and pop-up menus, adjust the settings if necessary.

**Note:** To print on a specific paper type, adjust the paper type setting to match the paper loaded, or select the appropriate tray or feeder.

3 Click Print.

### Printing in black and white

From the printer control panel, navigate to:



## Adjusting toner darkness

#### **Using the Embedded Web Server**

1 Open a Web browser, and then type the IP address of the printer in the address field.

#### Notes:

 View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.

- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings > Print Settings > Quality Menu > Toner Darkness.
- **3** Adjust the toner darkness, and then click **Submit**.

### Using the printer control panel

1 From the printer control panel, navigate to:



2 Adjust the toner darkness, and then press OK.

### **Using Max Speed and Max Yield**

Max Speed and Max Yield let you choose between a faster print speed and a higher toner yield. Max Yield is the factory default setting.

- Max Speed—This lets you print in either black or color depending on the setting in the printer driver. The printer prints in color unless **Black Only** is selected in the printer driver.
- Max Yield—This lets you switch from black to color based on the color content found on each page.

**Note:** Frequent color mode switching can result to slower printing if the content of the pages is mixed.

#### **Using the Embedded Web Server**

1 Open a Web browser, and then type the printer IP address in the address field.

#### Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings > Print Settings > Setup Menu.
- 3 From the Printer Usage list, select Max Speed or Max Yield.
- 4 Click Submit.

### Using the printer control panel

1 From the printer control panel, navigate to:



2 Select Max Speed or Max Yield, and then press OK

## Printing from a mobile device

To download a compatible mobile printing application, visit www.lexmark.com/mobile.

**Note:** Mobile printing applications may also be available from your mobile device manufacturer.

## Printing confidential and other held jobs

### Storing print jobs in the printer

1 From the printer control panel, navigate to:



Print job type	Description
Max Invalid PIN	Limits the number of times an invalid PIN can be entered.
	<b>Note:</b> When the limit is reached, the print jobs for that user name and PIN are deleted.
Confidential Job Expiration	Lets you hold print jobs in the computer until you enter the PIN from the printer control panel.
	<b>Note:</b> The PIN is set from the computer. It must be four digits, using the numbers 0–9.
Repeat Job Expiration	Lets you print and store print jobs in the printer memory for reprinting.
Verify Job Expiration	Lets you print one copy of a print job while the printer holds the remaining copies. It allows you to examine if the first copy is satisfactory. The print job is automatically deleted from the printer memory once all copies are printed.
Reserve Job Expiration	Lets you store print jobs for printing at a later time. The print jobs are held until deleted from the Held Jobs menu.

#### Notes:

- Confidential, Verify, Reserve, and Repeat print jobs may be deleted if the printer requires extra memory to process additional held jobs.
- You can set the printer to store print jobs in the printer memory until you start the print job from the printer control panel.
- All print jobs that can be initiated by the user at the printer are called *held jobs*.

2 Press OK

### Printing confidential and other held jobs

**Note:** Confidential and Verify print jobs are automatically deleted from memory after printing. Repeat and Reserve jobs are *held* in the printer until you delete them.

#### For Windows users

- 1 With a document open, click File > Print.
- 2 Click Properties, Preferences, Options, or Setup.
- 3 Click Print and Hold.
- **4** Select the print job type (Confidential, Repeat, Reserve, or Verify), and then assign a user name. For a confidential print job, also enter a four-digit PIN.
- 5 Click OK or Print.
- **6** From the printer home screen, release the print job.
  - For confidential print jobs, navigate to:
    - **Held jobs** > select your user name > **Confidential Jobs** > enter the PIN > **Print**
  - For other print jobs, navigate to:
    - Held jobs > select your user name > select the print job > specify the number of copies > Print

#### For Macintosh users

- 1 With a document open, choose File > Print.
  - If necessary, click the disclosure triangle to see more options.
- 2 From the print options or Copies & Pages pop-up menu, choose Job Routing.
- **3** Select the print job type (Confidential, Repeat, Reserve, or Verify), and then assign a user name. For a confidential print job, also enter a four-digit PIN.
- 4 Click OK or Print.
- **5** From the printer home screen, release the print job.
  - For confidential print jobs, navigate to:
    - Held jobs > select your user name > Confidential Jobs > enter the PIN > Print
  - For other print jobs, navigate to:
    - Held jobs > select your user name > select the print job > specify the number of copies > Print

### Modifying confidential print settings

1 Open a Web browser, and then type the printer IP address in the address field.

- View the printer IP address on the printer home screen. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings > Security > Confidential Print Setup.

- 3 Modify the settings:
  - Set a maximum number of PIN entry attempts. When a user exceeds that number, all of the jobs for that user are deleted.
  - Set an expiration time for confidential print jobs. When a user has not printed the jobs within that time, all of the jobs for that user are deleted.

4 Click **Submit** to save the modified settings.

## **Printing information pages**

### Printing a font sample list

1 From the printer control panel, navigate to:



- 2 Press the up or down arrow button to select the font setting.
- **3** Press OK

Note: The PPDS fonts appear only when the PPDS data stream is activated.

## Canceling a print job

### Canceling a print job from the printer control panel

- 1 From the printer control panel, press
- 2 When a list of print jobs appears, select the job to cancel, and then press
- **3** Press to go back to the home screen.

## Canceling a print job from the computer


### For Windows users

- **1** Open the printers folder, and then select your printer.
- 2 From the print queue, select the print job you want to cancel, and then delete it.

#### For Macintosh users

- **1** From System Preferences in the Apple menu, navigate to your printer.
- 2 From the print queue, select the print job you want to cancel, and then delete it.

# Copying

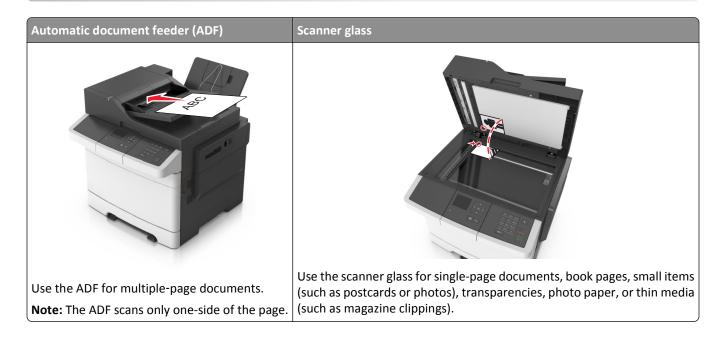

## **Making copies**

### Making a quick copy

1 Load an original document faceup, short edge first into the ADF tray or facedown on the scanner glass.

#### **Notes:**

- Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.
- The ADF indicator light comes on when the paper is loaded properly.
- 2 If you are loading a document into the ADF tray, then adjust the paper guides.

**Note:** To avoid a cropped image, make sure the size of the original document and the size of the copy paper are the same.

**3** From the printer control panel, press




### **Copying using the ADF**

1 Load an original document faceup, short edge first into the ADF tray.

#### Notes:

• Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.

- The ADF indicator light comes on when the paper is loaded properly.
- **2** Adjust the paper guides.

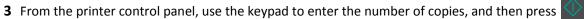



### Copying using the scanner glass

- 1 Place an original document facedown on the scanner glass in the upper left corner.
- 2 From the printer control panel, use the keypad to enter the number of copies, and then press Note: If you want to scan another document, then place the next document on the scanner glass, press the left or right arrow button to scroll to Scan the Next Page, and then press
- 3 Press the left or right arrow button to scroll to Finish the Job, and then press

## **Copying photos**

- **1** Place a photo facedown on the scanner glass in the upper left corner.
- **2** From the printer control panel, navigate to:
  - > Copy > OK > Content Type > Photo
- 3 From the Content Source menu, choose a setting that best describes the original photo your are copying, and then press

Note: If you want to copy another photo, then place it on the scanner glass, press the left or right arrow button to scroll to Scan the Next Page, and then press

4 Press the left or right arrow button to scroll to Finish the Job, and then press OK

## Copying on specialty media

### **Copying on transparencies**

1 Load an original document faceup, short edge first into the ADF tray or facedown on the scanner glass.

- Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.
- The ADF indicator light comes on when the paper is loaded properly.
- 2 If you are loading a document into the ADF tray, then adjust the paper guides.
- **3** From the printer control panel, navigate to:
  - > Copy > OK > Copy from > select the size of the original document

4 Navigate to:

**Copy to** > OK > select the tray containing the transparencies > OK > select the number of copies or enter a number on the keypad >

- **5** If there are no trays that contain transparencies, then do the following:
  - a Navigate to:

Copy to >  $^{0K}$  > Manual Feeder >  $^{0K}$  > select the size of the transparencies >  $^{0K}$  > Transparency >  $^{0K}$ 

**b** Load transparencies into the multipurpose feeder, and then press

**Note:** If you want to copy another document, then place it on the scanner glass, press the left or right arrow button to scroll to **Scan** the **Next Page**, and then press OK.

6 Press the left or right arrow button to scroll to Finish the Job, and then press

### **Copying on letterhead**

1 Load an original document faceup, short edge first into the ADF tray or facedown on the scanner glass.

#### Notes:

- Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.
- The ADF indicator light comes on when the paper is loaded properly.
- 2 If you are loading a document into the ADF tray, then adjust the paper guides.
- **3** From the printer control panel, navigate to:

> Copy > OK > Copy from > select the size of the original document

4 Navigate to:

Copy to > OK > select the tray containing the letterhead > OK > select the number of copies or enter a number on the keypad >

- **5** If there are no trays that contain letterhead, then do the following:
  - **a** Navigate to:

Copy to > DK > Manual Feeder > DK > select the size of the letterhead > Letterhead

b Place the letterhead faceup, top edge first into the multipurpose feeder, and then press .

Note: If you want to copy another document, then place it on the scanner glass, press the left or right arrow button to scroll to Scan the Next Page, and then press OK.

**6** Press the left or right arrow button to scroll to **Finish the Job**, and then press

## **Customizing copy settings**

### Copying to a different size

1 Load an original document faceup, short edge first into the ADF tray or facedown on the scanner glass.

#### Notes:

- Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.
- The ADF indicator light comes on when the paper is loaded properly.
- 2 If you are loading a document into the ADF tray, then adjust the paper guides.
- **3** From the printer control panel, navigate to:
  - > Copy > OK > Copy from > select the size of the original document
- 4 Navigate to:
  - Copy to > OK > select a new size for the copy > select the number of copies or enter a number on the keypad >

**Note:** If you want to copy another document, then place it on the scanner glass, press the left or right arrow button to scroll to **Scan** the **Next Page**, and then press **OK**.


**5** Press the left or right arrow button to scroll to **Finish the Job**, and then press

### Making copies using paper from a selected tray

1 Load an original document faceup, short edge first into the ADF tray or facedown on the scanner glass.

- Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.
- The ADF indicator light comes on when the paper is loaded properly.
- 2 If you are loading a document into the ADF tray, then adjust the paper guides.
- **3** From the printer control panel, navigate to:
  - > Copy > OK > Copy from > select the size of the original document
- 4 Navigate to:
  - Copy to > OK > select the tray containing the paper size and type you want to use > OK > select the number of copies or enter a number on the keypad >

- 5 If there are no trays that contain the paper size and type you want to use, then do the following:
  - a Navigate to:

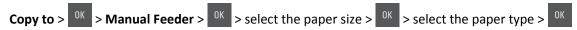

**b** Load the size and type of paper into the multipurpose feeder, and then press

**Note:** If you want to copy another document, then place it on the scanner glass, press the left or right arrow button to scroll to **Scan** the **Next Page**, and then press OK.

**6** Press the left or right arrow button to scroll to **Finish** the **Job**, and then press


### Reducing or enlarging copies

Copies can be scaled from 25% to 400% of the original document size.

1 Load an original document faceup, short edge first into the ADF tray or facedown on the scanner glass.

#### Notes:

- Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.
- The ADF indicator light comes on when the paper is loaded properly.
- 2 If you are loading a document into the ADF tray, then adjust the paper guides.
- **3** From the printer control panel, navigate to:

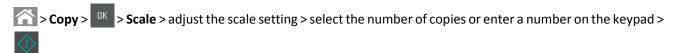

**Note:** If you want to copy another document, then place it on the scanner glass, press the left or right arrow button to scroll to **Scan** the **Next Page**, and then press


4 Press the left or right arrow button to scroll to Finish the Job, and then press OK.

### Making a copy lighter or darker

1 Load an original document faceup, short edge first into the ADF tray or facedown on the scanner glass in the upper left corner.

- Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.
- The ADF indicator light comes on when the paper is loaded properly.
- 2 If you are loading a document into the ADF tray, then adjust the paper guides.

**3** From the printer control panel, navigate to:

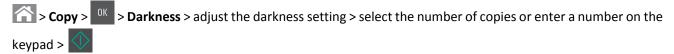

**Note:** If you want to copy another document, then place it on the scanner glass, press the left or right arrow button to scroll to **Scan** the **Next Page**, and then press **OK**.


4 Press the left or right arrow button to scroll to Finish the Job, and then press OK

### Adjusting copy quality

1 Load an original document faceup, short edge first into the ADF tray or facedown on the scanner glass.

- Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.
- The ADF indicator light comes on when the paper is loaded properly.
- 2 If you are loading a document into the ADF tray, then adjust the paper guides.
- **3** From the printer control panel, navigate to:
  - > Copy > OK > Content Type > select the content type of the original document
- **4** Press the left or right arrow button to scroll to one of the following:
  - **Text**—The content of the original document is mostly text or line art.
  - Text/Photo—The original document is a mixture of text and graphics or photos.
  - Photo—The original document is mostly a photo or an image.
  - **Graphics**—The original document is mostly business-type graphics, such as pie charts, bar charts, and animations.
- **5** Press the up or down arrow button until **Content Source** appears, and then press the left or right arrow button to scroll to one of the following:
  - **Color Laser**—The original document was printed using a color laser printer.
  - Inkjet—The original document was printed using an inkjet printer.
  - Magazine—The original document is from a magazine.
  - Press—The original document is from an offset press.
  - Black/White Laser—The original document was printed using a mono laser printer.
  - Photo/Film—The original document is a photo from a film.
  - **Newspaper**—The original document is from a newspaper.
  - Other—The original document was printed using an alternate or unknown printer.


**6** Select the number of copies or enter a number on the keypad, and then press

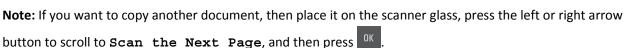

**7** Press the left or right arrow button to scroll to **Finish the Job**, and then press OK.

### **Collating copies**

If you print multiple copies of a document, then you can choose to print each copy as a set (collated) or to print the copies as groups of pages (not collated).

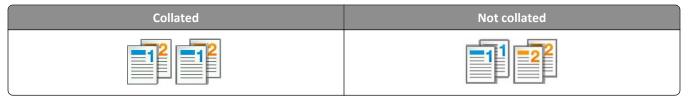

To select a Collate setting:

1 Load an original document faceup, short edge first into the ADF tray or facedown on the scanner glass.

#### Notes:

- Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.
- The ADF indicator light comes on when the paper is loaded properly.
- 2 If you are loading a document into the ADF tray, then adjust the paper guides.
- **3** From the printer control panel, navigate to:
  - > Copy > OK > Collate > select the collate setting you want > select the number of copies or enter a number on the keypad >

**Note:** If you want to copy another document, then place it on the scanner glass, press the left or right arrow button to scroll to **Scan** the **Next Page**, and then press OK.

4 Press the left or right arrow button to scroll to Finish the Job, and then press OK

### Placing separator sheets between copies

1 Load an original document faceup, short edge first into the ADF tray or facedown on the scanner glass.

- Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.
- The ADF indicator light comes on when the paper is loaded properly.
- 2 If you are loading a document into the ADF tray, then adjust the paper guides.

**3** From the printer control panel, navigate to:



4 Select Between Copies, Between Jobs, Between Pages, or Off.

5 Select the number of copies or enter a number on the keypad, and then press .

Note: If you want to copy another document, then place it on the scanner glass, press the left or right arrow button to scroll to Scan the Next Page, and then press .

**6** Press the left or right arrow button to scroll to **Finish the Job**, and then press

### Copying multiple pages onto a single sheet

To save paper, you can copy either two or four consecutive pages of a multiple-page document onto a single sheet of paper.

#### Notes:

- Make sure the paper size is set to letter, legal, A4, or JIS B5.
- The copy size must be set to 100%.
- 1 Load an original document faceup, short edge first into the ADF tray or facedown on the scanner glass.

#### Notes:

- Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.
- The ADF indicator light comes on when the paper is loaded properly.
- 2 If you are loading a document into the ADF tray, then adjust the paper guides.
- **3** From the printer control panel, navigate to:
  - > Copy > OK > Paper Saver > select the setting that you want
- 4 Select Off, 2-up Portrait, 2-up Landscape, 4-up Portrait, or 4-up Landscape.
- 5 Select the number of copies or enter a number on the keypad, and then press

  Note: If you want to copy another document, then place it on the scanner glass, press the left or right arrow button to scroll to Scan the Next Page, and then press

  OK.
- **6** Press the left or right arrow button to scroll to **Finish the Job**, and then press OK.

## Placing information on copies

## Placing an overlay message on each page

1 Load an original document faceup, short edge first into the ADF tray or facedown on the scanner glass.

#### Notes:

• Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.

- The ADF indicator light comes on when the paper is loaded properly.
- 2 If you are loading a document into the ADF tray, then adjust the paper guides.
- **3** From the printer control panel, navigate to:
  - > Copy > Overlay > select an overlay message you want
- 4 Select Off, Confidential, Copy, Draft, Urgent, or Custom.
- Select the number of copies or enter a number on the keypad, and then press
  Note: If you want to copy another document, then place it on the scanner glass, press the left or right arrow button to scroll to Scan the Next Page, and then press
  OK
  OK
- 6 Press the left or right arrow button to scroll to Finish the Job, and then press

## Canceling a copy job

### Canceling a copy job from the printer control panel

- 1 From the printer control panel, press
- **2** When a list of copy jobs appears, select the job to cancel, and then press OK.
- **3** Press to go back to the home screen.

## Understanding the copying options

### **Copies**

This option lets you set the number of copies to be printed.

## **Copy from**

This option opens a screen where you can select the paper size of the original document.

- To scroll to the paper size that matches the original document, press the left or right arrow button, and then press
- To copy an original document that contains mixed paper sizes with the same width, press the left or right arrow button to scroll to Mixed Sizes, and then press

### Copy to

This option lets you select the paper size and type on which your copies will be printed.

• To scroll to the paper size and type that matches the paper loaded in the tray or feeder, press the left or right arrow button, and then press OK.

- If the settings for "Copy from" and "Copy to" are different, then the printer automatically adjusts the Scale setting to accommodate the difference.
- If the paper type or size you want to use is not loaded in one of the trays, then press the left or right arrow button to scroll to Manual Feeder, press and then manually load the paper in the manual feeder or multipurpose feeder.
- To match each copy to the paper size of the original document, set "Copy to" to Auto Size Match. If a matching
  paper size is not in one of the trays, then Paper size not found appears and prompts to load a paper in a
  tray, manual feeder, or multipurpose feeder.

#### Scale

This option lets you scale the document from 25% to 400% of the original document size. You can also set automatic scaling.

- When copying to a different paper size, such as from legal-size to letter-size paper, set the "Copy from" and "Copy to" paper sizes automatically to scale the scan image to fit the size of the paper onto which you are copying.
- To decrease or increase the value by 1%, press the left or right arrow button on the printer control panel. To make a continuous decrease or increase in value, press and hold the button for two or more seconds.

#### **Darkness**

This option lets you adjust how light or dark the copies are in relation to the original document.

### **Collate**

This option keeps the pages of a print job stacked in sequence when printing multiple copies of the document.

### **Content Type**

This option lets you set the original document type.

Select from the following content types:

- **Graphics**—The original document is mostly business-type graphics, such as pie charts, bar charts, and animations.
- Photo—The original document is mostly a photo or an image.
- **Text**—The content of the original document is mostly text or line art.
- **Text/Photo**—The original document is a mixture of text, graphics, and photos.

### **Content Source**

This option lets you set the original document source.

Select from the following content sources:

- Color Laser—The original document was printed using a color laser printer.
- Black/White Laser—The original document was printed using a mono laser printer.
- Inkjet—The original document was printed using an inkjet printer.
- Photo/Film—The original document is a photo from a film.
- Magazine—The original document is from a magazine.
- **Newspaper**—The original document is from a newspaper.
- Press—The original document was printed using a printing press.
- Other—The original document was printed using an alternate or unknown printer.

### Color

This option lets you set the output to either color or monochrome for the scanned image.

### **Overlay**

This option lets you create a watermark (or message) that overlays the content of your copy. You can choose from Confidential, Copy, Draft, Urgent, and Custom. You can type a custom message in the "Enter the Custom Text Overlay and press OK" field. The message will appear, faintly, in large print across each page.

### **Separator Sheets**


This option lets you place a blank sheet of paper between copies, prints, pages, print jobs or copy jobs. The separator sheets can be drawn from a tray that contains a type or color of paper that is different from the paper your copies are printed on.

### **Paper Saver**

This option lets you print two or more pages of an original document on the same page. Paper Saver is also called *N-up* printing where *N* stands for the number of pages. For example, 2-up would print two pages of your document on a single page, and 4-up would print four pages of your document on a single page.

E-mailing 66

# E-mailing

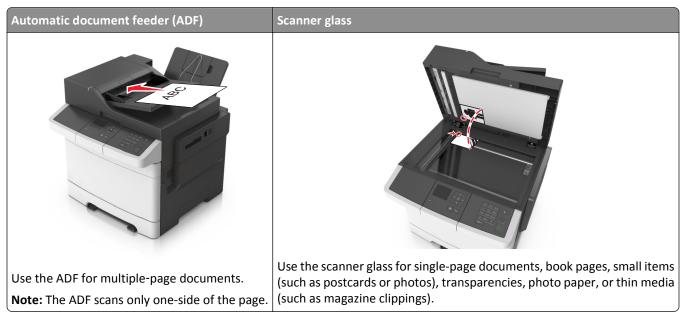

You can use the printer to e-mail scanned documents to one or more recipients. You can type the e-mail address or use a shortcut number to send an e-mail from the printer.

## Setting up the printer to e-mail

### Setting up the e-mail function

1 Open a Web browser, and then type the printer IP address in the address field.

#### **Notes:**

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings > E-mail/FTP Settings > E-mail Settings.
- 3 Enter the appropriate information, and then click Submit.

### **Configuring e-mail settings**

1 Open a Web browser, and then type the printer IP address in the address field.

#### Notes:

• View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.

E-mailing 67

- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings > E-mail/FTP Settings > E-mail Settings.
- **3** Enter the appropriate information, and then click **Submit**.

## Creating an e-mail shortcut

### Creating an e-mail shortcut using the Embedded Web Server

1 Open a Web browser, and then type the printer IP address in the address field.

#### Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings > Manage Shortcuts > E-mail Shortcut Setup.
- **3** Type a name for the shortcut, and then enter the e-mail address.

Note: If you are entering multiple addresses, then separate each address with a comma (,).

- 4 Adjust the scan settings, if necessary.
- **5** Enter a shortcut number, and then click **Add**.

If you enter a number that is already in use, then you are prompted to select another number.

## E-mailing a document

### Sending an e-mail using a shortcut number

1 Load an original document faceup, short edge first into the ADF tray or facedown on the scanner glass.

#### **Notes:**

- Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.
- The ADF indicator light comes on when the paper is loaded properly.
- 2 If you are loading a document into the ADF tray, then adjust the paper guides.
- 3 Press #, then enter the shortcut number using the keypad, and then press



### Sending an e-mail using the printer control panel

1 Load an original document faceup, short edge first into the ADF tray or facedown on the scanner glass.

E-mailing 68

#### Notes:

• Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.

- The ADF indicator light comes on when the paper is properly loaded.
- 2 If you are loading a document into the ADF tray, then adjust the paper guides.
- 3 From the printer control panel, press the up or down arrow button to scroll to Shortcuts, and then press
- 4 Press Email Shortcuts > 0K > select the name of the recipient > 0K or 0K.


Note: Shortcuts can be created only from the Embedded Web Server.

## Canceling an e-mail

From the printer control panel, press

# **Scanning**

## Scanning to an FTP address

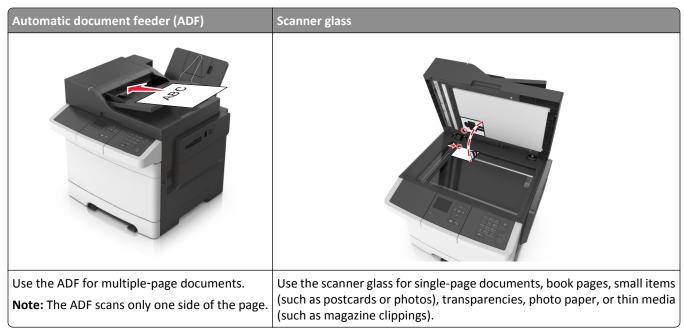

The scanner lets you scan documents directly to a File Transfer Protocol (FTP) server. Only one FTP address may be sent to the server at a time.

When an FTP destination has been configured by your system support person, the name of the destination becomes available as a shortcut number, or it is listed as a profile under the Held Jobs icon. An FTP destination could also be another PostScript printer.

### **Creating shortcuts**

Instead of entering the entire FTP site address on the printer control panel each time you want to send a document to an FTP server, you can create a permanent FTP destination and assign a shortcut number. There are two methods for creating shortcut numbers: using the Embedded Web Server and using the printer control panel.

#### Creating an FTP shortcut using the Embedded Web Server

1 Open a Web browser, and then type the printer IP address in the address field.

#### Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Navigate to:

**Settings** > Other Settings area > **Manage Shortcuts** > **FTP Shortcut Setup** 

**3** Enter the appropriate information.

**Note:** A password may be required. If you do not have an ID and password, then contact your system support person.

4 Enter a shortcut number.

If you enter a number that is already in use, then you are prompted to select another number.

5 Click Add.

### Scanning to an FTP address

### Scanning to an FTP address using a shortcut number

1 Load an original document faceup, short edge first into the ADF tray or facedown on the scanner glass.

#### Notes:


- Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.
- The ADF indicator light comes on when the paper is loaded properly.
- 2 If you are loading a document into the ADF tray, then adjust the paper guides.
- **3** From the printer control panel, press #, and then enter the FTP shortcut number.
- 4 Press

#### Scanning to an FTP address using the printer control panel

1 Load an original document faceup, short edge first into the ADF tray or facedown on the scanner glass.


#### Notes:

- Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.
- The ADF indicator light comes on when the paper is properly loaded.
- 2 If you are loading a document into the ADF tray, then adjust the paper guides.
- 3 From the printer control panel, press the up or down arrow button to scroll to Shortcuts, and then press

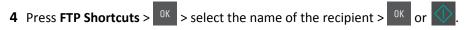

**Note:** Shortcuts can be created only from the Embedded Web Server.

## Scanning to a computer

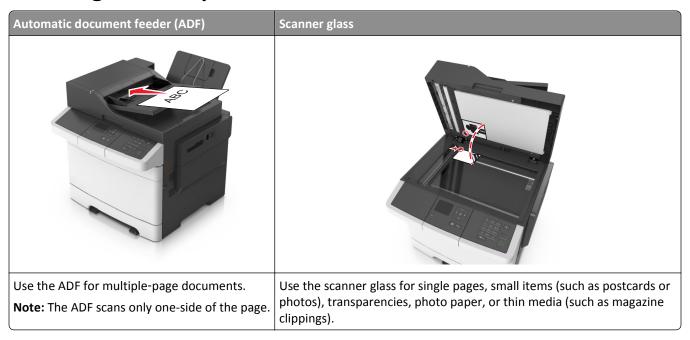

The scanner lets you scan documents directly to a computer. The computer does not have to be directly connected to the printer for you to receive images when scanning. You can scan the document back to the computer over the network by creating a scan profile on the computer and then downloading the profile to the printer.

### Scanning to a computer

1 Open a Web browser, and then type the printer IP address in the address field.

#### Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Scan Profile > Create Scan Profile.
- **3** Select your scan settings, and then click **Next**.
- **4** Select a location on your computer where you want to save the scanned output file.
- 5 Type a scan name.
  The scan name is the name that appears in the Scan Profile list on the display.
- 6 Click Submit.
- **7** Review the instructions on the Scan Profile screen.

A shortcut number is automatically assigned when you click **Submit**. You can use this shortcut number when you are ready to scan your documents.

**a** Load an original document faceup, short edge first into the ADF tray or facedown on the scanner glass.

#### Notes:

• Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.

- The ADF indicator light turns on when the paper is loaded properly.
- **b** If you are loading a document into the ADF tray, then adjust the paper guides.
- c From the printer control panel, press #, and then type the shortcut number using the keypad, or press the up or down arrow button to scroll to Held Jobs, and then press the up or down arrow button to scroll to Profiles. After entering the shortcut number, the scanner scans and sends the document to the directory or program you specified. If you selected Profiles on the printer control panel, then locate your shortcut on the list.
- **8** View the file from the computer.

The output file is saved in the location or launched in the program you specified.

# **Understanding the printer menus**

# **Menus list**

Supplies Menu	Paper Menu	Reports	Network/Ports
Cyan Cartridge	Default Source	Menu Settings Page	Active NIC
Magenta Cartridge	Paper Size/Type	Device Statistics	Standard Network or
Yellow Cartridge	Substitute Size	Network Setup Page	Network [x]
Black Cartridge	Paper Texture	Network [x] Setup Page	Standard USB
Waste Toner Bottle	Paper Weight	Shortcut List	SMTP Setup
Imaging Kit	Paper Loading	Copy Shortcuts	
Maintenance Kit	Custom Types	E-mail Shortcuts	
	Custom Scan Sizes	FTP Shortcuts	
	Universal Setup	Profiles List	
		Print Fonts	
		Print Directory	
		Print Demo	
		Asset Report	
		Event Log Summary	
Security	Settings	Help	Option Card Menu
Confidential Print	General Settings	Print All Guides	[index of each installed
Security Audit Log	Copy Settings	Copy Guide	DLE]
Set Date and Time	E-mail Settings	E-mail Guide	
	FTP Settings	FTP Guide	
	Print Settings	Color Quality	
		Print Defects Guide	
		Information Guide	
		Supplies Guide	

# Supplies menu

Use	То
Cyan Cartridge	View the status of the toner cartridges, which can be any of
Magenta Cartridge	the following:  Early Warning
Yellow Cartridge	Low
Black Cartridge	Invalid
	Near End of Life
	Replace
	Missing
	Defective
	ОК
	Unsupported
Waste Toner Bottle	View the status of the waste toner bottle.
Near Full	
Replace	
Missing	
ОК	
Imaging Kit	View the status of the imaging kit.
OK	
Replace Black Imaging Kit	
Replace Color Imaging Kit	
Maintenance Kit	View the status of the maintenance kit.
ОК	
Replace	

# Paper menu

# **Default Source menu**

Use	То
Default Source Tray [x] MP Feeder Manual Paper	Set a default paper source for all print jobs.  Notes:  Tray 1 (standard tray) is the factory default setting.
Manual Envelope	<ul> <li>From the Paper menu, set Configure MP to "Cassette" for MP Feeder to appear as a menu setting.</li> <li>If the same size and type of paper are in two trays and the paper size and paper type settings match, then the trays are automatically linked. When one tray is empty, the print job continues using the linked tray.</li> </ul>

# Paper Size/Type menu

Use	То
Tray [x] Size	Specify the paper size loaded in each tray.
A4	Notes:
A5	
JIS-B5	<ul> <li>Letter is the U.S. factory default setting. A4 is the international factory default setting.</li> </ul>
Letter	
Legal	<ul> <li>If two trays contain paper of the same size and type, and the trays have the same settings, then the trays are automatically linked. When one</li> </ul>
Executive	tray is empty, the print job continues using the linked tray.
Oficio (Mexico)	
Folio	
Universal	
Tray [x] Type	Specify the type of paper loaded in each tray.
Plain Paper	Notes:
Card Stock	
Transparency	<ul> <li>Plain Paper is the factory default setting for Tray 1. Custom Type [x] is the factory default setting for all other trays.</li> </ul>
Recycled	, , , , , , , , , , , , , , , , , , , ,
Labels	• If available, a user-defined name appears instead of Custom Type [x].
Glossy	<ul> <li>Use this menu to configure automatic tray linking.</li> </ul>
Bond	<ul> <li>Transparency is supported only in the 250-sheet tray.</li> </ul>
Letterhead	
Preprinted	
Colored Paper	
Light Paper	
Heavy Paper	
Rough/Cotton	
Custom Type [x]	

Use	То
Multipurpose Feeder Size	Specify the paper size loaded in the multipurpose feeder.
A4	Notes:
A5	
A6	Letter is the U.S. factory default setting. A4 is the international factory
JIS B5	default setting.
Letter	<ul> <li>The menu item applies only when the multipurpose feeder is installed.</li> </ul>
Legal	The multipurpose feeder does not automatically detect paper size. The
Executive	paper size value must be set.
Oficio (Mexico)	
Folio	
Statement	
Universal	
7 3/4 Envelope	
9 Envelope	
10 Envelope	
DL Envelope	
C5 Envelope	
B5 Envelope	
Other Envelope	
Multipurpose Feeder Type	Specify the paper type loaded in the multipurpose feeder.
Plain Paper	<b>Note:</b> Custom Type [x] is the factory default setting.
Card Stock	
Transparency	
Recycled	
Glossy	
Labels	
Bond	
Envelope	
Letterhead	
Preprinted	
Colored Paper	
Light Paper	
Heavy Paper	
Rough/Cotton	
Custom Type [x]	

Use	То
Manual Paper Size	Specify the size of the paper being manually loaded.
A4	<b>Note:</b> Letter is the U.S. factory default setting. A4 is the international factory
A5	default setting.
A6	
JIS B5	
Letter	
Legal	
Executive	
Oficio (Mexico)	
Folio	
Statement	
Universal	
Manual Paper Type	Specify the paper type being manually loaded.
Plain Paper	<b>Note:</b> Plain Paper is the factory default setting.
Card Stock	
Transparency	
Recycled	
Glossy	
Labels	
Bond	
Letterhead	
Preprinted	
Colored Paper	
Light Paper	
Heavy Paper	
Rough/Cotton	
Custom Type [x]	
Manual Envelope Size	Specify the envelope size being manually loaded.
7 3/4 Envelope	Note: 10 Envelope is the U.S. factory default setting. DL Envelope is the
9 Envelope	international factory default setting.
10 Envelope	
DL Envelope	
C5 Envelope	
B5 Envelope	
Other Envelope	
Manual Envelope Type	Specify the envelope type being manually loaded.
Envelope	Note: Envelope is the factory default setting.
Custom Type [x]	,
Note: Only installed trays and feeders are	listed in this menu.

# Substitute Size menu

Use	То
Substitute Size Off Statement/A5 Letter/A4 All Listed	Substitute a specified paper size if the requested paper size is not available.  Notes:  All Listed is the factory default setting. All available substitutions are allowed.  Off indicates that no size substitutions are allowed.
	<ul> <li>Setting a size substitution lets the print job continue without Change</li> <li>Paper appearing.</li> </ul>

# Paper Texture menu

Use	То
Plain Texture Smooth Normal Rough	Specify the relative texture of the plain paper loaded.  Note: Normal is the factory default setting.
Card Stock Texture Smooth Normal Rough	Specify the relative texture of the card stock loaded.  Notes:  Normal is the factory default setting.  The options appear only if card stock is supported.
Transparency Texture Smooth Normal Rough	Specify the relative texture of the transparencies loaded.  Note: Normal is the factory default setting.
Recycled Texture Smooth Normal Rough	Specify the relative texture of the recycled paper loaded.  Note: Normal is the factory default setting.
Glossy Texture Smooth Normal Rough	Specify the relative texture of the glossy paper loaded.  Note: Normal is the factory default setting.
Labels Texture Smooth Normal Rough	Specify the relative texture of the labels loaded.  Note: Normal is the factory default setting.
Bond Texture Smooth Normal Rough	Specify the relative texture of the bond paper loaded.  Note: Rough is the factory default setting.

Use	То
Envelope Texture Smooth Normal Rough	Specify the relative texture of the envelopes loaded.  Note: Normal is the factory default setting.
Letterhead Texture Smooth Normal Rough	Specify the relative texture of the letterhead loaded.  Note: Normal is the factory default setting.
Preprinted Texture Smooth Normal Rough	Specify the relative texture of the preprinted paper loaded.  Note: Normal is the factory default setting.
Colored Texture Smooth Normal Rough	Specify the relative texture of the colored paper loaded.  Note: Normal is the factory default setting.
Light Texture Smooth Normal Rough	Specify the relative texture of the light paper loaded.  Note: Normal is the factory default setting.
Heavy Texture Smooth Normal Rough	Specify the relative texture of the heavy paper loaded.  Note: Normal is the factory default setting.
Rough/Cotton Texture Rough	Specify the relative texture of the cotton paper loaded.
Custom [x] Texture Smooth Normal Rough	Specify the relative texture of the custom paper loaded.  Notes:  Normal is the factory default setting.  The options appear only if custom type is supported.

# Paper Weight menu

Use	То
Plain Weight	Specify the relative weight of the plain paper loaded.
Light	Note: Normal is the factory default setting.
Normal	
Heavy	

Use	То
Card Stock Weight Light Normal Heavy	Specify the relative weight of the card stock loaded.  Note: Normal is the factory default setting.
Transparency Weight Light Normal Heavy	Specify the relative weight of the transparencies loaded.  Note: Normal is the factory default setting.
Recycled Weight Light Normal Heavy	Specify the relative weight of the recycled paper loaded.  Note: Normal is the factory default setting.
Glossy Weight Light Normal Heavy	Specify the relative weight of the glossy paper loaded.  Note: Normal is the factory default setting.
Labels Weight Light Normal Heavy	Specify the relative weight of the labels loaded.  Note: Normal is the factory default setting.
Bond Weight Light Normal Heavy	Specify the relative weight of the bond paper loaded.  Note: Normal is the factory default setting.
Envelope Weight Light Normal Heavy	Specify the relative weight of the envelope loaded.  Note: Normal is the factory default setting.
Letterhead Weight Light Normal Heavy	Specify the relative weight of the letterhead loaded.  Note: Normal is the factory default setting.
Preprinted Weight Light Normal Heavy	Specify the relative weight of the preprinted paper loaded.  Note: Normal is the factory default setting.
Colored Weight Light Normal Heavy	Specify the relative weight of the colored paper loaded.  Note: Normal is the factory default setting.
<b>Light Weight</b> Light	Specify that the relative weight of the paper loaded is light.

Use	То
Heavy Weight Heavy	Specify that the relative weight of the paper loaded is heavy.
Rough/Cotton Weight Light Normal Heavy	Specify the relative weight of the rough or cotton paper loaded.  Note: Normal is the factory default setting.
Custom [x] Weight Light Normal Heavy	<ul> <li>Specify the relative weight of the custom paper loaded.</li> <li>Notes:</li> <li>Normal is the factory default setting.</li> <li>The options appear only when the custom type is supported.</li> </ul>

# **Paper Loading menu**

Use	То
Recycled Loading Duplex Off	Determine and set two-sided printing for all print jobs that specify Recycled as the paper type.
Glossy Loading Duplex Off	Determine and set two-sided printing for all print jobs that specify Glossy as the paper type.
Bond Loading Duplex Off	Determine and set two-sided printing for all print jobs that specify Bond as the paper type.
Letterhead Loading Duplex Off	Determine and set two-sided printing for all print jobs that specify Letterhead as the paper type.
Preprinted Loading  Duplex  Off	Determine and set two-sided printing for all print jobs that specify Preprinted as the paper type.
Colored Loading Duplex Off	Determine and set two-sided printing for all print jobs that specify Colored as the paper type.
Light Loading Duplex Off	Determine and set two-sided printing for all print jobs that specify Light as the paper type.

#### Notes:

- Duplex sets the printer default to two-sided printing for every print job unless one-sided printing is selected from Printing Preferences or the Print dialog.
- Off is the factory default setting for all the menus.

Use	То
Heavy Loading Duplex Off	Determine and set two-sided printing for all print jobs that specify Heavy as the paper type.
Custom [x] Loading Duplex	Determine and set two-sided printing for all print jobs that specify Custom [x] as the paper type.
Off	<b>Note:</b> Custom [x] Loading is available only when the custom type is supported.

#### Notes:

- Duplex sets the printer default to two-sided printing for every print job unless one-sided printing is selected from Printing Preferences or the Print dialog.
- Off is the factory default setting for all the menus.

# **Custom Types menu**

Use	То
Custom Type [x]  Paper Card Stock Transparency Glossy Rough/Cotton Labels Envelope	Associate a paper or specialty media type with a factory default Custom Type [x] name or a user-defined custom name created in the Embedded Web Server or MarkVision <sup>TM</sup> Professional.  Notes:  Paper is the factory default setting for Custom Type [x].  The custom media type must be supported in the selected tray or feeder in order to print from that source.
Recycled Paper Card Stock Transparency Glossy Rough/Cotton Labels Envelope	<ul> <li>Specify a paper type when Recycled is selected.</li> <li>Notes: <ul> <li>Paper is the factory default setting.</li> <li>The Recycled paper type must be supported in the selected tray or feeder in order to print from that source.</li> </ul> </li> </ul>

# **Custom Scan Sizes menu**

Use	То
Custom Scan Size [x]	Specify a custom scan size name, size, and page orientation.
Scan Size Name Width	Notes:
Height Orientation	<ul> <li>8.5 inches is the U.S. factory default setting for Width. 216 mm is the international factory default setting for Width.</li> </ul>
2 scans per side Off	<ul> <li>14 inches is the U.S. factory default setting for Height. 356 mm is the international factory default setting for Height.</li> </ul>
On	Portrait is the factory default setting for Orientation.
<u> </u>	Off is the factory default setting for 2 scans per side.

# **Universal Setup menu**

Use	То
Units of Measure	Identify the units of measure.
Inches	Notes:
Millimeters	<ul> <li>Inches is the US factory default setting.</li> </ul>
	Millimeters is the international factory default setting.
Portrait Width	Set the portrait width.
3–8.5 inches	Notes:
76–216 mm	<ul> <li>If the width exceeds the maximum, then the printer uses the maximum width allowed.</li> </ul>
	<ul> <li>8.5 inches is the US factory default setting. You can increase the width in 0.01-inch increments.</li> </ul>
	• 216 mm is the international factory default setting. You can increase the width in 1-mm increments.
Portrait Height	Set the portrait height.
3–14.17 inches	Notes:
76–360 mm	<ul> <li>If the height exceeds the maximum, then the printer uses the maximum height allowed.</li> </ul>
	<ul> <li>14 inches is the US factory default setting. You can increase the height in 0.01-inch increments.</li> </ul>
	• 356 mm is the international factory default setting. You can increase the height in 1-mm increments.
Feed Direction	Specify the feed direction if the paper can be loaded in either direction.
Short Edge Long Edge	Notes:
	Short Edge is the factory default setting.
	<ul> <li>Long Edge appears only when the longest edge is shorter than the maximum width supported in the tray.</li> </ul>

# Reports menu

### Reports menu

Use	То
Menu Settings Page	Print a report on the current printer menu settings. The report also contains information about the status of the supplies and a list of hardware options that are successfully installed.
Device Statistics	Print a report containing printer statistics, such as supply information and number of printed pages.
Network Setup Page	Print a report containing information about the network settings of the printer.  Note: This menu item appears only in printers connected to an Ethernet network or printers connected to print servers.
Network [x] Setup Page	Print a report containing information about the network settings of the printer. <b>Note:</b> This menu item appears only in printers connected to a wireless network or printers with a wireless network adapter installed.
Shortcut List	Print a report containing information about configured shortcuts.
E-mail Shortcuts	Print a report containing information about e-mail shortcuts.
FTP Shortcuts	Print a report containing information about FTP shortcuts.
Profiles List	Print a list of profiles stored in the printer.
Print Fonts	Print a report of all the fonts available for the printer language currently set in the printer.
Asset Report	Print a report containing asset information, including the printer serial number and model name. The report contains text and UPC bar codes that can be scanned into an asset database.
Event Log Summary	Print a summary of logged events.

# **Network/Ports**

#### **Active NIC menu**

Use	То
Active NIC	Allow the printer to connect to a network.
Auto [list of available network cards]	Notes:
[iist of available network cards]	Auto is the factory default setting.
	• This menu item appears only if an optional network adapter is installed.

# Standard Network or Network [x] menus

Note: Only active ports appear in this menu.

Use	То
Energy Efficient Ethernet	Set the printer Ethernet connection to a energy-saving mode.
Enable Disable	Note: Enable is the factory default setting.
PCL SmartSwitch On	Set the printer to automatically switch to PCL emulation when a print job requires it, regardless of the default printer language.
Off	Notes:
	On is the factory default setting.
	<ul> <li>When Off is used, the printer does not examine incoming data. The printer uses PostScript emulation if PS SmartSwitch is set to On. It uses the default printer language specified in the Setup menu if PS SmartSwitch is set to Off.</li> </ul>
PS SmartSwitch On	Set the printer to automatically switch to PS emulation when a print job requires it, regardless of the default printer language.
Off	Notes:
	On is the factory default setting.
	<ul> <li>When Off is used, the printer does not examine incoming data. The printer uses PCL emulation if PCL SmartSwitch is set to On. It uses the default printer language specified in the Setup menu if PCL SmartSwitch is set to Off.</li> </ul>
NPA Mode Off	Set the printer to perform the special processing required for bidirectional communication following the conventions defined by the NPA protocol.
Auto	Notes:
	Auto is the factory default setting.
	<ul> <li>Changing this setting from the control panel, and then exiting the menus causes the printer to restart. The menu selection is then updated.</li> </ul>
Network Buffer	Set the size of the network input buffer.
Auto 3KB to [maximum size allowed]	Notes:
SKB to [maximum size anowed]	Auto is the factory default setting.
	The value can be changed in 1-KB increments.
	<ul> <li>The maximum size allowed depends on the amount of memory in the printer, the size of the other link buffers, and whether Resource Save is set to On or Off.</li> </ul>
	<ul> <li>To increase the maximum size range for the Network Buffer, disable or reduce the size of the parallel, serial, and USB buffers.</li> </ul>
	<ul> <li>Changing this setting from the control panel and then exiting the menus causes the printer to restart. The menu selection is then updated.</li> </ul>
Mac Binary PS	Set the printer to process Macintosh binary PostScript print jobs.
On Off	Notes:
Auto	Auto is the factory default setting.
	Off filters print jobs using the standard protocol.
	On processes raw binary PostScript print jobs.

Use	То
Standard Network Setup OR Network [x] Setup	Display and set the printer network settings.  Note: The Wireless menu appears only when the printer is connected to a wireless
Reports	network.
Network Card	
TCP/IP	
IPv6	
Wireless	
AppleTalk	

### Reports menu

To access the menu, navigate to either of the following:

- Network/Ports > Standard Network > Standard Network Setup > Reports
- Network/Ports > Network [x] > Network [x] Setup > Reports

Use	То
Print Setup Page	Print a report containing information about the network printer settings, such as the TCP/IP address.

#### **Network Card menu**

To access the menu, navigate to either of the following:

- Network/Ports > Standard Network > Standard Network Setup > Network Card
- Network/Ports > Network [x] > Network [x] Setup > Network Card

Use	То
View Card Status Connected Disconnected	View the connection status of the wireless network adapter.
View Card Speed	View the speed of an active wireless network adapter.
Network Address  UAA  LAA	View the network addresses.
Job Timeout 0, 10–225 seconds	Set the amount of time it takes for a network print job to be canceled.  Notes:  • "90 seconds" is the factory default setting.  • A setting value of 0 disables the timeout.  • If a value between 1 and 9 is selected, then Invalid appears on the
	display, and the value is not saved.
Banner Page	Allow the printer to print a banner page.
Off On	Note: Off is the factory default setting.

# TCP/IP menu

To access the menu, navigate to either of the following:

- Network/Ports > Standard Network > Standard Network Setup > TCP/IP
- Network/Ports > Network [x] > Network [x] Setup > TCP/IP

Note: This menu is available only in network printers or printers attached to print servers.

Use	То
Set Hostname	Set the current TCP/IP host name.
	Note: This can be changed only from the Embedded Web Server.
IP Address	View or change the current TCP/IP address.
	<b>Note:</b> Manually setting the IP address sets the Enable DHCP and Enable Auto IP settings to Off. It also sets Enable BOOTP and Enable RARP to Off on systems that support BOOTP and RARP.
Netmask	View or change the current TCP/IP netmask.
Gateway	View or change the current TCP/IP gateway.
Enable DHCP	Specify the DHCP address and parameter assignment.
On Off	Note: On is the factory default setting.
Enable RARP	Specify the RARP address assignment setting.
On Off	Note: Off is the factory default setting.
Enable BOOTP	Specify the BOOTP address assignment setting.
On Off	Note: On is the factory default setting.
Enable AutoIP	Specify the Zero Configuration Networking setting.
Yes	Note: Yes is the factory default setting.
No	
Enable FTP/TFTP  Yes	Enable the built-in FTP server, which lets you send files to the printer using File Transfer Protocol.
No	Note: Yes is the factory default setting.
Enable HTTP Server	Enable the built-in Web server (Embedded Web Server). When enabled, the printer
Yes	can be monitored and managed remotely using a Web browser.
No	<b>Note:</b> Yes is the factory default setting.
WINS Server Address	View or change the current WINS server address.
Enable DDNS	View or change the current DDNS setting.
Yes	Note: Yes is the factory default setting.
No	
Enable mDNS	View or change the current mDNS setting.
Yes No	<b>Note:</b> Yes is the factory default setting.
DNS Server Address	View or change the current DNS server address.

Use	То
Backup DNS Server Address	View or change the backup DNS server addresses.
Backup DNS Server Address 2	
Backup DNS Server Address 3	
Enable HTTPS	View or change the current HTTPS setting.
Yes	Note: Yes is the factory default setting.
No	

#### IPv6 menu

To access the menu, navigate to any of the following:

- Network/Ports menu > Standard Network > Standard Network Setup > IPv6
- Network/Ports menu > Network [x] > Network [x] Setup > IPv6

Note: This menu is available only in network printers or printers that are attached to print servers.

Use	То
Enable IPv6	Enable IPv6 in the printer.
On	Note: On is the factory default setting.
Off	
Auto Configuration	Specify whether or not the network adapter accepts the automatic IPv6
On	address configuration entries provided by a router.
Off	<b>Note:</b> On is the factory default setting.
Set Hostname	Set the host name.
View Address	<b>Note:</b> These settings can be changed only from the Embedded Web Server.
View Router Address	
Enable DHCPv6	Enable DHCPv6 in the printer.
On	Note: On is the factory default setting.
Off	

#### Wireless menu

**Note:** This menu is available only in printers connected to a wireless network or printer models that have a wireless network adapter.

To access the menu, navigate to:

Network/Ports > Network [x] > Network [x] Setup > Wireless

Use	То
Wi-Fi Protected Setup	Establish a wireless network and enable network security.
Start Push Button Method	Notes:
Start PIN Method	Start Push Button Method connects the printer to a wireless network when buttons on both the printer and the access point (wireless router) are pressed within a given period of time.
	Start PIN Method connects the printer to a wireless network when a PIN on the printer is entered into the wireless settings of the access point.
Enable/Disable WPS Auto-detection	Automatically detect the connection method that an access point with
Enable	WPS uses—Start Push Button Method or Start PIN Method.
Disable	Note: Disable is the factory default setting.
Network Mode	Specify the network mode.
BSS Type	Notes:
Infrastructure Ad hoc	Infrastructure is the factory default setting. This lets the printer access a network using an access point.
	<ul> <li>Ad hoc configures wireless connection directly between the printer and a computer.</li> </ul>
Compatibility	Specify the wireless standard for the wireless network.
802.11b/g	Note: 802.11b/g/n is the factory default setting.
802.11b/g/n	
Choose Network	Select an available network for the printer to use.
View Signal Quality	View the quality of the wireless connection.
View Security Mode	View the encryption method for the wireless network.

# AppleTalk menu

To access the menu, navigate to either of the following:

- Network/Ports > Standard Network > Standard Network Setup > AppleTalk
- Network/Ports > Network [x] > Network [x] Setup > AppleTalk

Use	То
Activate	Enable or disable AppleTalk support.
Yes No	Note: No is the factory default setting.
View Name	Show the assigned AppleTalk name.
	<b>Note:</b> The AppleTalk name can be changed only from the Embedded Web Server.
View Address	Show the assigned AppleTalk address.
	<b>Note:</b> The AppleTalk address can be changed only from the Embedded Web Server.

Use	То
Set Zone	Provide a list of AppleTalk zones available on the network.
[list of zones available on the network]	<b>Note:</b> The default zone for the network is the factory default setting.

# Standard USB menu

Use	То
PCL SmartSwitch On	Set the printer to automatically switch to PCL emulation when a print job received through a USB port requires it, regardless of the default printer language.
Off	Notes:
	On is the factory default setting.
	<ul> <li>When set to Off, the printer does not examine incoming data. The printer uses     PostScript emulation if the PS SmartSwitch is set to On. It uses the default     printer language specified in the Setup menu if the PS SmartSwitch is set to     Off.</li> </ul>
PS SmartSwitch On	Set the printer to automatically switch to PS emulation when a print job received through a USB port requires it, regardless of the default printer language.
Off	Notes:
	On is the factory default setting.
	<ul> <li>When set to Off, the printer does not examine incoming data. The printer uses PCL emulation if the PCL SmartSwitch is set to On. It uses the default printer language specified in the Setup menu if the PCL SmartSwitch is set to Off.</li> </ul>
NPA Mode On	Set the printer to perform the special processing required for bidirectional communication following the conventions defined by the NPA protocol.
Off	Notes:
Auto	<ul> <li>Auto is the factory default setting. Auto sets the printer to examine data, determine the format, and then process it appropriately.</li> </ul>
	<ul> <li>The printer automatically restarts when changing the setting from the printer control panel. The menu selection is then updated.</li> </ul>
USB Buffer	Set the size of the USB input buffer.
Disabled	Notes:
Auto 3K to [maximum size allowed]	Auto is the factory default setting.
Six to [maximam size anowed]	Disabled turns off job buffering.
	The USB buffer size value can be changed in 1-KB increments.
	<ul> <li>The maximum size allowed depends on the amount of memory in the printer, the size of the other link buffers, and whether Resource Save is set to On or Off.</li> </ul>
	<ul> <li>To increase the maximum size range for USB Buffer, disable or reduce the size of the parallel, serial, and network buffers.</li> </ul>
	<ul> <li>The printer automatically restarts when the setting is changed from the printer control panel. The menu selection is then updated.</li> </ul>

Use	То
Mac Binary PS On Off Auto	Set the printer to process Macintosh binary PostScript print jobs.  Notes:  Auto is the factory default setting.  On processes raw binary PostScript print jobs.  Off filters print jobs using the standard protocol.
ENA Address  yyy.yyy.yyy.yyy	Set the network address information for an external print server.  Note: This menu is available only when the printer is attached to an external print server through the USB port.
ENA Netmask  yyy.yyy.yyy.yyy	Set the netmask information for an external print server.  Note: This menu is available only when the printer is attached to an external print server through the USB port.
ENA Gateway  yyy.yyy.yyy.yyy	Set the gateway information for an external print server.  Note: This menu is available only when the printer is attached to an external print server through the USB port.

# **SMTP Setup menu**

Use	То
Primary SMTP Gateway	Specify SMTP server gateway and port information.
Primary SMTP Gateway Port	Note: 25 is the default SMTP gateway port.
Secondary SMTP Gateway	
Secondary SMTP Gateway Port	
SMTP Timeout 5–30	Specify the amount of time in seconds before the server stops trying to send an e-mail.
	<b>Note:</b> 30 seconds is the factory default setting.
Reply Address	Specify a reply address of up to 128 characters in the e-mail sent by the printer.
Use SSL Disabled	Set the printer to use SSL for increased security when connecting to the SMTP server.
Negotiate Required	Notes:  • Disabled is the factory default setting.
	<ul> <li>When the Negotiate setting is used, the SMTP server determines if SSL will be used.</li> </ul>
SMTP Server Authentication  No authentication required	Specify the type of user authentication required for scan to e-mail privileges.
Login/Plain CRAM-MD5	<b>Note:</b> "No authentication required" is the factory default setting.
Digest-MD5 NTLM	
Kerberos 5	

Use	То
<b>Device-Initiated E-mail</b> None	Specify what credentials will be used when communicating to the SMTP server.
Use Device SMTP Credentials	Notes:
Device Userid	None is the factory default setting for Device-Initiated E-mail.
Device Password	<ul> <li>Device Userid and Device Password are used to log in to the SMTP server when Use Device SMTP Credentials is selected.</li> </ul>

# **Security menu**

### **Confidential Print menu**

Use	То
Confidential Job Expiration  Off 1 hour 4 hours 24 hours 1 week	<ul> <li>Set a limit on how long the printer stores confidential print jobs in the printer memory.</li> <li>Notes:</li> <li>If the Confidential Job Expiration setting is changed while confidential print jobs reside in the printer memory, then the expiration time for those print jobs does not change to the new default value.</li> <li>If the printer is turned off, then all confidential jobs held in the printer memory are deleted.</li> </ul>
Repeat Job Expiration  Off  1 hour  4 hours  24 hours  1 week	Set a limit on how long the printer stores print jobs.
Verify Job Expiration Off 1 hour 4 hours 24 hours 1 week	Set a limit on how long the printer stores print jobs needing verification.
Reserve Job Expiration Off 1 hour 4 hours 24 hours 1 week	Set a limit on how long the printer stores print jobs for printing at a later time.
<b>Note:</b> Off is the factory defa	ult setting.

# **Security Audit Log menu**

Use	То
Export Log	Let an authorized user export the security audit log. <b>Note:</b> The log can be downloaded from the Embedded Web Server and saved on a computer.
Pelete Log Yes No	Specify whether audit logs are deleted.  Note: Yes is the factory default setting.
Enable Audit Yes No Enable Remote Syslog No Yes Remote Syslog Facility 0–23 Severity of events to log 0–7	<ul> <li>Specify how audit logs are configured.</li> <li>Notes: <ul> <li>Enable Audit determines if events are recorded in the secure audit log and remote syslog. No is the factory default setting.</li> <li>Enable Remote Syslog determines if logs are sent to a remote server. No is the factory default setting.</li> <li>Remote Syslog Facility determines the value used to send logs to the remote syslog server. 4 is the factory default setting.</li> <li>If the security audit log is activated, then the severity value of each event is recorded. 4 is the factory default setting.</li> </ul> </li> </ul>

### **Set Date and Time menu**

Use	То
Current Date and Time	View the current date and time settings for the printer.
Manually Set Date and Time	Enter the date and time.
[input date/time]	Notes:
	Manually setting the date and time sets Enable NTP to No.
	The wizard lets you set the date and time in YYYY-MM-DD-HH:MM format.
Time Zone	Select the time zone.
[list of time zones]	Note: GMT is the factory default settings.
Automatically observe DST	Set the printer to use the applicable daylight saving time (DST) start and end times
On	associated with the printer Time Zone setting.
Off	Note: On is the factory default setting.
Enable NTP	Enable Network Time Protocol, which synchronizes the clocks of devices on a
On	network.
Off	Notes:
	On is the factory default setting.
	This setting is turned off if you manually set the date and time.

# **Settings menu**

# **General Settings menu**

Use	То
Display Language	Set the language of the text appearing on the display.
English	Note: Not all languages are available for all models. You may
Francais	need to install a special hardware for some languages.
Deutsch	
Italiano	
Espanol	
Dansk	
Norsk	
Nederlands	
Svenska	
Portugues	
Suomi	
Russian	
Polski	
Greek	
Magyar	
Turkce	
Cesky	
Simplified Chinese	
Traditional Chinese	
Korean	
Japanese	
Show Supply Estimates	View the estimates of the supplies on the control panel, Embedded
Show estimates	Web Server, menu settings, and device statistics reports.
Do not show estimates	<b>Note:</b> Show estimates is the factory default setting.
Eco-Mode	Minimize the use of energy, paper, or specialty media.
Off	Notes:
Energy	
Energy/Paper	<ul> <li>Off is the factory default setting.</li> </ul>
Paper	<ul> <li>When setting Eco-Mode to Energy or Paper, performance may be affected, but print quality is not.</li> </ul>
ADF Loaded Beep	Specify whether the ADF sounds a beep when paper is loaded.
Enabled	<b>Note:</b> Enabled is the factory default setting.
Disabled	
Quiet Mode	Minimize the printer noise.
Off	<b>Note:</b> Off is the factory default setting.
On	

Use	То
Run Initial Setup	Run the setup wizard.
Yes	
No	
Paper Sizes	Specify the unit of measurement for paper sizes.
US	Notes:
Metric	US is the factory default setting.
	<ul> <li>The initial setting is determined by your country or region selection in the initial setup wizard.</li> </ul>
Scan to PC Port Range [port range]	Specify a valid port range for printers behind a port blocking firewall.
	Note: 9751:12000 is the factory default setting.
Home screen customization	Change the icons that appear on the home screen.
Change Language	For each icon, select from the following options:
Сору	Display
E-mail Shortcuts	Do Not display
FTP Shortcuts	
Search Held Jobs	
Held Jobs	
Bookmarks	
Jobs by User	
One Page Copy	Set copies from the scanner glass to only one page at a time.
Off	<b>Note:</b> Off is the factory default setting.
On	
Allow Background Removal	Specify whether image background removal is allowed.
On	Note: On is the factory default setting.
Off	
Allow Custom Job Scans	Scan multiple jobs to one file.
On	<b>Note:</b> On is the factory default setting. If On is selected, then
Off	Allow Custom Job Scans can be enabled for specific jobs.
Scanner Jam Recovery	Specify how a scanned job should be reloaded if a paper jam occurs
Job Level	in the ADF.
Page Level	Note: Job level is the factory default setting.
Alarms	Set an alarm when the printer requires user intervention.
Alarm Control	For each alarm type, select from the following options:
Cartridge Alarm	Off
	Single
	Continuous
	Notes:
	<ul> <li>Single is the factory default setting. This sounds three quick beeps.</li> </ul>

Use	То
Timeouts Sleep Mode	Set the amount of time in minutes the printer waits after a job is printed before it goes into a reduced power state.
Disabled	Notes:
1–60	20 is the factory default setting.
	Lower settings conserve more energy, but may require longer warm-up times.
	<ul> <li>Select the lowest setting if the printer shares an electrical circuit with room lighting or you notice lights flickering in the room.</li> </ul>
	<ul> <li>Select a high setting if the printer is in constant use. Under most circumstances, this keeps the printer ready to print with minimum warm-up time.</li> </ul>
	Disabled appears only if Energy Conserve is set to Off.
Timeouts	Print a job with the display turned off.
Print with Display Off Allow printing with display off Display on when printing	<b>Note:</b> Display on when printing is the factory default setting.
Timeouts	Set the amount of time the printer waits before it enters Hibernate
Hibernate Timeout	mode.
Disabled	<b>Note:</b> 3 days is the factory default setting.
20 minutes	
1–3 hours	
6 hours	
1–3 days	
1–2 weeks	
1 month	
Hibernate Timeout on Connection Hibernate	Set the printer to Hibernate mode even if there is an active Ethernet connection.
Do Not Hibernate	<b>Note:</b> Do Not Hibernate is the factory default setting.
Timeouts Screen Timeout	Set the amount of time in seconds before returning the control panel to a Ready state.
15–300	<b>Note:</b> 30 is the factory default setting.
Timeouts	Set the amount of time in seconds the printer waits to receive an
Print Timeout	end-of-job message before canceling the rest of the job.
Disabled	Notes:
1–255	<ul> <li>90 is the factory default setting.</li> </ul>
	When the timer expires, any partially printed page still in the
	printer is printed, and then the printer checks to see if any new print jobs are waiting.
	Print Timeout is available only when using PCL emulation.

Use	То
Timeouts Wait Timeout	Set the amount of time in seconds the printer waits for additional data before canceling a print job.
Disabled	Notes:
15–65535	<ul> <li>40 is the factory default setting.</li> </ul>
	Wait Timeout is available only when the printer is using
	PostScript emulation.
Error Recovery	Set the printer to restart when an error occurs.
Auto Reboot	Note: Reboot always is the factory default setting.
Reboot when idle	
Reboot always Reboot never	
Error Recovery	Determine the number of automatic reboots the printer can
Max Auto Reboots	perform.
1–20	Notes:
	• 2 is the factory default setting.
	If the printer reaches the maximum number of reboots
	within a certain amount of time, the printer does not
	continue to reboot, and the error message appears on the display.
Print Recovery	Let the printer automatically continue printing from certain offline
Auto Continue	situations when these are not resolved within the specified time
Disabled	period.
5–255	Note: Disabled is the factory default setting.
Print Recovery	Specify whether the printer reprints jammed pages.
Jam Recovery	Notes:
On Off	Auto is the factory default setting. The printer reprints
Auto	jammed pages unless the memory required to hold the
	<ul><li>pages is needed for other printer tasks.</li><li>On sets the printer to always reprint jammed pages.</li></ul>
	Off sets the printer to always reprint jamined pages.      Off sets the printer to never reprint jammed pages.
Brint Bosovery	
Print Recovery Page Protect	Successfully print a page that may not have printed otherwise.
Off	Notes:
On	<ul> <li>Off is the factory default setting. This prints a partial page when there is not enough memory to print the whole page.</li> </ul>
	<ul> <li>On sets the printer to print the entire page.</li> </ul>
Press Sleep Button	Determine how the printer, while in idle state, reacts to a short
Do Nothing	press of the Sleep button.
Sleep	Note: Sleep is the factory default setting.
Hibernate	

Use	То
Press and Hold Sleep Button Do Nothing	Determine how the printer, while in idle state, reacts to a long press of the Sleep button.
Sleep Hibernate	Note: Do Nothing is the factory default setting.
Factory Defaults  Do Not Restore  Restore Now	Use the printer factory default settings.  Notes:
	Do Not Restore is the factory default setting.
	<ul> <li>Restore Now sets all printer settings to the factory default settings except for the Network/Ports menu settings. All downloads stored in the RAM are deleted. Downloads stored in the flash memory or on a hard disk are not affected.</li> </ul>
Custom Home Message	Select a custom home message that appears as an alternating
Off	display of the printer status.
IP Address	
Hostname	
Contact Name	
Location	
Zero Configuration Name	
Custom Text [x]	

# **Copy Settings menu**

Use	То
Content Type	Specify the content of the original document.
Text	Note: Text/Photo is the factory default setting.
Graphics	
Text/Photo	
Photo	
Content Source	Specify how the original document is produced.
Black/White Laser	Note: Color Laser is the factory default setting.
Color Laser	-
Inkjet	
Photo/Film	
Magazine	
Newspaper	
Press	
Other	
Color	Specify whether copies are printed in color.
On	Note: On is the factory default setting.
Off	

Use	То
Allow color copies On	Enable color in copies.  Notes:
Off	<ul> <li>On is the factory default setting.</li> <li>Setting this to Off will hide all color-specific menus.</li> <li>This setting overrides the Color setting.</li> </ul>
Sides (Duplex)  1 sided to 1 sided 1 sided to 2 sided 2 sided to 1 sided 2 sided to 2 sided	<ul> <li>Specify whether an original document is two-sided (duplex) or one-sided, and then specify whether the copy should be two-sided or one-sided.</li> <li>Notes: <ul> <li>1 sided to 1 sided—The original document has print on one side, and the copy will also have print on one side.</li> <li>1 sided to 2 sided—The original document has print on one side, while the copy will have print on both sides.</li> <li>2 sided to 1 sided—The original document has print on both sides, while the copy will have print on just one side.</li> <li>2 sided to 2 sided—The original document has print on both sides, and the copy will also have print on both sides.</li> </ul> </li> </ul>
Paper Saver Off 2-up Portrait 4-up Portrait 2-up Landscape 4-up Landscape	Allow copying of two or four sheets of a document on one page.  Note: Off is the factory default setting.
Print Page Borders On Off	Allow page borders in printed copies.  Note: Off is the factory default setting.
Collate (1,1,1) (2,2,2) (1,2,3) (1,2,3)	Keep the pages of a print job stacked in sequence when printing multiple copies.  Note: "(1,2,3) (1,2,3)" is the factory default setting.

Original Size Letter	Specify the paper size of the original document.
Letter	Specify the paper size of the original document.
I .	Notes:
Legal	
Executive	<ul> <li>Letter is the U.S. factory default setting. A4 is the international factory default setting.</li> </ul>
Folio	
Statement	Legal, Folio, and Oficio (Mexico) paper sizes are supported only in the ADF.
Oficio (Mexico)	
Universal	
Mixed Sizes	
A4	
A5	
A6	
JIS B5	
Custom Scan Size [x]	
Book Original	
Business Card	
3 x 5 in.	
4 x 6 in.	
ID Card	
Copy To Source	Specify the paper source for copy jobs.
Tray [x]	Note: Tray 1 is the factory default setting.
MP Feeder	
Manual Feeder	
Transparency Separators	Place a sheet of paper between transparencies.
On	Note: On is the factory default setting.
Off	
Separator Sheets	Place a sheet of paper between pages, copies, or jobs.
Off	Note: Off is the factory default setting.
Between Copies	
Between Jobs	
Between Pages	
Separator Sheet Source	Specify the paper source for the separator sheet.
Tray [x]	Note: Tray 1 is the factory default setting.
MP Feeder	
Darkness	Specify the level of darkness for the copy job.
1–9	Note: 5 is the factory default setting.
Number of Copies	Specify the number of copies for the copy job.
1–999	Note: 1 is the factory default setting.

Use	То
Overlay  Confidential Copy Draft Urgent Custom Off	Specify the overlay text printed on each page of the copy job.  Note: Off is the factory default setting.
Allow priority copies On Off	Allow interruption of a print job to copy a page or document.  Note: On is the factory default setting.
Background Removal -4 to 4	Adjust the amount of background visible on a copy.  Note: 0 is the factory default setting.
Auto Center Off On	Automatically center the content on the page.  Note: Off is the factory default setting.
Color Dropout  Color Dropout  None  Red  Green  Blue  Default Red Threshold  0–255  Default Green Threshold  0–255  Default Blue Threshold  0–255	Specify which color to drop during scanning and to adjust the dropout setting for each color threshold.  Notes:  None is the factory default setting for Color Dropout.  128 is the factory default setting for each color threshold.
Contrast 0–5 Best for content	Specify the contrast used for the copy job.  Note: "Best for content" is the factory default setting.
Mirror Image Off On	Create a mirror image of the original document.  Note: Off is the factory default setting.
Negative Image Off On	Create a negative image of the original document.  Note: Off is the factory default setting.
Shadow Detail -4 to 4	Adjust the amount of shadow detail visible on a copy.  Note: 0 is the factory default setting.
Scan edge to edge Off On	Allow edge-to-edge scanning of the original document.  Note: Off is the factory default setting.

Use	То
Sharpness	Adjust the amount of sharpness of a copy.
1–5	Note: 3 is the factory default setting.
Temperature	Enable the user to specify "warm" or "cool" outputs.
-4 to 4	<b>Note:</b> "Cool" values generate a bluer output than the default, while "warm" values generate a redder output than the default.

# E-mail Settings menu

Use	То
E-mail Server Setup  Send me a copy  Never appears  On by default  Off by default  Always On	Send a copy of the e-mail to the sender.  Note: Never appears is the factory default setting.
E-mail Server Setup  Max E-mail size  0–65535 KB	Specify the maximum e-mail size.  Note: E-mails greater than the specified maximum size are not sent.
Format  PDF (.pdf)  TIFF (.tif)  JPEG (.jpg)  XPS (.xps)	Specify the file format.  Note: PDF (.pdf) is the factory default setting.
PDF Settings PDF Version 1.2–1.7 A–1a Secure PDF Off On	Configure the PDF settings.  Notes:  1.5 is the factory default setting for PDF Version.  Off is the factory default setting for Secure PDF and Searchable PDF. Secure PDF requires you to enter your password twice.
Content Type  Text Graphics Text/Photo Photo	Specify the content of the original document.  Note: Text/Photo is the factory default setting.

Use	То
Content Source	Specify how the original document was produced.
Black/White Laser	Note: Color Laser is the factory default setting.
Color Laser	
Inkjet	
Photo/Film	
Magazine	
Newspaper Press	
Other	
Color	Specify whether the printer captures and transmits content in color.
Off	Note: On is the factory default setting.
On	
Resolution	Specify the resolution of the scan in dots per inch.
75 dpi	<b>Note:</b> 150 dpi is the factory default setting.
150 dpi 200 dpi	
·	
300 dpi 400 dpi	
600 dpi	
Darkness	Lighten or darken the output.
1–9	Note: 5 is the factory default setting.
Orientation	Specify the orientation of the scanned image.
Portrait	<b>Note:</b> Portrait is the factory default setting.
Landscape	
Original Size	Specify the size of the original document.
Letter	Notes:
Legal	<ul> <li>Letter is the U.S. factory default setting. A4 is the international factory default</li> </ul>
Executive	setting.
Folio	<ul> <li>Legal, Folio, and Oficio (Mexico) paper sizes are supported only in the ADF.</li> </ul>
Statement	zegan, rono, and onoto (mexico, paper sizes are supported only in the rist.
Oficio (Mexico)	
Universal Mixed Sizes	
A4	
A4 A5	
A6	
JIS B5	
Custom Scan Size [x]	
Book Original	
Business Card	
3 x 5 in.	
4 x 6 in.	

Use	То
Sides (Duplex) Off Long edge Short edge	Specify the orientation of the original documents loaded in the ADF for two-sided scanning.  Note: Off is the factory default setting.
JPEG Quality  Best for content 5–90	Set the quality of a JPEG photo image in relation to file size and quality of the image.  Notes:  Best for content is the factory default setting.  5 reduces the file size and quality of the image.  90 provides the best image quality, but the file size is very large.
Text Default 5–90	Set the quality of a text image in relation to file size and quality of the image.  Note: 75 is the factory default setting.
Text/Photo Default 5–90	Set the quality of a text or photo image in relation to file size and the quality of the image.  Note: 75 is the factory default setting.
Photo Default 5–90	Set the quality of a photo image in relation to file size and the quality of the image.  Note: 50 is the factory default setting.
E-mail images sent as Attachment Web Link	Specify how the images are sent.  Note: Attachment is the factory default setting.
<b>Use Multi-Page TIFF</b> On Off	Provide a choice between single-page TIFF files and multiple-page TIFF files. For a multiple-page scan-to-e-mail job, either one TIFF file is created containing all the pages, or multiple TIFF files are created with one file for each page of the job.  Note: On is the factory default setting.
Transmission Log Print log Do not print log Print only for error	Specify whether to print the transmission log.  Note: Print log is the factory default setting.
Log Paper Source Tray [x] MP Feeder	Specify the paper source for printing e-mail logs.  Note: Tray 1 is the factory default setting.
E-mail Bit Depth  1 bit 8 bit	Enable the Text/Photo mode to produce smaller file sizes by using 1-bit images when Color is set to Off.  Note: 8 bit is the factory default setting.
Allow Save as Shortcut On Off	Save e-mail addresses as shortcuts.  Notes:  On is the factory default setting.  When set to Off, the "Save as Shortcut" button does not appear on the e-mail destination screen.
Background Removal -4 to 4	Adjust the amount of background visible on a scanned image.  Note: 0 is the factory default setting.

Use	То
Color Dropout	Specify which color to drop and to adjust the dropout setting for each color threshold.
Color Dropout	Notes:
None	
Red	None is the factory default setting for Color Dropout.
Green	128 is the factory default setting for each color threshold.
Blue	
Default Red Threshold	
0–255	
Default Green Threshold	
0–255	
Default Blue Threshold	
0–255	
Contrast	Specify the contrast of the output.
0–5	Note: Best for content is the factory default setting.
Best for content	
Mirror Image	Create a mirror image of the original document.
Off	Note: Off is the factory default setting.
On	
Negative Image	Create a negative image of the original document.
Off	Note: Off is the factory default setting.
On	
Shadow Detail	Adjust the amount of shadow detail visible on a scanned image.
-4 to 4	Note: 0 is the factory default setting.
Scan edge to edge	Specify whether the original document is scanned edge-to-edge.
Off	Note: Off is the factory default setting.
On	, ,
Sharpness	Adjust the amount of sharpness on a scanned image.
1–5	Note: 3 is the factory default setting.
Temperature	Specify warm or cool outputs. Cool values generate a bluer output than the default
-4 to 4	while warm values generate a redder output than the default.
	Note: 0 is the factory default setting.

# **FTP Settings menu**

Use	То
Format	Specify the file format.
PDF (.pdf)	Note: PDF (.pdf) is the factory default setting.
TIFF (.tif)	
JPEG (.jpg)	
XPS (.xps)	

Use	То
PDF Settings PDF Version 1.2–1.7 A–1a Secure PDF Off On	Configure the PDF settings.  Notes:  1.5 is the factory default setting for PDF Version.  Off is the factory default setting for Secure PDF. Secure PDF requires you to enter your password twice.
Content Type  Text Graphics Text/Photo Photo	Specify the content of the original document.  Note: Text/Photo is the factory default setting.
Content Source  Black/White Laser  Color Laser Inkjet Photo/Film Magazine Newspaper Press Other	Specify how the original document was produced.  Note: Color Laser is the factory default setting.
Color Off On	Specify whether the printer captures and transmits content in color.  Note: On is the factory default setting.
Resolution 75 dpi 150 dpi 200 dpi 300 dpi 400 dpi 600 dpi	Specify the quality of the scan in dots per inch (dpi).  Note: 150 dpi is the factory default setting.
Darkness 1–9	Lighten or darken the output.  Note: 5 is the factory default setting.
Orientation Portrait Landscape	Specify the orientation of the scanned image.  Note: Portrait is the factory default setting.

Use	То
Original Size	Specify the size of the original document.
Letter	Notes:
Legal	
Executive	<ul> <li>Letter is the U.S. factory default setting. A4 is the international factory default setting.</li> </ul>
Folio	
Statement	<ul> <li>Legal, Folio, and Oficio (Mexico) paper sizes are supported only in the ADF.</li> </ul>
Oficio (Mexico)	
Universal	
Mixed Sizes	
A4	
A5	
A6	
JIS B5	
Custom Scan Size [x]	
Book Original	
Business Card	
3 x 5 in. 4 x 6 in.	
Sides (Duplex)	Specify the orientation of the original documents loaded in the ADF for two-sided
Off	scanning.
Long edge	<b>Note:</b> Off is the factory default setting.
Short edge	
JPEG Quality	Set the quality of a JPEG photo image in relation to file size and quality of the image.
Best for content	Notes:
5–90	<ul> <li>Best for content is the factory default setting.</li> </ul>
	• 5 reduces the image quality and the file size.
	90 produces the best image quality, but the file size is very large.
Text Default	Set the quality of the text in relation to the size and quality of the image.
5–90	<b>Note:</b> 75 is the factory default setting.
Text/Photo Default	Set the quality of a text or photo image in relation to the size and quality of the image.
5–90	<b>Note:</b> 75 is the factory default setting.
Photo Default	Set the quality of a photo image in relation to the size and quality of the image.
5–90	
3-90	Note: 50 is the factory default setting.
Use Multi-Page TIFF	Provide a choice between single-page TIFF files and multiple-page TIFF files. For a
On	multiple-page scan-to-FTP job, either one TIFF file is created containing all the pages, or multiple TIFF files are created with one file for each page of the job.
Off	
	Note: On is the factory default setting.
Transmission Log	Specify whether to print the transmission log.
Print log	<b>Note:</b> Print log is the factory default setting.
Do not print log	
Print only for error	

Use	То
Log Paper Source	Specify a paper source when printing FTP logs.
Tray [x]	Note: Tray 1 is the factory default setting.
Manual Feeder	
FTP bit Depth	Enable the Text/Photo mode to have smaller file sizes by using 1-bit images when
8 bit	Color is set to Off.
1 bit	<b>Note:</b> 8 bit is the factory default setting.
Allow Save as Shortcut	Enable shortcut creation for FTP addresses.
On	Note: On is the factory default setting.
Off	
Background Removal	Adjust the amount of background visible on a copy.
-4 to 4	Note: 0 is the factory default setting.
Color Dropout	Specify which color to drop and to adjust the dropout setting for each color threshold.
Color Dropout	Notes:
None	Notes:
Red	<ul> <li>None is the factory default setting for Color Dropout.</li> </ul>
Green	<ul> <li>128 is the factory default setting for each color threshold.</li> </ul>
Blue	
Default Red Threshold	
0–255	
Default Green Threshold	
0–255	
Default Blue Threshold	
0–255	
Contrast	Specify the contrast of the output.
0–5	Note: Best for content is the factory default setting.
Best for content	, and the second
Mirror Image	Create a mirror image of the original document.
Off	Note: Off is the factory default setting.
On	
Negative Image	Create a negative image of the original document.
Off	Note: Off is the factory default setting.
On	Note: On is the factory default setting.
Shadow Detail	Adjust the amount of shadow detail visible on a scanned image.
-4 to 4	<b>Note:</b> 0 is the factory default setting.
Scan adge to adge	
Scan edge to edge Off	Specify whether the original document is scanned edge-to-edge.
On	<b>Note:</b> Off is the factory default setting.
Sharpness	Specify the amount of sharpness of the scanned image.
1–5	Note: 3 is the factory default setting.

# **Print Settings**

### Setup menu

Use	То
Printer Language	Set the default printer language.
PCL Emulation PS Emulation	Notes:
	<ul> <li>PS Emulation is the factory default setting. PS Emulation uses a PS interpreter for processing print jobs.</li> </ul>
	<ul> <li>PCL Emulation uses a PCL interpreter for processing print jobs.</li> </ul>
	<ul> <li>Setting a printer language as the default does not prevent a software program from sending print jobs that use another printer language.</li> </ul>
Print Area	Set the logical and physical printable area.
Normal	Notes:
Fit To Page Whole Page	<ul> <li>Normal is the factory default setting. When attempting to print data in the non-printable area defined by the Normal setting, the printer clips the image.</li> </ul>
	<ul> <li>Fit To Page fits the page content into the selected paper size.</li> </ul>
	<ul> <li>Whole Page allows the image to be moved into the non-printable area defined by the Normal setting, but the printer clips the image at the Normal setting boundary. This setting affects only pages printed using a PCL 5e interpreter and has no effect on pages printed using the PCL XL or PostScript interpreter.</li> </ul>
Printer Usage	Set color toner use in printing.
Max Yield Max Speed	<b>Note:</b> Max Yield is the factory default setting.
Black Only Mode On	Set the printer to print text and graphics using only the black toner cartridge.
Off	<b>Note:</b> Off is the factory default setting.
Resource Save On Off	Specify how the printer handles temporary downloads, such as fonts and macros stored in the RAM, when the printer receives a job that requires more than the available memory.
	Notes:
	<ul> <li>Off is the factory default setting. Off sets the printer to retain the downloads only until memory is needed. Downloads are deleted in order to process print jobs.</li> </ul>
	<ul> <li>On sets the printer to retain downloads during language changes and printer resets. If the printer runs out of memory, then Memory full [38] appears, but downloads are not deleted.</li> </ul>

## Finishing menu

Use	То
Sides (Duplex) 1 sided	Specify whether two-sided (duplex) printing is set as the default for all print jobs.  Notes:
2 sided	• "1 sided" is the factory default setting.
	<ul> <li>You can set two-sided printing from the printer software.</li> <li>For Windows users:</li> </ul>
	Click <b>File</b> > <b>Print</b> , and then click <b>Properties</b> , <b>Preferences</b> , <b>Options</b> , or <b>Setup</b> . For Macintosh users:
	Choose <b>File</b> > <b>Print</b> , and then adjust the settings from the Print dialog and pop-up menus.
Duplex Binding	Define binding for duplexed pages in relation to page orientation.
Long Edge Short Edge	Notes:
Short Edge	<ul> <li>Long Edge is the factory default setting. This assumes binding along the long edge of the page (left edge for portrait and top edge for landscape).</li> </ul>
	<ul> <li>Short Edge assumes binding along the short edge of the page (top edge for portrait and left edge for landscape).</li> </ul>
Copies	Specify the default number of copies for each print job.
1–999	Note: 1 is the factory default setting.
Blank Pages	Specify whether blank pages are inserted in a print job.
Do Not Print Print	Note: Do Not Print is the factory default setting.
Collate	Stack the pages of a print job in sequence when printing multiple copies.
(1,1,1) (2,2,2) (1,2,3) (1,2,3)	Note: "(1,2,3) (1,2,3)" is the factory default setting.
Separator Sheets	Specify whether blank separator sheets are inserted.
Off	Notes:
Between Copies	Off is the factory default setting.
Between Jobs Between Pages	<ul> <li>Between Copies inserts a blank sheet between each copy of a print job if Collate is set to "(1,2,3) (1,2,3)." If Collate is set to "(1,1,1) (2,2,2)," then a blank page is inserted between each set of printed pages, such as after all page 1's and after all page 2's.</li> </ul>
	Between Jobs inserts a blank sheet between print jobs.
	<ul> <li>Between Pages inserts a blank sheet between each page of a print job. This setting is useful when printing transparencies or when inserting blank pages in a document.</li> </ul>
Separator Source	Specify the paper source for the separator sheet.
Tray [x]  Multipurpose Feeder	Note: Tray 1 (standard tray) is the factory default setting.

Use	То
Paper Saver  Off 2-Up 3-Up 4-Up 6-Up 9-Up 12-Up 16-Up	<ul> <li>Print multiple pages on a single sheet of paper.</li> <li>Notes:</li> <li>Off is the factory default setting.</li> <li>When the number of pages per sheet is selected, each page is scaled so that the number of pages you want can be displayed on the sheet.</li> </ul>
Paper Saver Ordering Horizontal Reverse Horizontal Reverse Vertical Vertical	<ul> <li>Specify the order in which pages are printed on a single sheet when using Paper Saver.</li> <li>Notes:</li> <li>Horizontal is the factory default setting.</li> <li>Positioning depends on the number of page images and whether they are in portrait or in landscape orientation.</li> </ul>
Paper Saver Orientation Auto Landscape Portrait	Specify the orientation in which pages are printed on a single sheet.  Note: Auto is the factory default setting. The printer chooses between portrait and landscape.
Paper Saver Border  None  Solid	Print a border when using Paper Saver.  Note: None is the factory default setting.

## **Quality menu**

Use	То
Print Mode Color Black Only	Specify whether images are printed in black and white or in color.  Notes:  Color is the factory default setting.  The printer driver is capable of overriding this setting.
Color Correction Auto Off Manual	Adjust the color output on the printed page.  Notes:  Auto is the factory default setting. This applies different color conversion tables to each object on the printed page.  Off turns off color correction.
	<ul> <li>Manual allows customization of the color tables using the settings available from the Manual Color menu.</li> <li>Due to the differences in additive and subtractive colors, certain colors that appear on computer monitors are impossible to duplicate on the printed page.</li> </ul>
Print Resolution 1200 dpi 4800 CQ	Specify the printed output resolution in dots per inch or in color quality (CQ).  Note: 4800 CQ is the factory default setting.

Use	То
Toner Darkness	Lighten or darken the printed output.
1–5	Notes:
	4 is the factory default setting.
	Selecting a smaller number can help conserve toner.
Enhance Fine Lines On	Enable a print mode preferable for files such as architectural drawings, maps, electrical circuit diagrams, and flow charts.
Off	Notes:
	Off is the factory default setting.
	<ul> <li>To set this option using the Embedded Web Server, type the network printer IP address in the Web browser address field.</li> </ul>
	<ul> <li>You can set this option from the software program.</li> <li>For Windows users:</li> </ul>
	Click <b>File</b> > <b>Print</b> , and then click <b>Properties</b> , <b>Preferences</b> , <b>Options</b> , or <b>Setup</b> . For Macintosh users:
	Choose <b>File</b> > <b>Print</b> , and then adjust the settings from the Print dialog and pop-up menus.
Color Saver On	Reduce the amount of toner used for graphics and images. The amount of toner used for text is not reduced.
Off	Notes:
	Off is the factory default setting.
	On overrides Toner Darkness settings.
RGB Brightness	Adjust the printed output either by lightening or darkening it. You can conserve toner
-6 to 6	by lightening the output.
	Note: 0 is the factory default setting.
RGB Contrast	Adjust the contrast of printed objects.
0–5	Note: 0 is the factory default setting.
RGB Saturation	Adjust saturation in color outputs.
0–5	Note: 0 is the factory default setting.
Color Balance	Adjust color in printed output by increasing or decreasing the amount of toner being
Cyan	used for each color.
-5 to 5	Note: 0 is the factory default setting.
Magenta	
-5 to 5	
Yellow	
-5 to 5	
Black	
-5 to 5	
Reset Defaults	

Use	То
Color Samples sRGB Display	Print sample pages for each of the RGB and CMYK color conversion tables used in the printer.
sRGB Vivid	Notes:
Display—True Black	
Vivid	<ul> <li>Selecting any setting prints the sample.</li> <li>Color samples consist of a series of colored boxes along with the RGB or CMYK</li> </ul>
Off—RGB	combination that creates the color observed. These pages can be used to help
US CMYK Euro CMYK	decide which combinations to use to get the printed output you want.
Vivid CMYK	To access a complete list of color sample pages using the Embedded Web Server,      To access a complete list of color sample pages using the Embedded Web Server,      To access a complete list of color sample pages using the Embedded Web Server,      To access a complete list of color sample pages using the Embedded Web Server,      To access a complete list of color sample pages using the Embedded Web Server,      To access a complete list of color sample pages using the Embedded Web Server,      To access a complete list of color sample pages using the Embedded Web Server,      To access a complete list of color sample pages using the Embedded Web Server,      To access a complete list of color sample pages using the Embedded Web Server,      To access a complete list of color sample pages using the Embedded Web Server,      To access a complete list of color sample pages using the Embedded Web Server,      To access a complete list of color sample pages using the Embedded Web Server,      To access a complete list of the Embedded Web Server,      To access a complete list of the Embedded Web Server,      To access a complete list of the Embedded Web Server,      To access a complete list of the Embedded Web Server,      To access a complete list of the Embedded Web Server,      To access a complete list of the Embedded Web Server,      To access a complete list of the Embedded Web Server,      To access a complete list of the Embedded Web Server,      To access a complete list of the Embedded Web Server,      To access a complete list of the Embedded Web Server,      To access a complete list of the Embedded Web Server,      To access a complete list of the Embedded Web Server,      To access a complete list of the Embedded Web Server,      To access a complete list of the Embedded Web Server,      To access a complete list of the Embedded Web Server,      To access a complete list of the Embedded Web Server,      To access a complete list of the Embedded Web Server,      To access a complete list of t
Off—CMYK	type the network printer IP address in the Web browser address field.
Manual Color	Customize the RGB color conversions.
RGB Image	Select from the following options:
RGB Text	Vivid
RGB Graphics	sRGB Display
	Display—True Black sRGB Vivid
	Off
	Notes:
	<ul> <li>sRGB Display is the factory default setting for RGB Image. This applies a color conversion table to an output that matches the colors displayed on a computer monitor.</li> </ul>
	<ul> <li>sRGB Vivid is the factory default setting for RGB Text and RGB Graphics. This applies a color table that increases saturation. This is preferred for business graphics and text.</li> </ul>
	<ul> <li>Vivid applies a color conversion table that produces brighter, more saturated colors.</li> </ul>
	<ul> <li>"Display—True Black" applies a color conversion table that uses only black toner for neutral gray colors.</li> </ul>
	Off turns off color conversion.
Manual Color (continued)	Customize the CMYK color conversions.
CMYK Image	Select from the following options:
CMYK Text	US CMYK
CMYK Graphics	Euro CMYK Vivid CMYK
	Off
	Notes:
	<ul> <li>US CMYK is the factory default setting. This applies a color conversion table that tries to produce output that matches SWOP color output.</li> </ul>
	<ul> <li>Euro CMYK is the international factory default setting. This applies a color conversion table that tries to produce output that matches Euroscale color output.</li> </ul>
	Vivid CMYK increases color saturation for the US conversion table.
	Off turns off color conversion.

Use	То
Spot Color Replacement	Assign specific CMYK values to named spot colors.
	Note: This menu is available only in the Embedded Web Server.
Color Adjust	Initiate a recalibration of color conversion tables and allow the printer to make adjustments for color variations in output.
	Notes:
	<ul> <li>Adjusting color starts when the menu is selected. Adjusting color appears on the display until the process is finished.</li> </ul>
	Color variations in output sometimes result from changeable conditions such as room temperature and humidity. Color adjustments are made on printer algorithms. Color alignment is also recalibrated in this process.

## **Utilities menu**

Use	То
Activate Hex Trace	Assist in isolating the source of a print job problem.
	Notes:
	<ul> <li>When activated, all data sent to the printer is printed in hexadecimal and character representation, and control codes are not executed.</li> </ul>
	To exit or deactivate Hex Trace, turn off or reset the printer.
Coverage Estimator Off	Provide an estimate of the percentage coverage of toner on a page. The estimate is printed on a separate page at the end of each print job.
On	Note: Off is the factory default setting.

### **XPS** menu

Use	То
Print Error Pages	Print a page containing information on errors, including XML markup errors.
Off	Note: Off is the factory default setting.
On	

### PDF menu

Use	То
Scale to Fit	Scale page content to fit the selected paper size.
Yes	<b>Note:</b> No is the factory default setting.
No	
Annotations	Print annotations in a PDF.
Do Not Print	<b>Note:</b> Do Not Print is the factory default setting.
Print	

## PostScript menu

Use	То
Print PS Error	Print a page containing the PostScript error.
On Off	<b>Note:</b> Off is the factory default setting.
Lock PS Startup Mode	Allow users to disable the SysStart file.
On Off	Note: Off is the factory default setting.
Image Smoothing On	Enhance the contrast and sharpness of low-resolution images and smoothen their color transitions.
Off	Notes:
	Off is the factory default setting.
	<ul> <li>Image Smoothing has no effect on images that are 300 dpi or higher in resolution.</li> </ul>

#### **PCL Emul menu**

Use	То
Font Source	Specify the set of fonts used in the Font Name menu.
Resident	Notes:
Download All	<ul> <li>"Resident" is the factory default setting. It shows the factory default set of fonts downloaded in the RAM.</li> </ul>
	<ul> <li>"Download" shows all the fonts downloaded in the RAM.</li> </ul>
	"All" shows all fonts available to any option.
Font Name	Identify a specific font and where it is stored.
Courier 10	Note: Courier 10 is the factory default setting.
Symbol Set	Specify the symbol set for each font name.
10U PC-8	Notes:
12U PC-850	<ul> <li>10U PC-8 is the U.S. factory default setting. 12U PC-850 is the international factory default setting.</li> </ul>
	<ul> <li>A symbol set is a set of alphabetical and numeric characters, punctuation, and special symbols. Symbol sets support the different languages or specific programs, such as math symbols for scientific text. Only the supported symbol sets are shown.</li> </ul>
PCL Emulation Settings	Change the point size for scalable typographic fonts.
Point Size 1.00–1008.00	Notes:
	• 12 is the factory default setting.
	<ul> <li>Point size refers to the height of the characters in the font. One point equals approximately 0.014 of an inch. This can be increased or decreased in 0.25-point increments.</li> </ul>

Use	То
PCL Emulation Settings Pitch 0.08–100.00	Specify the font pitch for scalable monospaced fonts.  Notes:  10 is the factory default setting.  Pitch refers to the number of fixed-space characters per inch (cpi). This can be increased or decreased in 0.01-cpi increments.  For non-scalable monospaced fonts, the pitch appears on the display but cannot be changed.
PCL Emulation Settings Orientation Portrait Landscape	<ul> <li>Specify the orientation of text and graphics on a page.</li> <li>Notes:</li> <li>Portrait is the factory default setting. It prints text and graphics parallel to the short edge of the page.</li> <li>Landscape prints text and graphics parallel to the long edge of the page.</li> </ul>
PCL Emulation Settings Lines per Page 1–255	<ul> <li>Specify the number of lines that print on each page.</li> <li>Notes:</li> <li>60 is the U.S. factory default setting. 64 is the international default setting.</li> <li>The printer sets the amount of space between each line based on the Lines per Page, Paper Size, and Orientation settings. Select the paper size and orientation before setting Lines per Page.</li> </ul>
PCL Emulation Settings A4 Width 198 mm 203 mm	Set the printer to print on A4-size paper.  Notes:  198 mm is the factory default setting.  The 203-mm setting sets the width of the page to allow the printing of eighty 10-pitch characters.
PCL Emulation Settings Auto CR after LF On Off	Specify whether the printer automatically performs a carriage return (CR) after a line feed (LF) control command.  Note: Off is the factory default setting.
PCL Emulation Settings Auto LF after CR On Off	Specify whether the printer automatically performs a line feed (LF) after a carriage return (CR) control command.  Note: Off is the factory default setting.

Use	То
Tray Renumber	Configure the printer to work with printer software or programs that use
Assign Multipurpose Feeder	different source assignments for trays and feeders.
Off	Notes:
None	<ul> <li>"Off" is the factory default setting.</li> </ul>
0–199	, -
Assign Tray [x]	<ul> <li>"None" ignores the Select Paper Feed command. This option appears only when it is selected by the PCL 5e interpreter.</li> </ul>
Off	<ul> <li>"0–199" allows a custom setting to be assigned.</li> </ul>
None	0—199 allows a custom setting to be assigned.
0–199	
Assign Manual Paper	
Off	
None	
0–199	
Assign Manual Envelope	
Off	
None	
0–199	
Tray Renumber	Show the factory default setting assigned to each tray or feeder.
View Factory Defaults	
MPF Default = 8	
T1 Default = 1	
T2 Default = 4	
T3 Default = 5	
T4 Default = 20	
T5 Default = 21	
Env Default = 6	
MPaper Default = 2	
MEnv Default = 3	
Tray Renumber	Restore all tray and feeder assignments to the factory default settings.
Restore Defaults	
Yes	
No	

#### **HTML** menu

Use		То
Font Name	Joanna MT	Set the default font for HTML documents.
Albertus MT	Letter Gothic	Note: The Times font is used in HTML documents that do not
Antique Olive	Lubalin Graph	specify a font.
Apple Chancery	Marigold	
Arial MT	MonaLisa Recut	
Avant Garde	Monaco	
Bodoni	New CenturySbk	
Bookman	New York	
Chicago	Optima	
Clarendon	Oxford	
Cooper Black	Palatino	
Copperplate	StempelGaramond	
Coronet	Taffy	
Courier	Times	
Eurostile	TimesNewRoman	
Garamond	Univers	
Geneva	Zapf Chancery	
Gill Sans	NewSansMTCS	
Goudy	NewSansMTCT	
Helvetica	New SansMTJA	
Hoefler Text	NewSansMTKO	
Intl CG Times		
Intl Courier		
Intl Univers		

Use	То
Font Size	Set the default font size for HTML documents.
1–255 pt	Notes:
	• 12 pt is the factory default setting.
	Font size can be increased in 1-point increments.
Scale	Scale the default font for HTML documents.
1–400%	Notes:
	• 100% is the factory default setting.
	Scaling can be increased in 1% increments.
Orientation	Set the page orientation for HTML documents.
Portrait	Note: Portrait is the factory default setting.
Landscape	

Use	То	
Margin Size 8–255 mm	Set the page margin for HTML documents.  Notes:	
	<ul> <li>19 mm is the factory default setting.</li> <li>Margin size can be increased in 1-mm increments.</li> </ul>	
Backgrounds  Do Not Print  Print	Specify whether to print backgrounds on HTML documents.  Note: Print is the factory default setting.	

### Image menu

Use	То	
Auto Fit On Off	Select the optimal paper size, scaling, and orientation. <b>Note:</b> On is the factory default setting. It overrides scaling and orientation settings for some images.	
Invert On Off	<ul> <li>Invert bitonal monochrome images.</li> <li>Notes:</li> <li>Off is the factory default setting.</li> <li>This setting does not apply to GIF or JPEG images.</li> </ul>	
Scaling Anchor Top Left Best Fit Anchor Center Fit Height/Width Fit Height Fit Width	Scale the image to fit the selected paper size.  Notes:  Best Fit is the factory default setting.  When Auto Fit is set to On, Scaling is automatically set to Best Fit.	
Orientation Portrait Landscape Reverse Portrait Reverse Landscape	Set the image orientation.  Note: Portrait is the factory default setting.	

# Help menu

Menu item	Description	
Print All Guides	Prints all the guides	
Copy Guide	Provides information about making copies and changing settings	
E-mail Guide	Provides information about sending e-mails and configuring the settings	
FTP Guide	Provides information about scanning documents and configuring the settings	
Color Quality	Provides information about solving color quality issues	

Menu item	Description
Print Defects Guide	Provides help in resolving repeating defects in copies or prints
Information Guide	Provides help in locating additional information
Supplies Guide	Provides information about ordering supplies

# Saving money and the environment

Lexmark is committed to environmental sustainability and is continually improving its printers to reduce their impact on the environment. We design with the environment in mind, engineer our packaging to reduce materials, and provide collection and recycling programs. For more information, see:

- The Notices chapter
- The Environmental Sustainability section of the Lexmark Web site at <a href="www.lexmark.com/environment">www.lexmark.com/environment</a>
- The Lexmark recycling program at <u>www.lexmark.com/recycle</u>

By selecting certain printer settings or tasks, you may be able to reduce your printer's impact even further. This chapter outlines the settings and tasks that may yield a greater environmental benefit.

# Saving paper and toner

Studies show that as much as 80% of the carbon footprint of a printer is related to paper usage. You can significantly reduce your carbon footprint by using recycled paper and the following printing suggestions, such as printing on both sides of the paper and printing multiple pages on one side of a single sheet of paper.

For information on how you can quickly save paper and energy using one printer setting, see <u>"Using Eco-Mode" on page 122.</u>

## Using recycled paper

As an environmentally conscious company, Lexmark supports the use of recycled office paper produced specifically for use in laser printers. For more information on recycled papers that work well with your printer, see <u>"Using recycled paper and other office papers" on page 45</u>.

## **Conserving supplies**

#### Use both sides of the paper

If your printer model supports two-sided printing, then you can control whether print appears on one or two sides of the paper.

#### **Notes:**

- Two-sided printing is the default setting in the print driver.
- For a complete list of supported products and countries, go to <a href="http://support.lexmark.com">http://support.lexmark.com</a>.

#### Place multiple pages on one sheet of paper

You can print up to 16 consecutive pages of a multiple-page document onto one side of a single sheet of paper by setting multiple page printing (N-Up) for the print job.

#### Check your first draft for accuracy

Before printing or making multiple copies of a document:

- Use the preview feature to see how the document looks like before you print it.
- Print one copy of the document to check its content and format for accuracy.

#### **Avoid paper jams**


Correctly set the paper type and size to avoid paper jams. For more information, see "Avoiding jams" on page 157.

# Saving energy

### **Using Eco-Mode**

Use Eco-Mode to quickly select one or more ways to reduce your printer's environmental impact.

**1** From the printer control panel, navigate to:

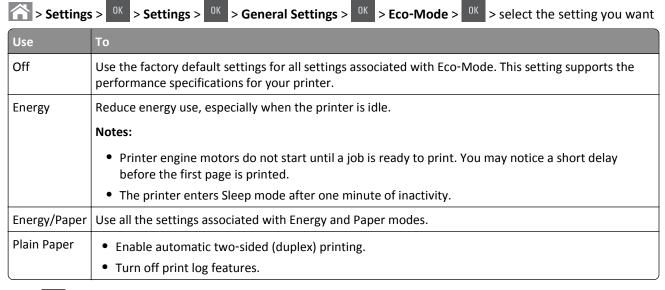

2 Press OK

## **Reducing printer noise**

Enable Quiet mode to reduce the printer noise.

1 From the printer control panel, navigate to:



2 Select a setting.

Use	То	
On	Reduce printer noise.	
	Notes:	
	Print jobs process at a reduced speed.	
	<ul> <li>Printer engine motors do not start until a document is ready to print. There is a short delay before the first page is printed.</li> </ul>	
	The alarm control and cartridge alarm sounds are turned off.	
	The printer ignores the Advance Start command.	
Off	Use factory default settings.	
	<b>Note:</b> This setting supports the performance specifications of the printer.	

**3** Press OK

### **Adjusting Sleep mode**

To save energy, decrease the number of minutes before the printer enters Sleep mode. Select from 1 to 120. The factory default setting is 30 minutes.

Note: The printer still accepts print jobs when in Sleep mode.

#### **Using the Embedded Web Server**

1 Open a Web browser, and then type the printer IP address in the address field.

#### Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Navigate to:

#### **Settings > General Settings > Timeouts**

- 3 In the Sleep Mode field, enter the number of minutes you want the printer to wait before it enters Sleep mode.
- 4 Click Submit.

#### Using the printer control panel

1 From the printer control panel, navigate to:



- 2 In the Sleep Mode field, select the number of minutes you want the printer to wait before it enters Sleep mode.
- **3** Press OK

### **Using Hibernate mode**

Hibernate is an ultra-low-power saving mode.

#### Notes:

- Three days is the default amount of time before the printer enters Hibernate mode.
- Make sure to wake the printer from Hibernate mode before sending a print job. A hard reset or a long press of the Sleep button wakes the printer from Hibernate mode.
- If the printer is in Hibernate mode, then the Embedded Web Server is disabled.
- **1** From the control panel, navigate to:
  - > Settings > OK > Settings > OK > General Settings > OK
- 2 Select Press Sleep Button or Press and Hold Sleep Button, and then press OK
- 3 Press Hibernate > OK

## **Setting Hibernate Timeout**

Hibernate Timeout lets you set the amount of time the printer waits after a print job is processed before it goes into a reduced power state.

#### **Using the Embedded Web Server**

1 Open a Web browser, and then type the printer IP address in the address field.

#### Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings > General Settings > Timeouts.
- **3** From the Hibernate Timeout menu, select the number of hours, days, weeks, or months you want for the printer to wait before it goes into a reduced power state.
- 4 Click Submit.

#### Using the printer control panel

**1** From the printer control panel, navigate to:



- 2 Select the amount of time the printer waits after a print job is processed before it enters Hibernate mode.
- 3 Press OK

### **Using Schedule Power Modes**

Schedule Power Modes lets you schedule when the printer goes into a reduced power state or into the Ready state.

**Note:** This feature is available only in network printers or printers connected to print servers.

1 Open a Web browser, and then type the printer IP address in the address field.

#### Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings > General Settings > Schedule Power Modes.
- **3** From the Action menu, select the power mode.
- 4 From the Time menu, select the time.
- **5** From the Day(s) menu, select the day or days.
- 6 Click Add.

# Recycling

Lexmark provides collection programs and environmentally progressive approaches to recycling. For more information, see:

- The Notices chapter
- The Environmental Sustainability section of the Lexmark Web site at www.lexmark.com/environment
- The Lexmark recycling program at <u>www.lexmark.com/recycle</u>

## **Recycling Lexmark products**

To return Lexmark products for recycling:

- 1 Go to <u>www.lexmark.com/recycle</u>.
- 2 Find the product type you want to recycle, and then select your country or region from the list.
- **3** Follow the instructions on the computer screen.

**Note:** Printer supplies and hardware not listed in the Lexmark collection program may be recycled through your local recycling center. Contact your local recycling center to determine the items they accept.

## **Recycling Lexmark packaging**

Lexmark continually strives to minimize packaging. Less packaging helps to ensure that Lexmark printers are transported in the most efficient and environmentally sensitive manner and that there is less packaging to dispose of. These efficiencies result in fewer greenhouse emissions, energy savings, and natural resource savings.

Lexmark cartons are 100% recyclable where corrugated recycling facilities exist. Facilities may not exist in your area.

The foam used in Lexmark packaging is recyclable where foam recycling facilities exist. Facilities may not exist in your area.

When you return a cartridge to Lexmark, you can reuse the box that the cartridge came in. Lexmark will recycle the box.

### Returning Lexmark cartridges for reuse or recycling

Lexmark Cartridge Collection Program diverts millions of Lexmark cartridges from landfills annually by making it both easy and free for Lexmark customers to return used cartridges to Lexmark for reuse or recycling. One hundred percent of the empty cartridges returned to Lexmark are either reused or demanufactured for recycling. Boxes used to return the cartridges are also recycled.

To return Lexmark cartridges for reuse or recycling, follow the instructions that came with your printer or cartridge and use the prepaid shipping label. You can also do the following:

- 1 Go to www.lexmark.com/recycle.
- **2** From the Toner Cartridges section, select your country or region.
- **3** Follow the instructions on the computer screen.

Securing the printer 127

# **Securing the printer**

# Using the security lock feature

The printer is equipped with a security lock feature. Attach a security lock compatible with most laptop computers in the location shown to secure the printer in place.



# **Statement of Volatility**

Your printer contains various types of memory that can store device and network settings, and user data.

Type of memory	Description
Volatile memory	Your printer uses standard <i>random access memory</i> (RAM) to temporarily buffer user data during simple print jobs.
Non-volatile memory	Your printer may use two forms of non-volatile memory: EEPROM and NAND (flash memory). Both types are used to store operating system, device settings, and network information.

Erase the content of any installed printer memory in the following circumstances:

- The printer is being decommissioned.
- The printer is being moved to a different department or location.
- The printer is being serviced by someone from outside your organization.
- The printer is being removed from your premises for service.
- The printer is being sold to another organization.

Securing the printer 128

# **Erasing volatile memory**

The volatile memory (RAM) installed in your printer requires a power source to retain information. To erase the buffered data, simply turn off the printer.

# **Erasing non-volatile memory**

Erase individual settings, device and network settings, security settings, and embedded solutions by following these steps:

- **1** Turn off the printer.
- 2 Hold down 2 and 6 on the keypad while turning the printer on. Release the buttons only when the screen with the progress bar appears.
  - The printer performs a power-on sequence, and then the Configuration menu appears. When the printer is fully turned on, a list of functions appears on the printer display.
- 3 Press the up or down arrow button until Wipe All Settings appears.
  - The printer will restart several times during this process.
  - **Note:** Wipe All Settings securely removes device settings, solutions, jobs, and passwords from the printer memory.
- 4 Navigate to:
  - Back > Exit Config Menu

The printer will perform a power-on reset, and then return to normal operating mode.

# Finding printer security information

In high-security environments, it may be necessary to take additional steps to make sure that confidential data stored in the printer cannot be accessed by unauthorized persons. For more information, visit the <a href="Lexmark security Web page">Lexmark security Web page</a>.

You can also see the Embedded Web Server — Security: Administrator's Guide for additional information:

- 1 Go to www.lexmark.com, and then navigate to Support & Downloads > select your printer.
- **2** Click the **Manuals** tab, and then select *Embedded Web Server Security: Administrator's Guide*.

# **Maintaining the printer**

**Warning—Potential Damage:** Failure to maintain optimum printer performance, or to replace parts and supplies, may cause damage to your printer.

# **Storing supplies**

Choose a cool, clean storage area for the printer supplies. Store supplies right side up in their original packing until you are ready to use them.

Do not expose supplies to:

- Direct sunlight
- Temperatures above 35°C (95°F)
- High humidity above 80%
- Salty air
- Corrosive gases
- Heavy dust

# **Cleaning printer parts**

## Cleaning the printer

Note: You may need to perform this task after every few months.

**Warning—Potential Damage:** Damage to the printer caused by improper handling is not covered by the printer warranty.

1 Make sure that the printer is turned off and unplugged from the electrical outlet.



**CAUTION—SHOCK HAZARD:** To avoid the risk of electrical shock when cleaning the exterior of the printer, unplug the power cord from the electrical outlet and disconnect all cables from the printer before proceeding.

- 2 Remove paper from the standard bin, multipurpose feeder, and manual feeder.
- 3 Remove any dust, lint, and pieces of paper around the printer using a soft brush or vacuum.
- **4** Dampen a clean, lint-free cloth with water, and use it to wipe the outside of the printer.
  - **Warning—Potential Damage:** Do not use household cleaners or detergents, as they may damage the finish of the printer.
- **5** Make sure all areas of the printer are dry before sending a new print job.

## Cleaning the scanner glass

Clean the scanner glass if you encounter print quality problems, such as streaks on copied or scanned images.

- **1** Slightly dampen a soft, lint-free cloth or paper towel with water.
- **2** Open the scanner cover.



**3** Clean all the areas shown, and then let them dry.



1	White underside of the ADF cover
2	White underside of the scanner cover
3	Scanner glass
4	ADF glass

**4** Close the scanner cover.

# Checking the status of parts and supplies

A message appears on the display when a replacement supply item is needed or when maintenance is required.

### Checking the status of parts and supplies on the printer control panel

From the printer control panel, navigate to:



# Checking the status of parts and supplies from the Embedded Web Server

**Note:** Make sure the computer and printer are connected to the same network.

1 Open a Web browser, and then type the printer IP address in the address field.

#### Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Device Status > More Details.

## **Estimated number of remaining pages**

The estimated number of remaining pages is based on the recent printing history of the printer. Its accuracy may vary significantly and is dependent on many factors, such as actual document content, print quality settings, and other printer settings.

The accuracy of the estimated number of remaining pages may decrease when the actual printing consumption is different from the historical printing consumption. Consider the variable level of accuracy before purchasing or replacing supplies based on the estimate. Until an adequate print history is obtained on the printer, initial estimates assume future supplies consumption based on the International Organization for Standardization\* test methods and page content.

<sup>\*</sup> Average continuous black declared cartridge yield in accordance with ISO/IEC 19752.

# **Ordering supplies**

To order supplies in the U.S., contact Lexmark at 1-800-539-6275 for information about Lexmark authorized supplies dealers in your area. In other countries or regions, go to the Lexmark Web site at <a href="https://www.lexmark.com">www.lexmark.com</a> or contact the place where you purchased the printer.

Note: All life estimates for printer supplies assume printing on letter- or A4-size plain paper.

#### Using genuine Lexmark parts and supplies

Your Lexmark printer is designed to function best with genuine Lexmark supplies and parts. Use of third-party supplies or parts may affect the performance, reliability, or life of the printer and its imaging components. Use of third-party supplies or parts can affect warranty coverage. Damage caused by the use of third-party supplies or parts is not covered by the warranty. All life indicators are designed to function with Lexmark supplies and parts, and may deliver unpredictable results if third-party supplies or parts are used. Imaging component usage beyond the intended life may damage your Lexmark printer or its associated components.

### **Ordering toner cartridges**

#### **Notes:**

- The estimated cartridge yield is based on the ISO/IEC 19798 standard.
- Extremely low print coverage for extended periods of time may negatively affect actual yield and may cause cartridge parts to fail prior to exhaustion of toner.

Item	United States and Canada	European Union (EU), European Economic Area (EEA), and Switzerland	Rest of the world	
Return Program toner cartrid	lges	,		
Black	801K	802K	808K	
Cyan	801C	802C	808C	
Magenta	801M	802M	808M	
Yellow	801Y	802Y	808Y	
Standard Yield Return Progra	Standard Yield Return Program toner cartridges			
Black	801SK	802SK	808SK	
Cyan	801SC	802SC	808SC	
Magenta	801SM	802SM	808SM	
Yellow	801SY	802SY	808SY	
For more information on countries located in a region, visit www.lexmark.com/regions.				

Item	Worldwide
Standard Yield regular toner cartridges	
Black	800S1
For more information on countries located in a region, visit <a href="www.lexmark.com/regions">www.lexmark.com/regions</a> .	

Item	Worldwide
Cyan	800S2
Magenta	800S3
Yellow	800S4
For more information on countries located in a region, visit www.lexmark.com/regions.	

## **Ordering imaging kits**

Item	All countries and regions
Black imaging kit	700Z1
Color imaging kit	70025

# Ordering a maintenance kit

#### **Notes:**

- Using certain types of paper may require more frequent replacement of the maintenance kit.
- The separator pad, fuser, and transfer module are included in the maintenance kit and can also be individually ordered and replaced, if necessary. The separator pad is a customer replaceable part.
- To replace the maintenance kit, contact customer support at <a href="http://support.lexmark.com">http://support.lexmark.com</a> or your service representative.

Part name	Туре	Supply number
Maintenance kit	115 V	40X7615
	220 V	40X7616
	100 V	40X7617

Item	Supply number
Separator pad	40X6247

## Ordering a waste toner bottle

Item	All countries and regions
Waste toner bottle	C540X75G

# **Replacing supplies**

## Replacing the waste toner bottle



1	Top door
2	Waste toner bottle
3	Right side cover
4	Front door

- 1 Unpack the replacement waste toner bottle.
- **2** Open the front door.




**CAUTION—HOT SURFACE:** The inside of the printer might be hot. To reduce the risk of injury from a hot component, allow the surface to cool before touching.




Open the top door.



Remove the right side cover.

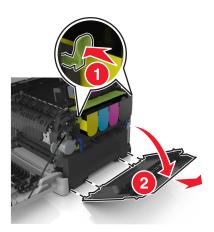


Press the green levers on each side of the waste toner bottle, and then remove the waste toner bottle.

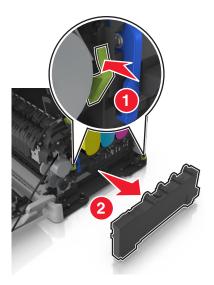


**6** Seal the used waste toner bottle in the enclosed packaging. For more information, see <u>"Recycling Lexmark products" on page 125</u>.

**7** Insert the replacement waste toner bottle.

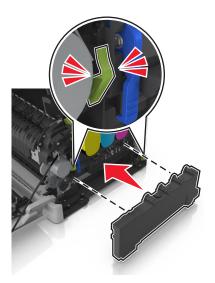

**8** Insert the right side cover.

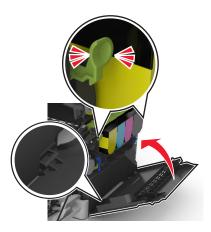

**9** Slide and hold the release latch on the right side of the printer, and then slowly close the top door.



**10** Close the front door.



# Replacing a black and color imaging kit

**1** Open the front door.



**CAUTION—HOT SURFACE:** The inside of the printer might be hot. To reduce the risk of injury from a hot component, allow the surface to cool before touching.




**2** Open the top door.




3 Remove the toner cartridges by lifting the handles, and then gently pulling them away from the imaging kit.




4 Remove the right side cover.

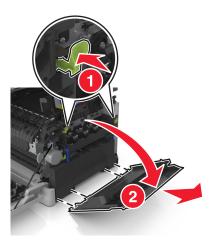


**5** Press the green levers on each side of the waste toner bottle, and then remove the waste toner bottle.

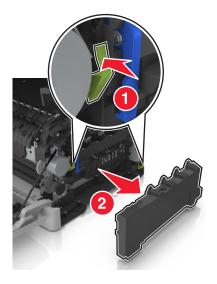


**6** Lift the blue levers on the imaging kit, and then pull the imaging kit until it stops.

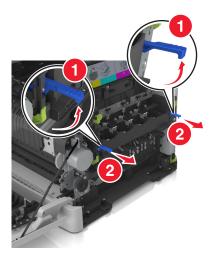

7 Press down the blue lever, and then grasp the green handles on the sides to pull out the imaging kit.

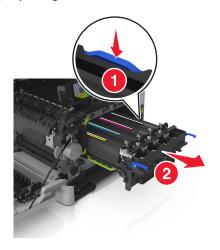


8 Unpack the replacement black and color imaging kit.

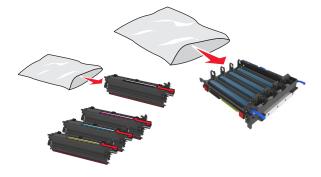

#### Notes:

- The color imaging kit includes the imaging kit and the cyan, magenta, yellow, and black developer units.
- The black imaging kit includes the imaging kit and the black developer unit.
- **9** Seal the used imaging kit in the bag that the replacement imaging kit came in.

For more information, see "Recycling Lexmark products" on page 125.

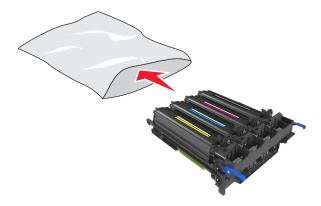

**Note:** When replacing the black imaging kit, save the cyan, magenta, and yellow developer units. Dispose only the black developer unit.

**10** Gently shake the yellow, cyan, magenta, and black developer units side-to-side.



**11** Remove the red packing strip and the attached fabric from the developer units.



**12** Gently insert the yellow, cyan, magenta, and black developer units.



Note: Make sure each developer unit is inserted into the matching color slot.


**13** Remove the red packing strip from the imaging kit.




**Warning—Potential Damage:** Do not touch the shiny photoconductor drum under the imaging kit. Doing so may affect the quality of future print jobs.



**14** Align and then insert the imaging kit.

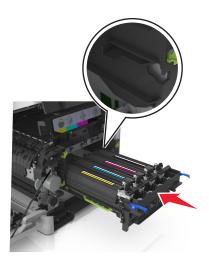


**15** Gently but firmly push the blue levers down until the imaging kit fits into place.

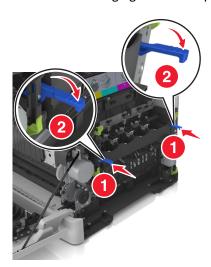


**Note:** Make sure that the imaging kit is fully seated.


**16** Insert the waste toner bottle.

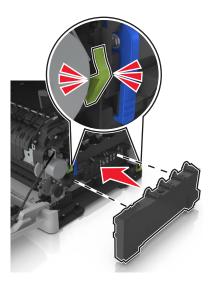

**17** Insert the right side cover.

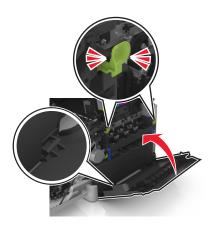

**18** Insert the toner cartridges.

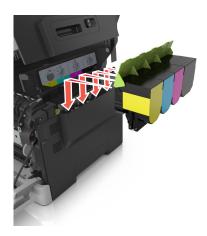

19 Slide and hold the release latch on the right side of the printer, and then slowly close the top door.



**20** Close the front door.



## **Replacing toner cartridges**

**Warning—Potential Damage:** Damage caused by use of a non-Lexmark toner cartridge is not covered under warranty.

**Note:** A reduced print quality may result from using non-Lexmark toner cartridges.


**1** Open the top door.



2 Remove the toner cartridge by lifting the handle, and then gently pulling it away from the imaging kit.



**3** Unpack the new toner cartridge, and then remove its packaging.

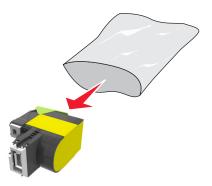

**4** Align the new toner cartridge, and then press the cartridge down until it fits into place.



**5** Slide and hold the release latch on the right side of the printer, and then slowly close the top door.



**6** Seal the used toner cartridge in the bag that the replacement toner cartridge came in. For more information, see "Recycling Lexmark products" on page 125.

#### Replacing a developer unit

Replace the developer unit when a print quality defect occurs or when damage occurs to the printer.

**1** Open the front door.



**CAUTION—HOT SURFACE:** The inside of the printer might be hot. To reduce the risk of injury from a hot component, allow the surface to cool before touching.




**2** Open the top door.




**3** Lift the toner cartridge handle, and then gently pull it from the imaging kit.




4 Remove the right side cover.

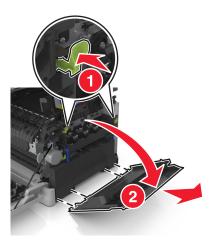


**5** Press the green levers on each side of the waste toner bottle, and then remove the waste toner bottle.

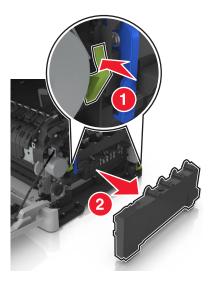

**6** Lift the blue levers on the imaging kit, and then pull the imaging kit until it stops.

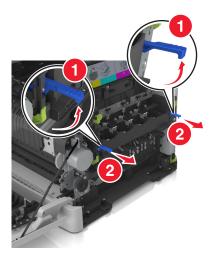


7 Press down the blue lever, and then grasp the green handles on the sides to pull out the imaging kit.
Warning—Potential Damage: Do not touch the underside of the imaging kit. Doing so could damage the imaging kit.

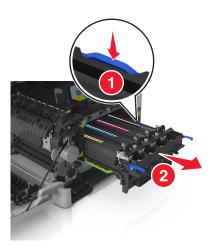

**8** Remove the used developer unit.



Gently shake the replacement developer unit side-to-side before removing it from its packaging.

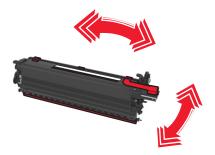

Remove the red shipping cover from the developer unit.




Insert the developer unit.



**12** Align and then insert the imaging kit.




13 Gently but firmly push the blue levers down until the imaging kit fits into place.

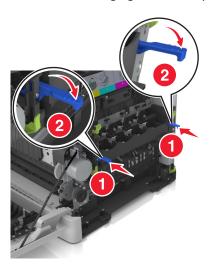


Note: Make sure that the imaging kit is fully seated.


**14** Replace the waste toner bottle.

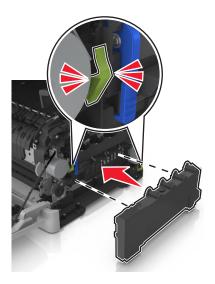

**15** Insert the right side cover.

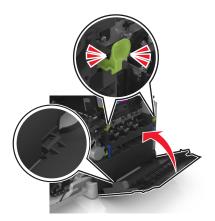

**16** Insert the toner cartridges.

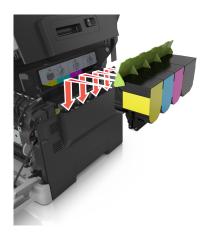

17 Slide and hold the release latch on the right side of the printer, and then slowly close the top door.



#### 18 Close the front door.



19 Seal the used developer unit in the bag that the replacement developer unit came in. For more information, see "Recycling Lexmark products" on page 125.

### Moving the printer

#### Before moving the printer



CAUTION—POTENTIAL INJURY: The printer weight is greater than 18 kg (40 lb) and requires two or more trained personnel to lift it safely.



CAUTION—POTENTIAL INJURY: Before moving the printer, follow these guidelines to avoid personal injury or printer damage:

- Turn the printer off using the power switch, and then unplug the power cord from the electrical outlet.
- Disconnect all cords and cables from the printer before moving it.
- Lift the printer off the optional tray, and then set it aside instead of trying to lift the tray and printer at the same

**Note:** Use the handholds located on both sides of the printer to lift it.

Warning—Potential Damage: Damage to the printer caused by improper moving is not covered by the printer warranty.

#### Moving the printer to another location

The printer and its hardware options can be safely moved to another location by following these precautions:

- Any cart used to move the printer must have a surface able to support the full footprint of the printer.
- Any cart used to move the hardware options must have a surface able to support the dimensions of the hardware options.
- Keep the printer in an upright position.
- Avoid severe jarring movements.

### Shipping the printer

When shipping the printer, use the original packaging.

Managing the printer 154

# Managing the printer

### Finding advanced networking and administrator information

This chapter covers basic administrative support tasks using the Embedded Web Server. For more advanced system support tasks, see the *Networking Guide* on the *Software and Documentation* CD or the *Embedded Web Server* — *Security: Administrator's Guide* on the Lexmark support Web site at <a href="http://support.lexmark.com">http://support.lexmark.com</a>.

### Checking the virtual display

1 Open a Web browser, and then type the printer IP address in the address field.

#### Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Check the virtual display that appears at the top left corner of the screen.

The virtual display works as an actual display would work on a printer control panel.

### Setting up e-mail alerts

Configure the printer to send you e-mail alerts when the supplies are getting low, when the paper needs to be changed or added, or when there is a paper jam.

1 Open a Web browser, and then type the printer IP address in the address field.

#### Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings.
- **3** From the Other Settings menu, click **E-mail Alert Setup**.
- **4** Select the items you want to be notified on, and then type the e-mail addresses.
- 5 Click Submit.

Note: For information on setting up the e-mail server, contact your system support person.

### **Viewing reports**

You can view some reports from the Embedded Web Server. These reports are useful for assessing the status of the printer, network, and supplies.

1 Open a Web browser, and then type the printer IP address in the address field.

Managing the printer 155

#### Notes:

 View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.

- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- **2** Click **Reports**, and then click the type of report you want to view.

# Configuring supply notifications from the Embedded Web Server

You can determine how you would like to be notified when supplies run nearly low, low, very low, or reach their end-of-life by setting the selectable alerts.

#### Notes:

- You can select alerts for toner cartridges, imaging kit, maintenance kit, and waste toner bottle.
- All alerts can be set for nearly low, low, and very low supply conditions. Not all alerts can be set for the end-of-life supply condition. E-mail alert is available for all supply conditions.
- The percentage of estimated remaining supply that prompts the alert can be set on some supplies for some supply conditions.
- 1 Open a Web browser, and then type the printer IP address in the address field.

#### Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings > Print Settings > Supply Notifications.
- **3** From the drop-down menu for each supply, select one of the following notification options:

Description	
The normal printer behavior for all supplies occurs.	
The printer generates an e-mail when the supply condition is reached. The status of the supply appears on the menus page and status page.	
The printer shows the warning message and generates an email about the status of the supply. The printer does not stop when the supply condition is reached.	
The printer stops processing jobs when the supply condition is reached. The user needs to press a button to continue printing.	
The printer stops when the supply condition is reached. The supply must be replaced to continue printing.	

 $<sup>^{1}</sup>$  The printer generates an e-mail about the status of the supply when supply notification is enabled.

#### 4 Click Submit.

<sup>&</sup>lt;sup>2</sup> The printer stops when some supplies become empty to prevent damage.

Managing the printer 156

### **Copying printer settings to other printers**

Note: This feature is available only in network printers.

1 Open a Web browser, and then type the printer IP address in the address field.

#### Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click the Copy Printer Settings.
- 3 To change the language, select a language from the drop-down menu, and then click Click here to submit language.
- 4 Click Printer Settings.
- **5** Type the IP addresses of the source and target printers in their appropriate fields.
  - Note: If you want to add or remove a target printer, then click Add Target IP or Remove Target IP.
- 6 Click Copy Printer Settings.


### **Restoring factory default settings**

If you want to keep a list of the current menu settings for reference, then print a menu settings page before restoring the factory default settings. For more information, see <u>"Printing a menu settings page" on page 28</u>.

If you want a more comprehensive method of restoring the printer factory default settings, then perform the Wipe All Settings option. For more information, see <u>"Erasing non-volatile memory" on page 128</u>.

**Warning—Potential Damage:** Restoring factory defaults returns most printer settings to the original factory default settings. Exceptions include the display language, custom sizes and messages, and network/port menu settings. All downloads stored in the RAM are deleted.

From the printer control panel, navigate to:

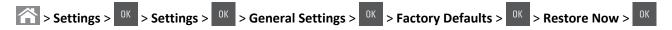

# **Clearing jams**


By carefully selecting paper and specialty media and loading it properly, you should be able to avoid most jams. If jams occur, then follow the steps outlined in this chapter.

Warning—Potential Damage: Never use any tool to remove a jam. Doing so could permanently damage the fuser.

# **Avoiding jams**


#### Load paper properly

• Make sure paper lies flat in the tray.

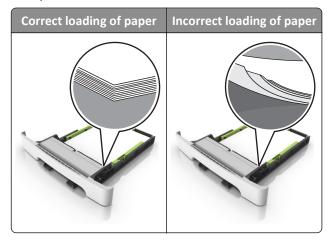

- Do not remove a tray while the printer is printing.
- Do not load a tray while the printer is printing. Load it before printing, or wait for a prompt to load it.
- Do not load too much paper. Make sure the stack height is below the maximum paper fill indicator.

• Do not slide the paper into the tray. Load paper as shown in the illustration.

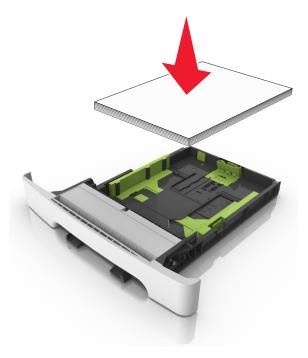

- Make sure the guides in the tray or the multipurpose feeder are properly positioned and are not pressing tightly against the paper or envelopes.
- Push the tray firmly into the printer after loading paper.

#### Use recommended paper

- Use only recommended paper or specialty media.
- Do not load wrinkled, creased, damp, bent, or curled paper.
- Flex, fan, and straighten paper before loading it.




- Do not use paper that has been cut or trimmed by hand.
- Do not mix paper sizes, weights, or types in the same tray.
- Make sure the paper size and type are set correctly on the computer or printer control panel.
- Store paper according to manufacturer recommendations.

### **Understanding jam messages and locations**

When a jam occurs, a message indicating the jam location and information to clear the jam appears on the printer display. Open the doors, covers, and trays indicated on the display to remove the jam.

**Note:** When Jam Recovery is set to On or Auto, the printer reprints jammed pages. However, Auto does not guarantee that the page will print.

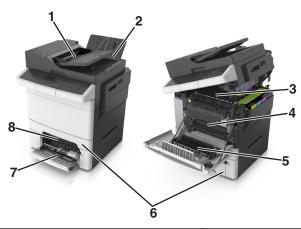

	Jam location	Message on the display	What to do
1	Automatic document feeder (ADF)	[x]-page jam, open automatic feeder top cover [28y.xx]	Remove all paper from the ADF tray, and then remove the jammed paper.
2	Standard bin	[x]-page jam, clear standard bin [203.xx]	Remove the jammed paper.
3	Fuser	[x]-page jam, open front door to clear fuser [202.xx]	Open the front door, then pull the tab and hold the fuser cover down, and then remove the jammed paper.
4	Front door	[x]-page jam, open front door [20y.xx]	Open the front door, and then remove the jammed paper.
5	Duplex area	[x]-page jam, open front door to clear duplex [23y.xx]	Open the front door, and then remove the jammed paper.
6	Tray [x]	[x]-page jam, open tray [x] [24y.xx]	Pull out the indicated tray, and then remove the jammed paper.
7	Multipurpose feeder	[x]-page jam, clear multipurpose feeder [250.xx]	Push the paper release lever to lift the paper rollers, and then remove the jammed paper.
8	Manual feeder	[x]-page jam, clear manual feeder [251.xx]	Remove the jammed paper.

# [x]-page jam, clear standard bin [203.xx]

1 Open the top door.



**2** Firmly grasp the jammed paper on each side, and then gently pull it out.



**3** Open the front door.




**CAUTION—HOT SURFACE:** The inside of the printer might be hot. To reduce the risk of injury from a hot component, allow the surface to cool before touching.



**a** If there is a jammed paper under the fuser, then firmly grasp the paper on each side, and then gently pull it out.



**b** Pull the green lever to open the fuser cover.

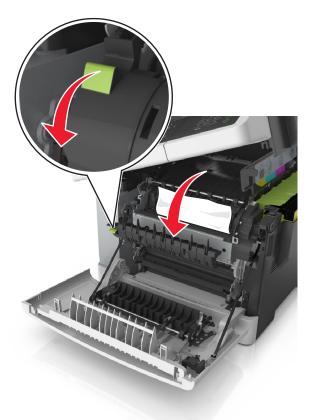

 ${f c}$  If there is a jammed paper in the fuser, then hold down the fuser cover, and then remove the paper.



4 Slide and hold the release latch on the right side of the printer, and then slowly close the top door.



**5** Close the front door.



6 From the printer control panel, touch 

to clear the message and continue printing. For non-touch-screen printer models, select Next > Clear the jam, press OK, and then press 

to confirm.

# [x]-page jam, open front door to clear fuser [202.xx]

1 Open the front door.




**CAUTION—HOT SURFACE:** The inside of the printer might be hot. To reduce the risk of injury from a hot component, allow the surface to cool before touching.



#### **2** Open the top door.



**3** Pull the green lever to open the fuser cover.

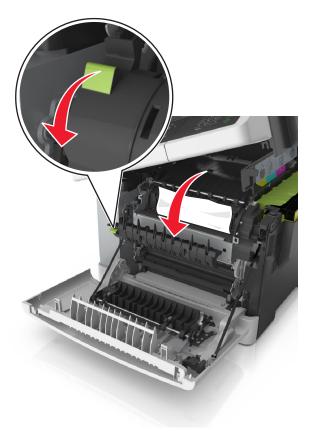

**4** Hold down the fuser cover, and then remove the jammed paper.



**5** Slide and hold the release latch on the right side of the printer, and then slowly close the top door.



6 Close the front door.




7 From the printer control panel, touch to clear the message and continue printing. For non-touch-screen printer models, select Next > Clear the jam, press OK, and then press of to confirm.

# [x]-page jam, open front door [20y.xx]

1 Open the front door.



**CAUTION—HOT SURFACE:** The inside of the printer might be hot. To reduce the risk of injury from a hot component, allow the surface to cool before touching.

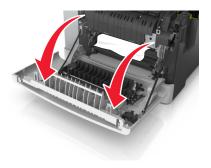

**2** Firmly grasp the jammed paper on each side, and then gently pull it out.

**Note:** Make sure all paper fragments are removed.



**3** Close the front door.



4 From the printer control panel, touch to clear the message and continue printing. For non-touch-screen printer models, select Next > Clear the jam, press OK, and then press of to confirm.

# [x]-page jam, open front door to clear duplex [23y.xx]

1 Open the front door.



**CAUTION—HOT SURFACE:** The inside of the printer might be hot. To reduce the risk of injury from a hot component, allow the surface to cool before touching.



2 Firmly grasp the jammed paper on each side, and then gently pull it out.



**3** Close the front door.



4 From the printer control panel, touch to clear the message and continue printing. For non-touch-screen printer models, select Next > Clear the jam, press OK, and then press of to confirm.

# [x]-page jam, open tray [x] [24y.xx]

1 Pull out the tray completely.

Note: The message on the printer display indicates the tray where the jammed paper is located.



2 Firmly grasp the jammed paper on each side, and then gently pull it out.






- 3 Insert the tray.
- 4 From the printer control panel, touch to clear the message and continue printing. For non-touch-screen printer models, select Next > Clear the jam, press OK, and then press to confirm.

# [x]-page jam, clear manual feeder [251.xx]

1 Pull out the standard 250-sheet tray (Tray 1) and manual feeder.

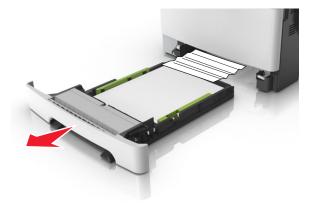

2 Firmly grasp the jammed paper on each side, and then gently pull it out.



- **3** Insert the tray.
- 4 From the printer control panel, touch to clear the message and continue printing. For non-touch-screen printer models, select Next > Clear the jam, press OK, and then press of to confirm.

# [x]-page jam, clear multipurpose feeder [250.xx]

**1** Push the paper release lever in the multipurpose feeder to access the jammed paper, and then gently pull out the paper.

Note: Make sure all paper fragments are removed.



**2** Flex the sheets back and forth to loosen them, and then fan them. Do not fold or crease the paper. Straighten the edges on a level surface.



**3** Reload paper into the multipurpose feeder.



**4** Slide the paper guide until it rests lightly against the edge of the paper stack.




# [x]-page jam, open automatic feeder top cover. [28y.xx]

1 Remove all original documents from the ADF tray.

Note: The message is cleared when the pages are removed from the ADF tray.

2 Open the ADF cover.

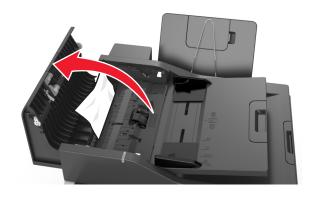

**3** Firmly grasp the jammed paper on each side, and then gently pull it out.



- 4 Close the ADF cover.
- **5** Straighten the edges of the original documents, then load the documents into the ADF, and then adjust the paper guide.
- 6 From the printer control panel, touch to clear the message and continue printing. For non-touch-screen printer models, select Next > OK > OK > OK .

# **Troubleshooting**

### **Understanding the printer messages**

#### Adjusting color

Wait for the process to complete.

#### Change [paper source] to [custom type name]

Try one or more of the following:

• Load the correct size and type of paper in the tray, and then select **Finished changing paper** on the printer control panel to clear the message and continue printing. For non-touch-screen printer models, press to confirm.

Note: Make sure the paper size and type are specified in the Paper menu on the printer control panel.

• Cancel the print job.

#### Change [paper source] to [custom string]

Try one or more of the following:

• Load the correct size and type of paper in the tray, and then select **Finished changing paper** on the printer control panel to clear the message and continue printing. For non-touch-screen printer models, press to confirm.

Note: Make sure the paper size and type are specified in the Paper menu on the printer control panel.

Cancel the print job.

### Change [paper source] to [paper type] [paper size]

Try one or more of the following:

• Load the correct size and type of paper in the tray, and then select **Finished changing paper** on the printer control panel to clear the message and continue printing. For non-touch-screen printer models, press to confirm.

Note: Make sure the paper size and type are specified in the Paper menu on the printer control panel.

• Cancel the print job.

#### **Close door**

Make sure the right side cover is installed, and then close the front and top doors to clear the message.

#### Close flatbed cover and load originals if restarting job [2yy.xx]

From the printer control panel, try one or more of the following:

• Select **Scan from automatic feeder**, and then press to continue scanning from the ADF immediately after the last successful scan job.

- Select **Scan from flatbed**, and then press to continue scanning from the scanner glass immediately after the last successful scan job.
- Select Finish job without further scanning, and then press to end the last successful scan job.
   Note: This does not cancel the scan job. All successfully scanned pages will be processed further for copying or e-mailing.
- Select **Restart Job**, and then press or to restart the scan job with the same settings from the previous scan job.
- Select **Cancel Job**, and then press of to clear the message and cancel the scan job.

#### [Color] cartridge low [88.xy]

You may need to order a toner cartridge. If necessary, select **Continue** to clear the message and continue printing. For non-touch-screen printer models, press to confirm.

#### [Color] cartridge nearly low [88.xy]

If necessary, select **Continue** on the printer control panel to clear the message and continue printing. For non-touch-screen printer models, press to confirm.

### [Color] cartridge very low, [x] estimated pages remain [88.xy]

You may need to replace the toner cartridge very soon. For more information, see the "Replacing supplies" section of the *User's Guide*.

If necessary, select **Continue** on the printer control panel to clear the message and continue printing. For non-touch-screen printer models, press to confirm.

### Complex page, some data may not have printed [39]

Try one or more of the following:

- From the printer control panel, select **Continue** to ignore the message and continue printing. For non-touch-screen printer models, press ok to confirm.
- Cancel the current print job. For non-touch-screen printer models, press ot confirm.
- Install additional printer memory.

#### Configuration change, some held jobs were not restored [57]

Held jobs are invalidated because of any of the following possible changes in the printer:

- The printer firmware has been updated.
- The tray for the print job is removed.
- The print job is sent from a flash drive that is no longer attached to the USB port.
- The printer hard disk contains print jobs that were stored when the hard disk was installed in a different printer model.

Note: The printer hard disk and the flash drive are supported only in select printer models.

From the printer control panel, select **Continue** to clear the message. For non-touch-screen printer models, press to confirm.

#### **Defective flash detected [51]**

Try one or more of the following:

- Replace the defective flash memory card.
- From the printer control panel, select Continue to ignore the message and continue printing. For non-touch-screen printer models, press ok to confirm.
- Cancel the current print job.

#### Error reading USB drive. Remove USB.

An unsupported USB device is inserted. Remove the USB device, and then insert a supported one.

#### Error reading USB hub. Remove hub.

An unsupported USB hub has been inserted. Remove the USB hub, and then install a supported one.

#### Incompatible tray [x] [59]

Remove, and then reinstall the indicated tray to clear the message.

#### Incorrect paper size, open [paper source] [34]

**Note:** The paper source can be a tray or a feeder.

Try one or more of the following:

- Load the correct size of paper in the paper source.
- From the printer control panel, select **Continue** to clear the message and print using a different paper source. For non-touch-screen printer models, press to confirm.
- Check the length and width guides of the paper source and make sure the paper is loaded properly.
- Make sure the correct paper size and type are specified in the Printing Preferences or in the Print dialog.
- Make sure the paper size and type are specified in the Paper menu on the printer control panel.

• Make sure that the paper size is correctly set. For example, if Multipurpose Feeder Size is set to Universal, then make sure the paper is large enough for the data being printed.

Cancel the print job.

#### **Insert Tray [x]**

Insert the indicated tray into the printer.

#### **Insufficient memory for Flash Memory Defragment operation [37]**

Try one or more of the following:

- From the printer control panel, select **Continue** to stop the defragmentation and continue printing. For non-touch-screen printer models, press to confirm.
- Delete fonts, macros, and other data from the printer memory.
- Install additional printer memory.

#### Insufficient memory, some Held Jobs were deleted [37]

The printer deleted some held jobs in order to process current jobs.

Select **Continue** to clear the message. For non-touch-screen printer models, press ot confirm.

#### Insufficient memory to collate job [37]

Try one or more of the following:

- From the printer control panel, select **Continue** to print the part of the job already stored and begin collating the rest of the print job. For non-touch-screen printer models, press of the print job.
- Cancel the current print job.

#### **Insufficient memory to support Resource Save feature [35]**

Install additional printer memory or select **Continue** on the printer control panel to disable Resource Save, clear the message, and continue printing. For non-touch-screen printer models, press of to confirm.

### Insufficient memory, some held jobs will not be restored [37]

Try one or more of the following:

- From the printer control panel, select **Continue** to clear the message. For non-touch-screen printer models, press to confirm.
- Delete other held jobs to free up additional printer memory.

#### Load [paper source] with [custom type name]

Try one or more of the following:

- Load the tray or feeder with the correct size and type of paper.
- To use the tray with the correct paper size or type, select Finished loading paper on the printer control panel. For non-touch-screen printer models, press or type, select Finished loading paper on the printer control panel. For

**Note:** If the printer detects a tray that has the correct paper type and size, then it feeds from that tray. If the printer cannot detect a tray that has the correct paper type and size, then it prints from the default paper source.

Cancel the current job.

#### Load [paper source] with [custom string]

Try one or more of the following:

- Load the indicated tray or feeder with the correct size and type of paper.
- To use the tray with the correct paper size or type, select **Finished loading paper** on the printer control panel. For non-touch-screen printer models, press or type, select **Finished loading paper** on the printer control panel. For non-touch-screen printer models, press or type, select **Finished loading paper** on the printer control panel. For non-touch-screen printer models, press or type, select **Finished loading paper** on the printer control panel. For non-touch-screen printer models, press or type, select **Finished loading paper** on the printer control panel.

**Note:** If the printer finds a tray that has the correct paper type and size, then it feeds from that tray. If the printer cannot find a tray with the correct paper type and size, then it prints from the default paper source.

• Cancel the current job.

#### Load [paper source] with [paper size]

Try one or more of the following:

- Load the tray or feeder with the correct size of paper.
- To use the tray or feeder with the correct paper size, select **Finished loading paper** on the printer control panel. For non-touch-screen printer models, press or to confirm.

**Note:** If the printer detects a tray that has the correct paper size, then it feeds from that tray. If the printer cannot detect a tray that has the correct paper size, then it prints from the default paper source.

• Cancel the current job.

### Load [paper source] with [paper type] [paper size]

Try one or more of the following:

- Load the tray or feeder with the correct size and type of paper.
- To use the tray or feeder with the correct paper size and type, select **Finished loading paper** on the printer control panel. For non-touch-screen printer models, press to confirm.

**Note:** If the printer detects a tray that has the correct paper size and type, then it feeds from that tray. If the printer cannot detect a tray that has the correct paper size and type, then it prints from the default paper source.

Cancel the current job.

#### Load Manual Feeder with [custom string]

Try one or more of the following:

- Load the feeder with the correct size and type of paper.
- Depending on your printer model, touch **Prompt each page, paper loaded** or press on the printer control panel to clear the message and continue printing.
- Cancel the current job.

#### Load Manual Feeder with [custom type name]

Try one or more of the following:

- Load the feeder with the correct size and type of paper.
- Depending on your printer model, touch **Prompt each page, paper loaded** or press on the printer control panel to clear the message and continue printing.
- Cancel the current job.

#### Load Manual Feeder with [paper size]

Try one or more of the following:

- Load the feeder with the correct size of paper.
- Depending on your printer model, touch **Prompt each page, paper loaded** or press on the printer control panel to clear the message and continue printing.
- Cancel the current job.

### Load Manual Feeder with [paper type] [paper size]

Try one or more of the following:

- Load the feeder with the correct size and type of paper.
- Depending on your printer model, touch **Prompt each page, paper loaded** or press on the printer control panel to clear the message and continue printing.
- Cancel the current job.

#### Maintenance kit low [80.xy]

You may need to order a maintenance kit. For more information, visit the Lexmark support Web site at <a href="http://support.lexmark.com">http://support.lexmark.com</a> or contact customer support, and then report the message.

If necessary, select **Continue** to clear the message and continue printing. For non-touch-screen printer models, press ok to confirm.

### Maintenance kit nearly low [80.xy]

For more information, visit the Lexmark support Web site at <a href="http://support.lexmark.com">http://support.lexmark.com</a> or contact customer support, and then report the message.

If necessary, select **Continue** to clear the message and continue printing. For non-touch-screen printer models, press or to confirm.

#### Maintenance kit very low, [x] estimated pages remain [80.xy]

You may need to replace the maintenance kit very soon. For more information, visit the Lexmark support Web site at <a href="http://support.lexmark.com">http://support.lexmark.com</a> or contact customer support, and then report the message.

If necessary, select **Continue** on the printer control panel to clear the message and continue printing. For non-touch-screen printer models, press to confirm.

#### Memory full [38]

Try one or more of the following:

- From the printer control panel, select **Cancel job** to clear the message. For non-touch-screen printer models, press to confirm.
- Install additional printer memory.

#### Network [x] software error [54]

Try one or more of the following:

- From the printer control panel, select **Continue** to continue printing. For non-touch-screen printer models, press to confirm.
- Turn off the printer, wait for about 10 seconds, and then turn the printer back on.
- Update the network firmware in the printer or print server. For more information, visit the Lexmark support Web site at <a href="http://support.lexmark.com">http://support.lexmark.com</a>.

### Not enough free space in flash memory for resources [52]

Try one or more of the following:

- From the printer control panel, select **Continue** to clear the message and continue printing. For non-touch-screen printer models, press ok to confirm.
- Delete fonts, macros, and other data stored in the flash memory.
- Upgrade to a larger capacity flash memory card.

Note: Downloaded fonts and macros that are not previously stored in the flash memory are deleted.

### Non-Lexmark [color] [supply type], see User's Guide [33.xy]

Note: The supply type can be a toner cartridge or the imaging kit.

The printer has detected a non-Lexmark supply or part installed in the printer.

Your Lexmark printer is designed to function best with genuine Lexmark supplies and parts. Use of third-party supplies or parts may affect the performance, reliability, or life of the printer and its imaging components.

All life indicators are designed to function with Lexmark supplies and parts, and may deliver unpredictable results if third-party supplies or parts are used. Imaging component usage beyond the intended life may damage your Lexmark printer or its associated components.

**Warning—Potential Damage:** Use of third-party supplies or parts can affect warranty coverage. Damage caused by the use of third-party supplies or parts may not be covered by the warranty.

To accept any and all of these risks, and to proceed with the use of non-genuine supplies or parts in your printer, press and hold and the # button on the printer control panel simultaneously for 15 seconds.

If you do not wish to accept these risks, then remove the third-party supply or part from your printer, and then install a genuine Lexmark supply or part.

**Note:** For the list of supported supplies, see the "Ordering supplies" section of the *User's Guide* or visit **www.lexmark.com**.

#### Printer had to restart. Last job may be incomplete.

From the printer control panel, touch to clear the message and continue printing. For non-touch-screen printer models, press to confirm.

For more information, visit http://support.lexmark.com or contact customer support.

#### Reinstall missing or unresponsive [color] cartridge [31.xy]

Try one or more of the following:

- Install the missing toner cartridge. For more information, see the "Replacing supplies" section of the User's Guide.
- Remove the unresponsive cartridge, and then reinstall it.

**Note:** If the message appears after reinstalling the supply, then the cartridge may be defective. Replace the cartridge.

#### Reinstall missing or unresponsive [type] imaging kit [31.xy]

**Note:** The type can be a black imaging kit, or a black and color imaging kit.

Try one or more of the following:

- Install the missing imaging kit. For more information, see the "Replacing supplies" section of the *User's Guide*.
- Remove the unresponsive imaging kit, and then reinstall it.

**Note:** If the message appears after reinstalling the supply, then the imaging kit may be defective. Replace the imaging kit.

### Reload printed pages in Tray [x]

Try any of the following:

- From the printer control panel, select **Continue** to clear the message and continue printing the second side of the sheet. For non-touch-screen printer models, press to confirm.
- Cancel the print job.

#### Remove packaging material, [area name]

- **1** Remove any remaining packing material from the indicated location.
- 2 From the printer control panel, touch **Continue** to clear the message. For non-touch-screen printer models, press to confirm.

#### Remove paper from standard output bin

Remove the paper stack from the standard bin.

#### Replace [color] cartridge, 0 estimated pages remain [88.xy]

Replace the indicated toner cartridge to clear the message and continue printing. For more information, see the instruction sheet that came with the supply.

**Note:** If you do not have a replacement cartridge, then see the "Ordering supplies" section of the *User's Guide* or visit **www.lexmark.com**.

#### Replace [color] cartridge, printer region mismatch [42.xy]

Install a toner cartridge that matches the region number of the printer. x indicates the value of the printer region. y indicates the value of the cartridge region. x and y can have the following values:

Region number	Region
0	Global
1	United States, Canada
2	European Union (EU), European Economic Area (EEA), Switzerland
8	Rest of the world
9	Invalid

#### Notes:

- The x and y values represent .xy in the error code that appears on the printer control panel.
- The x and y values must match for printing to continue.

## Replace [type] imaging kit, 0 estimated pages remain [84.xy]

Note: The type can be a black imaging kit, or a black and color imaging kit.

Replace the indicated imaging kit to clear the message and continue printing. For more information, see the instruction sheet that came with the supply.

**Note:** If you do not have a replacement imaging kit, then see the "Ordering supplies" section of the *User's Guide* or visit <u>www.lexmark.com</u>.

#### Replace all originals if restarting job.

From the printer control panel, try one or more of the following:

• Select **Scan from automatic feeder**, and then press to continue scanning from the ADF immediately after the last successful scan job.

- Select **Scan from flatbed**, and then press to continue scanning from the scanner glass immediately after the last successful scan job.
- Select **Finish job without further scanning**, and then press of to end the last successful scan job.

**Note:** This does not cancel the scan job. All successfully scanned pages will be processed further for copying or e-mailing.

- Select **Restart Job**, and then press to restart the scan job with the same settings from the previous scan job.
- Select **Cancel Job**, and then press of to clear the message and cancel the scan job.

#### Replace defective [type] imaging kit [31.xy]

Note: The type can be a black imaging kit, or a black and color imaging kit.

Replace the defective imaging kit to clear the message and continue printing. For more information, see the instruction sheet that came with the supply.

**Note:** If you do not have a replacement imaging kit, then see the "Ordering supplies" section of the *User's Guide* or visit **www.lexmark.com**.

## Replace jammed originals if restarting job.

From the printer control panel, try one or more of the following:

- Select **Scan from automatic feeder**, and then press to continue scanning from the ADF immediately after the last successful scan job.
- Select **Scan from flatbed**, and then press to continue scanning from the scanner glass immediately after the last successful scan job.
- Select **Finish job without further scanning**, and then press of to end the last successful scan job.

**Note:** This does not cancel the scan job. All successfully scanned pages will be processed further for copying or e-mailing.

- Select **Restart Job**, and then press or to restart the scan job with the same settings from the previous scan job.
- Select **Cancel Job**, and then press ok to clear the message and cancel the scan job.

## Replace maintenance kit, 0 estimated pages remain [80.xy]

The printer is scheduled for maintenance. For more information, visit the Lexmark support Web site at <a href="http://support.lexmark.com">http://support.lexmark.com</a> or contact your service representative, and then report the message.

## Replace missing [type] imaging kit [31.xy]

Note: The type can be a black imaging kit, or a black and color imaging kit.

Install the indicated imaging kit to clear the message. For more information, see the "Replacing supplies" section of the *User's Guide*.

#### Replace missing waste toner bottle [82.xy]

Install the missing waste toner bottle to clear the message. For more information, see the instruction sheet that came with the supply.

#### Replace unsupported [color] cartridge [32.xy]

Remove the toner cartridge, and then install a supported one to clear the message.

**Note:** If you do not have a replacement cartridge, then see the "Ordering supplies" section of the *User's Guide* or visit **www.lexmark.com**.

#### Replace unsupported [type] imaging kit [32.xy]

Note: The type can be a black imaging kit, or a black and color imaging kit.

Remove the indicated imaging kit, and then install a supported one to clear the message.

**Note:** If you do not have a replacement imaging kit, then see the "Ordering supplies" section of the *User's Guide* or visit **www.lexmark.com**.

## Replace waste toner bottle [82.xy]

Replace the waste toner bottle to clear the message.

#### Scanner automatic feeder cover open

Close the ADF cover.

#### Scanner disabled by admin [840.01]

Print without the scanner, or contact your system support person.

#### Scanner disabled. Contact system administrator if problem persists. [840.02]

From the printer control panel, try one or more of the following:

- Select **Continue with scanner disabled** to return to the home screen, and then contact your system support person.
- Select **Reboot and automatically enable scanner** to cancel the job.

**Note:** This attempts to enable the scanner.

• For non-touch-screen printer models, press ot confirm.

#### Scanner jam, remove all originals from the scanner [2yy.xx]

Remove the jammed paper from the scanner.

#### Scanner jam, remove jammed originals from the scanner [2yy.xx]

Remove the jammed paper from the scanner.

#### SMTP server not set up. Contact system administrator.

From the printer control panel, press ot clear the message.

Note: If the message appears again, then contact your system support person.

#### Standard network software error [54]

Try one or more of the following:

- From the printer control panel, select **Continue** to continue printing. For non-touch-screen printer models, press to confirm.
- Turn off the printer and then turn it back on.
- Update the network firmware in the printer or print server. For more information, visit the Lexmark support Web site at <a href="http://support.lexmark.com">http://support.lexmark.com</a>.

#### Standard USB port disabled [56]

From the printer control panel, select **Continue** to clear the message. For non-touch-screen printer models, press to confirm.

#### Notes:

- The printer discards any data received through the USB port.
- Make sure the USB Buffer menu is not set to Disabled.

#### Supply needed to complete job

Try one or more of the following:

- From the printer control panel, touch **Prompt for supplies** to view all error messages that indicate what supplies are needed to continue processing the current job. For non-touch-screen printer models, press to clear the message and continue printing.
  - 1 Order the missing supply immediately.
  - 2 Install the supply. For more information, see the instruction sheet that came with the supply.
- Cancel the print job, then install the missing supply, and then resend the print job.

#### Too many flash options installed [58]

- **1** Turn off the printer.
- **2** Unplug the power cord from the electrical outlet.
- **3** Remove the extra flash memory.
- 4 Connect the power cord to a properly grounded electrical outlet.
- 5 Turn the printer back on.

#### Too many trays attached [58]

- 1 Turn off the printer.
- **2** Unplug the power cord from the electrical outlet.
- **3** Remove the extra trays.
- 4 Connect the power cord to a properly grounded electrical outlet.
- 5 Turn the printer back on.

#### [Type] imaging kit low [84.xy]

Note: The type can be a black imaging kit, or a black and color imaging kit.

You may need to order an imaging kit. If necessary, select **Continue** on the printer control panel to clear the message and continue printing. For non-touch-screen printer models, press to confirm.

## [Type] imaging kit nearly low [84.xy]

**Note:** The type can be a black imaging kit, or a black and color imaging kit.

If necessary, select **Continue** on the printer control panel to clear the message and continue printing. For non-touch-screen printer models, press to confirm.

## [Type] imaging kit very low, [x] estimated pages remain [84.xy]

Note: The type can be a black imaging kit, or a black and color imaging kit.

You may need to replace the imaging kit very soon. For more information, see the "Replacing supplies" section of the *User's Guide*.

If necessary, select **Continue** on the printer control panel to clear the message and continue printing. For non-touch-screen printer models, press to confirm.

#### **Unformatted flash detected [53]**

Try one or more of the following:

• From the printer control, select **Continue** to stop the defragmentation and continue printing. For non-touch-screen printer models, press ok to confirm.

• Format the flash memory.

Note: If the error message remains, then the flash memory may be defective and need to be replaced.

#### Waste toner bottle nearly full [82.xy]

You may need to order a waste toner bottle. If necessary, select **Continue** on the printer control panel to clear the message and continue printing. For non-touch-screen printer models, press to confirm.

#### Weblink server not set up. Contact system administrator.

From the printer control panel, press ot clear the message.

**Note:** If the message appears again, then contact your system support person.

## **Solving printer problems**

### **Basic printer problems**

#### The printer is not responding

Action	Yes	No
Step 1	Go to step 2.	Turn on the printer.
Make sure the printer is turned on.		
Is the printer turned on?		
Step 2	Press the Sleep button	Go to step 3.
Check if the printer is in Sleep mode or Hibernate mode.	to wake the printer from Sleep mode or	
Is the printer in Sleep mode or Hibernate mode?	Hibernate mode.	
Step 3	Go to step 4.	Plug one end of the
Check if one end of the power cord is plugged into the printer and the other to a properly grounded electrical outlet.		power cord into the printer and the other to a properly grounded
Is the power cord plugged into the printer and a properly grounded electrical outlet?		electrical outlet.

Action	Yes	No
Step 4 Check other electrical equipment plugged into the electrical outlet.  Does other electrical equipment work?	Unplug the other electrical equipment, and then turn on the printer. If the printer does not work, then reconnect the other electrical equipment.	Go to step 5.
Step 5 Check if the cables connecting the printer and the computer are inserted in the correct ports.  Are the cables inserted in the correct ports?	Go to step 6.	Make sure to match the following:  • The USB symbol on the cable with the USB symbol on the printer  • The appropriate Ethernet cable with the Ethernet port
Step 6  Make sure the electrical outlet is not turned off by a switch or breaker.  Is the electrical outlet turned off by a switch or breaker?	Turn on the switch or reset the breaker.	Go to step 7.
Step 7  Check if the printer is plugged into any surge protectors, uninterruptible power supplies, or extension cords.  Is the printer plugged into any surge protectors, uninterruptible power supplies, or extension cords?	Connect the printer power cord directly to a properly grounded electrical outlet.	Go to step 8.
Step 8  Check if one end of the printer cable is plugged into a port on the printer and the other to the computer, print server, option, or other network device.  Is the printer cable securely attached to the printer and the computer, print server, option, or other network device?	Go to step 9.	Connect the printer cable securely to the printer and the computer, print server, option, or other network device.
Step 9  Make sure to install all hardware options properly and remove any packing material.  Are all hardware options properly installed and all packing material removed?	Go to step 10.	Turn off the printer, remove all packing materials, then reinstall the hardware options, and then turn on the printer.
Step 10 Check if you have selected the correct port settings in the printer driver.  Are the port settings correct?	Go to step 11.	Use correct printer driver settings.

Action	Yes	No
Step 11 Check the installed printer driver.	Go to step 12.	Install the correct printer driver.
Is the correct printer driver installed?		
Step 12  Turn off the printer, then wait for about 10 seconds, and then turn the printer back on.	The problem is solved.	Contact <u>customer</u> <u>support</u> .
Is the printer working?		

## Printer display is blank

Action	Yes	No
Step 1 Press the Sleep button on the printer control panel.	The problem is solved.	Go to step 2.
Does Ready appear on the printer display?  Step 2	The problem is solved.	Turn off the printer,
Turn off the printer, then wait for about 10 seconds, and then turn the printer back on.		and then contact customer support.
Do Please wait and Ready appear on the printer display?		

# **Option problems**

### **Cannot detect internal option**

Action	Yes	No
Step 1	The problem is solved.	Go to step 2.
Turn off the printer, then wait for about 10 seconds, and then turn on the printer.		
Does the internal option operate correctly?		
Step 2	Go to step 3.	Connect the internal
Check if the internal option is properly installed in the controller board.		option to the controller
<b>a</b> Turn off the printer using the power switch, and then unplug the power cord from the electrical outlet.		board.
<b>b</b> Make sure the internal option is installed in the appropriate connector in the controller board.		
<b>c</b> Connect the power cord to the printer, then to a properly grounded electrical outlet, and then turn on the printer.		
Is the internal option properly installed in the controller board?		

Action	Yes	No
Step 3  Print a menu settings page, and then check to see if the internal option is listed in the Installed Features list.	Go to step 4.	Reinstall the internal option.
Is the internal option listed in the menu settings page?		
Step 4	The problem is solved.	Contact <u>customer</u>
a Check if the internal option is selected.		support.
It may be necessary to manually add the internal option in the printer driver to make it available for print jobs. For more information, see "Adding available options in the print driver" on page 23.		
<b>b</b> Resend the print job.		
Does the internal option operate correctly?		

## **Tray problems**

Action	Yes	No
Step 1	The problem is solved.	Go to step 2.
<b>a</b> Pull out the tray, and then do one or more of the following:		
Check for paper jams or misfeeds.		
<ul> <li>Check if the paper size indicators on the paper guides are aligned with the paper size indicators on the tray.</li> </ul>		
<ul> <li>If you are printing on custom-size paper, then make sure that the paper guides rest against the edges of the paper.</li> </ul>		
<ul> <li>Make sure the paper is below the maximum paper fill indicator.</li> </ul>		
Make sure paper lies flat in the tray.		
<b>b</b> Check if the tray closes properly.		
Is the tray working?		
Step 2	The problem is solved.	Go to step 3.
<b>a</b> Turn off the printer, then wait about 10 seconds, and then turn the printer back on.		
<b>b</b> Resend the print job.		
Is the tray working?		
Step 3	Go to step 4.	Reinstall the tray. For
Check if the tray is installed and recognized by the printer.		more information, see
Print a menu settings page, and then check if the tray is listed in the Installed Features list.		the setup documentation that came with the tray.
Is the tray listed in the menu settings page?		

Action	Yes	No
Step 4 Check if the tray is available in the printer driver.	The problem is solved.	Contact <u>customer</u> <u>support</u> .
<b>Note:</b> If necessary, manually add the tray in the printer driver to make it available for print jobs. For more information, see <u>"Adding available options in the print driver" on page 23</u> .		
Is the tray available in the printer driver?		

# Paper feed problems

## Jammed pages are not reprinted

Action	Yes	No
<ul> <li>a Turn on jam recovery.</li> <li>1 From the printer control panel, navigate to:         <ul> <li>Settings &gt; General Settings &gt; Print Recovery &gt; Jam Recovery</li> </ul> </li> <li>2 Select On or Auto.</li> <li>3 Depending on your printer model, press or touch Submit.</li> <li>b Resend the pages that did not print.</li> </ul>	The problem is solved.	Contact <u>customer</u> <u>support</u> .
Were the jammed pages reprinted?		

## Paper frequently jams

Action	Yes	No
Step 1	Go to step 2.	The problem is solved.
<b>a</b> Pull out the tray, and then do one or more of the following:		
<ul> <li>Make sure paper lies flat in the tray.</li> </ul>		
<ul> <li>Check if the paper size indicators on the paper guides are aligned with the paper size indicators on the tray.</li> </ul>		
<ul> <li>Check if the paper guides are aligned against the edges of the paper.</li> </ul>		
Make sure the paper is below the maximum paper fill indicator.		
Check if you are printing on a recommended paper size and type.		
<b>b</b> Insert the tray properly.		
If jam recovery is enabled, then the print jobs will reprint automatically.		
Do paper jams still occur frequently?		

Action	Yes	No
Step 2	Go to step 3.	The problem is solved.
a Load paper from a fresh package.		
<b>Note:</b> Paper absorbs moisture due to high humidity. Store paper in its original wrapper until you use it.		
<b>b</b> Resend the print job.		
Do paper jams still occur frequently?		
Step 3	Contact <u>customer</u>	The problem is solved.
<b>a</b> Review the tips on avoiding jams. For more information, see <u>"Avoiding jams" on page 157</u> .	support.	
<b>b</b> Follow the recommendations, and then resend the print job.		
Do paper jams still occur frequently?		

#### Paper jam message remains after jam is cleared

Action	Yes	No
a Do either of the following:	Contact <u>customer</u>	The problem is solved.
• For touch-screen printer models, touch or <b>Done</b> .	support.	
• For non-touch-screen printer models, select <b>Next</b> > OK > <b>Clear</b>		
the jam, press OK > OK .		
<b>b</b> Follow the instructions on the printer display.		
Does the paper jam message remain?		

# **Solving print problems**

## **Printing problems**

#### Confidential and other held jobs do not print

**Note:** Confidential, Verify, Reserve, and Repeat print jobs may be deleted if the printer requires extra memory to process additional held jobs.

Action	Yes	No
Step 1 Open the held jobs folder on the printer display, and then verify that your print job is listed.  Is your print job listed in the held jobs folder?	Go to step 2.	Select one of the Print and Hold options, and then resend the print job. For more information, see "Printing confidential and other held jobs" on page 53.
Step 2	The problem is solved.	Go to step 3.
The print job may contain a formatting error or invalid data.		
Delete the print job, and then send it again.		
For PDF files, generate a new PDF, and then print it again.		
If you are printing from the Internet, then the printer may be reading multiple job titles as duplicates and deleting all jobs except the first one.		
For Windows users		
a Open the Print Properties folder.		
<b>b</b> From the Print and Hold dialog, select the "Keep duplicate documents" check box.		
<b>c</b> Enter a PIN number.		
For Macintosh users		
Save each print job, name each job differently, and then send the individual jobs to the printer.		
Does the job print?		
Step 3	The problem is solved.	Add additional printer
Free up additional printer memory by deleting some of the held jobs.		memory.
Does the job print?		

#### **Incorrect characters print**

Action	Yes	No
Step 1  Make sure the printer is not in Hex Trace mode.  Note: If Ready Hex appears on the printer display, then turn off the	Deactivate Hex Trace mode.	Go to step 2.
Is the printer in Hex Trace mode?		
<ul> <li>a From the printer control panel, select Standard Network or Network [x], and then set SmartSwitch to On.</li> <li>b Resend the print job.</li> </ul>	contact <u>customer</u> <u>support</u> .	The problem is solved.
Do incorrect characters print?		

### Job prints from the wrong tray or on the wrong paper

Action	Yes	No
Step 1	The problem is solved.	Go to step 2.
<b>a</b> Check if you are printing on paper that is supported by the tray.		
<b>b</b> Resend the print job.		
Did the job print from the correct tray or on the correct paper?		
Step 2	The problem is solved.	Go to step 3.
<b>a</b> From the Paper menu on the printer control panel, set the paper size and type to match the paper loaded in the tray.		
<b>b</b> Resend the print job.		
Did the job print from the correct tray or on the correct paper?		
Step 3	The problem is solved.	Go to step 4.
<b>a</b> Depending on your operating system, open Printing Preferences or the Print dialog, and then specify the paper type.		
<b>b</b> Resend the print job.		
Did the job print from the correct tray or on the correct paper?		
Step 4	The problem is solved.	Contact <u>customer</u>
a Check if the trays are not linked.		support.
<b>b</b> Resend the print job.		
Did the job print from the correct tray or on the correct paper?		

### Large jobs do not collate

Action	Yes	No
Step 1	The problem is solved.	Go to step 2.
<b>a</b> From the Finishing menu on the printer control panel, set Collate to (1,2,3) (1,2,3).		
<b>b</b> Resend the print job.		
Did the job print and collate correctly?		
Step 2	The problem is solved.	Go to step 3.
<b>a</b> From the printer software, set Collate to (1,2,3) (1,2,3).		
<b>Note:</b> Setting Collate to (1,1,1) (2,2,2) in the software overrides the setting in the Finishing menu.		
<b>b</b> Resend the print job.		
Did the job print and collate correctly?		
Step 3	The problem is solved.	Contact <u>customer</u>
Reduce the complexity of the print job by eliminating the number and size of fonts, the number and complexity of images, and the number of pages in the job.		support.
Did the job print and collate correctly?		

### Multiple-language PDF files do not print

Action	Yes	No
Step 1	The problem is solved.	Go to step 2.
<b>a</b> Check if the print options for the PDF output are set to embed all fonts.		
For more information, see the documentation that came with Adobe Acrobat.		
<b>b</b> Generate a new PDF file, and then resend the print job.		
Do the files print?		
Step 2	The problem is solved.	Contact <u>customer</u>
a Open the document you want to print in Adobe Acrobat.		support.
<b>b</b> Click <b>File</b> > <b>Print</b> > <b>Advanced</b> > <b>Print As Image</b> > <b>OK</b> > <b>OK</b> .		
Do the files print?		

#### Print jobs do not print

Action	Yes	No
Step 1	The problem is solved.	Go to step 2.
<b>a</b> From the document you are trying to print, open the Print dialog and check if you have selected the correct printer.		
<b>Note:</b> If the printer is not the default printer, then you must select the printer for each document that you want to print.		
<b>b</b> Resend the print job.		
Do the jobs print?		
Step 2	The problem is solved.	Go to step 3.
<b>a</b> Check if the printer is plugged in and turned on, and if <b>Ready</b> appears on the printer display.		
<b>b</b> Resend the print job.		
Do the jobs print?		
Step 3	The problem is solved.	Go to step 4.
If an error message appears on the printer display, then clear the message.		
<b>Note:</b> The printer continues to print after clearing the message.		
Do the jobs print?		
Step 4	The problem is solved.	Go to step 5.
<b>a</b> Check if the ports (USB, serial, or Ethernet) are working and if the cables are securely connected to the computer and the printer.		
<b>Note:</b> For more information, see the setup documentation that came with the printer.		
<b>b</b> Resend the print job.		
Do the jobs print?		
Step 5	The problem is solved.	Go to step 6.
<b>a</b> Turn off the printer, then wait for about 10 seconds, and then turn the printer back on.		
<b>b</b> Resend the print job.		
Do the jobs print?		
Step 6	The problem is solved.	Contact <u>customer</u>
<b>a</b> Remove, and then reinstall the printer software. For more information, see <u>"Installing the printer" on page 23</u> .		support.
Note: The printer software is available at <a href="http://support.lexmark.com">http://support.lexmark.com</a> .		
<b>b</b> Resend the print job.		
Do the jobs print?		

### Print job takes longer than expected

Action	Yes	No
Step 1	The problem is solved.	Go to step 2.
Change the environmental settings of the printer.		
<b>a</b> From the printer control panel, navigate to:		
Settings > General Settings		
<b>b</b> Select <b>Eco-Mode</b> or <b>Quiet Mode</b> , and then select <b>Off</b> .		
<b>Note:</b> Disabling Eco-Mode or Quiet Mode may increase the consumption of energy or supplies, or both.		
Did the job print?		
Step 2	The problem is solved.	Go to step 3.
Reduce the number and size of fonts, the number and complexity of images, and the number of pages in the print job, and then resend the job		
Did the job print?		
Step 3	The problem is solved.	Go to step 4.
a Remove held jobs stored in the printer memory.		
<b>b</b> Resend the print job.		
Did the job print?		
Step 4	The problem is solved.	Go to step 5.
a Disable the Page Protect feature.		
From the printer control panel, navigate to:		
Settings > General Settings > Print Recovery > Page Protect > Off		
<b>b</b> Resend the print job.		
Did the job print?		
Step 5	The problem is solved.	Go to step 6.
<b>a</b> Check if the cable connections to the printer and print server are secure. For more information, see the setup documentation that came with the printer.		
<b>b</b> Resend the print job.		
Did the job print?		
Step 6	The problem is solved.	Contact <u>customer</u>
Install additional printer memory, and then resend the print job.		support.
Did the job print?		

#### Tray linking does not work

#### **Notes:**

- The trays can detect paper length.
- The multipurpose feeder does not automatically detect the paper size. You must set the size from the Paper Size/Type menu.


Action	Yes	No
Step 1	The problem is solved.	Go to step 2.
<b>a</b> Open the trays, and then check if they contain paper of the same size and type.		
<ul> <li>Check if the paper guides are in the correct positions for the size of the paper loaded in each tray.</li> </ul>		
<ul> <li>Check if the paper size indicators on the paper guides are aligned with the paper size indicators on the tray.</li> </ul>		
<b>b</b> Resend the print job.		
Do the trays link correctly?		
Step 2	The problem is solved.	Contact customer
<b>a</b> From the printer control panel, set the paper size and type in the Paper menu to match the paper loaded in the trays to be linked.		support.
<b>Note:</b> The paper size and type must match for trays to be linked.		
<b>b</b> Resend the print job.		
Do the trays link correctly?		

#### Unexpected page breaks occur

Action	Yes	No
Step 1	The problem is solved.	Go to step 2.
Adjust the print timeout settings.		
<b>a</b> From the printer control panel, navigate to:		
Settings > General Settings > Timeouts > Print Timeout		
<b>b</b> Select a higher setting and then, depending on your printer model, select or <b>Submit</b> .		
c Resend the print job.		
Did the file print correctly?		
Step 2  a Check the original file for manual page breaks.	The problem is solved.	Contact <u>customer</u> <u>support</u> .
<b>b</b> Resend the print job.		
Neseria the print job.		
Did the file print correctly?		

## **Print quality problems**

#### Characters have jagged or uneven edges

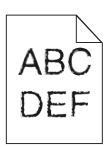

Action	Yes	No
Step 1  a Print a font sample list to check if the fonts you are using are supported by the printer.	Go to step 2.	Select a font that is supported by the printer.
1 From the printer control panel, navigate to: Menus > Reports > Print Fonts		
2 Select PCL Fonts or PostScript Fonts.		
<b>b</b> Resend the print job.		
Are you using fonts that are supported by the printer?		
Step 2	The problem is solved.	Contact <u>customer</u>
Check if the fonts installed on the computer are supported by the printer. $ \\$		support.
Are the fonts installed on the computer supported by the printer?		

# Clipped pages or images






Action	Yes	No
Step 1	Go to step 2.	The problem is solved.
<b>a</b> Move the width and length guides in the tray to the correct positions for the paper loaded.		
<b>b</b> Resend the print job.		
Is the page or image clipped?		

Action	Yes	No
Step 2 From the printer control panel, set the paper size and type in the Paper	Go to step 3.	Do one or more of the following:
menu to match the paper loaded in the tray.  Does the paper size match the paper loaded in the tray?		<ul> <li>From the printer control panel, change the paper size to match the paper loaded in the</li> </ul>
		tray.
		<ul> <li>From the printer control panel, change the paper type to match the paper loaded in the tray.</li> </ul>
Step 3	Go to step 4.	The problem is solved.
<b>a</b> Depending on your operating system, specify the paper size from Printing Preferences or from the Print dialog.		
<b>b</b> Resend the print job.		
Is the page or image clipped?		
Step 4	Contact <u>customer</u>	The problem is solved.
<b>a</b> Remove, and then reinstall the imaging kit.	support.	
Warning—Potential Damage: Do not expose the imaging kit to direct light for more than 10 minutes. Extended exposure to light may cause print quality problems.		
Warning—Potential Damage: Do not touch the underside of the imaging kit. This could damage the imaging kit.		
<b>b</b> Resend the print job.		
Is the page or image clipped?		

#### **Gray background on prints**

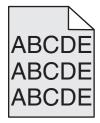



Action	Yes	No
Step 1	The problem is solved.	Go to step 2.
Reduce the toner darkness.		
<b>a</b> From the Quality menu on the printer control panel, reduce the tone density.	r	
Note: 4 is the factory default setting.		
<b>b</b> Resend the print job.		
Did the gray background disappear?		
Step 2	The problem is solved.	Contact <u>customer</u>
a Remove, and then reinstall the imaging kit.		support.
Warning—Potential Damage: Do not expose the imaging kit to direct light for more than 10 minutes. Extended exposure to light may cause print quality problems.		
Warning—Potential Damage: Do not touch the underside of the imaging kit. This could damage the imaging kit.		
<b>b</b> Resend the print job.		
Did the gray background disappear?		


#### Horizontal voids appear on prints



Action	Yes	No
<ul><li>Step 1</li><li>a Make sure your software program is using a correct fill pattern.</li><li>b Resend the print job.</li></ul>	Go to step 2.	The problem is solved.
Do horizontal voids appear on prints?		
<ul> <li>Step 2</li> <li>a Load the specified tray or feeder with a recommended type of paper.</li> <li>b Resend the print job.</li> </ul>	Go to step 3.	The problem is solved.
Do horizontal voids appear on prints?		

Action	Yes	No
Step 3	Go to step 4.	The problem is solved.
a Remove, and then reinstall the imaging kit.		
Warning—Potential Damage: Do not expose the imaging kit to direct light for more than 10 minutes. Extended exposure to light may cause print quality problems.		
Warning—Potential Damage: Do not touch the underside of the imaging kit. This could damage the imaging kit.		
<b>b</b> Resend the print job.		
Do horizontal voids appear on prints?		
Step 4	Contact <u>customer</u>	The problem is solved.
Replace the imaging kit, and then resend the print job.	support.	
Do horizontal voids appear on prints?		

## **Incorrect margins on prints**

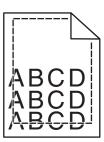


Action	Yes	No
Step 1	The problem is solved.	Go to step 2.
<b>a</b> Move the width and length guides in the tray to the correct positions for the paper size loaded.		
<b>b</b> Resend the print job.		
Are the margins correct?		
Step 2 From the printer control panel, set the paper size in the Paper menu to match the paper loaded in the tray.  Does the paper size match the paper loaded in the tray?	Go to step 3.	Do one or more of the following:  • Specify the paper size from the tray settings to match the paper loaded in the tray.
		<ul> <li>Change the paper loaded in the tray to match the paper size specified in the tray settings.</li> </ul>

Action	Yes	No
<ul> <li>Step 3</li> <li>a Depending on your operating system, specify the paper size from Printing Preferences or from the Print dialog.</li> <li>b Resend the print job.</li> </ul>	The problem is solved.	Contact <u>customer</u> <u>support</u> .
Are the margins correct?		

### Paper curl

Action	Yes	No
Step 1  Move the width and length guides in the tray to the correct positions for the size of the paper loaded.	Go to step 2.	Adjust the width and length guides.
Are the width and length guides positioned correctly?		
Step 2 From the printer control panel, set the paper type and weight in the Paper menu to match the paper loaded in the tray.  Do the paper type and weight match the type and weight of the paper in the tray?		Specify the paper type and weight from the tray settings to match the paper loaded in the tray.
<ul> <li>Step 3</li> <li>a Depending on your operating system, specify the paper type and weight from Printing Preferences or from the Print dialog.</li> <li>b Resend the print job.</li> </ul>	Go to step 4.	The problem is solved.
Step 4  a Remove the paper from the tray, and then turn it over.  b Resend the print job.  Is the paper still curled?	Go to step 5.	The problem is solved.
Step 5  a Load paper from a fresh package.  Note: Paper absorbs moisture due to high humidity. Store paper in its original wrapper until you use it.  b Resend the print job.  Is the paper still curled?	Contact <u>customer</u> <u>support</u> .	The problem is solved.

### **Print irregularities**

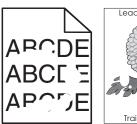



Action	Yes	No
<ul> <li>Step 1</li> <li>a Move the width and length guides in the tray to the correct positions for the size of the paper loaded in the tray.</li> <li>b Resend the print job.</li> </ul>	Go to step 2.	The problem is solved.
Do print irregularities still appear?		
Step 2 From the printer control panel, set the paper size and type in the Paper menu to match the paper loaded in the tray.  Is the tray set to the size and type of the paper loaded in the tray?	Go to step 3.	Do one or more of the following:  • Specify the paper size from the tray settings to match the paper loaded in the tray.  • Change the paper loaded in the tray to match the paper size specified in the tray settings.
<ul> <li>Step 3</li> <li>a Depending on your operating system, specify the paper type and weight from Printing Preferences or from the Print dialog.</li> <li>b Resend the print job.</li> </ul> Do print irregularities still appear?	Go to step 4.	The problem is solved.
Step 4  Check if the paper loaded in the tray has texture or rough finishes.  Are you printing on textured or rough paper?	From the printer control panel, set the paper texture in the Paper menu to match the paper loaded in the tray.	Go to step 5.
<ul> <li>Step 5</li> <li>a Load paper from a fresh package.</li> <li>Note: Paper absorbs moisture due to high humidity. Store paper in its original wrapper until you use it.</li> <li>b Resend the print job.</li> </ul> Do print irregularities still appear?	Go to step 6.	The problem is solved.

Action	Yes	No
Step 6 Replace the imaging kit, and then resend the print job.  Do print irregularities still appear?	Contact <u>customer</u> <u>support</u> .	The problem is solved.

#### Print is too dark



Action	Yes	No
Step 1  a From the Quality menu on the printer control panel, select Color Adjust.  b Resend the print job.	Go to step 2.	The problem is solved.
Is the print still too dark?		
<ul> <li>Step 2</li> <li>a From the Quality menu on the printer control panel, reduce the toner darkness.</li> <li>Note: 4 is the factory default setting.</li> <li>b Resend the print job.</li> </ul>	Go to step 3.	The problem is solved.
Is the print still too dark?		
<ul> <li>Step 3</li> <li>a From the printer control panel, set the paper type, texture, and weight in the Paper menu to match the paper loaded in the tray.</li> <li>b Resend the print job.</li> </ul>	Go to step 4.	Change the paper loaded in the tray to match the paper type, texture, and weight specified in the tray settings.
Is the tray set to the type, texture, and weight of the paper loaded?		
<ul> <li>Step 4</li> <li>a Depending on your operating system, specify the paper type, texture and weight from Printing Preferences or from the Print dialog.</li> <li>b Resend the print job.</li> </ul>	Go to step 5.	The problem is solved.
Is the print still too dark?		

Action	Yes	No
Step 5 Check if the paper loaded in the tray has texture or rough finishes.  Are you printing on textured or rough paper?	From the printer control panel, set the paper texture in the Paper menu to match the paper loaded on the tray.	Go to step 6.
Step 6	Go to step 7.	The problem is solved.
a Load paper from a fresh package.		
<b>Note:</b> Paper absorbs moisture due to high humidity. Store paper in its original wrapper until you use it.		
<b>b</b> Resend the print job.		
Is the print still too dark?		
Step 7	Contact <u>customer</u>	The problem is solved.
Replace the imaging kit, and then resend the print job.	support.	
Is the print still too dark?		


## Print is too light



Action	Yes	No
Step 1	Go to step 2.	The problem is solved.
a From the Quality menu on the printer control panel, select Color     Adjust.		
<b>b</b> Resend the print job.		
Is the print still too light?		
Step 2	Go to step 3.	The problem is solved.
<b>a</b> From the Quality menu on the printer control panel, increase the toner darkness.		
Note: 4 is the factory default setting.		
<b>b</b> Resend the print job.		
Is the print still too light?		

Action	Yes	No
Step 3 From the printer control panel, set the paper type, texture, and weight in the Paper menu to match the paper loaded in the tray.  Is the tray set to the type, texture, and weight of the paper loaded?	Go to step 4.	Specify the paper type, texture, and weight from the tray settings to match the paper loaded in the tray.
<ul> <li>Step 4</li> <li>a Depending on your operating system, specify the paper type, texture, and weight from Printing Preferences or from the Print dialog.</li> <li>b Resend the print job.</li> </ul>	Go to step 5.	The problem is solved.
Step 5  Make sure that the paper has no texture or rough finishes.  Are you printing on textured or rough paper?	From the printer control panel, set the paper texture in the Paper menu to match the paper loaded in the tray	Go to step 5.
Step 6  a Load paper from a fresh package.  Note: Paper absorbs moisture due to high humidity. Store paper in its original wrapper until you use it.  b Resend the print job.  Is the print still too light?	Go to step 7.	The problem is solved.
Step 7 Replace the imaging kit, and then resend the print job. Is the print still too light?	Contact <u>customer</u> <u>support</u> .	The problem is solved.

#### Printer is printing blank pages

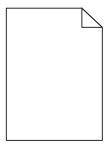


Action	1	Yes	No
Step 1		Go to step 2.	The problem is solved.
a Ch	eck if there is packing material left on the imaging kit.		
1	Remove the imaging kit.		
2	Check if the packing material is properly removed from the imaging kit. $\label{eq:check} % \begin{center} \end{constraint} \begin{center} \end{center} \begin{center} \e$		
	<b>Warning—Potential Damage:</b> Do not expose the imaging kit to direct light for more than 10 minutes. Extended exposure to light may cause print quality problems.		
	<b>Warning—Potential Damage:</b> Do not touch the underside of the imaging kit. This could damage the imaging kit.		
3	Reinstall the imaging kit.		
<b>b</b> Re	send the print job.		
Is the	printer still printing blank pages?		
Step 2	!	Contact customer	The problem is solved.
Repla	ce the imaging kit, and then resend the print job.	support.	
Is the	printer still printing blank pages?		

## Printer is printing solid black pages




Action	Yes	No
Step 1	Go to step 2.	The problem is solved.
<b>a</b> Remove, and then reinstall the imaging kit.		
Warning—Potential Damage: Do not expose the imaging kit to direct light for more than 10 minutes. Extended exposure to light may cause print quality problems.		
Warning—Potential Damage: Do not touch the underside of the imaging kit. This could damage the imaging kit.		
<b>b</b> Resend the print job.		
Is the printer printing solid black pages?		
Step 2 Replace the imaging kit, and then resend the print job.	Contact <u>customer</u> <u>support</u> .	The problem is solved.
Is the printer printing solid black pages?		

### Repeating defects appear on prints

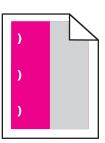

Action	Yes	No
<ul> <li>a Check if the distance between the defects is equal to one of the following: <ul> <li>25.1 mm (0.98 in.)</li> <li>29.8 mm (1.17 in.)</li> <li>43.9 mm (1.72 in.)</li> <li>45.5 mm (1.79 in.)</li> <li>94.2 mm (3.70 in.)</li> </ul> </li> <li>b If the distance between the defects equals 25.1 mm (0.98 in.), 29.8 mm (1.17 in.), or 94.2 mm (3.70 in.), then replace the photoconductor unit.</li> <li>c If the distance between the defects equals 43.9 mm (1.72 in.) or 45.5 mm (1.79 in.), then replace the developer unit.</li> </ul> <li>Do the repeating defects still appear?</li>	1 Check if the distance between the defects is equal to one of the following:  • 37.7 mm (1.48 in.)  • 78.5 mm (3.09 in.)  • 95 mm (3.74 in.)  2 Take note of the distance, and then contact customer support or your service representative.	The problem is solved.

### **Shadow images appear on prints**

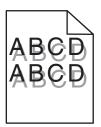




Action	Yes	No
Step 1 Check if the paper loaded in the tray has the correct paper type and weight.	Go to step 2.	Load paper with the correct paper type and weight in the tray.
Is paper with the correct paper type and weight loaded in the tray?		
Step 2 From the printer control panel, set the paper type and weight in the Paper menu to match the paper loaded in the tray.	Go to step 3.	Change the paper type and weight to match the paper loaded in the tray.
Do the printer settings match the type and weight of the paper loaded?		

Action	Yes	No
Step 3	Go to step 4.	The problem is solved.
<b>a</b> Depending on your operating system, specify the paper type and weight from Printing Preferences or from the Print dialog.		
<b>b</b> Resend the print job.		
Do shadow images still appear on prints?		
Step 4	Contact <u>customer</u>	The problem is solved.
Replace the imaging kit, and then resend the print job.	support.	
Do shadow images still appear on prints?		

### **Skewed print**

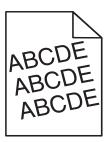


Action	Yes	No
Step 1	Go to step 2.	The problem is solved.
<b>a</b> Move the width and length guides in the tray to the correct positions for the size of the paper loaded.		
<b>b</b> Resend the print job.		
Is the print still skewed?		
Step 2	Contact <u>customer</u>	The problem is solved.
<b>a</b> Check if you are printing on a paper that is supported by the tray.	support.	
<b>b</b> Resend the print job.		
Is the print still skewed?		

### Streaked horizontal lines appear on prints



Action	Yes	No
Step 1	Go to step 2.	The problem is solved.
<b>a</b> Depending on your operating system, specify the tray or feeder from Printing Preferences or the Print dialog.		
<b>b</b> Resend the print job.		
Do streaked horizontal lines appear on prints?		
Step 2 From the printer control panel, set the paper type and weight in the Paper	Go to step 3.	Do one or more of the following:
menu to match the paper loaded in the tray.		<ul> <li>Specify the paper type and weight</li> </ul>
Do the paper type and weight match the paper in the tray?		from the tray settings to match the paper loaded in the tray.
		<ul> <li>Change the paper loaded in the tray to match the paper type and weight specified in the tray settings.</li> </ul>
Step 3	Go to step 4.	The problem is solved.
a Load paper from a fresh package.		
<b>Note:</b> Paper absorbs moisture due to high humidity. Store paper in its original wrapper until you use it.		
<b>b</b> Resend the print job.		
Do streaked horizontal lines appear on prints?		
Step 4	Go to step 5.	The problem is solved.
<b>a</b> Remove, and then reinstall the imaging kit.		
Warning—Potential Damage: Do not expose the imaging kit to direct light for more than 10 minutes. Extended exposure to light may cause print quality problems.		
Warning—Potential Damage: Do not touch the underside of the imaging kit. This could damage the imaging kit.		
<b>b</b> Resend the print job.		
Do streaked horizontal lines appear on prints?		
Step 5	Contact <u>customer</u>	The problem is solved.
Replace the imaging kit, and then resend the print job.	support.	
Do streaked horizontal lines appear on prints?		

### Streaked vertical lines appear on prints

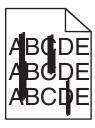




Action	Yes	No
<ul> <li>Step 1</li> <li>a Depending on your operating system, specify the paper type, texture, and weight from Printing Preferences or from the Print dialog.</li> <li>b Resend the print job.</li> <li>Do streaked vertical lines appear on prints?</li> </ul>	Go to step 2.	The problem is solved.
Step 2 From the printer control panel, set the paper texture, type, and weight in the Paper menu to match the paper loaded in the tray.  Do the paper texture, type, and weight match the paper in the tray?	Go to step 3.	Do one or more of the following:  • Specify the paper texture, type, and weight from the tray settings to match the paper loaded in the tray.  • Change the paper loaded in the tray to match the paper size specified in the tray settings.
<ul> <li>Step 3</li> <li>a Load paper from a fresh package.</li> <li>Note: Paper absorbs moisture due to high humidity. Store paper in its original wrapper until you use it.</li> <li>b Resend the print job.</li> <li>Do streaked vertical lines appear on prints?</li> </ul>	Go to step 4.	The problem is solved.
Step 4  a Remove, and then reinstall the imaging kit.  Warning—Potential Damage: Do not expose the imaging kit to direct light for more than 10 minutes. Extended exposure to light may cause print quality problems.  Warning—Potential Damage: Do not touch the underside of the imaging kit. This could damage the imaging kit.  b Resend the print job.  Do streaked vertical lines appear on prints?	Go to step 5.	The problem is solved.


Action	Yes	No
Step 5 Replace the imaging kit, and then resend the print job.  Do streaked vertical lines appear on prints?	Contact <u>customer</u> <u>support</u> .	The problem is solved.

## Toner fog or background shading appears on prints

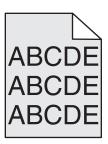

Action	Yes	No
Step 1	The problem is solved.	Go to step 2.
<b>a</b> Remove, and then reinstall the imaging kit.		
Warning—Potential Damage: Do not expose the imaging kit to direct light for more than 10 minutes. Extended exposure to light may cause print quality problems.		
Warning—Potential Damage: Do not touch the underside of the imaging kit. This could damage the imaging kit.		
<b>b</b> Resend the print job.		
Does fog or shading disappear from the prints?		
Step 2	The problem is solved.	Contact <u>customer</u>
Replace the imaging kit, and then resend the print job.		support.
Does fog or shading disappear from the prints?		

#### **Toner rubs off**

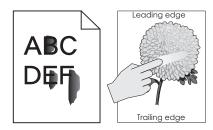

Action	Yes	No
Step 1 From the Paper menu on the printer control panel, check the paper type, texture, and weight.  Do the paper type, texture, and weight match the paper loaded in the tray?	Go to step 2.	Specify the paper type, texture, and weight from the tray settings to match the paper loaded in the tray.
Step 2 Resend the print job.  Does the toner still rub off?	Contact <u>customer</u> <u>support</u> .	The problem is solved.

## Transparency print quality is poor

Action	Yes	No
Step 1 From the printer control panel, set the paper type in the Paper menu to match the paper loaded in the tray.  Is the paper type for the tray set to Transparency?	Go to step 2.	Set the paper type to Transparency.
Step 2  a Check if you are using a recommended type of transparency.  b Resend the print job.  Is the print quality still poor?	Contact <u>customer</u> <u>support</u> .	The problem is solved.

## **Uneven print density**



Action	Yes	No
Replace the imaging kit, and then resend the print job.	Contact <u>customer</u> <u>support</u> .	The problem is solved.
Is the print density uneven?		

#### Vertical voids appear on prints



Action	Yes	No
Step 1	Go to step 2.	The problem is solved.
<b>a</b> Check if your software program is using a correct fill pattern.		
<b>b</b> Resend the print job.		
Do vertical voids appear on prints?		
Step 2	Go to step 3.	The problem is solved.
<b>a</b> From the Paper Menu on the printer control panel, check the paper type and paper weight.		
<b>b</b> Resend the print job.		
Do vertical voids appear on prints?		
Step 3	Go to step 4.	The problem is solved.
Check if you are using a recommended type of paper.		
<b>a</b> Load paper source with a recommended type of paper.		
<b>b</b> Resend the print job.		
Do vertical voids appear on prints?		
Step 4	Go to step 5.	The problem is solved.
<b>a</b> Remove, and then reinstall the imaging kit.		
Warning—Potential Damage: Do not expose the imaging kit to direct light for more than 10 minutes. Extended exposure to light may cause print quality problems.		
Warning—Potential Damage: Do not touch the underside of the imaging kit. This could damage the imaging kit.		
<b>b</b> Resend the print job.		
Do vertical voids appear on prints?		
Step 5	Contact <u>customer</u>	The problem is solved.
Replace the imaging kit, and then resend the print job.	support.	
Do vertical voids appear on prints?		

#### Color quality problems

#### FAQ about color printing

#### What is RGB color?

Red, green, and blue light can be added together in various amounts to produce a large range of colors observed in nature. For example, red and green can be combined to create yellow. Televisions and computer monitors create colors in this manner. RGB color is a method of describing colors by indicating the amount of red, green, or blue needed to produce a certain color.

#### What is CMYK color?

Cyan, magenta, yellow, and black inks or toners can be printed in various amounts to produce a large range of colors observed in nature. For example, cyan and yellow can be combined to create green. Printing presses, inkjet printers, and color laser printers create colors in this manner. CMYK color is a method of describing colors by indicating the amount of cyan, magenta, yellow, and black needed to reproduce a particular color.

#### How is color specified in a document to be printed?

Software programs typically specify the document color using RGB or CMYK color combinations. Additionally, they let users modify the color of each object in a document. For more information, see the help information of your operating system.

#### How does the printer know what color to print?

When a user prints a document, information describing the type and color of each object is sent to the printer. The color information is passed through color conversion tables that translate the color into the appropriate amounts of cyan, magenta, yellow, and black toner needed to produce the color you want. The object information determines the application of color conversion tables. For example, it is possible to apply one type of color conversion table to text while applying a different color conversion table to photographic images.

#### What is manual color correction?

When manual color correction is enabled, the printer employs user-selected color conversion tables to process objects. However, Color Correction must be set to Manual, or no user-defined color conversion will be implemented. Manual color correction settings are specific to the type of object being printed (text, graphics, or images), and how the color of the object is specified in the software program (RGB or CMYK combinations).

#### **Notes:**

- Manual color correction is not useful if the software program does not specify colors with RGB or CMYK
  combinations. It is also not effective in situations in which the software program or the computer operating
  system controls the adjustment of colors.
- When Auto Color Correction is selected, the color conversion tables will generate preferred colors used for the majority of the documents.

To manually apply a different color conversion table, do the following:

- 1 From the Quality menu on the printer control panel, select Color Correction, and then select Manual.
- **2** From the Quality menu on the printer control panel, select **Manual Color**, and then select the appropriate color conversion table for the affected object type.

Object type	Color conversion tables
RGB Image RGB Text	Vivid—Produces brighter, more saturated colors and may be applied to all incoming color formats.
RGB Graphics	<ul> <li>sRGB Display—Produces an output that approximates the colors displayed on a computer monitor.</li> </ul>
	Note: Black toner usage is optimized for printing photographs.
	Display—True Black—Produces an output that approximates the colors displayed on a computer monitor. This uses only black toner to create all levels of neutral gray.
	sRGB Vivid—Provides an increased color saturation for the sRGB     Display color correction.
	<b>Note:</b> Black toner usage is optimized for printing business graphics.
	Off—No color correction is implemented.
CMYK Image CMYK Text	US CMYK—Applies color correction to approximate the SWOP (Specifications for Web Offset Publishing) color output.
CMYK Graphics	Euro CMYK—Applies color correction to approximate Euroscale color output.
	Vivid CMYK—Increases the color saturation of the US CMYK color correction setting.
	Off—No color correction is implemented.

#### How can I match a particular color (such as a corporate logo)?

Nine types of Color Samples sets are available from the Quality menu on the printer control panel. These are also available from the Color Samples page of the Embedded Web Server. Selecting any sample set generates a multiple-page printout consisting of hundreds of colored boxes. Either a CMYK or RGB combination is located on each box, depending on the table selected. The observed color of each box is obtained by passing the CMYK or RGB combination labeled on the box through the selected color conversion table.

By examining Color Samples sets, you can identify the box whose color is the closest to the color you want. The color combination labeled on the box can then be used for modifying the color of the object in a software program. For more information, see the help information of your operating system.

**Note:** Manual color correction may be necessary to utilize the selected color conversion table for the particular object.

Selecting which Color Samples set to use for a particular color-matching problem depends on the Color Correction setting being used , the type of object being printed, and how the color of the object is specified in the software program. When Color Correction is set to Off, the color is based on the print job information, and no color conversion is implemented.

**Note:** The Color Samples pages are not useful if the software program does not specify colors with RGB or CMYK combinations. Additionally, certain situations exist in which the software program or the computer operating system adjusts the RGB or CMYK combinations specified in the program through color management. The resulting printed color may not be an exact match of the Color Samples pages.

### Prints on color transparencies appear dark when projected

**Note:** This problem occurs when projecting transparencies with reflective overhead projectors. To obtain the highest projected color quality, transmissive overhead projectors are recommended.

Action	Yes	No
Step 1 From the printer control panel, make sure the paper type setting is set to Transparency.	Go to step 2.	Set the paper type to Transparency.
Is the paper type setting correct?		
Step 2 Reduce the toner darkness, and then resend the print job.	The problem is solved.	Go to step 3.
Does the print on the color transparency look lighter?		
Step 3  Make sure you are using a recommended type of color transparency, and then resend the print job.	The problem is solved.	Contact <u>customer</u> <u>support</u> .
Does the print on the color transparency look lighter?		

## The color of the print does not match the color of the original file

**Note:** The color conversion tables used in Auto Color Correction mode generally approximate the colors of a standard computer monitor. However, because of technology differences that exist between printers and monitors, there are many colors that can also be affected by monitor variations and lighting conditions.

Action	Yes	No
Action		
Step 1	The problem is solved.	Go to step 2.
a Set Color Correction to Off.		
<b>Note:</b> When the printer color correction is disabled, the color is based on the print job information, and no color conversion is implemented.		
<b>b</b> Resend the print job.		
Does the color of the print match the color of the file on the computer screen?		
Step 2	The problem is solved.	Contact <u>customer</u>
From the Quality menu on the printer control panel, do the following:		support.
a Select Color Correction, and then select Manual.		
<b>b</b> Select <b>Manual Color</b> , and then select the appropriate color conversion table for the affected object type.		
<b>c</b> Resend the print job.		
Does the color of the print match the color of the file on the computer screen?		

### The print appears tinted

Action	Yes	No
Adjust the color balance.     a From the Color Balance menu on the printer control panel, increase or decrease the values for cyan, magenta, yellow, and black.     b Resend the print job.	The problem is solved.	Contact <u>customer</u> <u>support</u> .
Does the print still appear tinted?		

# **Solving copy problems**

- "Copier does not respond" on page 218
- "Scanner unit does not close" on page 219
- "Poor copy quality" on page 219
- "Partial document or photo copies" on page 220

# Copier does not respond

Action	Yes	No
Step 1 Check if an error or status message appears on the display.	Clear the error or status message.	Go to step 2.
Does an error or status message appear?		
Step 2 Check if the power cord is plugged into the printer and a properly grounded electrical outlet.  Is the power cord plugged into the printer and a properly grounded electrical outlet?	Go to step 3.	Connect the power cord to the printer and a properly grounded electrical outlet.
Step 3  Turn off the printer, then wait for about 10 seconds, and then turn it back on.  Did Performing Self Test and Ready appear?	The problem is solved.	Contact <u>customer</u> <u>support</u> .

## Scanner unit does not close

Action	Yes	No
Check if there are no obstructions between the scanner unit and the printer.  a Lift the scanner unit.  b Remove any obstruction that keeps the scanner unit open.  c Lower the scanner unit.	The problem is solved.	Contact <u>customer</u> <u>support</u> .
Did the scanner unit close properly?		

# **Poor copy quality**

Action	Yes	No
Step 1	Clear the error or status	Go to step 2.
Check if an error or status message appears on the display.	message.	
Does an error or status message appear?		
Step 2	Go to step 3.	Increase the scan
Check the quality of the original document.		resolution setting for a higher-quality output.
Is the quality of the original document satisfactory?		
Step 3	Go to step 4.	See <u>"Cleaning the</u>
If dark marks appear on prints, then clean the scanner glass and the ADF		scanner glass" on
glass using a clean, lint-free cloth dampened with water.		page 130.
Is the scanner glass clean?		
Step 4	Go to step 5.	See <u>"Print quality</u>
Send a print job, and then check for print quality problems.		problems" on
<b>a</b> From the General Settings menu, adjust the Eco-Mode settings.		page 198.
<b>b</b> From the Copy menu, adjust the Darkness setting.		
<b>c</b> If the print remains faded, then replace the toner cartridge.		
Is the print quality satisfactory?		
Step 5	Go to step 6.	Place the document or
Check the placement of the document or photo.		photo facedown on the
Make sure the document or photo is loaded facedown on the scanner glass in the upper left corner.		scanner glass in the upper left corner.
Is the document or photo loaded correctly?		

Action	Yes	No
Step 6 Check the copy settings. From the Copy screen, check if the Content Type and Content Source settings are correct for the document being scanned.  Are the Content Type and Content Source settings correct for the document being scanned?	Go to step 7.	Change the Content Type and Content Source settings to match the document being scanned.
Step 7	Go to step 8.	The problem is solved.
Check for patterns on print.		
<b>a</b> From the printer control panel, navigate to:		
Copy > Sharpness > select a lower setting		
Note: Make sure no scaling is being selected.		
<b>b</b> Resend the copy job.		
Do patterns appear on prints?		
Step 8	Go to step 9.	The problem is solved.
Check for missing or faded text on prints.		
<b>a</b> From the Copy screen, adjust the settings of the following:		
• Sharpness—Increase the sharpness setting.		
Contrast—Increase the contrast setting.		
<b>b</b> Resend the copy job.		
Do prints have missing or faded text?		
Step 9	Contact <u>customer</u>	The problem is solved.
Check for washed-out or overexposed output.	support.	
<b>a</b> From the Copy screen, adjust the settings of the following:		
Background Removal—Reduce the current setting.		
Darkness—Increase the current setting.		
<b>b</b> Resend the copy job.		
Do pages show washed-out or overexposed prints?		

# Partial document or photo copies

Action	Yes	No
Step 1  Check the placement of the document or photo.  Make sure the document or photo is loaded facedown on the scanner glass in the upper left corner.	Go to step 2.	Place the document or photo facedown on the scanner glass in the upper left corner.
Is the document or photo loaded correctly?		

Action	Yes	No
Step 2 Check if the paper size setting matches the size of the paper loaded in the tray. From the Paper menu on the printer control panel, check the Paper Size setting.  Does the paper size setting match the size of the paper loaded in the tray.	Go to step 3.	Change the paper size setting to match the paper loaded in the tray, or load the tray with paper that matches the paper size setting.
<ul> <li>Step 3</li> <li>a Specify the paper size. Depending on your operating system, specify the paper size in Printing Preferences or the Print dialog.</li> <li>b Resend the print job.</li> </ul>	The problem is solved.	Contact <u>customer</u> <u>support</u> .
Do copies print properly?		

# Solving scanner problems

- "The scanner does not respond" on page 221
- "Scan job was not successful" on page 222
- "Scanner unit does not close" on page 223
- "Scanning takes too long or freezes the computer" on page 223
- "Poor scanned image quality" on page 223
- "Partial document or photo scans" on page 224
- "Cannot scan from a computer" on page 225

# The scanner does not respond

Action	Yes	No
Step 1	Go to step 2.	Turn on the printer.
Check if the printer is turned on.		
Is the printer turned on?		
Step 2 Check if the printer cable is securely attached to the printer and the computer, print server, option, or other network device.  Is the printer cable securely attached to the printer and the computer, print server, option, or other network device?	Go to step 3.	Connect the printer cable securely to the printer and the computer, print server, option, or other network device.
Step 3  Check if the power cord is plugged into the printer and a properly grounded electrical outlet.  Is the power cord plugged into the printer and a properly grounded electrical outlet?	Go to step 4.	Connect the power cord to the printer and a properly grounded electrical outlet.

Action	Yes	No
Step 4 Check if the electrical outlet is turned off by a switch or breaker.	Turn on the switch or reset the breaker.	Go to step 5.
Is the electrical outlet turned off by a switch or breaker?		
Step 5 Check if the printer is plugged into any surge protectors, uninterruptible power supplies, or extension cords.	Connect the printer power cord directly to a properly grounded electrical outlet.	Go to step 6.
Is the printer plugged into any surge protectors, uninterruptible power supplies, or extension cords?		
Step 6 Check other electrical equipment plugged into the outlet. Are the other electrical equipment working?	Unplug the other electrical equipment and turn on the printer. If the printer does not work, then reconnect	Go to step 7.
	the other electrical equipment and then go to step 6.	
Step 7	The problem is solved.	Contact <u>customer</u>
Turn off the printer, then wait for about 10 seconds, and then turn the printer back on.		support.
Are the printer and scanner working?		

# Scan job was not successful

Action	Yes	No
Step 1	Go to step 2.	Connect the cables
Check the cable connections.		properly.
Make sure the Ethernet or USB cable is securely connected to the computer and the printer.		
Are the cables securely connected?		
Step 2	Change the file name.	Go to step 3.
Check if the file name is already in use.		
Is the file name already in use?		
Step 3	Close the file you are	Go to step 4.
Check if the document or photo you want to scan is open in another application or being used by another user.	scanning.	
Is the file you want to scan open by another application or user?		

Action	Yes	No
Step 4 Check if either the Append time stamp or the Overwrite existing file check box is selected in the destination configuration settings.  Is the Append time stamp or Overwrite existing file check box selected in the destination configuration settings?	Contact <u>customer</u> <u>support</u> .	Select the Append time stamp or Overwrite existing file check box in the destination configuration settings.

## Scanner unit does not close

Action	Yes	No
<ul> <li>Check if there are obstructions in the scanner unit.</li> <li>a Lift the scanner unit.</li> <li>b Remove any obstruction keeping the scanner unit open.</li> <li>c Lower the scanner unit.</li> </ul>	The problem is solved.	Contact <u>customer</u> <u>support</u> .
Did the scanner unit close correctly?		

# Scanning takes too long or freezes the computer

Action	Yes	No
Step 1	Go to step 2.	The problem is solved.
Check if other applications are interfering with the scan.		
Close all applications that are not being used.		
Does scanning still take too long or freeze the computer?		
Step 2	Contact <u>customer</u>	The problem is solved.
Select a lower scan resolution.	support.	
Does scanning still take too long or freeze the computer?		

# Poor scanned image quality

Action	Yes	No
Step 1 Check if an error message appears on the display. Is there an error message on the printer display?	Clear the error message.	Go to step 2.
Step 2 Check the quality of the original document.  Is the quality of the original document satisfactory?	Go to step 3.	Increase the scan resolution settings for a higher-quality output.

Action	Yes	No
Step 3 Clean the scanner glass and the ADF glass using a clean, lint-free cloth dampened with water.	Go to step 4.	See "Cleaning the scanner glass" on page 130.
Is the scanner glass clean?		
Step 4  Check the placement of the document or photo.  Make sure the document or photo is loaded facedown on the scanner glass in the upper left corner.	Go to step 5.	Place the document or photo facedown on the scanner glass in the upper left corner.
Is the document or photo loaded correctly?		
<ul> <li>Step 5</li> <li>Send a print job, and then check for print quality problems.</li> <li>From the General Settings menu, adjust the Eco-Mode settings.</li> <li>From the Copy menu, adjust the Darkness setting.</li> <li>When the print becomes faded, replace the toner cartridge.</li> </ul>	Go to step 6.	See <u>"Print quality</u> <u>problems" on</u> <u>page 198</u> .
Is the print quality satisfactory?		
Step 6 Check the scan settings. From the Scan screen, make sure the Content Type and Content Source settings are correct for the document being scanned.  Are the Content Type and Content Source settings correct for the document being scanned?	Go to step 7.	Change the Content Type and Content Source settings to match the document being scanned.
Step 7	Problem solved.	Contact <u>customer</u>
Increase the scan resolution settings for a higher-quality output.		support.
Did the increased resolution produce a higher-quality output?		

# Partial document or photo scans

Action	Yes	No
Check the placement of the document or photo.  Make sure the document or photo is loaded facedown on the scanner glass in the upper left corner.	Contact <u>customer</u> <u>support</u> .	Load the document or photo facedown on the scanner glass in the upper left corner.
Is the document or photo loaded correctly?		

# Cannot scan from a computer

Action	Yes	No
Step 1	Go to step 3.	Go to step 2.
Make sure the printer is turned on and that <b>Ready</b> appears on the printer display before scanning a job.		
Does <b>Ready</b> appear before scanning the job?		
Step 2  Turn off the printer, then wait for about 10 seconds, and then turn the printer back on.	Clear the error message.	Go to step 3.
Is there an error message on the printer display?		
Step 3  Check the cable connections between the printer and the print server to make sure they are secure.  For more information, see the setup documentation that came with the printer.	Contact <u>customer</u> <u>support</u> .	Tighten the cable connections.
Are the cable connections between the printer and the print server secure?		

# **Embedded Web Server does not open**

Action	Yes	No
Step 1	The problem is solved.	Go to step 2.
a Turn on the printer.		
<b>b</b> Open a Web browser, and then type the printer IP address.		
c Press Enter.		
Does the Embedded Web Server open?		

Action	Yes	No
Step 2	The problem is solved.	Go to step 3.
Make sure the printer IP address is correct.		
a View the printer IP address:		
<ul> <li>From the TCP/IP section in the Network/Ports menu</li> </ul>		
<ul> <li>By printing a network setup page or menu settings page, and then finding the TCP/IP section</li> </ul>		
<b>Note:</b> An IP address appears as four sets of numbers separated by periods, such as 123.123.123.		
<b>b</b> Open a Web browser, and then type the IP address.		
Note: Depending on the network settings, you may need to type "https://" instead of "http://" before the printer IP address to access the Embedded Web Server.		
c Press Enter.		
Does the Embedded Web Server open?		
Step 3	The problem is solved.	Go to step 4.
Check if the network is working.		
a Print a network setup page.		
<b>b</b> Check the first section of the network setup page and confirm that the status is Connected.		
<b>Note:</b> If the status is Not Connected, then the connection may be intermittent, or the network cable may be defective. Contact your system support person for a solution, and then print another network setup page.		
<b>c</b> Open a Web browser, and then type the printer IP address.		
d Press Enter.		
Does the Embedded Web Server open?		
Step 4	The problem is solved.	Go to step 5.
Check if the cable connections to the printer and print server are secure.		
<b>a</b> Connect the cables properly. For more information, see the setup documentation that came with the printer.		
<b>b</b> Open a Web browser, and then type the printer IP address.		
c Press Enter.		
Does the Embedded Web Server open?		
Step 5	The problem is solved.	Contact your system
Temporarily disable the Web proxy servers.		support person.
Proxy servers may block or restrict you from accessing certain Web sites including the Embedded Web Server.		
Does the Embedded Web Server open?		

# **Contacting customer support**

When you contact customer support, you will need to be able to describe the problem you are experiencing, the message on the printer display, and the troubleshooting steps you have already taken to find a solution.

You need to know your printer model type and serial number. For more information, see the label at the back of the printer. The serial number is also listed on the menu settings page.

Lexmark has various ways to help you solve your printing problem. Visit the Lexmark Web site at <a href="http://support.lexmark.com">http://support.lexmark.com</a>, and then select one of the following:

Tech Library	You can browse our library of manuals, support documentation, drivers, and other downloads to help you solve common problems.
E-mail	You can send an e-mail to the Lexmark team, describing your problem. A service representative will respond and provide you with information to solve your problem.
Live chat	You can chat directly with a service representative. They can work with you to solve your printer problem or provide assistance through Assisted Service where the service representative can remotely connect to your computer through the Internet to troubleshoot problems, install updates, or complete other tasks to help you successfully use your Lexmark product.

Telephone support is also available. In the U.S. or Canada, call 1-800-539-6275. For other countries or regions, visit <a href="http://support.lexmark.com">http://support.lexmark.com</a>.

# **Notices**

### **Product information**

Product name:

Lexmark CX310n and CX310dn

Machine type:

7527

Model(s):

211, 231

### **Edition notice**

September 2014

The following paragraph does not apply to any country where such provisions are inconsistent with local law: LEXMARK INTERNATIONAL, INC., PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions. Improvements or changes in the products or the programs described may be made at any time.

References in this publication to products, programs, or services do not imply that the manufacturer intends to make these available in all countries in which it operates. Any reference to a product, program, or service is not intended to state or imply that only that product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any existing intellectual property right may be used instead. Evaluation and verification of operation in conjunction with other products, programs, or services, except those expressly designated by the manufacturer, are the user's responsibility.

For Lexmark technical support, visit <a href="http://support.lexmark.com">http://support.lexmark.com</a>.

For information on supplies and downloads, visit www.lexmark.com.

© 2014 Lexmark International, Inc.

All rights reserved.

### **GOVERNMENT END USERS**

The Software Program and any related documentation are "Commercial Items," as that term is defined in 48 C.F.R. 2.101, "Computer Software" and "Commercial Computer Software Documentation," as such terms are used in 48 C.F.R. 12.212 or 48 C.F.R. 227.7202, as applicable. Consistent with 48 C.F.R. 12.212 or 48 C.F.R. 227.7202-1 through 227.7207-4, as applicable, the Commercial Computer Software and Commercial Software Documentation are licensed to the U.S. Government end users (a) only as Commercial Items and (b) with only those rights as are granted to all other end users pursuant to the terms and conditions herein.

## **Licensing notices**

All licensing notices associated with this product can be viewed from the root directory of the installation software CD.

### **Trademarks**

Lexmark, Lexmark with diamond design, MarkNet, and MarkVision are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

Mac and the Mac logo are trademarks of Apple Inc., registered in the U.S. and other countries.

PCL® is a registered trademark of the Hewlett-Packard Company. PCL is Hewlett-Packard Company's designation of a set of printer commands (language) and functions included in its printer products. This printer is intended to be compatible with the PCL language. This means the printer recognizes PCL commands used in various application programs, and that the printer emulates the functions corresponding to the commands.

The following terms are trademarks or registered trademarks of these companies:

Albertus	The Monotype Corporation plc
Antique Olive	Monsieur Marcel OLIVE
Apple-Chancery	Apple Computer, Inc.
Arial	The Monotype Corporation plc
CG Times	Based on Times New Roman under license from The Monotype Corporation plc, is a product of Agfa Corporation
Chicago	Apple Computer, Inc.
Clarendon	Linotype-Hell AG and/or its subsidiaries
Eurostile	Nebiolo
Geneva	Apple Computer, Inc.
GillSans	The Monotype Corporation plc
Helvetica	Linotype-Hell AG and/or its subsidiaries
Hoefler	Jonathan Hoefler Type Foundry
ITC Avant Garde Gothic	International Typeface Corporation
ITC Bookman	International Typeface Corporation
ITC Mona Lisa	International Typeface Corporation
ITC Zapf Chancery	International Typeface Corporation
Joanna	The Monotype Corporation plc
Marigold	Arthur Baker
Monaco	Apple Computer, Inc.
New York	Apple Computer, Inc.
Oxford	Arthur Baker
Palatino	Linotype-Hell AG and/or its subsidiaries
Stempel Garamond	Linotype-Hell AG and/or its subsidiaries

Taffy	Agfa Corporation
Times New Roman	The Monotype Corporation plc
Univers	Linotype-Hell AG and/or its subsidiaries

All other trademarks are the property of their respective owners.

AirPrint and the AirPrint logo are trademarks of Apple, Inc.

### Noise emission levels

The following measurements were made in accordance with ISO 7779 and reported in conformance with ISO 9296.

Note: Some modes may not apply to your product.

1-meter average sound pressure, dBA			
Printing	50		
Scanning	49		
Copying	48		
Ready	16		

Values are subject to change. See www.lexmark.com for current values.

## Waste from Electrical and Electronic Equipment (WEEE) directive



The WEEE logo signifies specific recycling programs and procedures for electronic products in countries of the European Union. We encourage the recycling of our products.

If you have further questions about recycling options, visit the Lexmark Web site at <a href="https://www.lexmark.com">www.lexmark.com</a> for your local sales office phone number.

### **India E-Waste notice**

This product complies with the India E-Waste (Management and Handling) Rules, 2011, which prohibit use of lead, mercury, hexavalent chromium, polybrominated biphenyls, or polybrominated diphenyl ethers in concentrations exceeding 0.1% by weight and 0.01% by weight for cadmium, except for the exemption set in Schedule II of the Rules.

## **Product disposal**

Do not dispose of the printer or supplies in the same manner as normal household waste. Consult your local authorities for disposal and recycling options.

## Static sensitivity notice



This symbol identifies static-sensitive parts. Do not touch in the areas near these symbols without first touching the metal frame of the printer.

### **ENERGY STAR**

Any Lexmark product bearing the ENERGY STAR emblem on the product or on a start-up screen is certified to comply with Environmental Protection Agency (EPA) ENERGY STAR requirements as configured when shipped by Lexmark.



# **Temperature information**

Ambient operating temperature	15.6 to 32.2°C (60 to 90°F)	
Shipping temperature	-40 to 43.3°C (-40 to 110°F)	
Storage temperature and relative humidity	1 to 35°C (34 to 95°F)	
	8 to 80% RH	

### Laser notice

The printer is certified in the U.S. to conform to the requirements of DHHS 21 CFR, Chapter I, Subchapter J for Class I (1) laser products, and elsewhere is certified as a Class I laser product conforming to the requirements of IEC 60825-1.

Class I laser products are not considered to be hazardous. The printer contains internally a Class IIIb (3b) laser that is nominally a 7 milliwatt gallium arsenide laser operating in the wavelength of 655-675 nanometers. The laser system and printer are designed so there is never any human access to laser radiation above a Class I level during normal operation, user maintenance, or prescribed service condition.

## Laser advisory label

A laser notice label may be affixed to this printer as shown:

DANGER - Invisible laser radiation when cartridges are removed and interlock defeated. Avoid exposure to laser beam.

PERIGO - Radiação a laser invisível será liberada se os cartuchos forem removidos e o lacre rompido. Evite a exposição aos feixes de laser.

Opasnost - Nevidljivo lasersko zračenje kada su kasete uklonjene i poništena sigurnosna veza. Izbjegavati izlaganje zracima.

NEBEZPEČÍ - Když jsou vyjmuty kazety a je odblokována pojistka, ze zařízení je vysíláno neviditelné laserové záření. Nevystavujte se působení laserového paprsku.

FARE - Usynlig laserstråling, når patroner fjernes, og spærreanordningen er slået fra. Undgå at blive udsat for laserstrålen.

GEVAAR - Onzichtbare laserstraling wanneer cartridges worden verwijderd en een vergrendeling wordt genegeerd. Voorkom blootstelling aan de laser.

DANGER - Rayonnements laser invisibles lors du retrait des cartouches et du déverrouillage des loquets. Eviter toute exposition au rayon laser.

VAARA - Näkymätöntä lasersäteilyä on varottava, kun värikasetit on poistettu ja lukitus on auki. Vältä lasersäteelle altistumista.

GEFAHR - Unsichtbare Laserstrahlung beim Herausnehmen von Druckkassetten und offener Sicherheitssperre. Laserstrahl meiden.

ΚΙΝΔΥΝΟΣ - Έκλυση αόρατης ακτινοβολίας laser κατά την αφαίρεση των κασετών και την απασφάλιση της μανδάλωσης. Αποφεύγετε την έκθεση στην ακτινοβολία laser.

VESZÉLY – Nem látható lézersugárzás fordulhat elő a patronok eltávolításakor és a zárószerkezet felbontásakor. Kerülje a lézersugárnak való kitettséget.

PERICOLO - Emissione di radiazioni laser invisibili durante la rimozione delle cartucce e del blocco. Evitare l'esposizione al raggio laser.

FARE – Usynlig laserstråling når kassettene tas ut og sperren er satt ut av spill. Unngå eksponering for laserstrålen.

NIEBEZPIECZEŃSTWO - niewidzialne promieniowanie laserowe podczas usuwania kaset i blokady. Należy unikać naświetlenia promieniem lasera.

ОПАСНО! Невидимое лазерное излучение при извлеченных картриджах и снятии блокировки. Избегайте воздействия лазерных лучей.

Pozor – Nebezpečenstvo neviditeľného laserového žiarenia pri odobratých kazetách a odblokovanej poistke. Nevystavujte sa lúčom.

PELIGRO: Se producen radiaciones láser invisibles al extraer los cartuchos con el interbloqueo desactivado. Evite la exposición al haz de láser.

FARA – Osynlig laserstrålning när patroner tas ur och spärrmekanismen är upphävd. Undvik exponering för laserstrålen.

危险 - 当移除碳粉盒及互锁失效时会产生看不见的激光辐射,请避免暴露在激光光束下。

危險 - 移除碳粉匣與安全連續開關失效時會產生看不見的雷射輻射。請避免曝露在雷射光束下。

危険 - カートリッジが取り外され、内部ロックが無効になると、見えないレーザー光が放射されます。 このレーザー光に当たらないようにしてください。

## **Power consumption**

#### **Product power consumption**

The following table documents the power consumption characteristics of the product.

**Note:** Some modes may not apply to your product.

Mode	Description	Power consumption (Watts)
Printing	The product is generating hard-copy output from electronic inputs.	500
Сору	The product is generating hard-copy output from hard-copy original documents.	540
Scan	The product is scanning hard-copy documents.	40
Ready	The product is waiting for a print job.	30
Sleep Mode	The product is in a high-level energy-saving mode.	2.5
Hibernate	The product is in a low-level energy-saving mode.	0.5
Off	The product is plugged into an electrical outlet, but the power switch is turned off.	0

The power consumption levels listed in the previous table represent time-averaged measurements. Instantaneous power draws may be substantially higher than the average.

Values are subject to change. See **www.lexmark.com** for current values.

### **Sleep Mode**

This product is designed with an energy-saving mode called *Sleep Mode*. The Sleep Mode saves energy by lowering power consumption during extended periods of inactivity. The Sleep Mode is automatically engaged after this product is not used for a specified period of time, called the *Sleep Mode Timeout*.

Factory default Sleep Mode Timeout for this product (in minutes):

20

By using the configuration menus, the Sleep Mode Timeout can be modified between 1 minute and 120 minutes. Setting the Sleep Mode Timeout to a low value reduces energy consumption, but may increase the response time of the product. Setting the Sleep Mode Timeout to a high value maintains a fast response, but uses more energy.

#### **Hibernate Mode**

This product is designed with an ultra-low power operating mode called *Hibernate mode*. When operating in Hibernate Mode, all other systems and devices are powered down safely.

The Hibernate mode can be entered in any of the following methods:

- Using the Hibernate Timeout
- Using the Schedule Power modes
- Using the Sleep/Hibernate button

Factory default Hibernate Timeout for this product in all countries or regions

3 days

The amount of time the printer waits after a job is printed before it enters Hibernate mode can be modified between one hour and one month.

#### Off mode

If this product has an off mode which still consumes a small amount of power, then to completely stop product power consumption, disconnect the power supply cord from the electrical outlet.

#### **Total energy usage**

It is sometimes helpful to calculate the total product energy usage. Since power consumption claims are provided in power units of Watts, the power consumption should be multiplied by the time the product spends in each mode in order to calculate energy usage. The total product energy usage is the sum of each mode's energy usage.

# Regulatory notices for electromagnetic compatibility

This section contains regulatory information pertaining to electromagnetic compatibility.

# Federal Communications Commission (FCC) compliance information statement

This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The FCC Class B limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your point of purchase or service representative for additional suggestions.

The manufacturer is not responsible for radio or television interference caused by using other than recommended cables or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate this equipment.

**Note:** To assure compliance with FCC regulations on electromagnetic interference for a Class B computing device, use a properly shielded and grounded cable such as Lexmark part number 1021231 for parallel attach or 1021294 for USB attach. Use of a substitute cable not properly shielded and grounded may result in a violation of FCC regulations.

Any questions regarding this compliance information statement should be directed to:

Director of Lexmark Technology & Services Lexmark International, Inc. 740 West New Circle Road Lexington, KY 40550 (859) 232–3000

## **Industry Canada compliance statement**

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Standard ICES-003.

### Avis de conformité aux normes de l'industrie du Canada

Cet appareil numérique de classe B est conforme aux exigences de la norme canadienne relative aux équipements pouvant causer des interférences NMB-003.

# 日本の VCCI 規定

製品にこのマークが表示されている場合、次の要件を満たしています。



この装置は、クラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。 取扱説明書に従って正しい取り扱いをしてください。

VCCI-B

## **European Community (EC) directives conformity**

This product is in conformity with the protection requirements of EC Council directives 2004/108/EC, 2006/95/EC, 2009/125/EC, and 2011/65/EU on the approximation and harmonization of the laws of the Member States relating to electromagnetic compatibility, safety of electrical equipment designed for use within certain voltage limits, the ecodesign of energy-related products, and on the restrictions of use of certain hazardous substances in electrical and electronic equipment.

The manufacturer of this product is: Lexmark International, Inc., 740 West New Circle Road, Lexington, KY, 40550 USA. The authorized representative is: Lexmark International Technology Hungária Kft., 8 Lechner Ödön fasor, Millennium Tower III, 1095 Budapest HUNGARY. A declaration of conformity to the requirements of the Directives is available upon request from the Authorized Representative.

This product satisfies the Class B limits of EN 55022 and safety requirements of EN 60950-1.

## Regulatory notices for wireless products

This section contains the following regulatory information pertaining to wireless products that contain transmitters, for example, but not limited to, wireless network cards or proximity card readers.

## Modular component notice

This product may contain the following modular component(s):

Lexmark Regulatory Type/Model LEX-M04-005, FCC ID: IYLLEXM01005; IC:2376A-M01005

# **Exposure to radio frequency radiation**

The radiated output power of this device is far below the radio frequency exposure limits of the FCC and other regulatory agencies. A minimum separation of 20 cm (8 inches) must be maintained between the antenna and any persons for this device to satisfy the RF exposure requirements of the FCC and other regulatory agencies.

# **Industry Canada (Canada)**

This device complies with Industry Canada specification RSS-210. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This device has been designed to operate only with the antenna provided. Use of any other antenna is strictly prohibited per regulations of Industry Canada.

To prevent radio interference to the licensed service, this device is intended to be operated indoors and away from windows to provide maximum shielding. Equipment (or its transmit antenna) that is installed outdoors is subject to licensing.

The installer of this radio equipment must ensure that the antenna is located or pointed such that it does not emit RF fields in excess of Health Canada limits for the general population; consult Safety Code 6, obtainable from Health Canada's Web site www.hc-sc.gc.ca/rpb.

The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications were met.

### **Industry Canada (Canada)**

Cet appareil est conforme à la norme RSS-210 d'Industry Canada. Son fonctionnement est soumis aux deux conditions suivantes :

(1) cet appareil ne doit pas provoquer d'interférences et (2) il doit accepter toute interférence reçue, y compris celles risquant d'altérer son fonctionnement.

Cet appareil a été conçu pour fonctionner uniquement avec l'antenne fournie. L'utilisation de toute autre antenne est strictement interdite par la réglementation d'Industry Canada.

En application des réglementations d'Industry Canada, l'utilisation d'une antenne de gain supérieur est strictement interdite.

Pour empêcher toute interférence radio au service faisant l'objet d'une licence, cet appareil doit être utilisé à l'intérieur et loin des fenêtres afin de garantir une protection optimale.

Si le matériel (ou son antenne d'émission) est installé à l'extérieur, il doit faire l'objet d'une licence.

L'installateur de cet équipement radio doit veiller à ce que l'antenne soit implantée et dirigée de manière à n'émettre aucun champ HF dépassant les limites fixées pour l'ensemble de la population par Santé Canada. Reportez-vous au Code de sécurité 6 que vous pouvez consulter sur le site Web de Santé Canada www.hc-sc.gc.ca/rpb.

Le terme « IC » précédant le numéro de d'accréditation/inscription signifie simplement que le produit est conforme aux spécifications techniques d'Industry Canada.

### Notice to Users in the European Union

Products bearing the CE mark are in conformity with the protection requirements of EC Council directives 2004/108/EC, 2006/95/EC, 1999/5/EC, and 2009/125/EC on the approximation and harmonization of the laws of the Member States relating to electromagnetic compatibility, safety of electrical equipment designed for use within certain voltage limits, radio equipment and telecommunications terminal equipment and on the ecodesign of energy-related products.

Compliance is indicated by the CE marking.



The manufacturer of this product is: Lexmark International, Inc., 740 West New Circle Road, Lexington, KY, 40550 USA. The authorized representative is: Lexmark International Technology Hungária Kft., 8 Lechner Ödön fasor, Millennium Tower III, 1095 Budapest HUNGARY, A declaration of conformity to the requirements of the Directives is available upon request from the Authorized Representative.

This product satisfies the Class B limits of EN 55022 and safety requirements of EN 60950-1.

Refer to the table at the end of the Notices section for further compliance information.

This product may be used in the countries indicated in the table below.

AT	BE	BG	СН	СҮ	CZ	DE	DK	EE
EL	ES	FI	FR	HR	ни	IE	IS	IT
LI	LT	LU	LV	МТ	NL	NO	PL	PT
RO	SE	SI	SK	TR	UK			

Česky	Společnost Lexmark International, Inc. tímto prohlašuje, že výrobek tento výrobek je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.
Dansk	Lexmark International, Inc. erklærer herved, at dette produkt overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.
Deutsch	Hiermit erklärt Lexmark International, Inc., dass sich das Gerät dieses Gerät in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.
Ελληνική	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Η LEXMARK INTERNATIONAL, INC. ΔΗΛΩΝΕΙ ΟΤΙ ΑΥΤΌ ΤΟ ΠΡΟΪ́ΟΝ ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΌΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΈΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.
English	Hereby, Lexmark International, Inc., declares that this type of equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
Español	Por medio de la presente, Lexmark International, Inc. declara que este producto cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
Eesti	Käesolevaga kinnitab Lexmark International, Inc., et seade see toode vastab direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele muudele asjakohastele sätetele.
Suomi	Lexmark International, Inc. vakuuttaa täten, että tämä tuote on direktiivin 1999/5/EY oleellisten vaatimusten ja muiden sitä koskevien direktiivin ehtojen mukainen.
Français	Par la présente, Lexmark International, Inc. déclare que l'appareil ce produit est conforme aux exigences fondamentales et autres dispositions pertinentes de la directive 1999/5/CE.
Magyar	Alulírott, Lexmark International, Inc. nyilatkozom, hogy a termék megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.
Íslenska	Hér með lýsir Lexmark International, Inc. yfir því að þessi vara er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 1999/5/EC.
Italiano	Con la presente Lexmark International, Inc. dichiara che questo questo prodotto è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
Latviski	Ar šo Lexmark International, Inc. deklarē, ka šis izstrādājums atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.
Lietuvių	Šiuo Lexmark International, Inc. deklaruoja, kad šis produktas atitinka esminius reikalavimus ir kitas 1999/5/EB direktyvos nuostatas.
Malti	Bil-preżenti, Lexmark International, Inc., jiddikjara li dan il-prodott huwa konformi mal-ħtiġijiet essenzjali u ma dispożizzjonijiet oħrajn relevanti li jinsabu fid-Direttiva 1999/5/KE.
Nederlands	Hierbij verklaart Lexmark International, Inc. dat het toestel dit product in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
Norsk	Lexmark International, Inc. erklærer herved at dette produktet er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.
Polski	Niniejszym Lexmark International, Inc. oświadcza, że niniejszy produkt jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC.
Português	A Lexmark International Inc. declara que este este produto está conforme com os requisitos essenciais e outras disposições da Diretiva 1999/5/CE.
Slovensky	Lexmark International, Inc. týmto vyhlasuje, že tento produkt spĺňa základné požiadavky a všetky príslušné ustanovenia smernice 1999/5/ES.

Slovensko	Lexmark International, Inc. izjavlja, da je ta izdelek v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.
Svenska	Härmed intygar Lexmark International, Inc. att denna produkt står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.

# STATEMENT OF LIMITED WARRANTY FOR LEXMARK LASER PRINTERS, LEXMARK LED PRINTERS, AND LEXMARK MULTIFUNCTION LASER PRINTERS

#### Lexmark International, Inc., Lexington, KY

This limited warranty applies to the United States and Canada. For customers outside the U.S., refer to the country-specific warranty information that came with your product.

This limited warranty applies to this product only if it was originally purchased for your use, and not for resale, from Lexmark or a Lexmark Remarketer, referred to in this statement as "Remarketer."

### **Limited warranty**

Lexmark warrants that this product:

- —Is manufactured from new parts, or new and serviceable used parts, which perform like new parts
- —Is, during normal use, free from defects in material and workmanship

If this product does not function as warranted during the warranty period, contact a Remarketer or Lexmark for repair or replacement (at Lexmark's option).

If this product is a feature or option, this statement applies only when that feature or option is used with the product for which it was intended. To obtain warranty service, you may be required to present the feature or option with the product.

If you transfer this product to another user, warranty service under the terms of this statement is available to that user for the remainder of the warranty period. You should transfer proof of original purchase and this statement to that user.

#### Limited warranty service

The warranty period starts on the date of original purchase as shown on the purchase receipt and ends 12 months later provided that the warranty period for any supplies and for any maintenance items included with the printer shall end earlier if it, or its original contents, are substantially used up, depleted, or consumed. Fuser Units, Transfer/Transport Units, Paper Feed items, if any, and any other items for which a Maintenance Kit is available are substantially consumed when the printer displays a "Life Warning" or "Scheduled Maintenance" message for such item.

To obtain warranty service you may be required to present proof of original purchase. You may be required to deliver your product to the Remarketer or Lexmark, or ship it prepaid and suitably packaged to a Lexmark designated location. You are responsible for loss of, or damage to, a product in transit to the Remarketer or the Lexmark designated location.

When warranty service involves the exchange of a product or part, the item replaced becomes the property of the Remarketer or Lexmark. The replacement may be a new or repaired item.

The replacement item assumes the remaining warranty period of the original product.

Replacement is not available to you if the product you present for exchange is defaced, altered, in need of a repair not included in warranty service, damaged beyond repair, or if the product is not free of all legal obligations, restrictions, liens, and encumbrances.

As part of your warranty service and/or replacement, Lexmark may update the firmware in your printer to the latest version. Firmware updates may modify printer settings and cause counterfeit and/or unauthorized products, supplies, parts, materials (such as toners and inks), software, or interfaces to stop working. Authorized use of genuine Lexmark products will not be impacted.

Before you present this product for warranty service, remove all print cartridges, programs, data, and removable storage media (unless directed otherwise by Lexmark).

For further explanation of your warranty alternatives and the nearest Lexmark authorized servicer in your area contact Lexmark on the World Wide Web.

Remote technical support is provided for this product throughout its warranty period. For products no longer covered by a Lexmark warranty, technical support may not be available or only be available for a fee.

#### **Extent of limited warranty**

Lexmark does not warrant uninterrupted or error-free operation of any product or the durability or longevity of prints produced by any product.

Warranty service does not include repair of failures caused by:

- Modification or unauthorized attachments
- —Accidents, misuse, abuse or use inconsistent with Lexmark user's guides, manuals, instructions or guidance
- -Unsuitable physical or operating environment
- -Maintenance by anyone other than Lexmark or a Lexmark authorized servicer
- Operation of a product beyond the limit of its duty cycle
- —Use of printing media outside of Lexmark specifications
- -Refurbishment, repair, refilling or remanufacture by a third party of products, supplies or parts
- -Products, supplies, parts, materials (such as toners and inks), software, or interfaces not furnished by Lexmark

TO THE EXTENT PERMITTED BY APPLICABLE LAW, NEITHER LEXMARK NOR ITS THIRD PARTY SUPPLIERS OR REMARKETERS MAKE ANY OTHER WARRANTY OR CONDITION OF ANY KIND, WHETHER EXPRESS OR IMPLIED, WITH RESPECT TO THIS PRODUCT, AND SPECIFICALLY DISCLAIM THE IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND SATISFACTORY QUALITY. ANY WARRANTIES THAT MAY NOT BE DISCLAIMED UNDER APPLICABLE LAW ARE LIMITED IN DURATION TO THE WARRANTY PERIOD. NO WARRANTIES, EXPRESS OR IMPLIED, WILL APPLY AFTER THIS PERIOD. ALL INFORMATION, SPECIFICATIONS, PRICES, AND SERVICES ARE SUBJECT TO CHANGE AT ANY TIME WITHOUT NOTICE.

#### Limitation of liability

Your sole remedy under this limited warranty is set forth in this document. For any claim concerning performance or nonperformance of Lexmark or a Remarketer for this product under this limited warranty, you may recover actual damages up to the limit set forth in the following paragraph.

Lexmark's liability for actual damages from any cause whatsoever will be limited to the amount you paid for the product that caused the damages. This limitation of liability will not apply to claims by you for bodily injury or damage to real property or tangible personal property for which Lexmark is legally liable. IN NO EVENT WILL LEXMARK BE LIABLE FOR ANY LOST PROFITS, LOST SAVINGS, INCIDENTAL DAMAGE, OR OTHER ECONOMIC OR CONSEQUENTIAL DAMAGES.

This is true even if you advise Lexmark or a Remarketer of the possibility of such damages. Lexmark is not liable for any claim by you based on a third party claim.

This limitation of remedies also applies to claims against any Suppliers and Remarketers of Lexmark. Lexmark's and its Suppliers' and Remarketers' limitations of remedies are not cumulative. Such Suppliers and Remarketers are intended beneficiaries of this limitation.

### **Additional rights**

Some states do not allow limitations on how long an implied warranty lasts, or do not allow the exclusion or limitation of incidental or consequential damages, so the limitations or exclusions contained above may not apply to you.

This limited warranty gives you specific legal rights. You may also have other rights that vary from state to state.

#### **DEVICE PATENT LICENSE**

Lexmark reserves the right to discontinue selling these toner cartridges any time after it discontinues service support for this printer.

**IMPORTANT: PLEASE READ BEFORE OPENING:** Opening this package, installing the printing device software, or using the products inside confirms your acceptance of the following licenses/agreements:

License: The patented printer inside is licensed for, and designed to work with only genuine Lexmark toner cartridges and developer components for the life of the patented printer. You agree to: (1) use only genuine Lexmark toner cartridges and developer components with this printer except as otherwise provided below, and (2) pass this license/agreement to any subsequent user of this printer. The patented Lexmark toner cartridges and developer components inside are licensed subject to a restriction that they may be used only once. Following their initial use, you agree to return them only to Lexmark for recycling. Lexmark toner cartridges are designed to stop working after delivering a fixed amount of toner. A variable amount of toner may remain in them when replacement is required. If you do not accept these terms, return the unopened package to your point of purchase. Replacement toner cartridge(s) sold without these terms are available through www.lexmark.com, may be refilled by you, or a third party, as the only cartridge alternative to be used with the licensed printer.

# Patent acknowledgment

The use of this product or service is subject to the reasonable, non-discriminatory terms in the Intellectual Property Rights (IPR) Disclosure of Certicom Corp. at the IETF for Elliptic Curve Cryptography (ECC) Cipher Suites for Transport Layer Security (TLS) implemented in the product or service.

The use of this product or service is subject to the reasonable, non-discriminatory terms in the Intellectual Property Rights (IPR) Disclosure of Certicom Corp. at the IETF for TLS Elliptic Curve Cipher Suites with SHA-256/382 and AES Galois Counter Mode (GCM) implemented in the product or service.

The use of this product or service is subject to the reasonable, non-discriminatory terms in the Intellectual Property Rights (IPR) Disclosure of Certicom Corp. at the IETF for TLS Suite B Profile for Transport Layer Security (TLS) implemented in the product or service.

The use of this product or service is subject to the reasonable, non-discriminatory terms in the Intellectual Property Rights (IPR) Disclosure of Certicom Corp. at the IETF for Addition of the Camellia Cipher Suites to Transport Layer Security (TLS) implemented in the product or service.

The use of certain patents in this product or service is subject to the reasonable, non-discriminatory terms in the Intellectual Property Rights (IPR) Disclosure of Certicom Corp. at the IETF for AES-CCM ECC Cipher Suites for TLS implemented in the product or service.

The use of this product or service is subject to the reasonable, non-discriminatory terms in the Intellectual Property Rights (IPR) Disclosure of Certicom Corp. at the IETF for IKE and IKEv2 Authentication Using the Eliptic Curve Digital Signature Algorithm (ECDSA) implemented in the product or service.

The use of this product or service is subject to the reasonable, non-discriminatory terms in the Intellectual Property Rights (IPR) Disclosure of Certicom Corp. at the IETF for Suite B Cryptographic Suites for IPSec implemented in the product or service.

The use of this product or service is subject to the reasonable, non-discriminatory terms in the Intellectual Property Rights (IPR) Disclosure of Certicom Corp. at the IETF for Algorithms for Internet Key Exchange version 1 (IKEv1) implemented in the product or service.

# Index

### **Numerics**

250-sheet tray loading 29 650-sheet duo tray installing 21 loading 29, 33

### **Symbols**

[Color] cartridge low [88.xy] 174 [Color] cartridge nearly low [88.xy] 174 [Color] cartridge very low, [x] estimated pages remain [88.xy] 174 [Type] imaging kit low [84.xy] 185 [Type] imaging kit nearly low [84.xy] 185 [Type] imaging kit very low, [x] estimated pages remain [84.xy] 185 [x]-page jam, open front door [20y.xx] 166 [x]-page jam, open front door to clear fuser [202.xx] 163 [x]-page jam, clear manual feeder [251.xx] 169 [x]-page jam, clear multipurpose feeder [250.xx] 170 [x]-page jam, clear standard bin [203.xx] 160 [x]-page jam, open automatic feeder top cover. [28y.xx] 171 [x]-page jam, open front door to clear duplex [23y.xx] 167 [x]-page jam, open tray [x] [24y.xx] 168

#### Α

Active NIC menu 84
adding hardware options
print driver 23
ADF
copying using 55
Adjusting color 173
adjusting Sleep mode 123
adjusting toner darkness 50

administrator settings
Embedded Web Server 154
AppleTalk menu 89
arrow buttons
printer control panel 12
attaching cables 22
available internal options 14
avoiding jams 45
avoiding paper jams 157

#### В

back button
printer control panel 12
black-and-white printing 50
buttons, printer control panel 12

### C

cables

Ethernet 22

USB 22 cancel button printer control panel 12 canceling a copy job from the printer control panel 63 canceling a print job from a computer 54 from the printer control panel 54 canceling an e-mail 68 cannot open Embedded Web Server 225 card stock loading 34 tips 43 Change [paper source] to [custom string] 173 Change [paper source] to [custom] type name] 173 Change [paper source] to [paper type] [paper size] 173 checking an unresponsive printer 186 checking status of parts and supplies 131 checking the status of parts and supplies 131 checking the virtual display using the Embedded Web Server 154

exterior of the printer 129 interior of the printer 129 scanner glass 130 cleaning the printer 129 Close door 173 Close flatbed cover and load originals if restarting job [2yy.xx] 174 collate copy options 64 collating copies 61 color quality troubleshooting color of print and color on computer screen do not match 217 prints on color transparencies appear dark when projected 217 color quality, troubleshooting print appears tinted 218 Complex page, some data may not have printed [39] 174 confidential data information on securing 128 confidential jobs modifying print settings 53 confidential print jobs 52 printing from a Macintosh computer 53 printing from Windows 53 Confidential Print menu 92 Configuration change, some held jobs were not restored [57] 175 configuration information wireless network 25 configurations printer 10 configuring multiple printers 156 supply notifications, imaging kit 155 supply notifications, maintenance kit 155 supply notifications, toner cartridge 155 supply notifications, waste toner bottle 155 configuring e-mail settings 66

cleaning

configuring supply notifications	copy to	Defective flash detected [51] 175
from the Embedded Web	copy options 64	developer unit
Server 155	copy troubleshooting	replacing 137, 146
configuring the Universal paper size	copier does not respond 218	device and network settings
settings 29	partial document or photo	erasing 128
connecting to a wireless network	copies 220	display troubleshooting
using PBC, Push Button	poor copy quality 219	printer display is blank 188
Configuration method 26	poor scanned image quality 223	display, printer control panel 12
using PIN, Personal Identification	scanner unit does not	documents, printing
Number method 26	close 219, 223	from Macintosh 50
using the Embedded Web	copying	from Windows 50
Server 27	adding an overlay message 62	
using wireless setup wizard 26	adjusting quality 60	E
conservation settings	canceling a copy job from the	
conserving supplies 121	printer control panel 63	Eco-Mode
Eco-Mode 122	collating copies 61	using 122
Hibernate mode 124	enlarging 59	embedded solutions
Hibernate Timeout 124	making a copy lighter or darker 59	erasing 128
Quiet mode 122	multiple pages on one sheet 62	Embedded Web Server 155
Schedule Power Modes 125	on letterhead 57	administrator settings 154
Sleep mode 123	on transparencies 56	checking the status of parts 131
conserving supplies 121	photos 56	checking the status of
contacting customer support 227	placing separator sheets between	supplies 131
control panel, printer	copies 61	copying settings to other
indicator light 13	quick copy 55	printers 156
Sleep button light 13	reducing 59	creating an FTP shortcut 69
controller board	selecting a tray 58	creating e-mail shortcuts 67
accessing 15	to a different size 58	modifying confidential print
copies	using the ADF 55	settings 53
copy options 63	using the scanner glass 56	networking settings 154
copy from	creating an FTP shortcut	problem accessing 225
copy options 63	using the Embedded Web	setting up e-mail alerts 154
copy job	Server 69	Embedded Web Server — Security:
canceling 63	custom paper type	Administrator's Guide
copy options	assigning 39	where to find 154
collate 64	custom paper type name	Embedded Web Server — Security:
copies 63	creating 38	Administrator's Guide
copy from 63	custom paper type names	where to find 128
copy to 64	assigning 38	emission
darkness 64	Custom Scan Sizes menu 83	notices 230, 233, 234, 235
overlay 65	Custom Type [x]	enlarging a copy 59
paper saver 65	assigning a paper type 39	envelopes
scale 64	Custom Type [x] name	loading 32, 34
separator sheets 65	creating 38	tips on using 42
copy quality	Custom Types menu 82	environmental settings
adjusting 60	customer support	conserving supplies 121
copy screen	contacting 227	Eco-Mode 122
content source 64	contacting 227	Hibernate mode 124
content type 64	D	Hibernate Timeout 124
options 65		Quiet mode 122
Copy Settings menu 98	darkness	Schedule Power Modes 125
esp, seemos mena so	copy options 64	Sleep mode 123
	Default Source menu 74	erasing non-volatile memory 128

erasing volatile memory 128 Error reading USB drive. Remove USB. 175 Error reading USB hub. Remove hub. 175 Ethernet network preparing to set up for Ethernet printing 24 Ethernet port 22	General Settings menu 94 green settings Eco-Mode 122 Hibernate mode 124 Hibernate Timeout 124 Quiet mode 122 Schedule Power Modes 125	Insufficient memory, some Held Jobs were deleted [37] 176 Insufficient memory, some held jobs will not be restored [37] 176 interior of the printer cleaning 129 internal options 14 IPv6 menu 88
Ethernet setup preparing for an 24 exterior of the printer cleaning 129 e-mail canceling 68 e-mail alerts low supply levels 154 paper jam 154 setting up 154 e-mail function setting up 66 E-mail Settings menu 102 e-mail shortcuts, creating using the Embedded Web Server 67	hardware options, adding print driver 23 held jobs 52 printing from a Macintosh computer 53 printing from Windows 53 Help menu 119 Hibernate mode using 124 Hibernate Timeout setting 124 home button printer control panel 12 HTML menu 118	jams avoiding 157 locating doors and trays 158 locations 158 messages 158 jams, clearing in automatic document feeder top cover 171 in fuser area 163 in manual feeder 169 in multipurpose feeder 170 in standard bin 160 Tray 1 168 Tray 2 168
e-mail, sending using a shortcut number 67 using the printer control panel 67 e-mailing configuring e-mail settings 66 creating shortcuts using the Embedded Web Server 67 setting up e-mail function 66 using a shortcut number 67 using the printer control panel 67	Image menu 119 imaging kit replacing 137 imaging kits ordering 133 Incompatible tray [x] [59] 175 Incorrect paper size, open [paper source] [34] 175 indicator light	keypad printer control panel 12  L labels, paper tips 42 letterhead copying on 57 loading, multipurpose feeder 40
factory defaults, restoring 156 FAQ about color printing 215 FCC notices 233, 235 finding more information about the printer 8 Finishing menu 110 firmware cards 14 font sample list   printing 54 fonts card 14 FTP address, scanning to   using a shortcut 70 FTP Settings menu 105	printer control panel 12 individual settings erasing 128 Insert Tray [x] 176 installing an optional card 19 installing options order of installation 20 installing printer 23 Insufficient memory for Flash Memory Defragment operation [37] 176 Insufficient memory to collate job [37] 176 Insufficient memory to support Resource Save feature [35] 176	loading, trays 40 linking trays 37 assigning custom paper type names 38 Load [paper source] with [custom string] 177 Load [paper source] with [custom type name] 177 Load [paper source] with [paper size] 177 Load [paper source] with [paper type] [paper size] 177 Load Manual Feeder with [custom string] 178 Load Manual Feeder with [custom type name] 178

Load Manual Feeder with [paper	Image 119	Non-Lexmark [color] [supply type],
size] 178	IPv6 88	see User's Guide [33.xy] 179
Load Manual Feeder with [paper	list of 73	non-volatile memory 127
type] [paper size] 178	Network [x] 84	erasing 128
loading	Network Card 86	Not enough free space in flash
250-sheet tray 29	Network Reports 86	memory for resources [52] 179
650-sheet duo tray 29, 33	Paper Loading 81	notices 229, 230, 231, 232, 233,
card stock 34	Paper Size/Type 75	234, 235, 236
envelopes 32, 34	Paper Texture 78	number of remaining pages
manual feeder 32	Paper Weight 79	estimate 131
multipurpose feeder 34	PCL Emul 115	
transparencies 34	PDF 114	0
loading letterhead	PostScript 115	_
paper orientation 40	Quality 111	optional card
lock, security 127	Reports 84	installing 19
, , , , , , , , , , , , , , , , , , , ,	Security Audit Log 93	options
M	Set Date and Time 93	650-sheet duo tray 21
	Setup 109	firmware cards 14
maintenance kit	SMTP Setup menu 91	fonts card 14
ordering 133	Standard Network 84	memory card 14, 17
Maintenance kit low [80.xy] 178	Standard USB 90	options, touch-screen
Maintenance kit nearly low	Substitute Size 78	copy 65
[80.xy] 178	Supplies 74	ordering
Maintenance kit very low, [x]	TCP/IP 87	imaging kits 133
estimated pages remain	Universal Setup 83	maintenance kit 133
[80.xy] 179	Utilities 114	toner cartridges 132
manual feeder	Wireless 88	waste toner bottle 133
loading 32	XPS 114	overlay
Max Speed and Max Yield	menus list 73	copy options 65
using 51	mobile device	overlay message, adding
memory	printing from 52	copying 62
types installed on printer 127	moving the printer 9, 152	5
memory card 14	multiple pages on one sheet 62	Р
installing 17	multipurpose feeder	paper
Memory full [38] 179	loading 34	characteristics 43
menu settings	S	letterhead 45
loading on multiple printers 156 menu settings page	N	preprinted forms 45
printing 28	Network [x] menu 84	recycled 45, 121
menus	Network [x] menu 64 Network [x] software error	selecting 44
Active NIC 84	[54] 179	setting size 29
AppleTalk 89	Network Card menu 86	setting type 29
Confidential Print 92	Network Reports menu 86	storing 45
Copy Settings 98	network settings	unacceptable 44
Custom Scan Sizes 83	Embedded Web Server 154	Universal size setting 29
Custom Types 82	network setup page	paper feed troubleshooting
Default Source 74	printing 28	message remains after jam is
E-mail Settings 102	Networking Guide	cleared 191
Finishing 110	where to find 154	paper jams
FTP Settings 105	noise emission levels 230	avoiding 157
General Settings 94	noise, printer	paper jams, clearing
Help 119	reducing 122	[x]-page jam, open front door
HTML 118		[20y.xx] 166

HTML 118

[x]-page jam, open front door to canceling, from computer 54 unexpected page breaks clear fuser [202.xx] 163 occur 197 print quality cleaning the scanner glass 130 printer 23 [x]-page jam, open front door to clear duplex [23y.xx] 167 replacing a developer unit 146 configurations 10 in automatic document feeder top replacing imaging kit 137 minimum clearances 9 cover 171 replacing the waste toner models 10 in fuser area 163 bottle 134 moving 9, 152 in manual feeder 169 print quality troubleshooting selecting a location 9 in multipurpose feeder 170 blank pages 206 shipping 153 in standard bin 160 characters have jagged edges 198 printer control panel Tray 1 168 clipped pages or images 198 factory defaults, restoring 156 Tray 2 168 gray background on prints 199 indicator light 13 Paper Loading menu 81 horizontal voids appear on parts 12 paper saver prints 200 Sleep button light 13 print irregularities 203 copy options 65 using 12 Paper Size/Type menu 75 print is too dark 204 printer control panel, virtual print is too light 205 paper sizes display supported by the printer 46 printer is printing solid black using the Embedded Web Paper Texture menu 78 Server 154 pages 207 repeating print defects 208 Printer had to restart. Last job may paper types supported by printer 48 shadow images appear on be incomplete. 180 where to load 48 prints 208 printer information Paper Weight menu 79 skewed print 209 where to find 8 paper weights streaked horizontal lines appear printer is printing blank pages 206 supported by printer 48 printer messages on prints 209 streaked vertical lines appear on [Color] cartridge low [88.xy] 174 parts checking status 131 prints 211 [Color] cartridge nearly low checking, using the Embedded toner fog or background shading [88.xy] 174 Web Server 131 appears on prints 212 [Color] cartridge very low, [x] toner rubs off 212 using genuine Lexmark 132 estimated pages remain parts and supplies, status of transparency print quality is [88.xy] 174 checking, on printer control poor 213 [Type] imaging kit low [84.xy] 185 panel 131 [Type] imaging kit nearly low uneven print density 213 PCL Emul menu 115 vertical voids appear on [84.xy] 185 PDF menu 114 [Type] imaging kit very low, [x] prints 214 Personal Identification Number print troubleshooting estimated pages remain method held jobs do not print 192 [84.xy] 185 using 26 incorrect characters print 193 [x]-page jam, clear manual feeder photos incorrect margins on prints 201 [251.xx] 169 copying 56 jammed pages are not [x]-page jam, clear multipurpose placing separator sheets between reprinted 190 feeder [250.xx] 170 copies 61 job prints from wrong tray 193 [x]-page jam, clear standard bin PostScript menu 115 job prints on wrong paper 193 [203.xx] 160 power cord socket 22 jobs do not print 195 [x]-page jam, open automatic preparing to set up the printer on Large jobs do not collate 194 feeder top cover. [28y.xx] 171 an Ethernet network 24 multiple-language PDF files do not [x]-page jam, open tray [x] print driver print 194 [24y.xx] 168 Adjusting color 173 hardware options, adding 23 paper curl 202 print irregularities 203 paper frequently jams 190 Change [paper source] to [custom print job print job takes longer than string 173 canceling from the printer control expected 196 Change [paper source] to [custom] panel 54 tray linking does not work 197 type name] 173

Change [paper source] to [paper type] [paper size] 173 Close door 173 Close flatbed cover and load originals if restarting job [2yy.xx] 174 Complex page, some data may not have printed [39] 174 Configuration change, some held jobs were not restored [57] 175 Defective flash detected [51] 175 Error reading USB drive. Remove USB. 175 Error reading USB hub. Remove hub. 175 Incompatible tray [x] [59] 175 Incorrect paper size, open [paper source] [34] 175 Insert Tray [x] 176 Insufficient memory for Flash Memory Defragment operation [37] 176 Insufficient memory to collate job [37] 176 Insufficient memory to support Resource Save feature [35] 176 Insufficient memory, some Held Jobs were deleted [37] 176 Insufficient memory, some held jobs will not be restored [37] 176 Load [paper source] with [custom string] 177 Load [paper source] with [custom type name] 177 Load [paper source] with [paper size] 177 Load [paper source] with [paper type] [paper size] 177 Load Manual Feeder with [custom string] 178 Load Manual Feeder with [custom type name] 178 Load Manual Feeder with [paper size] 178 Load Manual Feeder with [paper type] [paper size] 178 Maintenance kit low [80.xy] 178 Maintenance kit nearly low [80.xy] 178

Maintenance kit very low, [x] estimated pages remain [80.xy] 179 Memory full [38] 179 Network [x] software error [54] 179 Non-Lexmark [color] [supply type], see User's Guide [33.xy] 179 Not enough free space in flash memory for resources [52] 179 Printer had to restart. Last job may be incomplete. 180 Reinstall missing or unresponsive [color] cartridge [31.xy] 180 Reload printed pages in Tray [x] 180 Remove packaging material, [area name] 181 Remove paper from standard output bin 181 Replace [color] cartridge, 0 estimated pages remain [88.xy] 181 Replace [color] cartridge, printer region mismatch [42.xy] 181 Replace [type] imaging kit, 0 estimated pages remain [84.xy] 181 Replace all originals if restarting job. 182 Replace defective [type] imaging kit [31.xy] 182 Replace jammed originals if restarting job. 182 Replace maintenance kit, 0 estimated pages remain [80.xy] 182 Replace missing [type] imaging kit [31.xy] 183 Replace missing or unresponsive [type] imaging kit [31.xy] 180 Replace missing waste toner bottle [82.xy] 183 Replace unsupported [color] cartridge [32.xy] 183 Replace unsupported [type] imaging kit [32.xy] 183 Replace waste toner bottle [82.xy] 183 Scanner automatic feeder cover open 183

Scanner disabled by admin [840.01] 183 Scanner disabled. Contact system administrator if problem persists. [840.02] 183 Scanner jam, remove all originals from the scanner [2yy.xx] 184 Scanner jam, remove jammed originals from the scanner [2yy.xx] 184 SMTP server not set up. Contact system administrator. 184 Standard network software error [54] 184 Standard USB port disabled [56] 184 Supply needed to complete job 184 Too many flash options installed [58] 185 Too many trays attached [58] 185 Unformatted flash detected [53] 186 Unsupported USB hub, please remove 175 Waste toner bottle nearly full [82.xy] 186 Weblink server not set up. Contact system administrator. 186 printer options troubleshooting internal option is not detected 188 tray problems 189 printer problems, solving basic 186 printer security information on 128 printing black-and-white 50 faster speed vs. higher yield 51 font sample list 54 from a mobile device 52 from Macintosh 50 from Windows 50 Max Speed and Max Yield 51 menu settings page 28 network setup page 28 printing a document 50 printing a network setup page 28 printing confidential and other held from a Macintosh computer 53 from Windows 53

printing from a mobile device 52 Replace missing [type] imaging kit Scanner jam, remove jammed printing in black and white 50 originals from the scanner [31.xy] 183 publications [2yy.xx] 184 Replace missing or unresponsive where to find 8 [type] imaging kit [31.xy] 180 scanning Push Button Configuration method Replace missing waste toner bottle quick copy 55 to a computer 71 using 26 [82.xy] 183 Replace unsupported [color] scanning to a computer 71 cartridge [32.xy] 183 scanning to an FTP address Q Replace unsupported [type] creating shortcuts using the Quality menu 111 imaging kit [32.xy] 183 computer 69 Quiet mode 122 Replace waste toner bottle using a shortcut 70 [82.xy] 183 using the printer control panel 70 R reports scanning, FTP address recycled paper using the printer control panel 70 viewing 154 using 45, 121 Schedule Power Modes Reports menu 84 recycling reserve print jobs 52 using 125 Lexmark packaging 125 printing from a Macintosh security Lexmark products 125 computer 53 modifying confidential print toner cartridges 126 printing from Windows 53 settings 53 reducing a copy 59 Security Audit Log menu 93 reducing noise 122 security lock 127 S Reinstall missing or unresponsive security lock port 22 safety information 6, 7 [color] cartridge [31.xy] 180 security settings scale Reload printed pages in Tray erasing 128 copy options 64 [x] 180 security Web page scan troubleshooting Remove packaging material, [area where to find 128 cannot scan from a computer 225 name] 181 select button partial document or photo Remove paper from standard printer control panel 12 scans 224 output bin 181 selecting a location for the scan job was not successful 222 repeat print jobs 52 printer 9 scanner unit does not printing from a Macintosh selecting paper 44 close 219, 223 computer 53 separator sheets scanning takes too long or freezes printing from Windows 53 copy options 65 the computer 223 repeating print defects 208 Set Date and Time menu 93 scanner Replace [color] cartridge, 0 setting Automatic document feeder estimated pages remain paper size 29 (ADF) 12 [88.xy] 181 paper type 29 functions 11 Replace [color] cartridge, printer TCP/IP address 87 scanner glass 12 region mismatch [42.xy] 181 setting Hibernate Timeout 124 Scanner automatic feeder cover Replace [type] imaging kit, 0 setting up e-mail alerts 154 open 183 estimated pages remain Setup menu 109 Scanner disabled by admin [84.xy] 181 shipping the printer 153 [840.01] 183 Replace all originals if restarting shortcuts, creating Scanner disabled. Contact system job. 182 e-mail 67 administrator if problem persists. Replace defective [type] imaging kit FTP destination 69 [840.02] 183 [31.xy] 182 sleep button scanner glass Replace jammed originals if printer control panel 12 cleaning 130 restarting job. 182 Sleep mode copying using 56 Replace maintenance kit, 0 adjusting 123 Scanner jam, remove all originals estimated pages remain SMTP server not set up. Contact from the scanner [2yy.xx] 184 [80.xy] 182 system administrator. 184 SMTP Setup menu 91

Standard Network menu 84	recycling 126	jobs do not print 195
Standard network software error	replacing 144	Large jobs do not collate 194
[54] 184	toner darkness	multiple-language PDF files do not
standard tray	adjusting 50	print 194
loading 29	Too many flash options installed	paper curl 202
Standard USB menu 90	[58] 185	paper frequently jams 190
Standard USB port disabled	Too many trays attached [58] 185	print job takes longer than
[56] 184	transparencies	expected 196
statement of volatility 127	copying on 56	tray linking does not work 197
status of parts and supplies	loading 34	unexpected page breaks
checking 131	tips on using 41	occur 197
storing	trays	troubleshooting, print quality
paper 45	linking 37	blank pages 206
supplies 129	unlinking 37	characters have jagged edges 198
storing print jobs 52	troubleshooting	clipped pages or images 198
streaked horizontal lines appear on	cannot open Embedded Web	gray background on prints 199
prints 209	Server 225	horizontal voids appear on
streaked vertical lines appear on	checking an unresponsive	prints 200
prints 211	printer 186	print irregularities 203
Substitute Size menu 78	contacting customer support 227	print is too dark 204
supplies	FAQ about color printing 215	print is too light 205
checking status 131	solving basic printer	printer is printing solid black
checking, using the Embedded	problems 186	pages 207
Web Server 131	the scanner does not respond 221	repeating print defects 208
conserving 121	troubleshooting, color quality	shadow images appear on
storing 129	color of print and color on	prints 208
using genuine Lexmark 132	computer screen do not	skewed print 209
using recycled paper 121	match 217	streaked horizontal lines appear
Supplies menu 74	print appears tinted 218	on prints 209
supplies, ordering	prints on color transparencies	streaked vertical lines appear on
imaging kits 133	appear dark when projected 217	prints 211
maintenance kit 133	troubleshooting, copy	toner fog or background shading
toner cartridges 132	copier does not respond 218	appears on prints 212
waste toner bottle 133	partial document or photo	toner rubs off 212
Supply needed to complete job 184	copies 220	transparency print quality is
supply notifications	poor copy quality 219	poor 213
configuring 155	poor scanned image quality 223	uneven print density 213
	scanner unit does not	vertical voids appear on
Т	close 219, 223	prints 214
TCP/IP menu 87	troubleshooting, display	troubleshooting, printer options
telecommunication notices 236	printer display is blank 188	internal option is not
the scanner does not respond 221	troubleshooting, paper feed	detected 188
tips	message remains after jam is	tray problems 189
card stock 43	cleared 191	troubleshooting, scan
labels, paper 42	troubleshooting, print	cannot scan from a computer 225
on using envelopes 42	held jobs do not print 192	partial document or photo
on using letterhead 40	incorrect characters print 193	scans 224
transparencies 41	incorrect margins on prints 201	scan job was not successful 222
tips on using envelopes 42	jammed pages are not	scanner unit does not
tips on using letterhead 40	reprinted 190	close 219, 223
toner cartridges	job prints from wrong tray 193	scanning takes too long or freezes
ordoring 122	job prints on wrong paper 193	the computer 223

job prints on wrong paper 193

ordering 132

the computer 223

### U

unacceptable paper 44 uneven print density 213 Unformatted flash detected [53] 186 Universal paper size settings configuring 29 Universal Setup menu 83 unlinking trays 37 Unsupported USB hub, please remove 175 USB port 22 using Hibernate mode 124 using Max Speed and Max Yield 51 using Schedule Power Modes 125 using the printer control panel 12 Utilities menu 114

### ٧

verify print jobs 52
printing from a Macintosh
computer 53
printing from Windows 53
vertical voids appear on prints 214
viewing
reports 154
virtual display
checking, using Embedded Web
Server 154
volatile memory 127
erasing 128
volatility
statement of 127

#### W

waste toner bottle
ordering 133
replacing 134
Waste toner bottle nearly full
[82.xy] 186
Weblink server not set up. Contact
system administrator. 186
Wireless menu 88
wireless network
configuration information 25
wireless network setup
using the Embedded Web
Server 27
wireless setup wizard
using 26

#### X

XPS menu 114