

**1** Unpack your printer.


**Note:** Contents may vary based on geography.  
Unpack your printer.

**Note:** Contents may vary based on geography.  
Unpack your printer.

**Note:** Contents may vary based on geography.  
Unpack your printer.

**Note:** Contents may vary based on geography.  
Unpack your printer.

**Note:** Contents may vary based on geography.  
Unpack your printer.

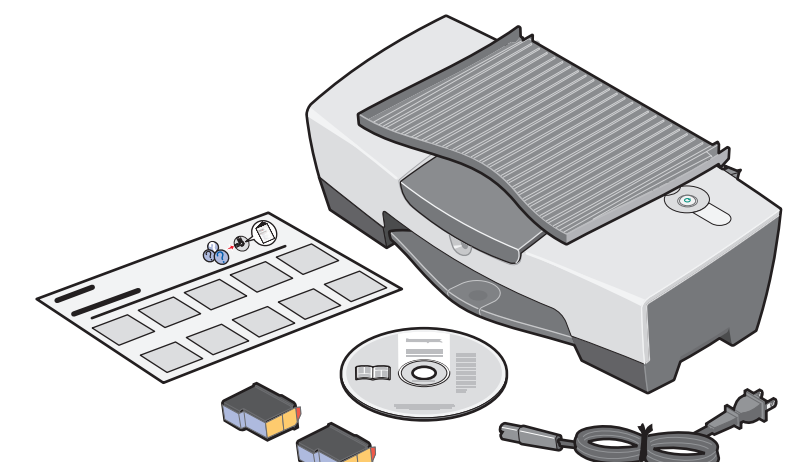


**Note:** You may need to purchase a USB cable separately.

**Note:** You may need to purchase a USB cable separately.


**Note:** You may need to purchase a USB cable separately.

**Note:** You may need to purchase a USB cable separately.

Your printer may include a photo cartridge instead of a black print cartridge.  
Your printer may include a photo cartridge instead of a black print cartridge.  
Your printer may include a photo cartridge instead of a black print cartridge.  
Your printer may include a photo cartridge instead of a black print cartridge.

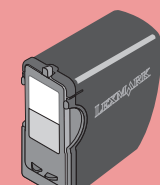


Before you continue, remove the photo cartridge from the print cartridge storage unit.  
Before you continue, remove the photo cartridge from the print cartridge storage unit.  
Before you continue, remove the photo cartridge from the print cartridge storage unit.  
Before you continue, remove the photo cartridge from the print cartridge storage unit.

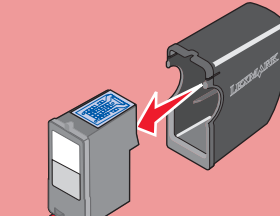

**Reminder:** Save the print cartridge storage unit to protect unused cartridges.  
**Reminder:** Save the print cartridge storage unit to protect unused cartridges.  
**Reminder:** Save the print cartridge storage unit to protect unused cartridges.  
**Reminder:** Save the print cartridge storage unit to protect unused cartridges.

**2** Connect the power cord.


Connect the power cord.  
Connect the power cord.  
Connect the power cord.

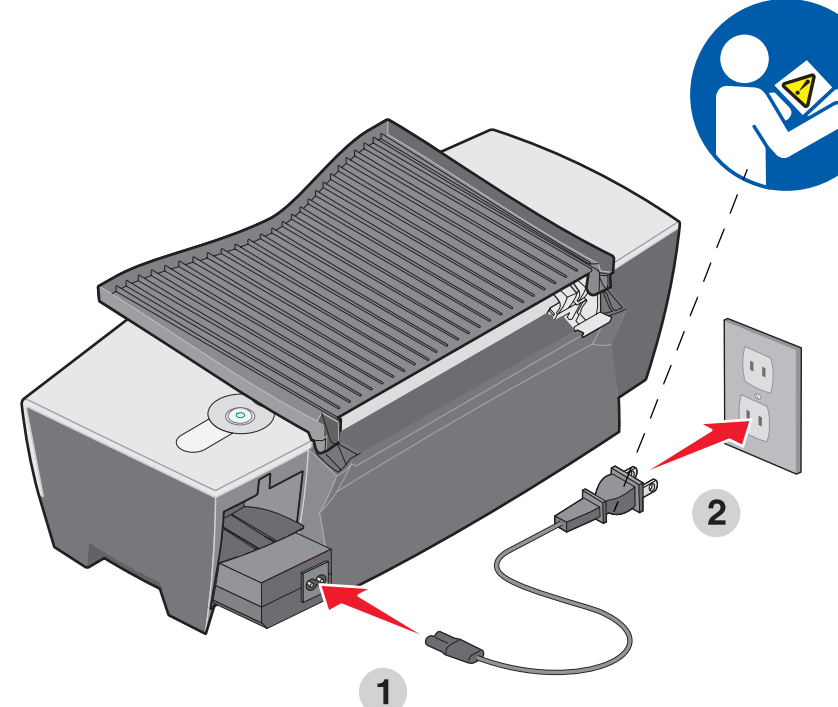

1 2


**3** Make sure the power is on.

Make sure the power is on.  
Make sure the power is on.  
Make sure the power is on.

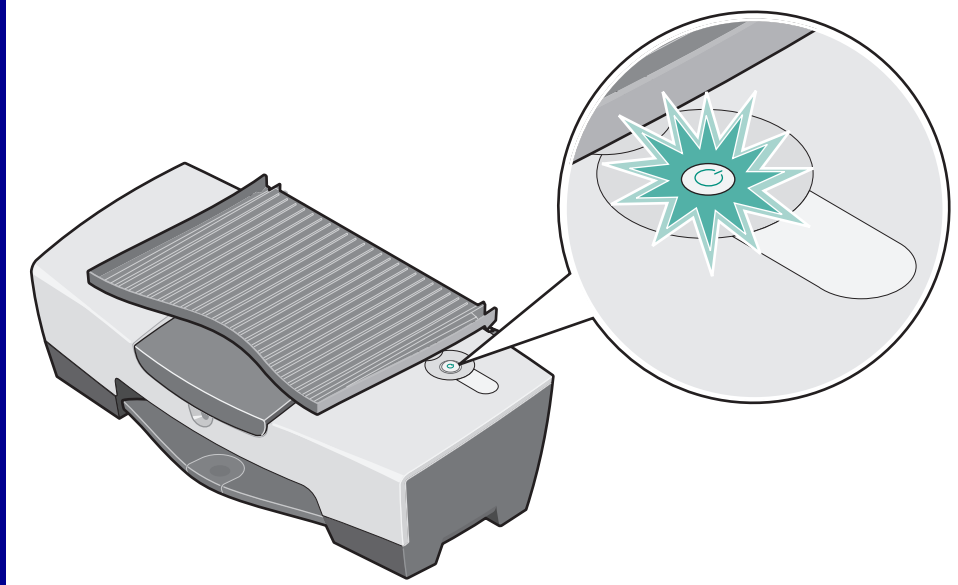


**4** Raise the paper support.

Raise the paper support.  
Raise the paper support.  
Raise the paper support.

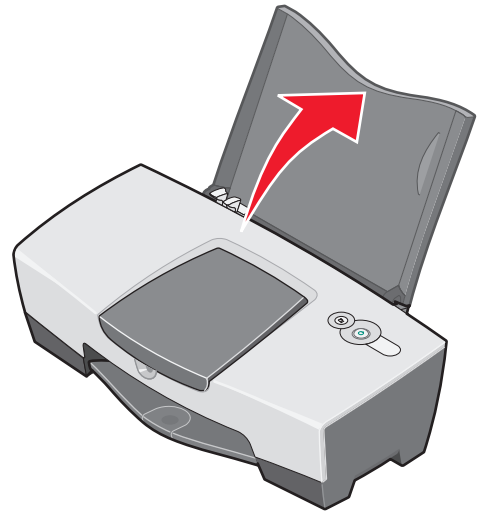


**5** Extend the paper exit tray.

Extend the paper exit tray.  
Extend the paper exit tray.  
Extend the paper exit tray.

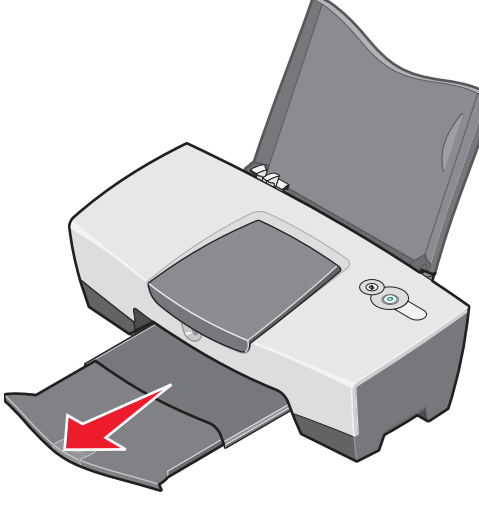


**6** Raise the access cover.

Raise the access cover.  
Raise the access cover.  
Raise the access cover.

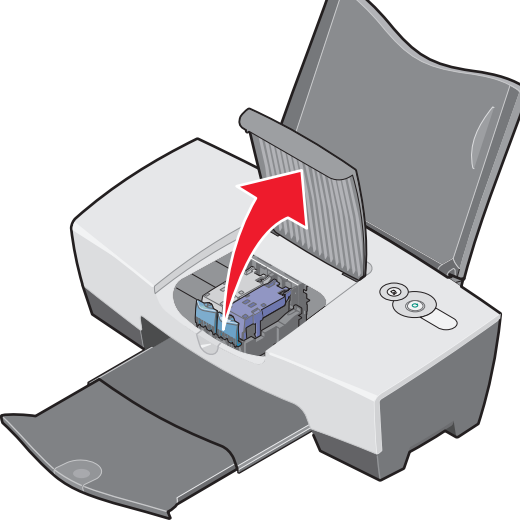

**7** Remove the sticker and tape from the bottom of the print cartridges.


Remove the sticker and tape from the bottom of the print cartridges.  
Remove the sticker and tape from the bottom of the print cartridges.  
Remove the sticker and tape from the bottom of the print cartridges.

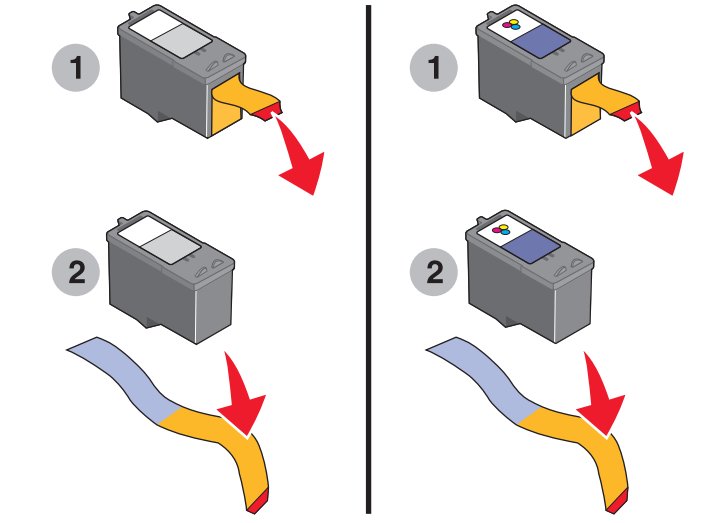

1 2

**8** Open the cartridge lids, insert the cartridges, and snap the lids closed.

Open the cartridge lids, insert the cartridges, and snap the lids closed.  
Open the cartridge lids, insert the cartridges, and snap the lids closed.  
Open the cartridge lids, insert the cartridges, and snap the lids closed.

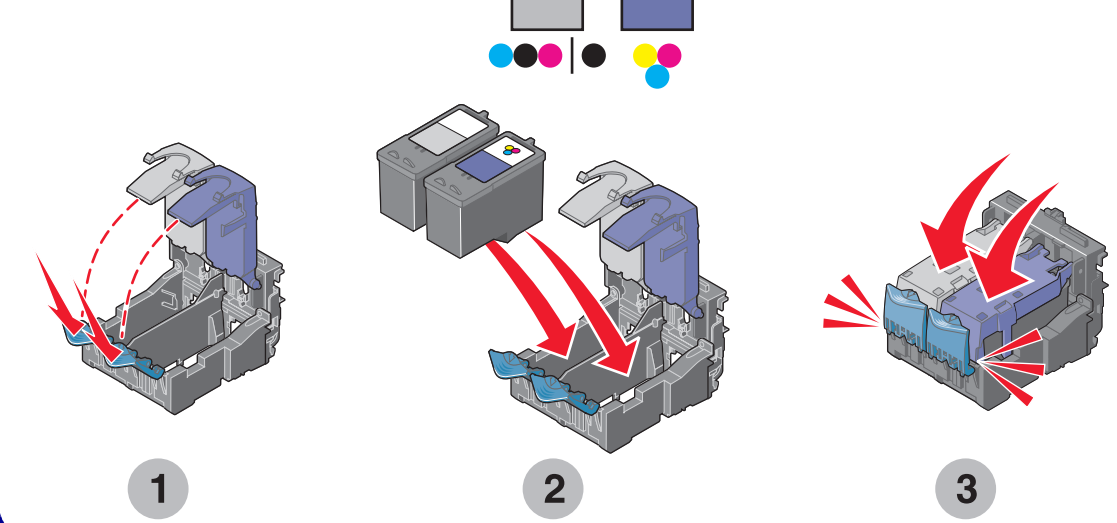

1 2 3

**9** Close the access cover.  
Close the access cover.  
Close the access cover.  
Close the access cover.

**10** Load paper and adjust the paper guide.  
Load paper and adjust the paper guide.  
Load paper and adjust the paper guide.  
Load paper and adjust the paper guide.

**11** Make sure your computer is on.  
Make sure your computer is on.  
Make sure your computer is on.  
Make sure your computer is on.

**12** Attach the USB cable to your printer and computer.  
Attach the USB cable to your printer and computer.  
Attach the USB cable to your printer and computer.  
Attach the USB cable to your printer and computer.

**13** **Important!** Click **Cancel** on the Add New Hardware screen.  
**Important!** Click **Cancel** on the Add New Hardware screen.  
**Important!** Click **Cancel** on the Add New Hardware screen.  
**Important!** Click **Cancel** on the Add New Hardware screen.

Windows 2000/XP

Windows 98/Me

**Note:** Add New Hardware screens appear only for Windows users. For Macintosh, continue to step 14.  
**Note:** Add New Hardware screens appear only for Windows users. For Macintosh, continue to step 14.  
**Note:** Add New Hardware screens appear only for Windows users. For Macintosh, continue to step 14.  
**Note:** Add New Hardware screens appear only for Windows users. For Macintosh, continue to step 14.

**14** Insert the CD.  
Insert the CD.  
Insert the CD.  
Insert the CD.

Follow the instructions on your screen to complete installation.  
Follow the instructions on your screen to complete installation.  
Follow the instructions on your screen to complete installation.  
Follow the instructions on your screen to complete installation.

**If you inserted the CD and the install screen did not appear (Windows):**  
Eject and reinsert the printer software CD.  
If the printer software install screen does not appear:  
1 From your desktop, double-click **My Computer** (In Windows XP, click **Start** → **My Computer**).  
2 Double-click the CD-ROM drive icon. If necessary, double-click **setup.exe**.  
3 When the printer software install screen appears, click **Install**.

**If you inserted the CD and the install screen did not appear (Mac):**  
1 From your desktop, double-click the **Lexmark 810 Series Installer** icon.  
2 Double-click **Install** and follow the instructions on the screen.

**If you inserted the CD and the install screen did not appear (Windows):**  
Eject and reinsert the printer software CD.  
If the printer software install screen does not appear:  
1 From your desktop, double-click **My Computer** (In Windows XP, click **Start** → **My Computer**).  
2 Double-click the CD-ROM drive icon. If necessary, double-click **setup.exe**.  
3 When the printer software install screen appears, click **Install**.

**If you inserted the CD and the install screen did not appear (Mac):**  
1 From your desktop, double-click the **Lexmark 810 Series Installer** icon.  
2 Double-click **Install** and follow the instructions on the screen.

**If you inserted the CD and the install screen did not appear (Windows):**  
Eject and reinsert the printer software CD.  
If the printer software install screen does not appear:  
1 From your desktop, double-click **My Computer** (In Windows XP, click **Start** → **My Computer**).  
2 Double-click the CD-ROM drive icon. If necessary, double-click **setup.exe**.  
3 When the printer software install screen appears, click **Install**.

**If you inserted the CD and the install screen did not appear (Mac):**  
1 From your desktop, double-click the **Lexmark 810 Series Installer** icon.  
2 Double-click **Install** and follow the instructions on the screen.

**Need more ink?**      **Need more ink?**  
**Need more ink?**      **Need more ink?**

• 31	• 32 • 34	• 33 • 35

**Have a question?**      **Have a question?**  
**Have a question?**      **Have a question?**

<http://support.lexmark.com/>