

Printing

Paper handling

Maintenance


Troubleshooting

Administration

Index

Removing the old print cartridge

The Toner Low light comes on when the print cartridge is getting low on toner.

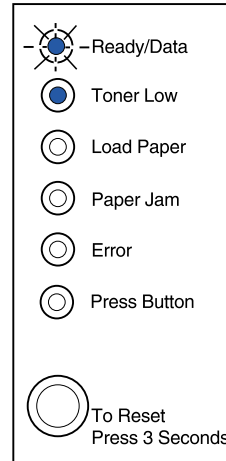

Note: On the Lexmark E320, the Toner Low light does not come on if the standard 1,500-page print cartridge is installed.



Printing

Paper handling

Maintenance


Troubleshooting

Administration

Index

Removing the print cartridge and shaking it lets you print more pages before replacing it. When it's time to replace the cartridge:

- 1 Use the finger tab to pull down the printer cover.

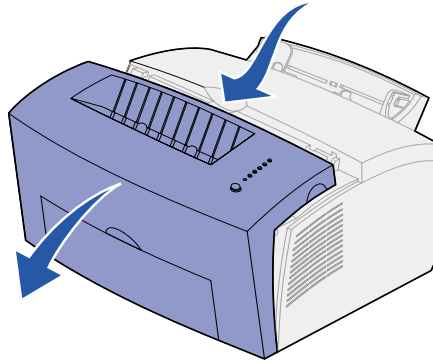

Printing

Paper handling


Maintenance

Troubleshooting

Administration

Index

- 2 Grasp the cartridge handle and pull the print cartridge straight up (it may be warm).

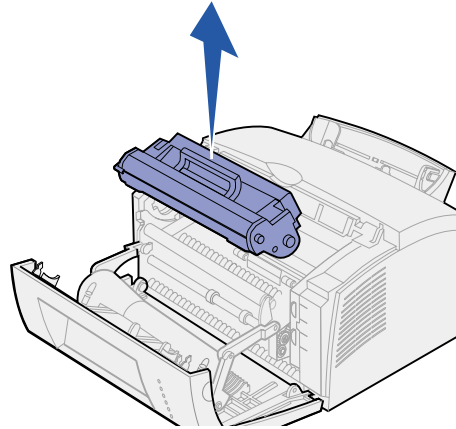

- 3 Set the print cartridge aside.



Printing

Paper handling

Maintenance

Troubleshooting

Administration

Index

Warning: Lexmark does not recommend refilling used printer cartridges or purchasing refilled cartridges from a third party. Print quality and printer reliability cannot be guaranteed if you do. **The printer warranty does not cover damage caused by using refilled cartridges.**

Installing the new print cartridge

- 1 Take the new print cartridge out of the bag.
- 2 Pull off the plastic piece attached to the ends of the print cartridge.



Printing

Paper handling


Maintenance

Troubleshooting

Administration

Index

Discard the plastic piece and foam protective packaging.

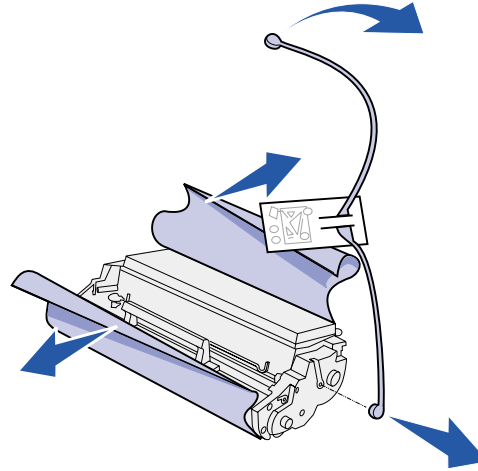

- 3 Shake the cartridge to distribute the toner evenly.
- 4 Insert the print cartridge.
 - a Align the colored labels on either side of the print cartridge with the corresponding labels in the printer.



Printing

Paper handling


Maintenance

Troubleshooting

Administration

Index

- b** Holding the handle, tilt the cartridge down and guide it between the print cartridge grooves.

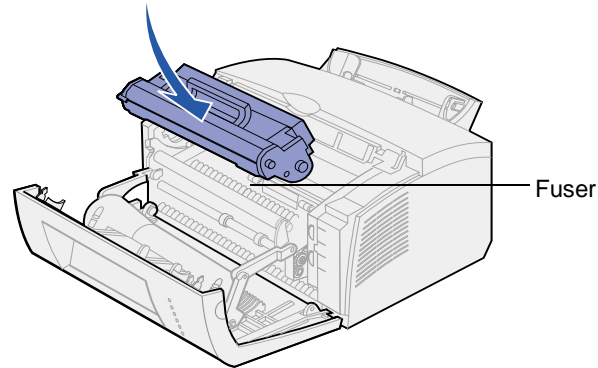

- c** Push down on the cartridge until it is firmly in place.

CAUTION! Avoid touching the fuser, it may be hot!



Printing

Paper handling


Maintenance

Troubleshooting

Administration

Index

5 Close the printer cover.

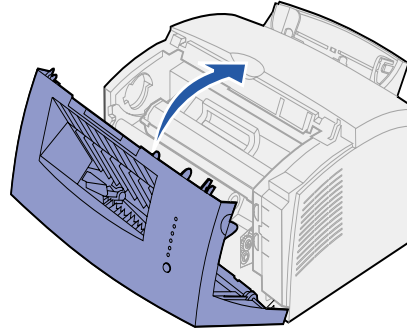

6 Place the used cartridge in the bag and follow the instructions on the print cartridge box to send it back to Lexmark.

To get the maximum benefit from your print cartridge:

- Do not remove the print cartridge from its packaging until you are ready to install it.
- Store print cartridges in the same environment as the printer.
- Do not remove the print cartridge from the printer except to replace it or to clear a paper jam.

