

Lexmark™ C720 Product Update

Keep this information with your Lexmark C720 *Quick Reference Card*.

Operator panel messages

The printer operator panel displays two new messages: **89 Clean Charger** and **89 Replace Charger**. These messages remind you when to clean or replace the charger on the photo developer cartridge. Complying with these messages will help your printer maintain print quality.

Photo developer charger

The charger on the bottom of the photo developer cartridge prepares the photo developer to accept the toner that creates your printed images. You must periodically clean the charger to maintain print quality.

When the photo developer has printed 10,000 images, **89 Clean Charger** appears on the operator panel display. This message indicates it is time for you to remove the photo developer cartridge and clean the charger.

For information about cleaning the charger, refer to *Cleaning the photo developer charger* in the Troubleshooting section of your *Lexmark C720 Publications CD*.

When the photo developer has printed 20,000 images, **89 Replace Charger** appears on the operator panel display. This message indicates it is time for you to remove the photo developer cartridge and replace the charger.

Information about replacing the charger is in the package with your new charger. The part number to use when ordering a replacement charger is 15W0918.

Starter cartridges

Your printer shipped with a starter photo developer cartridge and starter toner cartridges.

The starter photo developer cartridge is rated at 50 percent maximum life and yields up to 20,000 images. The following table shows the maximum life difference between a starter photo developer cartridge and a replacement cartridge.

Cartridge	Starter cartridge maximum life	Replacement cartridge maximum life
Photo developer	Up to 20,000 images	Up to 40,000 images

The toner starter cartridges are rated at 42 percent maximum life. The following table shows the maximum life difference between a starter and replacement toner cartridge.

Toner cartridge	Starter cartridge maximum life	Replacement cartridge maximum life
Black	Up to 5,000 pages @ 5% toner coverage	Up to 12,000 pages @ 5% toner coverage
Cyan	Up to 3,000 pages @ 5% toner coverage	Up to 7,200 pages @ 5% toner coverage
Magenta	Up to 3,000 pages @ 5% toner coverage	Up to 7,200 pages @ 5% toner coverage
Yellow	Up to 3,000 pages @ 5% toner coverage	Up to 7,200 pages @ 5% toner coverage

