

Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

Edition: June 2002

The following paragraph does not apply to any country where such provisions are inconsistent with local law: LEXMARK INTERNATIONAL, INC., PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions. Improvements or changes in the products or the programs described may be made at any time.

Comments about this publication may be addressed to Lexmark International, Inc., Department F95/032-2, 740 West New Circle Road, Lexington, Kentucky 40550, U.S.A. In the United Kingdom and Eire, send to Lexmark International Ltd., Marketing and Services Department, Westhorpe House, Westhorpe, Marlow Bucks SL7 3RQ. Lexmark may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you. You can purchase additional copies of publications related to this product by calling 1-800-553-9727. In the United Kingdom and Eire, call +44(0)8704 440 044. In other countries, contact your point of purchase.

References in this publication to products, programs, or services do not imply that the manufacturer intends to make these available in all countries in which it operates. Any reference to a product, program, or service is not intended to state or imply that only that product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any existing intellectual property right may be used instead. Evaluation and verification of operation in conjunction with other products, programs, or services, except those expressly designated by the manufacturer, are the user's responsibility.

© Copyright 2001, 2002 Lexmark International, Inc.
All rights reserved.

UNITED STATES GOVERNMENT RESTRICTED RIGHTS

This software and documentation are provided with RESTRICTED RIGHTS. Use, duplication or disclosure by the Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013 and in applicable FAR provisions: Lexmark International, Inc., Lexington, KY 40550.



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

Lexmark™ X84-X85 Scan/Print/Copy



Tips for using this guide

- Click the categories on the left side of the page to navigate through this guide, section by section.
- Click the left or right arrow in the lower right corner of the page to navigate through this guide, page by page.
- Click the house icon in the lower right corner of the page to return to the Home Page.
- Click **Edition Notice** to view edition information.
- Select File ▶ Print ▶ Properties to print this guide. Make sure Landscape is selected. Select the pages you want to print, and then click **OK**.

Basics

Copying

Printing

Scanning

Troubleshooting

Notices


Index

Congratulations on the purchase of your Lexmark™ X84-X85 Scan/Print/Copy. You can scan, print, and copy documents using the printer operator panel and the printer software.

- **Using the operator panel**
- **Using the menus**
- **Using the Scan & Copy Control Program**
- **Using the Print Control Program**
- **Loading the paper**
- **Replacing the cartridges**
- **Aligning the cartridges**
- **Preserving the cartridges**



Using the operator panel

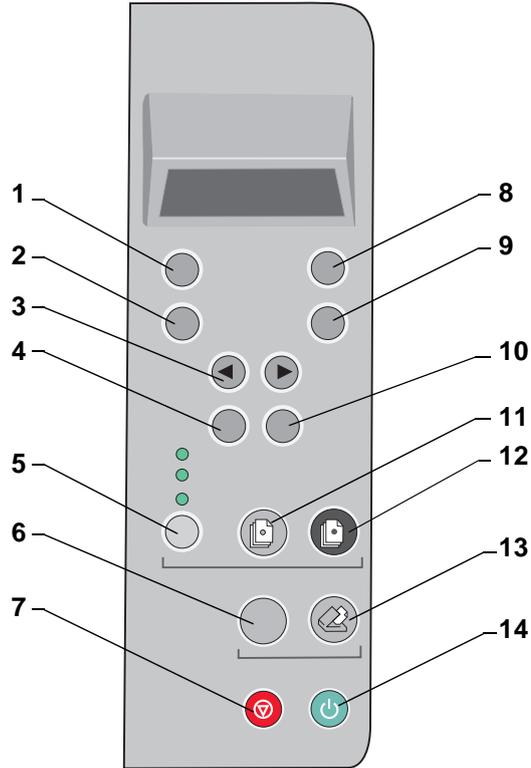

Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

The following table corresponds to the graphic on the preceding page.

| # | Press this button: | To: |
|----|--------------------|--|
| 1 | Number of Copies | Select the number of copies, from 1 to 99. |
| 2 | Reduce/Enlarge | Make the document smaller or larger than the original. |
| 3 | ◀ or ▶ | Scroll through menu categories. |
| 4 | Menu | Change settings using the menus. For menu options, see page 8. |
| 5 | Quality | Choose photo, quick, or normal copy setting. |
| 6 | Scan To | Select a scan destination, such as Application, File, Email, or Fax. |
| 7 | Cancel | Cancel a scan or copy job, or return a menu item to its default. |
| 8 | Lighter/Darker | Make the document lighter or darker than the original. |
| 9 | Paper Type | Select glossy, photo, transparency, or plain paper type. |
| 10 | Select | Choose the displayed selection. |
| 11 | Color Copy | Make a color copy. |
| 12 | Black Copy | Make a black and white copy. |



| # | Press this button: | To: |
|----|--------------------|--|
| 13 | Scan | Press Scan after selecting a Scan To destination. |
| 14 | Power | Turn the printer on and off. |

Using the menus

- 1 Press **Menu** until you see the menu you want.
- 2 Press **Select**.
- 3 Press ◀ or ▶ until you see the menu item you want.
- 4 Press **Select**.

| | |
|--|---|
| <p>Mono Collate</p> <p>Prints multiple copies of a multipage document so pages 1 through 5 of copy one print, pages 1 through 5 of copy two print, and so on.</p> | <p>Clone</p> <p>Prints several copies of one image on the same page. Select 4, 9, or 16 images per page.</p> |
|--|---|



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

| | | |
|---|---|---|
| <p>Poster</p> <p>Prints an image on multiple pages. Select 4 pages, 9 pages or 16 pages.</p> | <p>Language</p> <ul style="list-style-type: none"> • English • French • German • Spanish • Italian • Dutch • Brazilian Portuguese • Polish | <p>Copy Source Type</p> <ul style="list-style-type: none"> • Photo • Text • Line Drawing • Mixed |
| <p>Copy Source Size</p> <ul style="list-style-type: none"> • A4 • Letter • 3 x 5 • 4 x 6 | <p>Color Intensity</p> <ul style="list-style-type: none"> • Less • More | <p>Set Defaults</p> <p>Makes the current settings the default.</p> |
| <p>Factory Defaults</p> <p>Returns the settings to the factory default settings.</p> | <p>Maintenance</p> <ul style="list-style-type: none"> • Change Cartridges • Align Cartridges • Clean Cartridges • Self Test | <p>Power Saver Timeout</p> <ul style="list-style-type: none"> • Immediate • 10 min • 30 min • 60 min |
| <p>Copy Count Timeout</p> <ul style="list-style-type: none"> • 2 min • OFF | <p>Reduce/Enlarge Timeout</p> <ul style="list-style-type: none"> • 2 min • OFF | <p>Ink Levels</p> <ul style="list-style-type: none"> • Black • Color |



Using the Scan & Copy Control Program

When the software is installed on your computer, you can use the Scan & Copy Control Program to customize scan, print, and copy jobs. To open the Scan & Copy Control Program:

- 1 Click Start ▶ Programs ▶ Lexmark X84-X85 ▶ Scan & Copy Control Program.

| Select: | To: |
|--------------------|--|
| The keypad | Set the number of copies to print, from 1 to 99. |
| Reduce/Enlarge | Scroll and select the size of your output. |
| Fit to page | Scroll and select the size of your output. |
| Auto Crop | Crop the image during scanning. |
| Rotate | Rotate the image 90 degrees clockwise during scanning. |
| The brightness bar | Adjust how dark or light you want the copy to be. |
| Color | Make a color scan or copy of a color original. |
| Gray | Make a black and white scan or copy of a color original. |
| B/W | Make a black and white scan or copy of a black and white original. |
| Text/(OCR) | Scan a document into an application to let you edit the text. |



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

| Select: | To: |
|---------------------|--|
| Copy | Make a copy of the original document. |
| Fax | Scan the image or document and send it to a fax machine. |
| Email | Scan the image or document and attach it to a new e-mail message. |
| Send to Application | Scan the image or document into the selected image editor or word processor application. |
| Scan to File | Scan the image or document and save it as an image or text file. |

To make additional changes to your documents before copying, printing, or scanning:

- 2 Click File ▶ Setup.

| Select this tab: | To: |
|------------------|---|
| Image | Adjust the properties of the scanned image. |
| Scan | Change how or where images are scanned. |
| Page | Set the scan frame position and size. |
| Copy/Fax | Set Printer Properties or choose your fax driver. |
| Email | Change settings related to e-mail operations. |



| Select this tab: | To: |
|------------------|--|
| Application | Choose and configure any application on your computer for the Send to Application button. |
| OCR | Select the language you want the Optical Character Recognition (OCR) to use. |
| Descreen/Sharpen | <ul style="list-style-type: none"> Remove a halftone pattern in the background of a scanned image. Enable and set the sharpen level. |

Using the Print Control Program

The Control Program lets you monitor the printer and install or replace cartridges. To open the Control Program, click Start ▶ Programs ▶ Lexmark X84-X85 ▶ Print Control Program.

Windows 98/Me

| Click this tab: | To: |
|-----------------|---|
| Status | <ul style="list-style-type: none"> Monitor the status of your print job. Cancel your print job. |
| Options | Enable or disable various software functions, such as Sound Effects and Buffer Mode. |



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

| Click this tab: | To: |
|-----------------|---|
| Cartridges | <ul style="list-style-type: none"> • View your ink levels. • Install or replace cartridges. • Clean the nozzles. • Print a test page. • Align cartridges for best quality. • View cartridge part numbers and order supplies directly from the Lexmark Web site. |

Windows 2000/XP

| Click this tab: | To: |
|-----------------|---|
| Status | <ul style="list-style-type: none"> • Monitor the status of your print job. • Cancel your print job. |



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

| Click this tab: | To: |
|-----------------|---|
| Cartridges | <ul style="list-style-type: none"> • View your ink levels. • Align cartridges for best quality. • Clean the nozzles. • Print a test page. • View cartridge part numbers and order supplies directly from the Lexmark Web site. |
| Options | <ul style="list-style-type: none"> • Control how and when the Control Program displays. • Disable the printer shortcut. |



Setting defaults

If you are usually copying and scanning using a particular setting, such as a certain size paper, you may want to set this as your default. If you are using your printer with a computer, you must make changes using **both** the operator panel and the Scan & Copy Control Program.

| Using the operator panel: | Using the computer: |
|---|---|
| <p>Make sure:</p> <ul style="list-style-type: none"> Paper Size is set to desired paper size Copy Source Size is set to desired copy size <ol style="list-style-type: none"> 1 Press Menu. 2 Press ◀ or ▶ until Language or Copy Source Size appears on the display, and then press Select. 3 Press ◀ or ▶ until the desired setting appears on the display, and then press Select. 4 Press Menu. 5 Press ◀ or ▶ until Set Defaults appears on the display, and then press Select. | <p>Make sure:</p> <ul style="list-style-type: none"> Paper Size is set to desired paper size The area to be scanned is set to the desired paper size in the Scan & Copy Control Program <ol style="list-style-type: none"> 1 From your program File menu, select Print. 2 To customize print settings, click Properties or Printer Preferences. 3 Select the Paper tab to select the paper size you want, and then click OK. 4 Click Start ▶ Programs ▶ Lexmark X84-X85 ▶ Scan & Copy Control Program. 5 Click File ▶ Setup, and then select the Page tab. 6 Select the paper size you want, and then click OK. |



Loading the paper

- 1 Place the paper against the right side of the paper support with the print side facing you.



Note: Do not force the paper into the printer.

Basics

Copying

Printing


Scanning

Troubleshooting

Notices

Index

- 2 Squeeze the release tab and slide the paper guide to the right until it rests against the edge of the paper.

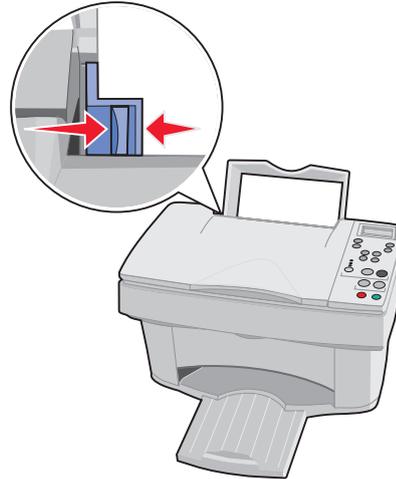

Loading specialty paper

Follow these guidelines when loading specialty paper:

| Load up to: | Make sure: |
|---|--|
| 100 sheets of inkjet paper (depending on thickness) | <ul style="list-style-type: none"> The print side is facing you. The paper is against the right side of the paper support. |
| 10 envelopes | <ul style="list-style-type: none"> The print side is facing you. The envelopes are loaded vertically against the right side of the paper support. The stamp location is in the upper left corner. The paper guide rests against the edge of the envelopes. |
| 10 greeting cards, index cards, postcards, or photo cards | <ul style="list-style-type: none"> The print side is facing you. The cards are loaded vertically against the right side of the paper support. The paper guide rests against the edge of the cards. |
| 25 sheets of photo paper | <ul style="list-style-type: none"> The glossy or coated side is facing you. The paper guide rests against the edge of the photo paper. |



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

| Load up to: | Make sure: |
|---------------------------------|---|
| 10 transparencies | <ul style="list-style-type: none"> • The rough sides of the transparencies are facing you. • The paper guide rests against the edge of the transparencies. |
| 100 sheets of custom size paper | <ul style="list-style-type: none"> • The print side is facing you. • Your paper size fits within these dimensions: <ul style="list-style-type: none"> – Width: <ul style="list-style-type: none"> 76 to 216 mm 3.0 to 8.5 in. – Length: <ul style="list-style-type: none"> 127 to 432 mm 5.0 to 17.0 in. • The paper guide rests against the edge of the paper. |
| 25 iron-on transfers | <ul style="list-style-type: none"> • You follow the loading instructions on the iron-on packaging. • The print side (blank side) is facing you. • The paper guide rests against the edge of the iron-on transfers. |



Replacing the cartridges

The Lexmark X84-X85 uses the following cartridges:

| | |
|------------------|---------|
| Black | 12A1970 |
| Color | 15M0120 |
| High Yield Black | 12A1975 |
| High Yield Color | 15M0125 |

- 1 Make sure the printer is on.
- 2 Open the cartridge door.



The cartridge carrier moves to the loading position, unless the printer is busy.

Basics

Copying

Printing


Scanning

Troubleshooting

Notices


Index

- 3 Pull the old cartridge toward you, and then lift it out. Store it in an air-tight container or dispose of it.

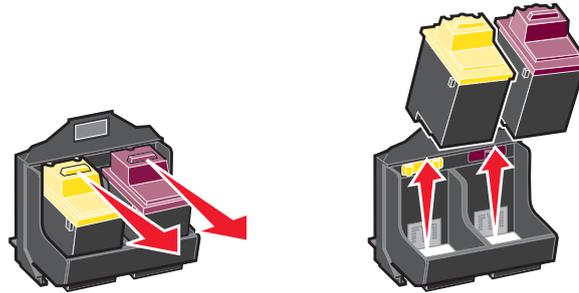

- 4 Install the new or replacement cartridge.

- a If you are installing a new cartridge, remove only the sticker and transparent tape on the bottom of the cartridge.

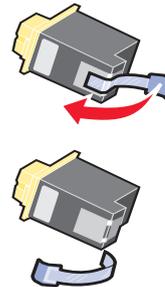

Basics

Copying

Printing


Scanning

Troubleshooting


Notices

Index

b Insert the cartridge into the carrier.

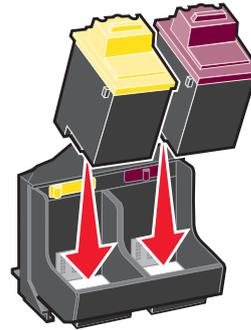

c Push back firmly on the cartridge until it snaps securely into place.

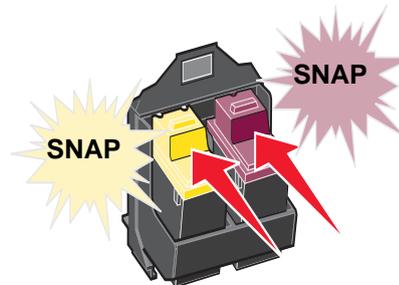

Warning: Do **not** touch the gold contact area of the cartridge.

Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index


- 5 Close the cartridge door.
- 6 From the operator panel, select the cartridge type you installed.
- 7 Use the ◀ or ▶ to scroll through the choices.
- 8 Press **Select**.

Note: If you installed a new cartridge, an alignment page prints. Use the arrow buttons on the operator panel to choose the pattern and select the pattern numbers that come closest to forming a straight line. For instructions, see the next section.

Aligning the cartridges

To improve the print quality, you may need to align the cartridges. You can align cartridges using the operator panel or the Control Program. For help using the Control Program, see page 12. To use the operator panel:

- 1 Press **Menu** until **Maintenance** appears on the display.
- 2 Press ◀ or ▶ until **Align Cartridges** appears on the display.
- 3 Press **Select**.

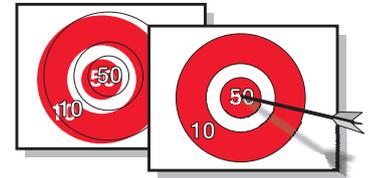

Basics

Copying

Printing


Scanning

Troubleshooting

Notices

Index

- An alignment page prints with several patterns. A number appears under each pattern. The test pattern that prints is similar to the one shown:

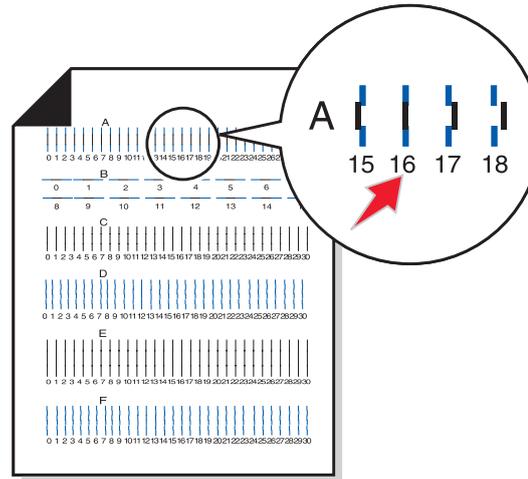

- For each alignment group on the test page, find the number that comes closest to forming a straight line.
- Press ◀ or ▶ and scroll to the number you selected on the test page.
- Press **Select**.

Preserving the cartridges

To ensure the longest life from your print cartridge and optimum performance from your printer:

- Keep a new print cartridge in its packaging until you are ready to install it.
- Do not remove a print cartridge from the printer except to replace, clean, or store it in an air-tight container. The print cartridge does not print correctly if removed from the printer and left exposed for an extended period of time.
- If a print cartridge runs out of ink, leave the empty cartridge in the printer until you are ready to replace it. Printing with only one of the print cartridges in the printer may cause printer problems.

Lexmark's printer warranty does not cover repair of failures or damage caused by a refilled cartridge. Lexmark does not recommend use of refilled cartridges. Refilling cartridges can affect print quality and cause damage to the printer. For best results, use Lexmark supplies.



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

The following section includes information about:

- **Copying instructions**
- **Customizing copy settings**
- **Using special copy features**
- **Creating projects**



Copying instructions

Note: A4 users, please see page 15 for setting default paper sizes.

| Using the operator panel: | Using the computer: |
|--|---|
| <ol style="list-style-type: none"> 1 Make sure the printer is on. 2 Open the top cover. 3 Place the document face down on the scanner bed in the bottom, right corner. 4 Close the top cover. 5 Press Color Copy or Black Copy. | <ol style="list-style-type: none"> 1 Make sure the printer and the computer are turned on. 2 Open the top cover. 3 Place the document face down on the scanner bed in the bottom, right corner. 4 Close the top cover. 5 Click Start ▶ Programs ▶ Lexmark X84-X85 ▶ Scan & Copy Control Program. 6 Select the number of copies. 7 Click the option button that matches the desired color of your copy. 8 Click Copy. |



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

Customizing copy settings

You can make additional changes to your document before copying.

- 1 Click Start ▶ Programs ▶ Lexmark X84-X85 ▶ Scan & Copy Control Program.
- 2 Click File ▶ Setup.
- 3 Select the Copy/Fax tab.
- 4 Customize the settings.
- 5 Click **OK** to copy.




Using special copy features

- 1 Click Start ▶ Programs ▶ Lexmark X84-X85 ▶ Scan & Copy Control Program.
- 2 From the Fit to Page area, scroll and select Poster, Clone, or Autofit.
- 3 Click **Paper Type/Print Quality** and select the Paper tab to choose the collate feature.

Poster



Prints an image on multiple pages.

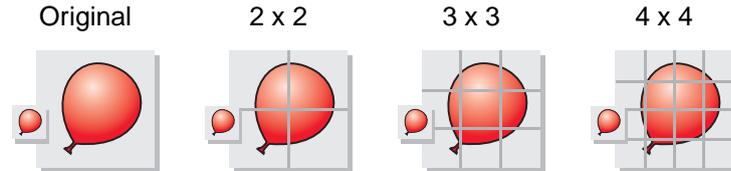

You can also create a poster without using the computer. See page 31.

Clone

 Prints several copies of one image on the same page.

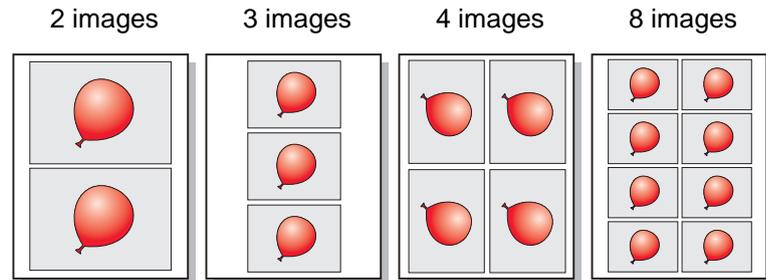

Basics

Copying

Printing

Scanning

Troubleshooting

 
Notices

Index


Clone from the operator panel

Prints several copies of one image on the same page.

Original




4 images

 

9 images



 16 images



You can also clone an image without using the computer. See page 34.

 
Autofit

Enlarges an image to fit a full page.

Original



Fit to page




Collate

Prints multiple copies of a multipage document so pages 1 through 3 of copy one print, pages 1 through 3 of copy two print, and so on.



 Creating projects



Printing posters

| Using the operator panel: | Using the computer: |
|--|--|
| <ol style="list-style-type: none"> 1 Make sure the printer is on. 2 Open the top cover. 3 Place the document face down on the scanner bed in the bottom, right corner. 4 Close the top cover. 5 Press Menu until Poster appears on the display. 6 Press Select. 7 Press ◀ or ▶ until the desired size (4, 9, or 16 pages) appears on the display. 8 Press Select. 9 Press Color Copy or Black Copy. | <ol style="list-style-type: none"> 1 Make sure the printer and the computer are turned on. 2 Open the top cover. 3 Place the document face down on the scanner bed in the bottom, right corner. 4 Close the top cover. 5 Click Start ▶ Programs ▶ Lexmark X84-X85 ▶ Scan & Copy Control Program. 6 Select the color button of your choice. 7 Select Poster from the Fit to Page area. 8 Select the size you want your poster to be (2 x 2, 3 x 3, or 4 x 4) and click OK. 9 Click Copy. |



Basics

Copying

Printing

Scanning


Troubleshooting

Notices


Index

Assembling posters

- 1 On each printed page, trim the white edges from two adjacent sides.
For example, trim the white edges from the top and left sides of each page.

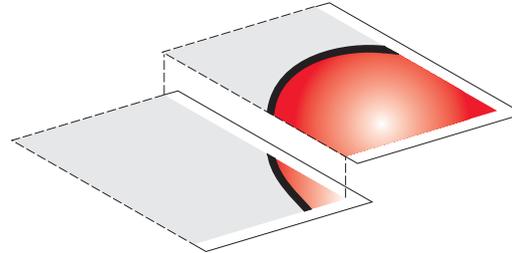

- 2 Arrange the pages so that every trimmed edge overlaps an untrimmed edge (the white edge).
- 3 Tape the back of the pages together.
- 4 To complete your poster, trim any remaining white edges.

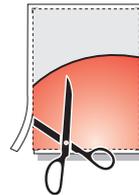

Basics

Copying

Printing


Scanning

Troubleshooting

Notices


Index

Copying receipts
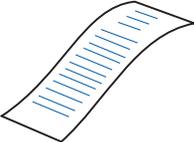
| Using the operator panel: | Using the computer: |
|--|--|
| <ol style="list-style-type: none"> 1 Make sure the printer is on. 2 Open the top cover. 3 Place the receipt face down on the scanner bed in the bottom, right corner. 4 Close the top cover. 5 Press Black Copy. | <ol style="list-style-type: none"> 1 Make sure the printer and the computer are turned on. 2 Open the top cover. 3 Place the receipt face down on the scanner bed in the bottom, right corner. 4 Close the top cover. 5 Click Start ▶ Programs ▶ Lexmark X84-X85 ▶ Scan & Copy Control Program. 6 Click Copy.  |

Note: If you have lightly printed receipts, you can use the lighter/darker option of the operator panel or the Scan & Copy Control Program.


Cloning seed packets to label garden rows
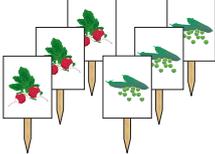
| Using the operator panel: | Using the computer: |
|--|---|
| <ol style="list-style-type: none"> 1 Make sure the printer is on. 2 Open the top cover. 3 Place the seed packet face down on the scanner bed in the bottom, right corner. 4 Close the top cover. 5 Press Menu until Clone appears on the display, and then press Select. 6 Use ◀ or ▶ until the desired number of images (4, 9, or 16 images) appears on the display. 7 Press Select. 8 Press Color Copy or Black Copy. | <ol style="list-style-type: none"> 1 Make sure the printer and the computer are turned on. 2 Open the top cover. 3 Place the seed packet face down on the scanner bed in the bottom, right corner. 4 Close the top cover. 5 Click Start ▶ Programs ▶ Lexmark X84-X85 ▶ Scan & Copy Control Program. 6 From the Fit to Page area, select Clone. 7 Select 2, 3, 4, or 8 images. 8 Select Color, Gray, or B/W. 9 Click Copy.  |

Cut out each image and attach to an object that can be inserted into the ground.

Note: If you plan on using the images outdoors, you may want to laminate them.

Enlarging patterns
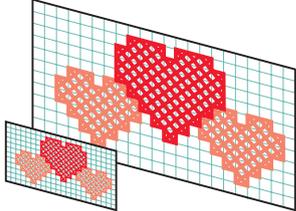
| Using the operator panel: | Using the computer: |
|---|--|
| <ol style="list-style-type: none"> 1 Make sure the printer is on. 2 Open the top cover. 3 Place the pattern face down on the scanner bed in the bottom, right corner. 4 Close the top cover. 5 Press Reduce/Enlarge until the desired size or Custom appears on the display. 6 Press Select. 7 If you selected Custom, press ◀ or ▶ until the desired percentage appears on the display. 8 Press Select. 9 Press Color Copy or Black Copy. | <ol style="list-style-type: none"> 1 Make sure the printer and the computer are turned on. 2 Open the top cover. 3 Place the pattern face down on the scanner bed in the bottom, right corner. 4 Close the top cover. 5 Click Start ▶ Programs ▶ Lexmark X84-X85 ▶ Scan & Copy Control Program. 6 From the Reduce/Enlarge area, select the desired percentage. 7 Select Color, Gray, or B/W. 8 Click Copy.  |

Basics

Copying

Printing


Scanning

Troubleshooting

Notices

Index

Restoring old photos
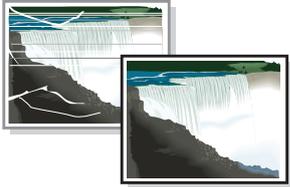
| Using the operator panel: | Using the computer: |
|--|---|
| <ol style="list-style-type: none"> 1 Make sure the printer is on. 2 Open the top cover. 3 Place the photo face down on the scanner bed in the bottom, right corner. 4 Close the top cover. 5 Press Paper Type until the paper type you have selected appears on the display. 6 Press Select. 7 Select Photo Quality. 8 Press Color Copy | <ol style="list-style-type: none"> 1 Make sure the printer and the computer are turned on. 2 Open the top cover. 3 Place the photo face down on the scanner bed in the bottom, right corner. 4 Close the top cover. 5 Click Start ▶ Programs ▶ Lexmark X84-X85 ▶ Scan & Copy Control Program. 6 From the Reduce/Enlarge or Fit to page area, select the desired size of your photo. 7 Select Color. 8 Click Copy.  |

Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

Creating transparencies

You can create transparencies for an important presentation in black and white or in color.

- 1 Print your presentation on plain paper.
- 2 Load the transparencies in the printer.
- 3 Place your document face down on the scanner bed in the bottom, right corner.
- 4 Press **Color Copy** to make a transparency in color. Press **Black Copy** to make a transparency in black.



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

The following section includes information about:

- **Printing instructions**
- **Customizing print settings**
- **Creating projects**



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

Printing instructions

- 1 From the application File menu, select Print.
- 2 From the Print dialog box, click **OK**.

If you are using Windows 98/Me, click Printer Properties to customize your print job.

If you are using Windows 2000/XP, click Printing Preferences to customize your print job. For help, see page 42.

Customizing print settings

The software includes several applications that let you perform printing tasks. Printer Properties or Printing Preferences lets you make changes to the print settings.

Opening Printer Properties or Printing Preferences from an application

Open Printer Properties or Printing Preferences from an application to change printer settings **only** for the documents in the application you are currently creating.

- 1 Open the application File menu.
- 2 Choose Print (or Printer) Setup.



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

3 In the Printer Setup dialog box, click Properties, Options, or Setup (depending on the application.)

Printer Properties for Windows 98/Me has four tabs: Job Finishing, Paper, Document/Quality, and Advanced. Each tab has settings for operating the printer and its software.

| Click this tab: | To: |
|-----------------|---|
| Job Finishing | Print <ul style="list-style-type: none"> • Handouts. • Posters. • Booklets. • Two-sided documents. |
| Paper | <ul style="list-style-type: none"> • Select a paper size and orientation. • Set the number of copies to print. • Reverse the printing order of your document pages. The first page will be on top of the stack in the paper exit tray. • Collate your document. |



- Basics
- Copying
- Printing
- Scanning
- Troubleshooting
- Notices
- Index

| Click this tab: | To: |
|------------------|---|
| Document/Quality | Select <ul style="list-style-type: none">• A color setting.• A type of paper.• A print quality setting.• Web Smoothing to print clearer images from the Internet.• The Allow pages to dry option.• The default settings. |
| Advanced | Adjust <ul style="list-style-type: none">• Halftone settings.• Image settings. |

Note: Click the Help button on any tab in the Printer Properties to access the printer driver Help.



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

Printing Preferences for Windows 2000/XP has five tabs: General, Options, Page Setup, Color, and Features. Each tab has settings for operating the printer and its software.

| Click this tab: | To: |
|-----------------|---|
| General | Select <ul style="list-style-type: none"> • A printer. • Which pages to print. • The number of copies. |
| Options | Print <ul style="list-style-type: none"> • Frames. • All linked documents. • A table of links. |



- Basics
- Copying
- Printing**
- Scanning
- Troubleshooting
- Notices
- Index

| Click this tab: | To: |
|-----------------|---|
| Page Setup | Select <ul style="list-style-type: none">• A paper size.• A media type.• A print quality.• A paper orientation.• The Reverse Order Printing option.• The number of copies to print.• The Collate Copies option. |
| Color | Select <ul style="list-style-type: none">• The color.• The shading.• A color appearance.• The brightness and contrast. |



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

| Click this tab: | To: |
|-----------------|---|
| Features | Select <ul style="list-style-type: none"> • The Dry Time Delay option. • The Two-Sided Printing option. • The Binding option. • The Print Instruction Sheet option. |

Note: Click the Help button on any tab in the Printer Preferences to access the printer driver Help.

Opening Printer Properties or Printing Preferences from Windows

Opening Printer Properties or Printing Preferences from Windows lets you apply the settings to **all** documents.

- 1 Select Start ▶ Settings ▶ Printers.
- 2 From the Printers folder, right-click the printer icon for the printer.
- 3 Select Properties or Printing Preferences from the sidebar menu.



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

Printer Properties for Windows 98/Me has seven tabs: Job Finishing, Paper, Document/Quality, Advanced, General, Details, and Color Management. Each tab has settings for operating the printer and its software.

| Click this tab: | To: |
|-----------------|---|
| Job Finishing | Print <ul style="list-style-type: none"> • Handouts. • Posters. • Booklets. • Two-sided documents. |
| Paper | <ul style="list-style-type: none"> • Select a paper size and orientation. • Set the number of copies to print. • Reverse the printing order of your document pages. The first page will be on top of the stack in the paper exit tray. • Collate your document. |



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

| Click this tab: | To: |
|------------------|---|
| Document/Quality | Select <ul style="list-style-type: none"> • A color setting. • A type of paper. • A print quality setting. • Web Smoothing to print clearer images from the Internet. • Allow pages to dry. • The default settings. |
| Advanced | Adjust <ul style="list-style-type: none"> • Halftone settings. • Image settings. |
| General | <ul style="list-style-type: none"> • Add a comment. • Insert a separator page. • Print a test page. |



- Basics
- Copying
- Printing
- Scanning
- Troubleshooting
- Notices
- Index

| Click this tab: | To: |
|------------------|--|
| Details | <ul style="list-style-type: none">• Add or delete printer ports or drivers.• Select a printer driver.• Capture printer ports.• Set timeout settings.• Customize spool and port settings. |
| Color Management | Set color profiles for the printer. |

Note: Click the Help button on any tab in the Printer Properties to access the printer driver Help.



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

Printing Preferences for Windows 2000/XP has three tabs: Page Setup, Color, and Features. Each tab has settings for operating the printer and its software.

| Click this tab: | To: |
|-----------------|---|
| Page Setup | Select <ul style="list-style-type: none"> • A paper size. • A media type. • A print quality. • A paper orientation. • The Reverse Order Printing option. • The number of copies to print. • The Collate Copies option. |
| Color | Select <ul style="list-style-type: none"> • The document color. • The shading. • A color appearance. • The brightness and contrast. |



- Basics
- Copying
- Printing
- Scanning
- Troubleshooting
- Notices
- Index

| Click this tab: | To: |
|-----------------|--|
| Features | Select <ul style="list-style-type: none">The Dry Time Delay option.The Two-Sided Printing option.The Binding option.The Print Instruction Sheet option. |

Note: Click the Help button on any tab in the Printer Preferences to access the printer driver Help.



Customizing print settings for specialty paper

When you install the software, the default settings are assigned to Printer Properties. Use the default settings for printing most documents on inkjet paper. To change printer settings for specialty paper, use the following table:

| When printing on: | Click this Printer Properties tab: | To make these selections: |
|--|------------------------------------|---|
| Envelopes | Paper | <ol style="list-style-type: none"> From the Paper Size area, scroll to select the appropriate envelope size. Select Landscape Orientation. <p>Note: Your application may override the envelope settings in Printer Properties.</p>  |
| Greeting cards, index cards, postcards, or photo cards | Paper | Select the appropriate Paper Size setting. |
| | Document/Quality | From the Paper Type area, select Greeting Card Stock. |

Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

| When printing on: | Click this Printer Properties tab: | To make these selections: |
|-------------------|------------------------------------|--|
| Iron-on transfers | Document/Quality | From the Paper Type area, select Iron-On Transfer. Note: We recommend printing on plain paper before printing it on an iron-on transfer. |
| Custom size paper | Paper | <ol style="list-style-type: none"> From the list of Paper Sizes, scroll to select Custom. Enter the dimensions of your custom paper size. |
| Photo paper | Document/Quality | From the Paper Type area, select Glossy/Photo Paper. Note: When printing photos, remove each photo as it exits the printer and let it dry before stacking. |
| Transparencies | Document/Quality | From the Paper Type area, select Transparency. Select Normal Print Quality. Note: When printing transparencies, remove each transparency as it exits the printer and let it dry before stacking. |



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

Creating projects

Windows 98/Me

Two-sided printing

Besides saving paper, this feature is helpful when you want to print booklets.

- 1 Customize Printer Properties for a two-sided document.
 - a Open Printer Properties. For help, see page 39.
 - b Click the Paper tab to select the page size and orientation.
 - c Click the Job Finishing tab to select Two-sided printing.
 - d Select a binding edge.
 - e To print paper reloading instructions, select the option on the screen that prints reloading instructions.
 - f Click **OK**.
- 2 From the application File menu, select Print.
- 3 After the first side of your two-sided document prints, the software prompts you to reload the paper.



Basics

Copying

Printing

Scanning

Troubleshooting


Notices

Index

- 4 Follow the instructions on the computer screen or the printed instruction page.
- 5 Click **OK**.

To return to single-sided printing:


- 1 From Printer Properties, click the Job Finishing tab.
- 2 Clear the Two-sided printing check box.
- 3 Click **OK**.

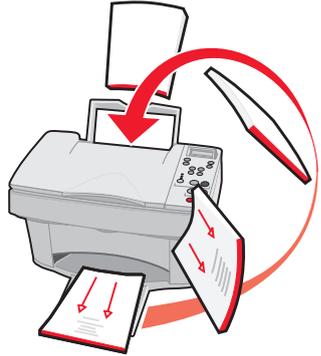

Printing a handout

You can conserve paper by printing handouts or multiple page images on a single sheet of paper.

- 1 Customize Printer Properties for handouts.
 - a Open Printer Properties. For help, see page 39.
 - b Click the Paper tab to select the page orientation and document size.
 - c Click the Job Finishing tab and select:
 - Handout

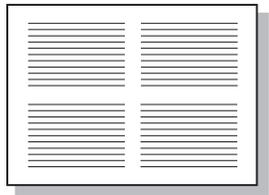

Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

- Number of Prints
- Print Page Borders, if desired

d To print your handout on one side of the paper, click **OK**.

To print your handout on both sides of the paper:

- Select Two-sided printing. For help, see page 52.
- Click Long Edge Binding or Short Edge Binding.
- Click **OK**.

2 Print your handouts.

a From the application File menu, select Print.

b From the Print dialog box, click **OK**.

- If you format your handouts to print on one side of each page, return to normal printing.
- If you format your handouts for two-sided printing, continue printing the second side of your handouts. For help, see page 52.

To return to normal printing:

- 1** From the Job Finishing tab, select Normal.
- 2** Click **OK**.



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index


Printing a booklet

You can print and bundle your document to make a booklet.

- 1 Customize Printer Properties for booklets.
 - a Select Portrait.
 - b Select a paper size. Choices include Statement, Letter, A4, or A5.
 - c Open Printer Properties. For help, see page 39.
 - d Click the Job Finishing tab.
 - e Select Booklet.
 - f Select the number of Sheets Per Bundle.

Note: A bundle is any number of sheets of paper folded together. When printing with a heavier paper stock, select a smaller number of sheets per bundle.

- g Select the option on the screen that prints reloading instructions.
 - h Click **OK**.
- 2 Print, and then assemble your booklet.

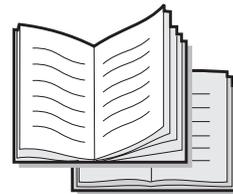

Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

- a From the application File menu, select Print.
- b From the Print dialog box, click **OK**. The first side of your document prints.
- c After the first side of your booklet is finished printing, the software prompts you to reload the paper.

Note: For help reloading and printing two-sided documents, see page 52.

- d Click **OK**.

Note: To return to normal printing, see page 53.

- e Assemble your booklet.

Assembling a booklet

Once your document prints, stack the bundles and bind the booklet.

- 1 Take the first bundle from the paper exit tray, fold it in half, and set it aside.
- 2 Fold and stack the rest of your bundles, one on top of the other, until your booklet is complete.
- 3 Bind the bundles.



Basics

Copying

Printing

Scanning


Troubleshooting

Notices

Index

Customizing T-shirts

- 1 Load iron-on transfer paper with the blank side facing you.
- 2 Open the image editor program supplied with the printer.
- 3 Create or select the image of your choice (scanned photo, clip art, scanned images) in an image editor program.
- 4 Select the mirror option.
- 5 Print your image.
- 6 Follow the instructions of the iron-on transfer packaging.

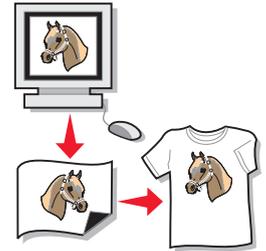

Note: You can also personalize pillowcases, tote bags or other items suitable for iron-on transfers.

Creating labels

- 1 Load a sheet of labels.
- 2 Create or select the image of your choice (scanned photo, clip art, scanned images) in an image editor program.
- 3 Personalize your labels.
- 4 Print your labels.



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

Creating awards and certificates

- 1 Create awards or certificates in a word processing or image editor program.
- 2 Center and enlarge the text for the heading.
- 3 Reduce the font and customize your award or certificate for the specified occasion.
- 4 Use clip art or create your own graphics, if desired.
- 5 From the application File menu, select Print.
- 6 Select Properties.
- 7 From the Document Quality tab, select the Document Type, Paper Type, and Print Quality for your document.
- 8 From the Paper tab, select the Paper Size and orientation for your document.
- 9 Click **OK**.
- 10 Click **OK**.



Note: You may want to print your award or certificate on card stock.



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

Creating signs

- 1 Create a sign in a word processing or image editor program.
- 2 Create or select graphics of your choice.
- 3 From the application File menu, select Print.
- 4 Select Properties.
- 5 From the Document Quality tab, select the Document Type, Paper Type, and Print Quality for your document.
- 6 From the Paper tab, select the Paper Size and orientation for your document.
- 7 Click **OK**.
- 8 Click **OK**.



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

Creating refrigerator magnets

- 1 Load magnetic paper.
- 2 Create or select the image of your choice (scanned photo, clip art, scanned images, or objects) in an image editor program.
- 3 From the application File menu, select Print.
- 4 Click the Printer Properties button.
- 5 Customize the settings.
- 6 Click **Print**.



Personalizing objects

- 1 Select an object to cover.
- 2 Create or select the image of your choice (scanned photo, clip art, scanned images) in an image editor program.
- 3 Print the image.
- 4 Fit the image to the specified object, cutting away any excess.
- 5 Attach the image to the specified object.



Basics

Copying

Printing

Scanning

 
Troubleshooting

Notices

Index

Creating CD covers

- 1 Create or select an image for your CD cover.
- 2 Add text to personalize the cover.
- 3 From the application File menu, select Print.
- 4 Select Properties.
- 5 From the Document Quality tab, select the Document Type, Paper Type, and Print Quality for your document.
- 6 From the Paper tab, select the Paper Type and Paper Size for your document.
- 7 Click **OK**.
- 8 Click **OK**.
- 9 Cut the paper to fit into your CD case.



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

The following section includes information about:

- **Scanning instructions**
- **Customizing scan options**
- **Using special scan features**
- **Creating projects**



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

Scanning instructions

A4 users, see page 15 for setting default paper size.

| Using the operator panel: | Using the computer: |
|--|---|
| <ol style="list-style-type: none"> 1 Make sure the printer and the computer are turned on. 2 Open the top cover. 3 Place the document face down on the scanner bed in the bottom, right corner. 4 Close the top cover. 5 Press Scan To until you see the category on the display that matches your scan destination (Application, File, E-mail, or Fax). 6 Press Scan. <ul style="list-style-type: none"> – A screen appears for you to select the destination of your scan. |  <ol style="list-style-type: none"> 1 Make sure the printer and the computer are turned on. 2 Open the top cover. 3 Place the document face down on the scanner bed in the bottom, right corner. 4 Close the top cover. 5 Click Start ▶ Programs ▶ Lexmark X84-X85 ▶ Scan & Copy Control Program. 6 Click the button that matches your scan destination (Send to Application, Scan to File, E-mail, or Fax). 7 If you select Send to Application, scroll and select an application to scan to. 8 Select the type of file to scan to. 9 Click Send. |



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

Customizing scan options

Customize scan settings using the operator panel or the Scan & Copy Control Program. For help using the operator panel, see page 7. For help using the Scan & Copy Control Program, see page 10.

You can make additional changes to your document before scanning.

- 1 Click Start ▶ Programs ▶ Lexmark X84-X85 ▶ Scan & Copy Control Program.
- 2 Click File ▶ Setup.
- 3 Select the Scan tab.
- 4 Customize the settings.
- 5 Click **OK**.

Using special scan features

- **Scanning a photo to an e-mail**
- **Scanning a photo to a file**
- **Scanning to Text/(OCR)**
- **Scanning to an application**
- **Scanning to the clipboard of your Windows system**



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

Scanning a photo to an e-mail

- 1 Open the top cover.
- 2 Place your photo face down on the scanner bed in the bottom, right corner.
- 3 Close the top cover.
- 4 Press **Scan To** until you see **E-mail** on the display.
- 5 Press **Scan**.
- 6 Enter an e-mail address on your screen.
- 7 Click Send.

Scanning a photo to a file

- 1 Open the top cover.
- 2 Place your photo face down on the scanner bed in the bottom, right corner.
- 3 Close the cover.
- 4 Click Start ▶ Programs ▶ Lexmark X84-X85 ▶ Scan & Copy Control Program.
- 5 Click File ▶ Setup ▶ Scan tab to customize the settings.
- 6 Click Scan to File.



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

- 7 Press **Scan**.
- 8 From the file list, select the file destination of your scan.
- 9 Click **Save**.

Scanning to Text/(OCR)

Using the Text/OCR (Optical Character Recognition) option lets you scan in an image of text which can be modified in word processor applications.

- 1 Open the top cover.
- 2 Place the document face down on the scanner bed in the bottom, right corner.
- 3 Close the cover.
- 4 Click **Start** ▶ **Programs** ▶ **Lexmark X84-X85** ▶ **Scan & Copy Control Program**.
- 5 Select **Text/(OCR)**.
- 6 Click the scan button that matches the destination of your scan.
- 7 Select the software application you want to scan to.
- 8 Click **Send**.

You can now edit the document in the word processor application.



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

Scanning to an application

- 1 Open the top cover.
- 2 Place your photo face down on the scanner bed in the bottom, right corner.
- 3 Close the cover.
- 4 Click Start ▶ Programs ▶ Lexmark X84-X85 ▶ Scan & Copy Control Program.
- 5 Click Send to Application.
- 6 From the application list, select the application you want to scan to.
- 7 From the file type list, select the file type.
- 8 Click **Send**.

Scanning to the clipboard of your Windows system

- 1 Open the top cover.
- 2 Place your photo face down on the scanner bed in the bottom, right corner.
- 3 Close the cover.
- 4 Click Start ▶ Programs ▶ Lexmark X84-X85 ▶ Scan & Copy Control Program.
- 5 Click **Send to Application**.



Basics

Copying

Printing

Scanning

Troubleshooting

Notices


Index

- 6 Select Clipboard.
- 7 From the file type list, select the file type.
- 8 Click **Send**.

Creating projects

Creating personalized recipe cards

- 1 Load index cards or custom size paper.
- 2 Select the recipe from a cookbook, magazine or other source.
- 3 Place your recipe face down on the scanner bed in the bottom, right corner.
- 4 From the Scan & Copy Control Program, select a size from the Fit to page area.
- 5 Customize the settings.
- 6 Click **Copy**.

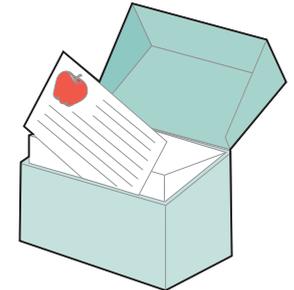

Basics

Copying

Printing

Scanning


Troubleshooting

Notices

Index

Personalizing business cards, letterheads, and envelopes

- 1 Load the business cards, plain paper, or envelopes.
- 2 Scan your company logo into an image editor program.
- 3 Type in your business name and address.
- 4 From the application File menu, select Print.
- 5 Select Properties.
- 6 From the Document Quality tab, select the Document Type, Paper Type, and Print Quality for your document.
- 7 From the Paper tab, select the Paper Size and orientation for your document.
- 8 Click **OK**.
- 9 Click **OK**.

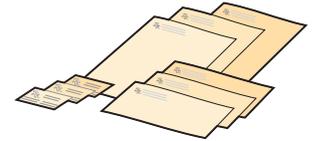

Basics

Copying

Printing

Scanning

Troubleshooting

Notices


Index

Printing a wedding program

- 1 Place a fresh flower or other object on the scanner bed.
- 2 Cover the flower with a sheet of paper.
- 3 Scan the flower or object into an image editor program.
- 4 Personalize your wedding program with text.

Note: To print your wedding program as a booklet, see page 55.

- 5 Print your wedding program.

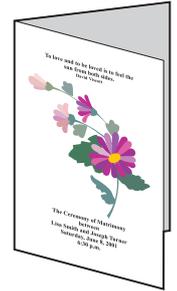

Printing scrapbook pages

- 1 Scan a photograph into an image editor program.
- 2 Customize the photograph.
- 3 Use the text tool to create a title for your page.
- 4 Print your scrapbook page.



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

If the printer has a problem, first make sure:

- The power supply is plugged into the printer and an electrical outlet.
- The printer is turned on.
- The tape is removed from the bottom of the cartridges.
- The USB cable is securely attached to the computer and printer.
- The paper is loaded correctly.
- The printer is set as the default printer.
- The computer is turned on.

Categories

- **Document does not print**
- **Document prints slowly**
- **Document misfeeds or jams**
- **Document prints poorly**
- **Problems with specialty paper**
- **Error messages**



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

Document does not print

- Make sure the cartridges are properly installed. For help, see page 20.
- Use an undamaged USB cable.
- Check your printer status to make sure your document is not being held or paused.

To check printer status:

- 1 Click Start ▶ Settings ▶ Printers.
- 2 Double-click the Lexmark X84-X85 printer icon.
- 3 Make sure no check mark appears next to the Pause Printing option.
- 4 Print a test page.
- 5 Check the software application.

Document prints slowly

- Close applications not in use.
- Select Normal or Quick on the Document/Quality tab of Printer Properties, Printing Preferences, or the Scan & Copy Control Program. For help, see page 39.



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

- Consider purchasing more Random Access Memory (RAM) for your computer.

Note: Photos or documents containing graphics may take longer to print than regular text.

Document misfeeds or jams



Paper misfeeds or multiple sheets feed

Make sure:

- You use a paper recommended for inkjet printers.
- You do not force the paper into the printer.
- You do not load too much paper in the printer. For help, see page 16.
- You load the paper correctly.
- The paper guide rests against the left edge of the paper and does not cause the paper to bow in the paper support.
- The printer is on a flat, level surface.
- You select the correct paper type and size in Printer Properties, Printing Preferences, or in the Scan & Copy Control Program.



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

Paper jams

Remove the paper from the printer. If the paper is lodged too far into the printer and cannot be removed:

- 1 Press **Power** to turn the printer off.
- 2 Pull firmly on the paper to remove it.
If you cannot reach the paper because it is too far into the printer
 - a Open the cartridge door and pull the paper out.
 - b Close the cartridge door.
- 3 Press **Power** to turn the printer on, and then send your document to print.



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

Document prints poorly

Vertical, straight lines are not smooth

To improve the print quality of vertical, straight lines in tables, borders, and graphs:

- Select Photo or Max Photo Quality from the Document/Quality tab of Printer Properties, Printing Preferences, or the Scan & Copy Control Program. For help, see page 39.
- Test the cartridge alignment. For help, see page 23.
- Clean the nozzles. For help, see page 78.



Characters are missing or unexpected

Make sure the scanner bed is clean.

- 1 Dampen a clean lint-free cloth.
- 2 Gently wipe the glass scanner bed.

Note: Make sure all ink or corrective fluid on the document is dry before placing the document on the glass scanner bed.



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

Print is too dark or smudged

Make sure:

- You let the ink dry before handling the paper.
- You select the correct paper type and size in Printer Properties, Printing Preferences, or in the Scan & Copy Control Program.
- The paper is straight and unwrinkled.
- You select the appropriate Quality for the paper type. If you are printing on regular paper, select the Quick setting from the Document/Quality tab of Printer Properties, Printing Preferences, or from the Scan & Copy Control Program. For help, see page 39.
- The nozzles are clean. For help, see page 78.

Printed pages have alternating bands of light and dark print (intermittent printing)

- Make sure Enable Buffer Mode is selected on the Options tab of the Control Program. For help, see page 12.
- Select Photo or Max Photo Quality on the Document/Quality tab of Printer Properties or Printing Preferences. For help, see page 39.



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

Print quality is poor at the edges of the page

Like other printers, the printer cannot print in the extreme left, right, top or bottom edges of a page. Use these minimum settings:

- Left and right margins:
 - 6.35 mm (0.25 in.) each for all paper sizes except A4
 - 3.37 mm (0.133 in.) each for A4 size paper
- Top margin:
 - 1.7 mm (0.067 in.)
- Bottom margin:
 - 16.51 mm (0.65 in.)

Colors are faded or not printing correctly

- Check the ink level graphic on the Cartridges tab of the Printing Control Program. An ink cartridge may be out of or low on ink. For help, see page 12.
- Use a different color setting.
- Select Printer Properties or Printing Preferences ▶ Document/Quality ▶ Natural Color For help, see page 39.
- Use a different brand of paper. Every paper brand accepts ink differently and prints with slight color variations.



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

- Clean the nozzles. For help, see the next section.
- Wipe the nozzles. For help, see page 80.

Cleaning the cartridge nozzles


To improve quality, you may need to clean the nozzles. You can use the operator panel or the Control Program to clean the nozzles. For help using the Control Program, see page 12. To use the operator panel:

- 1 Press **Menu**.
- 2 Press ◀ or ▶ and scroll until **Maintenance** appears on the display.
- 3 Press **Select**.
- 4 Press ◀ or ▶ and scroll until **Clean Nozzles** appears on the display.
- 5 Press **Select**.



- Basics
- Copying
- Printing
- Scanning
- Troubleshooting**
- Notices
- Index

The printer feeds a sheet of paper and prints a nozzle test pattern similar to the one shown.

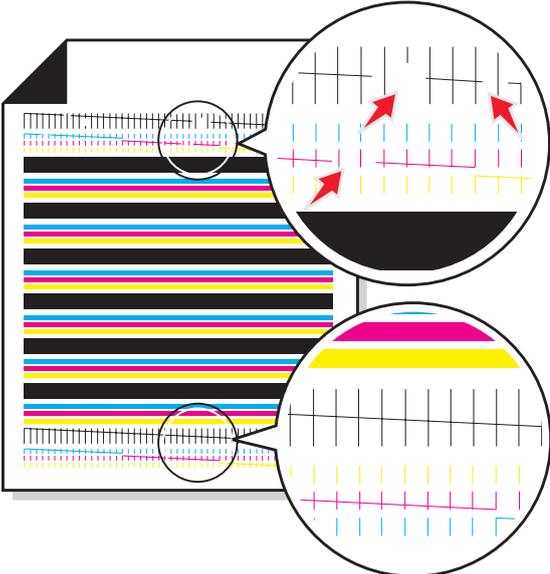

Compare the diagonal lines **above** the printed bars to the diagonal lines **below** the printed bars. Look for a break in the diagonal lines **above** the printed bars. Broken lines indicate clogged nozzles. Look for continuity in the diagonal lines below the printed bars. Unbroken lines indicate clean nozzles.

Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

If the bottom lines have breaks, run the test up to two more times looking for unbroken lines.


If the quality of both lines is not satisfactory after running the test three times, wipe the cartridge nozzles. For help, see the next section.

Wiping nozzles

If quality does not improve after cleaning the nozzles, there may be dried ink on the cartridge nozzles or the cartridge contacts.

To wipe the cartridge nozzles and contacts:

- 1 Remove the cartridge from the printer. For help, see page 21.
- 2 Dampen a clean, lint-free cloth with water and gently wipe the gold nozzle area.

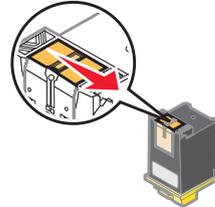

Warning: Wipe the nozzles in one direction so the colors do not mix.



Basics

Copying

Printing


Scanning

Troubleshooting

Notices

Index

- 3 To dissolve dried ink, hold the damp cloth against the nozzles for about three seconds. Gently blot and wipe dry.
- 4 Dampen another section of clean, lint-free cloth with water and gently wipe the gold contact area.

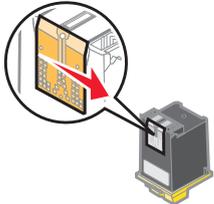

Warning: Do not wipe the nozzles and contacts with the same section of cloth.

- 5 Let the gold-colored areas dry before you reinsert the cartridge into the printer.

Reinstall the cartridge and repeat the nozzle test. For help, see page 78.



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

Problems with specialty paper

Transparencies or glossy photo papers stick together

- Remove each page as it exits the printer and let it dry completely before stacking.
- Use a transparency or photo paper designed for an inkjet printer.

Transparencies or photo papers contain white lines

- From Printer Properties or Printing Preferences ▶ Document/Quality ▶ Photo or Max Photo Quality. For help, see page 39.
- Clean the nozzles. For help, see page 78.
- Wipe the nozzles. For help, see page 80.
- Clean the scanner bed. For help, see page 75.

Envelopes do not feed properly

If regular paper feeds without problems, make sure:

- You load the envelopes correctly. For help, see page 18.
- You use an envelope size supported by the printer and it is selected in Printer Properties or Printing Preferences.



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

- You have the correct Paper Type and Size selected in Printer Properties or Printing Preferences.

Error messages

Printer is not communicating or scanner is not communicating

- 1 Disconnect, and then reconnect the USB cable.
- 2 Disconnect, and then reconnect the power supply.
- 3 Restart your computer.

Note: If you still receive this error, uninstall and then reinstall the Lexmark X84-X85 software. For help, see [Uninstalling and reinstalling the printer software](#).



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

Paper Jam message

Remove the paper from the printer. If the paper is lodged too far into the printer and cannot be removed:

- 1 Press **Power** to turn the printer off.
- 2 Pull firmly on the paper to remove it.
If you cannot reach the paper because it is too far into the printer:
 - a Open the cartridge door and pull the paper out.
 - b Close the cartridge door.
- 3 Press **Power** to turn the printer on, and then send your document to print.

Paper Out message

- 1 If the printer is out of paper, load the paper. For help, see page 16.
- 2 Press **Select**.
- 3 Resend your document to print.



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

Ink Low message

The cartridge is running out of ink. Purchase a new cartridge. For help replacing the cartridge, see page 20.

Other error messages

- 1 Turn the printer off.
- 2 Wait a few seconds, and then turn the printer back on.
- 3 Resend your document to print.

Note: You may not need to resend your document to print.

Faxing problems

If you are having problems sending or receiving faxes, make sure:

- You have an operational fax modem installed on your computer.
- You have installed the fax software included on CD 2.
- The fax driver you want to use is set as the default fax driver in the Scan & Copy Control Program.

To check or select your default fax driver:



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

- 1 Click Start ▶ Programs ▶ Lexmark X84-X85 ▶ Scan & Copy Control Program.
- 2 Click File ▶ Setup, and then select the Copy/Fax tab.

If the fax driver you want to use as your default is not listed:

- 1 Click **Fax Setup**.
- 2 From the list, select the fax driver you want to use as your default.
- 3 Click **Select**.

Note: Cable and Digital Subscriber Line (DSL) modems are **not** supported.

Uninstalling and reinstalling the printer software

If the printer software is not functioning properly or a communications error message appears when you try to use your printer, you may need to uninstall, and then reinstall the printer software.

Uninstalling software

- 1 Disconnect the USB cable.
- 2 Click Start ▶ Programs ▶ Lexmark X84-X85 ▶ Uninstall.
- 3 Follow the instructions on your computer screen to uninstall the printer software.



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

- 4 Restart the computer.

Installing the software

Windows users:

- 1 Disconnect the USB cable.
- 2 Insert the Lexmark X84-X85 CD to reinstall the software.
- 3 Follow the instructions on your computer screen.

Note: Do not connect the USB cable until you are prompted by the CD software.



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

The following section contains information about:

- **Statement of Limited Warranty**
- **Electronic emission notices**
- **Safety information**
- **ENERGY STAR**
- **Trademarks**



[Basics](#)[Copying](#)[Printing](#)[Scanning](#)[Troubleshooting](#)[Notices](#)[Index](#)

Statement of Limited Warranty

Lexmark International, Inc. Lexington, KY

This limited warranty applies to the United States. For customers outside the U.S., refer to the country-specific warranty information that came with your product.

This limited warranty applies to this product only if it was originally purchased for your use, and not for resale, from Lexmark or a Lexmark remarketer, referred to in this statement as "Remarketer."

Limited warranty

Lexmark warrants that this product:

- Is manufactured from new parts, or new and serviceable used parts, which perform like new parts
- Is, during normal use, free from defects in material and workmanship

If this product does not function as warranted during the warranty period, contact a Remarketer or Lexmark for repair or replacement (at Lexmark's option).



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

If this product is a feature or option, this statement applies only when that feature or option is used with the product for which it was designed. To obtain warranty service, you may be required to present the feature or option with the product.

If you transfer this product to another user, warranty service under the terms of this statement is available to that user for the remainder of the warranty period. You should transfer proof of original purchase and this statement to that user.

Limited warranty service

The warranty period starts on the date of original purchase as shown on the purchase receipt. The warranty period ends 12 months later.

To obtain warranty service you may be required to present proof of original purchase. You may be required to deliver your product to the Remarketer or Lexmark, or ship it prepaid and suitably packaged to a Lexmark designated location. You are responsible for loss of, or damage to, a product in transit to the Remarketer or the designated location.

When warranty service involves the exchange of a product or part, the item replaced becomes the property of the Remarketer or Lexmark. The replacement may be a new or repaired item. The replacement item assumes the remaining warranty period of the original product.



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

Replacement is not available to you if the product you present for exchange is defaced, altered, in need of a repair not included in warranty service, damaged beyond repair, or if the product is not free of all legal obligations, restrictions, liens, and encumbrances.

Before you present this product for warranty service, remove all print cartridges, programs, data, and removable storage media (unless directed otherwise by Lexmark).

For further explanation of your warranty alternatives and the nearest Lexmark authorized servicer in your area, contact Lexmark at (407) 563-4600, or on the World Wide Web at <http://support.lexmark.com>.

Remote technical support is provided for this product throughout its warranty period. For products no longer covered by a Lexmark warranty, technical support may not be available or only be available for a fee.

Extent of limited warranty

We do not warrant uninterrupted or error-free operation of any product.

Warranty service does not include repair of failures caused by:

- Modification or attachments
- Accidents or misuse
- Unsuitable physical or operating environment



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

- Maintenance by anyone other than Lexmark or a Lexmark authorized servicer
- Operation of a product beyond the limit of its duty cycle
- Use of printing media outside of Lexmark specifications
- Supplies (such as ink) not furnished by Lexmark
- Products, components, parts, materials, software, or interfaces not furnished by Lexmark

TO THE EXTENT PERMITTED BY APPLICABLE LAW, NEITHER LEXMARK NOR ITS THIRD PARTY SUPPLIERS OR REMARKETERS MAKE ANY OTHER WARRANTY OR CONDITION OF ANY KIND, WHETHER EXPRESS OR IMPLIED, WITH RESPECT TO THIS PRODUCT, AND SPECIFICALLY DISCLAIM THE IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND SATISFACTORY QUALITY. ANY WARRANTIES THAT MAY NOT BE DISCLAIMED UNDER APPLICABLE LAW ARE LIMITED IN DURATION TO THE WARRANTY PERIOD. NO WARRANTIES, EXPRESS OR IMPLIED, WILL APPLY AFTER THIS PERIOD. ALL INFORMATION, SPECIFICATIONS, PRICES, AND SERVICES ARE SUBJECT TO CHANGE AT ANY TIME WITHOUT NOTICE.

Limitation of liability

Your sole remedy under this limited warranty is set forth in this document. For any claim concerning performance or nonperformance of Lexmark or a Remarketer for this product



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

under this limited warranty, you may recover actual damages up to the limit set forth in the following paragraph.

Lexmark's liability for actual damages from any cause whatsoever will be limited to the amount you paid for the product that caused the damages. This limitation of liability will not apply to claims by you for bodily injury or damage to real property or tangible personal property for which Lexmark is legally liable. IN NO EVENT WILL LEXMARK BE LIABLE FOR ANY LOST PROFITS, LOST SAVINGS, INCIDENTAL DAMAGE, OR OTHER ECONOMIC OR CONSEQUENTIAL DAMAGES. This is true even if you advise Lexmark or a Remarketer of the possibility of such damages. Lexmark is not liable for any claim by you based on a third party claim.

This limitation of remedies also applies to claims against any Suppliers and Remarketers of Lexmark. Lexmark's and its Suppliers' and Remarketers' limitations of remedies are not cumulative. Such Suppliers and Remarketers are intended beneficiaries of this limitation.

Additional rights

Some states do not allow limitations on how long an implied warranty lasts, or do not allow the exclusion or limitation of incidental or consequential damages, so the limitations or exclusions contained above may not apply to you.

This limited warranty gives you specific legal rights. You may also have other rights that vary from state to state.



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

Electronic emission notices

Federal Communications Commission (FCC) compliance information statement

The Lexmark X84-X85 Scan/Print/Copy has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The FCC Class B limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your point of purchase or service representative for additional suggestions.

The manufacturer is not responsible for any radio or television interference caused by using other than recommended cables or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate this equipment.

Note: To assure compliance with FCC regulations on electromagnetic interference for a Class B computing device, use a properly shielded and grounded USB cable such as Lexmark part number 12A2405. Use of a substitute cable not properly shielded and grounded may result in a violation of FCC regulations.

Any questions regarding this compliance information statement should be directed to:

Director of Lexmark Technology & Service
 Lexmark International, Inc.
 740 West New Circle Road
 Lexington, KY 40550
 (859) 232-3000



[Basics](#)[Copying](#)[Printing](#)[Scanning](#)[Troubleshooting](#)[Notices](#)[Index](#)

Notices

Industry Canada Compliance Statement

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Avis de conformité aux normes d'Industrie Canada

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

European Community (EC) Directives Conformity

This product is in conformity with the protection requirements of EC Council directives 89/336/EEC and 73/23/EEC on the approximation and harmonization of the laws of the Member States relating to electromagnetic compatibility and safety of electrical equipment designed for use within certain voltage limits.

A declaration of conformity with the requirements of the directives has been signed by the Director of Manufacturing and Technical Support, Lexmark International, S.A., Boigny, France.

This product satisfies the Class B limits of EN 55022 and safety requirements of EN 60950.



[Basics](#)[Copying](#)[Printing](#)[Scanning](#)[Troubleshooting](#)[Notices](#)[Index](#)

Japanese VCCI Notice

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。

取扱説明書に従って正しい取り扱いをして下さい。

The United Kingdom Telecommunications Act 1984

This apparatus is approved under the approval number NS/G/1234/J/100003 for the indirect connections to the public telecommunications systems in the United Kingdom.

Safety information

- Use only the Lexmark power supply provided with this product or a Lexmark replacement unit.
- Connect the power cord to an electrical outlet that is near the product and easily accessible.
- Refer service or repairs, other than those described in the manual, to a professional service person.



[Basics](#)[Copying](#)[Printing](#)[Scanning](#)[Troubleshooting](#)[Notices](#)[Index](#)

ENERGY STAR



The EPA ENERGY STAR Office Equipment program is a partnership effort with office equipment manufacturers to promote the introduction of energy-efficient products and to reduce air pollution caused by power generation.

Companies participating in this program introduce products that power down when they are not being used. This feature will cut the energy used by up to 50 percent. Lexmark is proud to be a participant in this program.

As an ENERGY STAR Partner, Lexmark International, Inc. has determined that this product meets the ENERGY STAR guidelines for energy efficiency.

Trademarks

Lexmark and Lexmark with the diamond design are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

Other trademarks are the property of their respective owners.



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

A

aligning
cartridges

B

banding
booklets
assembling
printing

C

cards
loading
setting recommendations

cartridges

aligning
cleaning
installing
preserving
removing

characters, missing or unexpected
clone

Community
contacts, cartridge
cleaning

copy settings
customizing

copying
instructions
with computer
without computer
custom size paper
loading
setting recommendations

E

electronic emission notices
ENERGY STAR
envelopes
loading
problems
setting recommendations
error messages
Ink Low
Paper Jam
Paper Out
printer is not communicating
scanner is not communicating

F

faxing
problems
FCC statement

G

greeting cards
loading
setting recommendations

H

handouts
printing

I

index cards
loading
setting recommendations
Ink Low message
installing cartridges
instructions
copying
printing
scanning
intermittent printing
Internet printing
Web Smoothing
iron-on transfers
loading
setting recommendations



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

L

loading
 cards
 custom size paper
 envelopes
 greeting cards
 index cards
 iron-on transfers
 paper
 photo cards
 photo paper
 postcards
 specialty paper
 transparencies

M

margins
 minimum settings
 menus
 using
 messages, error
 Ink Low
 Paper Jam
 Paper Out
 Printer is not communicating
 Scanner is not communicating

N

notices
 electronic emission
 ENERGY STAR
 nozzles
 cleaning
 wiping

O

operator panel
 ordering supplies

P

paper
 loading
 Paper Jam message
 Paper Out message
 part numbers
 black cartridge
 color cartridge
 USB cable
 photo cards
 loading
 setting recommendations
 photo paper
 loading
 problems

setting recommendations
 postcards
 loading
 setting recommendations
 poster
 assembling
 printing
 print quality
 banding
 different colors
 smudged
 too dark
 troubleshooting
 wavy lines
 print settings
 customizing
 printer
 not communicating
 printing
 instructions
 posters
 problems
 faxing

R

reinstalling software
 removing cartridges
 reverse order printing



Basics

Copying

Printing

Scanning

Troubleshooting

Notices

Index

S

- safety information
- scanner
 - not communicating
- scanning
 - instructions
 - to a file
 - to an application
 - to an e-mail
 - to Text/(OCR)
 - to the clipboard
- setting recommendations
 - cards
 - custom size paper
 - envelopes
 - greeting cards
 - index cards
 - iron-on transfers
 - photo cards
 - photo paper
 - postcards
 - transparencies
- software
 - reinstalling
 - uninstalling
- specialty paper
 - custom size paper
 - envelopes
 - greeting cards

- index cards
- iron-on transfer
- loading
- photo cards
- photo paper
- postcards
- transparencies
- supplies ordering

T

- test page
 - nozzle test pattern
- test pattern
 - alignment
- transparencies
 - loading
 - problems
 - setting recommendations
- troubleshooting
 - envelopes don't print
 - paper feed problems
 - print quality
- two-sided printing

U

- uninstalling software
- USB cable
 - part number

W

- Web Smoothing
- Internet printing
- wiping nozzles

