

# Menu Map

## Menus list

### Device

Preferences  
Notifications  
Group Lists  
Alert Types  
Anti-Spam Logic Description  
Suppressing Duplicate Alerts  
Power Management  
Information Sent to Lexmark  
Accessibility  
Restore Factory Defaults  
Maintenance  
Visible Home Screen Icons  
Update Firmware  
About This Printer

### Print

Layout  
Finishing  
Setup  
Quality  
Job Accounting  
Image  
XPS  
PDF  
HTML  
PostScript  
PCL  
PPDS

### Bookmark Setup

Add Bookmark  
Add Folder  
Delete

### Paper

Tray Configuration  
Media Configuration  
Bin Configuration

### Network/Ports

Network Overview  
Wireless  
AirPrint  
Direct Wi-Fi Printing  
Ethernet  
TCP/IP  
IPv6  
SNMP  
IPSec  
LPD Configuration  
HTTP/FTP  
ThinPrint  
USB  
Parallel [x]  
Serial

### USB Drive

Flash Drive Print


### Security

Login Methods  
Certificate Management  
TCP/IP Port Access  
Schedule USB Devices  
Security Audit Log  
Login Restrictions  
Confidential Print  
Disk Encryption  
Erase Temporary Data Files  
Miscellaneous

### Reports

Menu Settings Page  
Device  
Print  
Shortcuts  
Network  
Event Log Summary

## Using the control panel

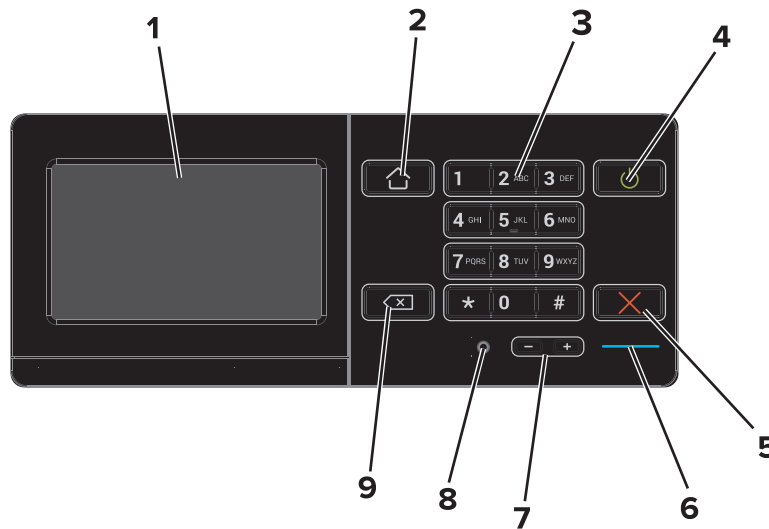

	Use the	To
1	Display	<ul style="list-style-type: none"> <li>Show the status of the printer.</li> <li>Set up and operate the printer.</li> </ul>
2	Home button	Go to the home screen.
3	Keypad	Enter numbers or symbols on the printer.
4	Power button	<ul style="list-style-type: none"> <li>Turn the printer on or off.</li> <li>Wake the printer from Sleep or Hibernate mode.</li> </ul>
5	Stop or Cancel button	Stop the current job.
6	Indicator light	Check the status of the printer. For more information, see the “Understanding the colors of the indicator light” topic.
7	Volume buttons	Adjust the volume of the headset or speaker.
8	Headset or speaker port	Attach a headset or speaker.
9	Back button	Return to the previous screen.


## Understanding the colors of the indicator light

Indicator light	Printer status
Off	The printer is off or in Hibernate mode.
Blue	The printer is ready or processing data.
Red	The printer requires user intervention.

## Using the home screen

When the printer is turned on, the display shows the home screen. Use the home screen buttons and icons to initiate an action.

**Note:** Your home screen may vary depending on your home screen customization settings, administrative setup, and active embedded solutions.

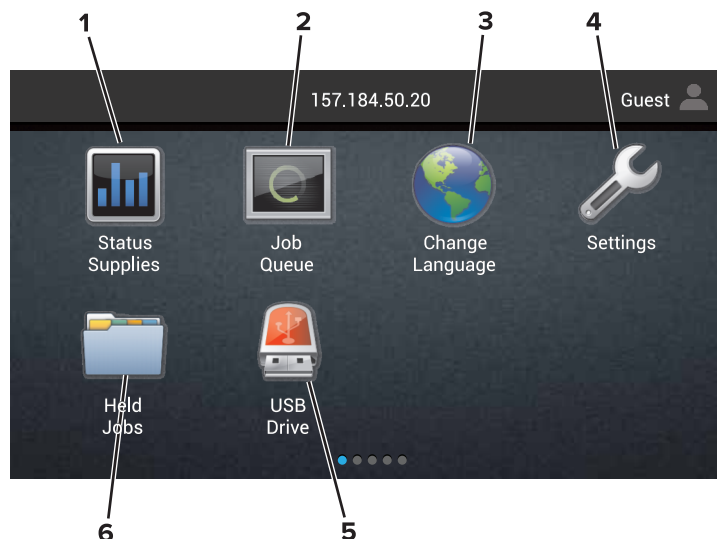


Touch		To
1	Change Language	Change the language on the printer display.
2	Status Supplies	<ul style="list-style-type: none"> <li>Show a printer warning or error message whenever the printer requires intervention to continue processing.</li> <li>View more information on the printer warning or message, and on how to clear it.</li> </ul> <b>Note:</b> You can also access this setting by touching the top section of the home screen.
3	Settings	Access the printer menus. <b>Note:</b> Make sure to enable the printer menus. From the Embedded Web Server, click <b>Settings &gt; Device &gt; Maintenance &gt; Configuration Menu &gt; Panel Menu &gt; On</b> .
4	Shortcuts	Organize all shortcuts.
5	USB	View, select, or print photos and documents from a flash drive.
6	Document Manager	Access held jobs, bookmarks, and applications.

**These settings may also appear on the home screen:**

Touch	To
Job Queue	Show all current print jobs. <b>Note:</b> You can also access this setting by touching the top section of the home screen.
App Profiles	Access profiles and applications.
Lock Device	Prevent users from accessing any printer functions from the home screen.

## Features

Feature	Description
Warning 	If an error condition occurs, then this icon appears. Touch the top of the home screen to show the error message.
Printer IP address Example: <b>123 .123 .123 .123</b>	The IP address of your printer is at the top of the home screen. Use the IP address to access the Embedded Web Server and remotely configure printer settings.