

# Menu Map

## Menus list

### Device

Preferences  
Notifications  
Group Lists  
Alert Types  
Anti-Spam Logic Description  
Suppressing Duplicate Alerts  
Power Management  
Information Sent to Lexmark  
Accessibility  
Restore Factory Defaults  
Maintenance  
Visible Home Screen Icons  
Update Firmware  
About This Printer

### Print

Layout  
Finishing  
Setup  
Quality  
Job Accounting  
Image  
XPS  
PDF  
HTML  
PostScript  
PCL  
PPDS

### Bookmark Setup

Add Bookmark  
Add Folder  
Delete

### Paper

Tray Configuration  
Media Configuration  
Bin Configuration

### Copy

Copy Defaults

### Fax

General Fax Settings  
Fax Server Setup  
T.38 Settings  
VoIP Settings  
SIP Settings  
H.323 Settings  
Fax Cover Page  
Fax Send Settings  
Fax Receive Settings  
Fax Log Settings  
Speaker Settings

### E-mail

E-mail Defaults  
E-mail Setup  
Web Link Setup

### FTP

FTP Defaults

**Network/Ports**

- Network Overview
- Wireless
- AirPrint
- Direct Wi-Fi Printing
- Ethernet
- TCP/IP
- IPv6
- SNMP
- IPSec
- LPD Configuration
- HTTP/FTP
- ThinPrint
- USB
- Parallel [x]
- Serial

**USB Drive**

- Flash Drive Print


**Security**

- Login Methods
- Certificate Management
- TCP/IP Port Access
- Schedule USB Devices
- Security Audit Log
- Login Restrictions
- Confidential Print
- Disk Encryption
- Erase Temporary Data Files
- Miscellaneous

**Reports**

- Menu Settings Page
- Device
- Print
- Shortcuts
- Network
- Event Log Summary

**Using the control panel**

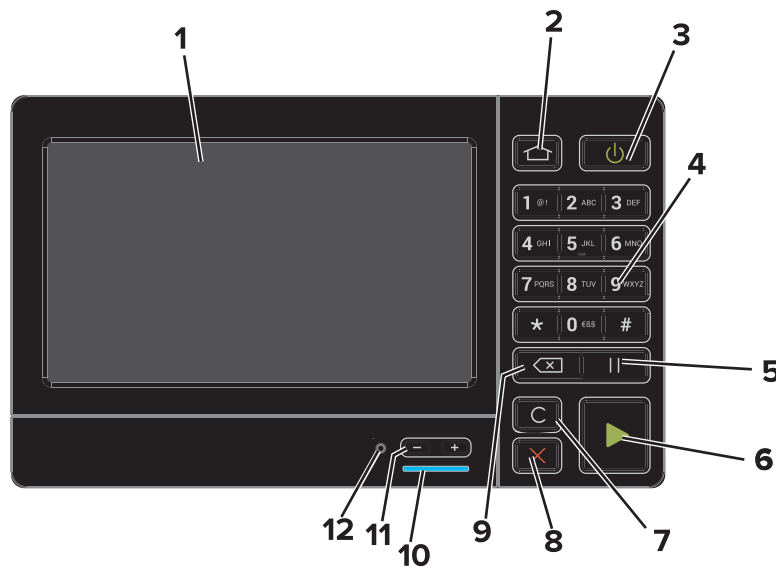

	Use the	To
1	Display	<ul style="list-style-type: none"> <li>• View the printer status and messages.</li> <li>• Set up and operate the printer.</li> </ul>
2	Home button	Go to the home screen.
3	Power button	Turn the printer on or off. <ul style="list-style-type: none"> <li>• Turn the printer on or off.</li> <li>• Wake the printer from Sleep or Hibernate mode.</li> </ul>
4	Keypad	Enter numbers or symbols on the printer.
5	Pause button	Place a two-second dialing pause within a fax number.

	Use the	To
6	Start button	Start a job, depending on which mode is selected.
7	Clear all or Reset button	Reset the default settings of a function, such as copying, faxing, or scanning.
8	Stop or Cancel button	Stop the current job.
9	Back button	Return to the previous screen.
10	Indicator light	Check the status of the printer. For more information, see the “Understanding the colors of the indicator light” topic.
11	Volume buttons	Adjust the volume of the headset or speaker.
12	Headset or speaker port	Attach a headset or speaker.

## Understanding the colors of the indicator light

Indicator light	Printer status
Off	The printer is off or in Hibernate mode.
Blue	The printer is ready or processing data.
Red	The printer requires user intervention.

## Using the home screen

When the printer is turned on, the display shows the home screen. Use the home screen buttons and icons to initiate an action.


**Note:** Your home screen may vary depending on your home screen customization settings, administrative setup, and active embedded solutions.



Touch	To
1	Change Language Change the language on the printer display.
2	Copy Make copies.
3	Document Manager Access held jobs, bookmarks, and applications.

Touch		To
4	Fax	Send fax.
5	USB	View, select, or print photos and documents from a flash drive.
6	E-mail	Send e-mails.
7	Scan Profiles	Scan documents, and then save them directly to the computer.
8	FTP	Scan documents, and then save them directly to an FTP server.
9	App Profiles	Access profiles and applications.
10	Lock Device	Prevent users from accessing any printer functions from the home screen.
11	Job Queue	Show all current print jobs. <b>Note:</b> You can also access this setting by touching the top section of the home screen.
12	Held Faxes	Show all current held fax jobs.
13	Settings	Access the printer menus. <b>Note:</b> Make sure to enable the printer menus. From the Embedded Web Server, click <b>Settings</b> > <b>Device</b> > <b>Maintenance</b> > <b>Configuration Menu</b> > <b>Panel Menus</b> > <b>On</b> .
14	Status Supplies	<ul style="list-style-type: none"> <li>Show a printer warning or error message when the printer requires intervention to continue processing.</li> <li>View more information on the printer warning or message and how to clear it.</li> </ul> <b>Note:</b> You can also access this setting by touching the top section of the home screen.
15	Shortcuts	Organize all shortcuts.

## Features

Feature	Description
Menu path Example: <u>Settings</u> > <u>Copy</u> > <u>Copy Defaults</u> > Number of Copies	A menu path is at the top of each menu screen. This feature shows the path taken to arrive at the current menu. Touch any of the underlined words to return to a previous menu. Make sure to save the changes to a setting before returning to a previous menu. The current screen on a menu path is not underlined. <b>Note:</b> This feature appears only on the Settings menu screen.
Warning 	If an error condition occurs, then this icon appears. Touch the top of the home screen to show the error message.
Notifications bar	Shows the current printer status, messages, and jobs.
Printer IP address Example: 123 . 123 . 123 . 123	The IP address of your printer is at the top of the home screen. Use the IP address to access the Embedded Web Server and remotely configure printer settings.