

XM1135

User's Guide

November 2017 www.lexmark.com

Machine type(s):

7015

Model(s):

Contents

Safety information	6
Conventions	6
Learning about the printer	9
Finding information about the printer	
Selecting a location for the printer	
Printer configurations	
Understanding the basic functions of the scanner	
Using the ADF and scanner glass	
Using the printer control panel	
Understanding the colors of the Sleep button and indicator lights	
Additional printer setup	16
Installing internal options	
Installing hardware options	
Attaching cables	
Setting up the printer software	24
Networking	25
Verifying printer setup	28
Loading paper and specialty media	30
Setting the paper size and type	30
Configuring Universal paper settings	30
Loading trays	30
Loading the multipurpose feeder	35
Linking and unlinking trays	39
Paper and specialty media guide	42
Using specialty media	42
Paper guidelines	44
Supported paper sizes, types, and weights	48
Printing	51
Printing a document	
Printing from a mobile device	

Printing confidential and other held jobs	52
Printing information pages	54
Canceling a print job	54
Copying	56
Making copies	56
Copying photos	57
Copying on specialty media	57
Customizing copy settings	59
Placing information on copies	63
Canceling a copy job	64
Understanding the copy options	64
E-mailing	67
Setting up the printer to e-mail	67
Creating an e-mail shortcut	68
E-mailing a document	68
Canceling an e-mail	68
Faxing	69
Setting up the printer to fax	69
Sending a fax	83
Creating a fax destination shortcut using the Embedded Web Server	85
Customizing fax settings	86
Canceling an outgoing fax	87
Holding and forwarding faxes	87
Understanding the fax options	88
Scanning	91
Scanning to an FTP address	91
Scanning to a computer	92
Understanding the printer menus	94
Menus list	94
Paper menu	95
Reports menu	104
Network/Ports menu	105
Security menu	

4

Settings menu	113
Help menu	146
Saving money and the environment	147
Saving paper and toner	147
Saving energy	147
Recycling	150
Securing the printer	152
Statement of Volatility	152
Erasing volatile memory	152
Erasing non-volatile memory	152
Finding printer security information	153
Maintaining the printer	154
Cleaning printer parts	154
Checking the status of parts and supplies	156
Estimated number of remaining pages	156
Ordering supplies	157
Storing supplies	158
Replacing supplies	159
Moving the printer	163
Managing the printer	164
Finding advanced networking and administrator information	164
Accessing the remote control panel	164
Setting up e-mail alerts	164
Viewing reports	165
Configuring supply notifications from the Embedded Web Server	165
Restoring factory default settings	166
Clearing jams	167
Avoiding jams	167
Identifying jam locations	168
Paper jam in the front door	169
Paper jam in the rear door	171
Paper jam in the standard bin	172
Paper jam in the duplex unit	173

Paper jam in trays	174
Paper jam in the multipurpose feeder	174
Paper jam in the automatic document feeder	176
Troubleshooting	177
Understanding the printer messages	177
Solving printer problems	191
Solving print problems	197
Solving copy problems	221
Solving fax problems	224
Solving scanner problems	231
Embedded Web Server does not open	235
Contacting customer support	236
Notices	237
Product information	237
Edition notice	237
Power consumption	242
Indov	254

Safety information 6

Safety information

Conventions

Note: A note identifies information that could help you.

Warning: A warning identifies something that could damage the product hardware or software.

CAUTION: A *caution* indicates a potentially hazardous situation that could injure you.

Different types of caution statements include:



CAUTION—POTENTIAL INJURY: Indicates a risk of injury.



CAUTION—SHOCK HAZARD: Indicates a risk of electrical shock.



CAUTION—HOT SURFACE: Indicates a risk of burn if touched.



CAUTION—TIPPING HAZARD: Indicates a crush hazard.



CAUTION—PINCH HAZARD: Indicates a risk of being caught between moving parts.



CAUTION—POTENTIAL INJURY: To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.



CAUTION—POTENTIAL INJURY: Do not use this product with extension cords, multioutlet power strips, multioutlet extenders, or UPS devices. The power capacity of these types of accessories can be easily overloaded by a laser printer and may result in a risk of fire, property damage, or poor printer performance.



CAUTION—POTENTIAL INJURY: Only a Lexmark Inline Surge Protector that is properly connected between the printer and the power cord provided with the printer may be used with this product. The use of non-Lexmark surge protection devices may result in a risk of fire, property damage, or poor printer performance.



CAUTION—SHOCK HAZARD: To avoid the risk of electrical shock, do not place or use this product near water or wet locations.



CAUTION—SHOCK HAZARD: Do not use the fax feature during a lightning storm. Do not set up this product or make any electrical or cabling connections, such as the fax feature, power cord, or telephone, during a lightning storm.



CAUTION—POTENTIAL INJURY: To reduce the risk of equipment instability, load each tray separately. Keep all other trays closed until needed.

Refer service or repairs, other than those described in the user documentation, to a service representative.

This product is designed, tested, and approved to meet strict global safety standards with the use of specific manufacturer's components. The safety features of some parts may not always be obvious. The manufacturer is not responsible for the use of other replacement parts.



CAUTION—SHOCK HAZARD: To avoid the risk of electrical shock, make sure that all external connections (such as Ethernet and telephone system connections) are properly installed in their marked plug-in ports.

Safety information 7



CAUTION—POTENTIAL INJURY: This product uses a laser. Use of controls or adjustments or performance of procedures other than those specified in the *User's Guide* may result in hazardous radiation exposure.

This product uses a printing process that heats the print media, and the heat may cause the media to release emissions. You must understand the section in your operating instructions that discusses the guidelines for selecting print media to avoid the possibility of harmful emissions.



CAUTION—HOT SURFACE: The inside of the printer might be hot. To reduce the risk of injury from a hot component, allow the surface to cool before touching it.



CAUTION—POTENTIAL INJURY: The lithium battery in this product is not intended to be replaced. There is a danger of explosion if a lithium battery is incorrectly replaced. Do not recharge, disassemble, or incinerate a lithium battery. Discard used lithium batteries according to the manufacturer's instructions and local regulations.

This equipment is not suitable for use in locations where children are likely to be present.



CAUTION—POTENTIAL INJURY: To reduce the risk of fire, use only a 26 AWG or larger telecommunications (RJ-11) cord when connecting this product to the public switched telephone network. For users in Australia, the cord must be approved by the Australian Communications and Media Authority.



CAUTION—POTENTIAL INJURY: Do not cut, twist, bind, crush, or place heavy objects on the power cord. Do not subject the power cord to abrasion or stress. Do not pinch the power cord between objects such as furniture and walls. If any of these things happen, a risk of fire or electrical shock results. Inspect the power cord regularly for signs of such problems. Remove the power cord from the electrical outlet before inspecting it.



CAUTION—SHOCK HAZARD: To avoid the risk of electrical shock when cleaning the exterior of the printer, unplug the power cord from the electrical outlet and disconnect all cables from the printer before proceeding.



CAUTION—TIPPING HAZARD: Floor-mounted configurations require additional furniture for stability. You must use either a printer stand or printer base if you are using multiple input options. If you purchased a multifunction printer (MFP) that scans, copies, and faxes, then you may need additional furniture. For more information, see www.lexmark.com/multifunctionprinters.



CAUTION—SHOCK HAZARD: If you are accessing the controller board or installing optional hardware or memory devices sometime after setting up the printer, then turn the printer off, and unplug the power cord from the electrical outlet before continuing. If you have any other devices attached to the printer, then turn them off as well, and unplug any cables going into the printer.



CAUTION—POTENTIAL INJURY: The printer weight is greater than 18 kg (40 lb) and requires two or more trained personnel to lift it safely.



CAUTION—POTENTIAL INJURY: Before moving the printer, follow these guidelines to avoid personal injury or printer damage:

- Turn the printer off using the power switch, and then unplug the power cord from the electrical outlet.
- Disconnect all cords and cables from the printer before moving it.
- If an optional tray is installed, then remove it from the printer. To remove the optional tray, slide the latch on the right side of the tray toward the front of the tray until it *clicks* into place.
- Use the handholds located on both sides of the printer to lift it.
- Make sure your fingers are not under the printer when you set it down.
- Before setting up the printer, make sure there is adequate clearance around it.

Safety information 8



CAUTION—POTENTIAL INJURY: To avoid the risk of fire or electrical shock, use only the power cord provided with this product or the manufacturer's authorized replacement.

SAVE THESE INSTRUCTIONS.

Learning about the printer

Finding information about the printer

What are you looking for?	Find it here
Initial setup instructions: Connecting the printer Installing the printer software	Setup documentation—The setup documentation came with the printer and is also available at http://support.lexmark.com .
Additional setup and instructions for using the printer: • Selecting and storing paper and specialty media • Loading paper • Configuring printer settings • Viewing and printing documents and photos • Setting up and using the printer software • Configuring the printer on a network • Caring for and maintaining the printer • Troubleshooting and solving problems	User's Guide and Quick Reference Guide—The guides are available on the Documentation CD. Note: These guides are also available in other languages.
Information on setting up and configuring the accessibility features of your printer.	Lexmark Accessibility Guide—This guide is available at http://support.lexmark.com .
Help using the printer software	Windows or Mac Help—Open a printer software program or application, and then click Help . Click to view context-sensitive information. Notes: Help is automatically installed with the printer software. The printer software is located in the printer program folder or on the desktop, depending on your operating system.

What are you looking for?	Find it here
The latest supplemental information, updates, and customer support:	Lexmark support Web site— http://support.lexmark.com
DocumentationDriver downloads	Note: Select your country or region, and then select your product to view the appropriate support site.
Live chat supportE-mail supportVoice support	Support telephone numbers and hours of operation for your country or region can be found on the support Web site or on the printed warranty that came with your printer.
	Record the following information (located on the store receipt and at the back of the printer), and have it ready when you contact customer support so that they may serve you faster:
	Machine Type number
	Serial number
	Date purchasedStore where purchased
Warranty information	Warranty information varies by country or region:
	 In the U.S.—See the Statement of Limited Warranty included with this printer, or go to http://support.lexmark.com.
	• In other countries and regions—See the printed warranty that came with this printer.

Selecting a location for the printer




CAUTION—POTENTIAL INJURY: The printer weight is greater than 18 kg (40 lb) and requires two or more trained personnel to lift it safely.

When selecting a location for the printer, leave enough room to open trays, covers, and doors. If you plan to install any options, then leave enough room for them also. It is important to:

- Set up the printer near a properly grounded and easily accessible electrical outlet.
- Make sure airflow in the room meets the latest revision of the ASHRAE 62 standard or the CEN Technical Committee 156 standard.
- Provide a flat, sturdy, and stable surface.
- Keep the printer:
 - Clean, dry, and free of dust.
 - Away from stray staples and paper clips.
 - Away from the direct airflow of air conditioners, heaters, or ventilators.
 - Free from direct sunlight and humidity extremes.
- Observe the recommended temperatures and avoid fluctuations:

Ambient temperature	15.6 to 32.2°C (60 to 90°F)
Storage temperature	-40 to 60°C (-40 to 140°F)

• Allow the following recommended amount of space around the printer for proper ventilation:

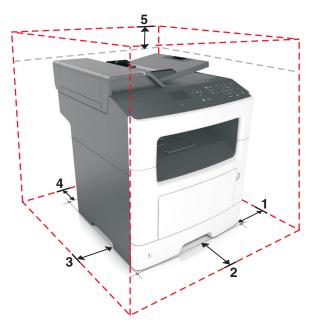

1	Right side	300 mm (12 in.)
2	Front	510 mm (20 in.)
3	Left side	200 mm (8 in.)
4	Rear	200 mm (8 in.)
5	Тор	540 mm (21 in.)

Printer configurations




CAUTION—TIPPING HAZARD: Floor-mounted configurations require additional furniture for stability. You must use either a printer stand or printer base if you are using multiple input options. If you purchased a multifunction printer (MFP) that scans, copies, and faxes, then you may need additional furniture. For more information, see www.lexmark.com/multifunctionprinters.



CAUTION—POTENTIAL INJURY: To reduce the risk of equipment instability, load each tray separately. Keep all other trays closed until needed.

You can configure your printer by adding an optional 250- or 550-sheet tray. For instructions on installing the optional tray, see "Installing optional trays" on page 20.

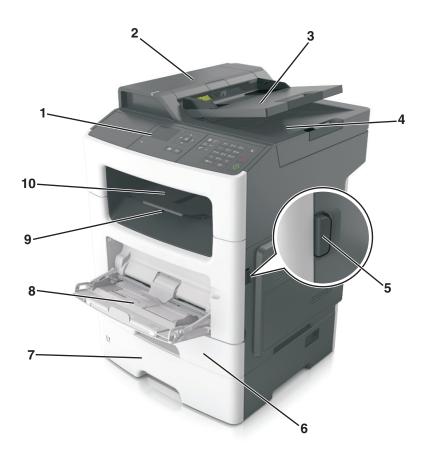


1	Printer control panel	
2	Automatic document feeder (ADF)	
3	ADF tray	
4	ADF bin	
5	Front door release button	
6	Standard 250-sheet tray	
7	Optional 250- or 550-sheet tray	
8	100-sheet multipurpose feeder	
9	Paper stop	
10	Standard bin	

Understanding the basic functions of the scanner

- Make quick copies or set the printer to perform specific copy jobs.
- Send a fax using the printer control panel.
- Send a fax to multiple fax destinations at the same time.
- Scan documents and send them to your computer, an e-mail address, or an FTP destination.
- Scan documents and send them to another printer (PDF through an FTP).

Using the ADF and scanner glass

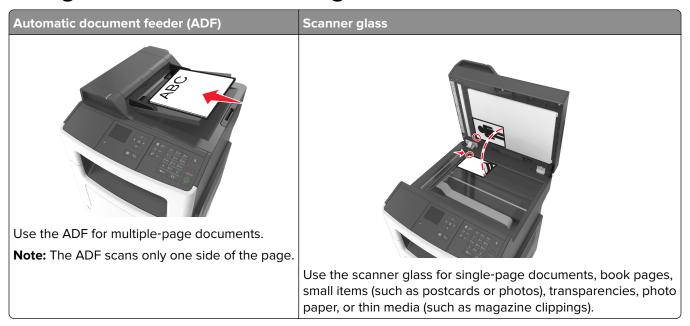

Using the ADF


- Load the document into the ADF tray faceup, short edge first.
- Load up to 50 sheets of plain paper into the ADF tray.
- Scan sizes from 105 x 148 mm (4.1 x 5.8 inches) wide to 216 x 368 mm (8.5 x 14.5 inches) long.
- Scan media weights from 52 to 120 g/m² (14-32 lb).
- Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.

Using the scanner glass

When using the scanner glass:

- Place the document facedown on the scanner glass in the corner with the green arrow.
- Scan or copy documents up to 216 x 296.9 mm (8.5 x 11.69 inches).
- Copy books up to 12.7 mm (0.5 inch) thick.

Using the printer control panel

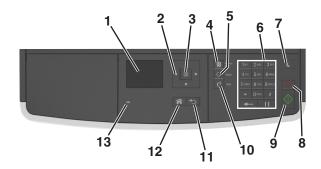

	Use the	То
1	Display	View the printer status and messages.
		Set up and operate the printer.
2	Arrow buttons	Scroll up and down or left and right.
3	Select button	Select menu options.
		Save settings.
4	Address book button	View all the stored addresses.
5	Redial button	View the last number dialed.
6	Keypad	Enter numbers, letters, or symbols.
7	Sleep button	Enable Sleep mode or Hibernate mode.
		Do the following to wake the printer from Sleep mode:
		Press any hard button.
		Open a door or cover.
		 Send a print job from the computer.
		Perform a power-on reset using the main power switch.
8	Cancel button	Cancel all printer activity.
9	Start button	Start a job, depending on which mode is selected.
10	Fax button	Send faxes.
11	Back button	Return to the previous screen.
12	Home button	Go to the home screen.
13	Indicator light	Check the status of the printer.

Understanding the colors of the Sleep button and indicator lights

The colors of the Sleep button and indicator lights on the control panel signify a printer status or condition.

Indicator light	Printer status
Off	The printer is off or in Hibernate mode.
Blinking green	The printer is warming up, processing data, or printing.
Solid green	The printer is on, but idle.
Blinking red	The printer requires user intervention.

Sleep button light	Printer status
Off	The printer is off, idle, or in Ready state.
Solid amber	The printer is in Sleep mode.
Blinking amber	The printer is entering or waking from Hibernate mode.

Sleep button light	Printer status
Blinking amber for 0.1 second, then goes completely off for 1.9 seconds in a slow, pulsing pattern	The printer is in Hibernate mode.

Additional printer setup

Installing internal options



CAUTION—SHOCK HAZARD: If you are accessing the controller board or installing optional hardware or memory devices sometime after setting up the printer, then turn the printer off, and unplug the power cord from the electircal outlet before continuing. If you have any other devices attached to the printer, then turn them off as well, and unplug any cables going into the printer.

Warning—Potential Damage: Controller board electronic components are easily damaged by static electricity. Touch a metal surface on the printer before touching any controller board electronic components or connectors.

Available internal options

Memory cards


- Flash memory
- Fonts

Accessing the controller board




CAUTION—SHOCK HAZARD: If you are accessing the controller board or installing optional hardware or memory devices sometime after setting up the printer, then turn the printer off, and unplug the power cord from the electrical outlet before continuing. If you have any other devices attached to the printer, then turn them off as well, and unplug any cables going into the printer.

1 Open the controller board access door.

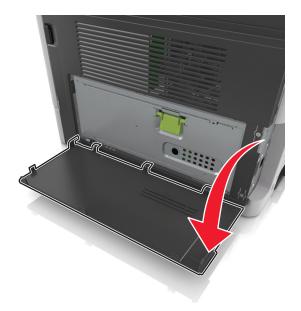


2 Open the controller board shield using the green handle.

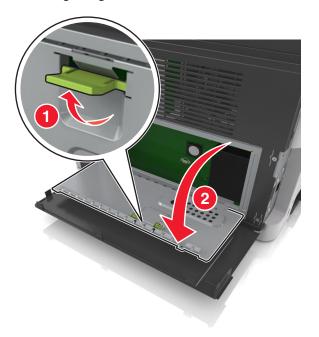

3 Use the following illustration to locate the option card connector.

Warning—Potential Damage: Controller board electronic components are easily damaged by static electricity. Touch something metal on the printer before touching any controller board electronic components or connectors.

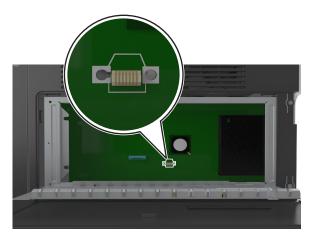

4 Close the shield, and then the access door.



Installing an optional card



CAUTION—SHOCK HAZARD: If you are accessing the controller board or installing optional hardware or memory devices sometime after setting up the printer, then turn the printer off, and unplug the power cord from the electrical outlet before continuing. If you have any other devices attached to the printer, then turn them off as well, and unplug any cables going into the printer.


Warning—Potential Damage: Controller board electronic components are easily damaged by static electricity. Touch a metal surface on the printer before touching any controller board electronic components or connectors.

- **1** Access the controller board.


 For more information, see <u>"Accessing the controller board" on page 16.</u>
- **2** Unpack the optional card.

Warning—Potential Damage: Avoid touching the connection points along the edge of the card. Doing so may cause damage.

3 Holding the card by its sides, align the plastic pins (1) on the card with the holes (2) on the controller board.

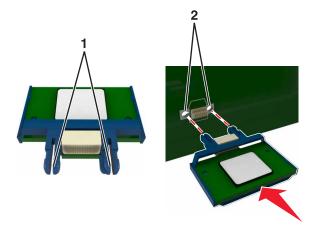

4 Push the card firmly into place.

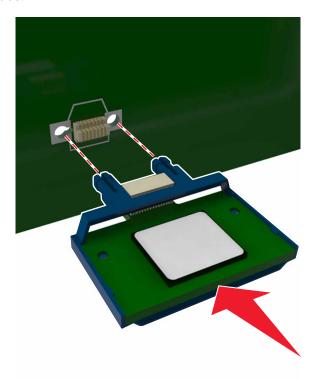

Warning—Potential Damage: Improper installation of the card may cause damage to the card and the controller board.

Note: The entire length of the connector on the card must touch and be flush with the controller board.

Installing hardware options

Order of installation



CAUTION—POTENTIAL INJURY: The printer weight is greater than 18 kg (40 lb) and requires two or more trained personnel to lift it safely.



CAUTION—SHOCK HAZARD: If you are accessing the controller board or installing optional hardware or memory devices sometime after setting up the printer, then turn the printer off, and unplug the power cord from the electrical outlet before continuing. If you have any other devices attached to the printer, then turn them off as well, and unplug any cables going into the printer.



CAUTION—TIPPING HAZARD: Floor-mounted configurations require additional furniture for stability. You must use either a printer stand or printer base if you are using multiple input options. If you purchased a multifunction printer (MFP) that scans, copies, and faxes, then you may need additional furniture. For more information, see www.lexmark.com/multifunctionprinters.

Install the printer and any hardware options you have purchased in the following order:

- Printer stand
- Optional 250- or 550-sheet tray
- Printer

For more information on installing a printer stand, optional 250- or 550-sheet tray, or spacer, see the setup sheet that came with the option.

Installing optional trays



CAUTION—POTENTIAL INJURY: The printer weight is greater than 18 kg (40 lb) and requires two or more trained personnel to lift it safely.




CAUTION—SHOCK HAZARD: If you are accessing the controller board or installing optional hardware or memory devices sometime after setting up the printer, then turn the printer off, and unplug the power cord from the electrical outlet before continuing. If you have any other devices attached to the printer, then turn them off as well, and unplug any cables going into the printer.



CAUTION—TIPPING HAZARD: Floor-mounted configurations require additional furniture for stability. You must use either a printer stand or printer base if you are using multiple input options. If you purchased a multifunction printer (MFP) that scans, copies, and faxes, then you may need additional furniture. For more information, see www.lexmark.com/multifunctionprinters.


1 Turn off the printer using the power switch, and then unplug the power cord from the electrical outlet.



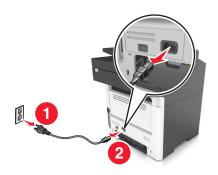


2 Unpack the tray, and then remove all packing material.

3 Pull out the tray from the base.

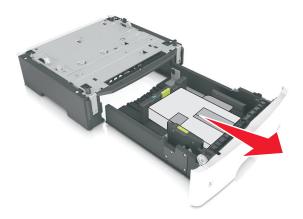

- **4** Remove any packing material from inside the tray.
- **5** Insert the tray into the base.
- **6** Place the tray near the printer.
- **7** Align the printer with the tray, and then slowly lower the printer into place.

Note: Optional trays lock together when stacked.

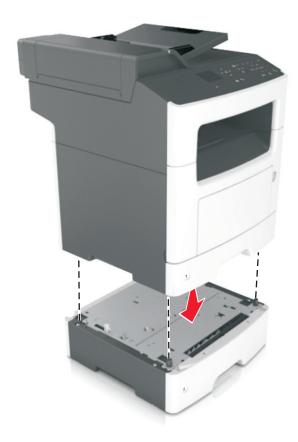

8 Connect the power cord to the printer, then to a properly grounded electrical outlet, and then turn on the printer.





Notes:

- When the printer software and any hardware options are installed, you may need to manually add the options in the printer driver to make them available for print jobs. For more information, see <u>"Adding available options in the print driver" on page 24</u>.
- To uninstall the optional trays, slide the latch on the right side of the printer toward the front of the printer until it *clicks* into place, and then remove stacked trays one at a time from the top to the bottom.

Attaching cables



CAUTION—SHOCK HAZARD: To avoid the risk of electrical shock, do not set up this product or make any electrical or cabling connections, such as the power cord, fax feature, or telephone, during a lightning storm.



CAUTION—POTENTIAL INJURY: To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.




CAUTION—POTENTIAL INJURY: To avoid the risk of fire or electrical shock, use only the power cord provided with this product or the manufacturer's authorized replacement.



CAUTION—POTENTIAL INJURY: To reduce the risk of fire, use only a 26 AWG or larger telecommunications (RJ-11) cord when connecting this product to the public switched telephone network. For users in Australia, the cord must be approved by the Australian Communications and Media Authority.

Warning—Potential Damage: To avoid loss of data or printer malfunction, do not touch the USB cable, any wireless network adapter, or the printer in the areas shown while actively printing.

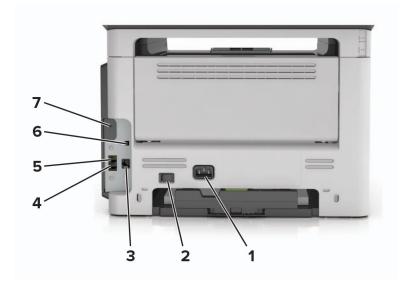

	Use the	То
1	Power cord socket	Connect the printer to a properly grounded electrical outlet.
2	Power switch	Turn on or turn off the printer.
3	Ethernet port	Connect the printer to an Ethernet network.
4	EXT port	Connect additional devices (telephone or answering machine) to the printer and the telephone line. Use this port if you do not have a dedicated fax line for the printer and if this connection method is supported in your country or region.
		Note: Remove the adapter plug to access the port.
5	LINE port	Connect the printer to an active telephone line through a standard wall jack (RJ-11), DSL filter, or VoIP adapter, or any other adapter that allows you to access the telephone line to send and receive faxes.
6	USB printer port	Connect the printer to a computer.

	Use the	То
7	Security slot	Attach a lock to secure the printer in place.

Setting up the printer software

Installing the printer software

- **1** Obtain a copy of the software installer package.
 - From the software CD that came with your printer.
 - Go to http://support.lexmark.com, and then select your printer and operating system.
- **2** Run the installer, and then follow the instructions on the computer screen.
- 3 For Macintosh users, add the printer.

Note: Obtain the printer IP address from the TCP/IP section in the Network/Ports menu.

Adding available options in the print driver

For Windows users

- 1 Open the printers folder.
- **2** Select the printer you want to update, and then do the following:
 - For Windows 7 or later, select **Printer properties**.
 - For earlier versions, select **Properties**.
- 3 Navigate to the Configuration tab, and then select **Update Now Ask Printer**.
- **4** Apply the changes.

For Macintosh users

- 1 From System Preferences in the Apple menu, navigate to your printer, and then select **Options & Supplies**.
- **2** Navigate to the list of hardware options, and then add any installed options.
- **3** Apply the changes.

Networking

Notes:

 Purchase a MarkNetTM N8352 wireless network adapter first before setting up the printer on a wireless network. For information on installing the wireless network adapter, see the setup sheet that came with the adapter.

• A Service Set Identifier (SSID) is a name assigned to a wireless network. Wired Equivalent Privacy (WEP), Wi-Fi Protected Access (WPA), and WPA2 are types of security used on a network.

Preparing to set up the printer on an Ethernet network

To configure your printer to connect to an Ethernet network, organize the following information before you begin:

Note: If your network automatically assigns IP addresses to computers and printers, continue on to installing the printer.

- A valid, unique IP address for the printer to use on the network
- The network gateway
- The network mask
- A nickname for the printer (optional)

Note: A printer nickname can make it easier for you to identify your printer on the network. You can choose to use the default printer nickname, or assign a name that is easier for you to remember.

You will need an Ethernet cable to connect the printer to the network and an available port where the printer can physically connect to the network. Use a new network cable when possible to avoid potential problems caused by a damaged cable.

Preparing to set up the printer on a wireless network

Notes:

- Make sure your wireless network adapter is installed in your printer and working properly. For more
 information, see the instruction sheet that came with the wireless network adapter.
- Make sure your access point (wireless router) is turned on and is working properly.

Make sure you have the following information before setting up the printer on a wireless network:

- **SSID**—The SSID is also referred to as the network name.
- Wireless Mode (or Network Mode)—The mode is either infrastructure or ad hoc.
- Channel (for ad hoc networks)—The channel defaults to automatic for infrastructure networks.

Some ad hoc networks will also require the automatic setting. Check with your system support person if you are not sure which channel to select.

- Security Method—There are four basic options for Security Method:
 - WEP key

If your network uses more than one WEP key, then enter up to four in the provided spaces. Select the key currently in use on the network by selecting the default WEP transmit key.

- WPA or WPA2 preshared key or passphrase

WPA includes encryption as an additional layer of security. The choices are AES or TKIP. Encryption must be set for the same type on the router and on the printer, or the printer will not be able to communicate on the network.

- 802.1X-RADIUS

If you are installing the printer on an 802.1X network, then you may need the following:

- Authentication type
- Inner authentication type
- 802.1X user name and password
- Certificates
- No security

If your wireless network does not use any type of security, then you will not have any security information.

Note: We do not recommend using an unsecured wireless network.

Notes:

- If you do not know the SSID of the network that your computer is connected to, then launch the wireless
 utility of the computer network adapter, and then look for the network name. If you cannot find the SSID
 or the security information for your network, then see the documentation that came with the access
 point, or contact your system support person.
- To find the WPA/WPA2 preshared key or passphrase for the wireless network, see the documentation
 that came with the access point, see the Embedded Web Server associated with the access point, or
 consult your system support person.

Connecting the printer using the Wireless Setup Wizard

Before you begin, make sure that:

- A wireless network adapter is installed in the printer and is working properly. For more information, see the instruction sheet that came with the wireless network adapter.
- An Ethernet cable is disconnected from the printer.
- Active NIC is set to Auto. To set this to Auto, navigate to:



Note: Make sure to turn off the printer, then wait for at least five seconds, and then turn the printer back on.

1 From the printer control panel, navigate to:



2 Select a wireless connection setup.

Use	То	
Search for networks	Show available wireless connections.	
	Note: This menu item shows all broadcast secured or unsecured SSIDs.	
Enter a network name	Manually type the SSID.	
	Note: Make sure to type the correct SSID.	
Wi-Fi Protected Setup	Connect the printer to a wireless network using Wi-Fi Protected Setup.	

3 Press OK, and then follow the instructions on the printer display.

Connecting the printer to a wireless network using Wi-Fi Protected Setup

Before you begin, make sure that:

- The access point (wireless router) is Wi-Fi Protected Setup (WPS) certified or WPS-compatible. For more information, see the documentation that came with your access point.
- A wireless network adapter is installed in the printer and is working properly. For more information, see the instruction sheet that came with the wireless network adapter.

Using the Push Button Configuration (PBC) method

1 From the printer control panel, navigate to:

2 Follow the instructions on the printer display.

Using the Personal Identification Number (PIN) method

1 From the printer control panel, navigate to:

- 2 Copy the eight-digit WPS PIN.
- 3 Open a Web browser, and then type the IP address of your access point in the address bar.

Notes:

- The IP address appears as four sets of numbers separated by periods, such as 123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- **4** Access the WPS settings. For more information, see the documentation that came with your access point.
- **5** Enter the eight-digit PIN, and then save the setting.

Connecting the printer to a wireless network using the Embedded Web Server

Before you begin, make sure that:

- Your printer is connected temporarily to an Ethernet network.
- A wireless network adapter is installed in your printer and working properly. For more information, see the instruction sheet that came with the wireless network adapter.
- 1 Open a Web browser, and then type the printer IP address in the address field.

Notes:

- View the printer IP address on the printer control panel. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings > Network/Ports > Wireless.
- 3 Modify the settings to match the settings of your access point (wireless router).

Note: Make sure to enter the correct SSID, security method, preshared key or passphrase, network mode, and channel.

- 4 Click Submit.
- **5** Turn off the printer, and then disconnect the Ethernet cable. Then wait for at least five seconds, and then turn the printer back on.
- **6** To verify if your printer is connected to the network, print a network setup page. Then in the Network Card [x] section, see if the status is Connected.

Verifying printer setup

Printing a menu settings page

Print a menu settings page to review the current menu settings and to verify if the printer options are installed correctly.

Note: If you have not changed any menu settings, then the menu settings page lists all the factory default settings. When you select and save other settings from the menus, they replace the factory default settings as *user default settings*. A user default setting remains in effect until you access the menu again, choose another value, and save it.

From the printer control panel, navigate to:



Printing a network setup page

If the printer is attached to a network, then print a network setup page to verify the network connection. This page also provides important information that aids network printing configuration.

1 From the printer control panel, navigate to:



2 Check the first section of the network setup page, and then confirm that the status is Connected. If the status is Not Connected, then the LAN drop may not be active, or the network cable may be malfunctioning. Consult your system support person for a solution, and then print another network setup page.

Loading paper and specialty media

The selection and handling of paper and specialty media can affect how reliably documents print. For more information, see <u>"Avoiding jams" on page 167</u> and <u>"Storing paper" on page 47</u>.

Setting the paper size and type

- **1** From the printer control panel, navigate to:
 - > Settings > OK > Paper Menu > OK > Paper Size/Type > OK
- 2 Press the up or down arrow button to select the tray or feeder size, and then press
- **3** Press the up or down arrow button to select the paper size, and then press OK.
- 4 Press the up or down arrow button to select the tray or feeder type, and then press
- **5** Press the up or down arrow button to select the paper type, and then press OK

Configuring Universal paper settings

The Universal paper size is a user-defined setting that lets you print on paper sizes that are not preset in the printer menus.

Notes:

- The smallest supported Universal paper size is 76.2 x 76.2 mm (3 x 3 inches), and is supported only from the multipurpose feeder.
- The largest supported Universal paper size is 215.9 x 359.92 mm (8.5 x 14.17 inches), and is supported from all paper sources.
- **1** From the printer control panel, navigate to:
 - > Settings > OK > Paper Menu > OK > Universal Setup > OK > Units of Measure > OK > select a unit of measure > OK
- 2 Select Portrait Width or Portrait Height, and then press OK
- **3** Press the left or right arrow button to change the setting, and then press

Loading trays


CAUTION—POTENTIAL INJURY: To reduce the risk of equipment instability, load each tray separately. Keep all other trays closed until needed.

1 Pull out the tray completely.


Note: Do not remove trays while a job prints or while **Busy** appears on the printer display. Doing so may cause a jam.



2 Squeeze and then slide the width guide tab to the correct position for the size of the paper you are loading.

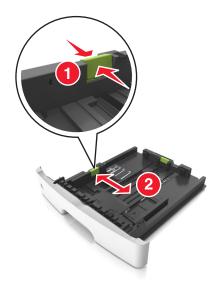


3 Squeeze and then slide the length guide tab to the correct position for the size of the paper you are loading.

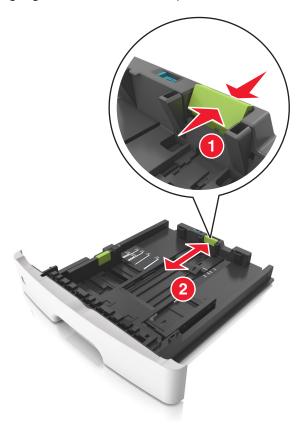


Notes:

- For some paper sizes like letter, legal, and A4, squeeze and slide the length guide tab backward to accommodate their length.
- When loading legal-size paper, the length guide extends beyond the base leaving the paper exposed to dust. To protect the paper from dust, you can purchase a dust cover separately. For more information, contact customer support.
- If you are loading A6-size paper in the standard tray, then squeeze and then slide the length guide tab toward the center of the tray to the A6-size position.
- Make sure the width and length guides are aligned with the paper size indicators on the bottom of the tray.

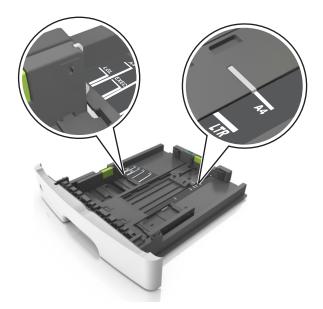

 4 Flex the sheets back and forth to loosen them, and then fan them. Do not fold or crease the paper. Straighten the edges on a level surface.




5 Load the paper stack.



Notes:

- Load with the printable side facedown when using recycled or preprinted paper.
- Load prepunched paper with the holes on the top edge toward the front of the tray.

- Load letterhead facedown, with the top edge of the sheet toward the front of the tray. For two-sided printing, load letterhead faceup with the bottom edge of the sheet toward the front of the tray.
- Make sure the paper is below the maximum paper fill indicator located on the side of the width guide.

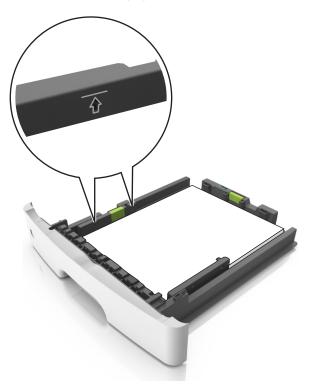

6 Insert the tray.



7 From the printer control panel, set the paper size and paper type in the Paper menu to match the paper loaded in the tray.

Note: Set the correct paper size and type to avoid paper jams and print quality problems.

Loading the multipurpose feeder

Use the multipurpose feeder when printing on different paper sizes and types or specialty media, such as card stock, transparencies, paper labels, and envelopes. You can also use it for single-page print jobs on letterhead.

1 Open the multipurpose feeder.




a Pull the multipurpose feeder extender.



b Pull the extender gently so that the multipurpose feeder is fully extended and open.



2 Squeeze the tab on the left width guide, and then move the guides for the paper you are loading.

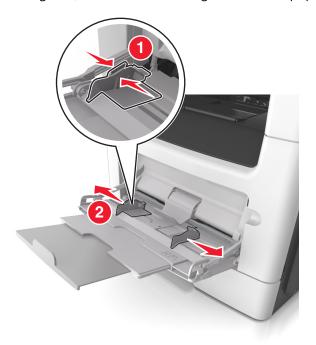

- **3** Prepare the paper or specialty media for loading.
 - Flex sheets of paper back and forth to loosen them, and then fan them. Do not fold or crease the paper. Straighten the edges on a level surface.



• Hold transparencies by the edges. Flex the stack of transparencies back and forth to loosen them, and then fan them. Straighten the edges on a level surface.

Note: Avoid touching the printable side of the transparencies. Be careful not to scratch them.



• Flex the stack of envelopes back and forth to loosen them, and then fan them. Straighten the edges on a level surface.



4 Load the paper or specialty media.

Notes:

- Do not force paper or specialty media into the multipurpose feeder.
- Make sure the paper or specialty media is below the maximum paper fill indicator located on the paper guides. Overfilling may cause paper jams.



• Load paper, transparencies, and card stock with the recommended printable side faceup and the top edge entering the printer first. For more information on loading transparencies, see the packaging that the transparencies came in.





Note: When loading A6-size paper, make sure the multipurpose feeder extender rests lightly against the edge of the paper so that the last few sheets of paper remain in place.



• Load letterhead faceup with the top edge entering the printer first. For two-sided (duplex) printing, load letterhead facedown with the bottom edge entering the printer first.



• Load envelopes with the flap on the left side facedown.



Warning—Potential Damage: Never use envelopes with stamps, clasps, snaps, windows, coated linings, or self-stick adhesives. These envelopes may severely damage the printer.

5 From the printer control panel, set the paper size and paper type in the Paper menu to match the paper or specialty media loaded in the multipurpose feeder.

Linking and unlinking trays

The printer links trays when the specified paper size and type are the same. When a linked tray becomes empty, paper feeds from the next linked tray. To prevent trays from linking, assign a unique custom paper type name.

Linking and unlinking trays

Note: This feature applies only in network printers.

1 Open a Web browser, and then type the printer IP address in the address field.

Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings > Paper Menu.
- **3** Change the tray settings to specify the paper size and type for the tray.
 - To link trays, make sure the paper size and type for the tray match with that of the other tray.
 - To unlink trays, make sure the paper size or type for the tray does not match with that of the other tray.

4 Click Submit.

Warning—Potential Damage: Paper loaded in the tray should match the paper type name assigned in the printer. The temperature of the fuser varies according to the specified paper type. Printing issues may occur if settings are not properly configured.

Creating a custom name for a paper type

Using the Embedded Web Server

1 Open a Web browser, and then type the printer IP address in the address field.

Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings > Paper Menu > Custom Names.
- **3** Select a custom name, and then type a new custom paper type name.
- 4 Click Submit.
- 5 Click Custom Types, and then verify if the new custom paper type name has replaced the custom name.

Using the printer control panel

1 From the printer control panel, navigate to:



- 2 Select a custom name, and then type a new custom paper type name.
- 3 Press OK
- 4 Press Custom Types, and then verify if the new custom paper type name has replaced the custom name.

Assigning a custom paper type

Using the Embedded Web Server

1 Open a Web browser, and then type the printer IP address in the address field.

Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings > Paper Menu > Custom Types.
- **3** Select a custom paper type name, and then select a paper type.

Note: Paper is the factory default paper type for all user-defined custom names.

4 Click Submit.

Using the printer control panel

1 From the printer control panel, navigate to:



2 Select a custom paper type name, and then select a paper type.

Note: Paper is the factory default paper type for all user-defined custom names.

3 Press OK

Paper and specialty media guide

Notes:

- Make sure that the paper size, type, and weight are set correctly on the computer or control panel.
- Flex, fan, and straighten specialty media before loading them.
- The printer may print at a reduced speed to prevent damage to the fuser.
- For more information on card stock and labels, see the *Card Stock & Label Guide* on the Lexmark support Web site at http://support.lexmark.com.

Using specialty media

Tips on using letterhead

- Use letterhead designed specifically for laser printers.
- Print samples on the letterhead being considered for use before buying large quantities.
- Before loading letterhead, flex, fan, and straighten the stack to prevent sheets from sticking together.
- Page orientation is important when printing on letterhead. For information on how to load letterhead, see:
 - "Loading trays" on page 30
 - "Loading the multipurpose feeder" on page 35

Tips on using transparencies

- Print a test page on the transparencies being considered for use before buying large quantities.
- Feed transparencies from the standard tray, or the multipurpose feeder.
- Use transparencies designed specifically for laser printers. Transparencies must be able to withstand temperatures up to 185°C (365°F) without melting, discoloring, offsetting, or releasing hazardous emissions.

Note: If the transparency weight is set to Heavy and the transparency texture is set to Rough in the Paper menu, then transparencies can be printed at a temperature up to 195°C (383°F).

- Avoid getting fingerprints on the transparencies to prevent print quality problems.
- Before loading transparencies, flex, fan, and straighten the stack to prevent sheets from sticking together.

Tips on using envelopes

Print samples on the envelopes being considered for use before buying large quantities.

- Use envelopes designed specifically for laser printers. Check with the manufacturer or vendor to ensure that the envelopes can withstand temperatures up to 230°C (446°F) without sealing, wrinkling, curling excessively, or releasing hazardous emissions.
- For best performance, use envelopes made from 90-g/m² (24-lb bond) paper or 25% cotton. All-cotton envelopes must not exceed 75-g/m² (20-lb bond) weight.
- Use only new envelopes from undamaged packages.

- To optimize performance and minimize jams, do not use envelopes that:
 - Have excessive curl or twist
 - Are stuck together or damaged in any way
 - Have windows, holes, perforations, cutouts, or embossing
 - Have metal clasps, string ties, or folding bars
 - Have an interlocking design
 - Have postage stamps attached
 - Have any exposed adhesive when the flap is in the sealed or closed position
 - Have bent corners
 - Have rough, cockle, or laid finishes
- Adjust the width guides to fit the width of the envelopes.

Note: A combination of high humidity (over 60%) and high printing temperature may wrinkle or seal envelopes.

Tips on using labels

Print samples on the labels being considered for use before buying large quantities.

Note: Use only paper label sheets. Vinyl, pharmacy, and two-sided labels are not supported.

For more information on label printing, characteristics, and design, see the *Card Stock & Label Guide* available at http://support.lexmark.com.

When printing on labels:

- Use labels designed specifically for laser printers. Check with the manufacturer or vendor to verify that:
 - The labels can withstand temperatures up to 240°C (464°F) without sealing, excessive curling, wrinkling, or releasing hazardous emissions.
 - Label adhesives, face sheet (printable stock), and topcoats can withstand up to 172-kPa (25-psi) pressure
 without delaminating, oozing around the edges, or releasing hazardous fumes.
- Do not use labels with slick backing material.
- Use full label sheets. Partial sheets may cause labels to peel off during printing, resulting in a jam. Partial sheets also contaminate the printer and the cartridge with adhesive, and could void the printer and toner cartridge warranties.
- Do not use labels with exposed adhesive.
- Do not print within 1 mm (0.04 inch) of the edge of the label, of the perforations, or between die-cuts of the label.
- Make sure the adhesive backing does not reach to the edge of the sheet. Zone coating of the adhesive should be at least 1 mm (0.04 inch) away from edges. Adhesive material contaminates the printer and could void the warranty.
- If zone coating of the adhesive is not possible, then remove a 2-mm (0.08-inch) strip on the leading and driver edge, and then use a non-oozing adhesive.
- Portrait orientation is recommended, especially when printing bar codes.

Tips on using card stock

Card stock is heavy, single-ply specialty media. Many of its variable characteristics, such as moisture content, thickness, and texture, can significantly affect print quality.

- From the printer control panel, set the paper size, type, texture, and weight in the Paper menu to match the card stock loaded in the tray.
- Print samples on the card stock being considered for use before buying large quantities.
- Specify the paper texture and weight from the tray settings to match the paper loaded in the tray.
- Preprinting, perforation, and creasing may significantly affect the print quality and cause jams or other paper feed problems.
- Before loading the card stock on the tray, flex and fan the card stock to loosen them. Straighten the edges on a level surface.

Paper guidelines

Selecting the correct paper or specialty media reduces printing problems. For the best print quality, try a sample of the paper or specialty media before buying large quantities.

Paper characteristics

The following paper characteristics affect print quality and reliability. Consider these characteristics when evaluating new paper stock.

Weight

The printer trays can automatically feed paper weights up to 120-g/m^2 (32-lb) bond grain long paper. The multipurpose feeder can automatically feed paper weights up to 163-g/m^2 (43-lb) bond grain long paper. Paper lighter than 60 g/m^2 (16 lb) might not be stiff enough to feed properly, causing jams. For best performance, use 75-g/m^2 (20-lb) bond grain long paper. For paper smaller than $182 \times 257\text{ mm}$ (7.2 x 10.1 inches), we recommended to use 90 g/m^2 (24 lb) or heavier paper.

Note: Two-sided printing is supported only for 60–90-g/m² (16–24-lb) bond paper.

Curl

Curl is the tendency for paper to curl at its edges. Excessive curl can cause paper feeding problems. Curl can occur after the paper passes through the printer, where it is exposed to high temperatures. Storing paper unwrapped in hot, humid, cold, or dry conditions, even in the trays, can contribute to paper curling prior to printing and can cause feeding problems.

Smoothness

Paper smoothness directly affects print quality. If paper is too rough, then toner cannot fuse to it properly. If paper is too smooth, then it can cause paper feeding or print quality issues. Always use paper between 100 and 300 Sheffield points; however, smoothness between 150 and 250 Sheffield points produces the best print quality.

Moisture content

The amount of moisture in paper affects both print quality and the ability of the printer to feed the paper correctly. Leave paper in its original wrapper until it is time to use it. This limits the exposure of paper to moisture changes that can degrade its performance.

Store paper in its original wrapper in the same environment as the printer for 24 to 48 hours before printing. Extend the time to several days if the storage or transportation environment is very different from the printer environment. Thick paper may also require a longer conditioning period.

Grain direction

Grain refers to the alignment of the paper fibers in a sheet of paper. Grain is either *grain long*, running the length of the paper, or *grain short*, running the width of the paper.

For 60–90-g/m² (16–24-lb) bond paper, grain long paper is recommended.

Fiber content

Most high-quality xerographic paper is made from 100% chemically treated pulped wood. This content provides the paper with a high degree of stability resulting in fewer paper feeding problems and better print quality. Paper containing fibers such as cotton can negatively affect paper handling.

Selecting paper

Using the appropriate paper prevents jams and helps ensure trouble-free printing.

To help avoid paper jams and poor print quality:

- Always use new, undamaged paper.
- Before loading paper, know the recommended printable side of the paper. This information is usually indicated on the paper package.
- Do not use paper that has been cut or trimmed by hand.
- Do not mix paper sizes, types, or weights in the same tray; mixing results in jams.
- Do not use coated papers unless they are specifically designed for electrophotographic printing.

Selecting preprinted forms and letterhead

Use these guidelines when selecting preprinted forms and letterhead:

- Use grain long for 60 to 90 g/m² (16 to 24 lb) weight paper.
- Use only forms and letterhead printed using an offset lithographic or engraved printing process.
- Avoid papers with rough or heavily textured surfaces.

Use papers printed with heat-resistant inks designed for use in xerographic copiers. The ink must be able to withstand temperatures up to 230°C (446°F) without melting or releasing hazardous emissions. Use inks that are not affected by the resin in toner. Inks that are oxidation-set or oil-based generally meet these requirements; latex inks might not. When in doubt, contact the paper supplier.

Preprinted papers such as letterhead must be able to withstand temperatures up to 230°C (446°F) without melting or releasing hazardous emissions.

Using recycled paper and other office papers

As an environmentally conscientious company, Lexmark supports the use of recycled paper produced specifically for use in laser (electrophotographic) printers.

While no blanket statement can be made that all recycled paper will feed well, Lexmark consistently tests papers that represent recycled cut size copier papers available on the global market. This scientific testing is conducted with rigor and discipline. Many factors are taken into consideration both separately and as a whole, including the following:

- Amount of post-consumer waste (Lexmark tests up to 100% post-consumer waste content.)
- Temperature and humidity conditions (Testing chambers simulate climates from all over the world.)
- Moisture content (Business papers should have low moisture: 4–5%.)
- Bending resistance and proper stiffness means optimum feeding through the printer.
- Thickness (impacts how much can be loaded into a tray)
- Surface roughness (measured in Sheffield units, impacts print clarity and how well toner fuses to the paper)
- Surface friction (determines how easily sheets can be separated)
- Grain and formation (impacts curling, which also influences the mechanics of how the paper behaves as it moves through the printer)
- Brightness and texture (look and feel)

Recycled papers are better than ever; however, the amount of recycled content in a paper affects the degree of control over foreign matter. And while recycled papers are one good path to printing in an environmentally responsible manner, they are not perfect. The energy required to de-ink and deal with additives such as colorants and "glue" often generates more carbon emissions than does normal paper production. However, using recycled papers enables better resource management overall.

Lexmark concerns itself with the responsible use of paper in general based on life cycle assessments of its products. To gain a better understanding of the impact of printers on the environment, the company commissioned a number of life cycle assessments and found that paper was identified as the primary contributor (up to 80%) of carbon emissions caused throughout the entire life of a device (from design to end-of-life). This is due to the energy-intensive manufacturing processes required to make paper.

Thus, Lexmark seeks to educate customers and partners on minimizing the impact of paper. Using recycled paper is one way. Eliminating excessive and unnecessary paper consumption is another. Lexmark is well-equipped to help customers minimize printing and copying waste. In addition, the company encourages purchasing paper from suppliers who demonstrate their commitment to sustainable forestry practices.

Lexmark does not endorse specific suppliers, although a converter's product list for special applications is maintained. However, the following paper choice guidelines will help alleviate the environmental impact of printing:

- 1 Minimize paper consumption.
- **2** Be selective about the origin of wood fiber. Buy from suppliers who carry certifications such as the Forestry Stewardship Council (FSC) or the Program for the Endorsement of Forest Certification (PEFC). These certifications guarantee that the paper manufacturer uses wood pulp from forestry operators that employ environmentally and socially responsible forest management and restoration practices.
- **3** Choose the most appropriate paper for printing needs: normal 75 or 80 g/m² certified paper, lower weight paper, or recycled paper.

Unacceptable paper examples

Test results indicate that the following paper types are at risk for use with laser printers:

- Chemically treated papers used to make copies without carbon paper, also known as carbonless papers
- Preprinted papers with chemicals that may contaminate the printer
- Preprinted papers that can be affected by the temperature in the printer fuser
- Preprinted papers that require a registration (the precise location on the page) greater than ± 2.3 mm (± 0.9 in.), such as optical character recognition (OCR) forms. In some cases, registration can be adjusted with a software application to successfully print on these forms.)
- Coated papers (erasable bond), synthetic papers, thermal papers
- Rough-edged, rough or heavily textured surface papers or curled papers
- Recycled papers that fail EN12281:2002 (European testing)
- Paper weighing less than 60 g/m² (16 lb)
- Multiple part forms or documents

For more information about Lexmark, visit <u>www.lexmark.com</u>. General sustainability-related information can be found at the **Environmental Sustainability** link.

Storing paper

Use these paper storage guidelines to help avoid jams and uneven print quality:

- For best results, store paper where the temperature is 21°C (70°F) and the relative humidity is 40 percent. Most label manufacturers recommend printing in a temperature range of 18–24°C (65–75°F) with relative humidity between 40 and 60 percent.
- Store paper in cartons, on a pallet or shelf, rather than on the floor.
- Store individual packages on a flat surface.
- Do not store anything on top of individual paper packages.
- Take paper out of the carton or wrapper only when you are ready to load it in the printer. The carton and wrapper help keep the paper clean, dry, and flat.

Supported paper sizes, types, and weights

Supported paper sizes

Paper size and dimension	Standard 250-sheet tray	Optional 250- or 550-sheet tray	Multipurpose feeder	ADF	Scanner glass	Duplex printing
Business card	х	х	х	Х	✓	х
3 x 5 in.	Х	х	√ 1	Х	✓	х
4 x 6 in.	х	х	√ 1	Х	/	х
A4 210 x 297 mm (8.27 x 11.7 in.)	√	✓	√	✓	✓	✓
A5 148 x 210 mm (5.83 x 8.27 in.)	√	✓	✓	✓	✓	x
A6 105 x 148 mm (4.13 x 5.83 in.)	✓	x	✓	✓	✓	X
JIS B5 182 x 257 mm (7.17 x 10.1 in.)	√	✓	✓	✓	✓	х
Letter 215.9 x 279.4 mm (8.5 x 11 in.)	✓	✓	✓	✓	✓	✓
Legal 215.9 x 355.6 mm (8.5 x 14 in.)	√	✓	✓	/	х	✓
Executive 184.2 x 266.7 mm (7.25 x 10.5 in.)	√	✓	✓	✓	✓	х
Oficio (México) 215.9 x 340.4 mm (8.5 x 13.4 in.)	√	✓	✓	✓	х	✓

¹ Paper is supported only if the paper size setting is set to Universal.

² Paper is supported in two-sided (duplex) printing only if the width is at least 210 mm (8.27 in.) and the length is at least 279.4 mm (11 in.). The smallest supported Universal paper size is supported only in the multipurpose feeder.

³ Paper is supported only if the width is at least 215.9 mm (8.5 in.) and the length is at least 296.9 mm (11.7 in.).

⁴ Paper is supported only if the length is at least 296.9 mm (11.7 in.).

Paper size and dimension	Standard 250-sheet tray	Optional 250- or 550-sheet tray	Multipurpose feeder	ADF	Scanner glass	Duplex printing
Folio 215.9 x 330.2 mm (8.5 x 13 in.)	√	✓	√	✓	х	✓
Statement 139.7 x 215.9 mm (5.5 x 8.5 in.)	√	✓	✓	✓	√	х
Universal ² 76.2 x 127 mm (3 x 5 in.) to 215.9 x 359.92 mm (8.5 x 14.17 in.)	√	✓	✓	1	√ 3	✓
7 3/4 Envelope (Monarch) 98.4 x 190.5 mm (3.875 x 7.5 in.)	х	x	√	х	√	х
9 Envelope 98.4 x 226.1 mm (3.875 x 8.9 in.)	х	х	✓	х	✓	х
10 Envelope 104.8 x 241.3 mm (4.12 x 9.5 in.)	х	х	✓	х	✓	х
DL Envelope 110 x 220 mm (4.33 x 8.66 in.)	х	х	√	х	✓	х
C5 Envelope 162 x 229 mm (6.38 x 9.01 in.)	х	х	✓	х	✓	х
B5 Envelope 176 x 250 mm (6.93 x 9.84 in.)	х	x	✓	х	✓	х
Other Envelope 85.7 x 165 mm to 215.9 x 355.6 mm (3.375 x 6.50 in. to 8.5 x 14 in.)	x	х	✓	х	\ 4	х

¹ Paper is supported only if the paper size setting is set to Universal.

² Paper is supported in two-sided (duplex) printing only if the width is at least 210 mm (8.27 in.) and the length is at least 279.4 mm (11 in.). The smallest supported Universal paper size is supported only in the multipurpose feeder.

³ Paper is supported only if the width is at least 215.9 mm (8.5 in.) and the length is at least 296.9 mm (11.7 in.).

⁴ Paper is supported only if the length is at least 296.9 mm (11.7 in.).

Supported paper types and weights

The standard tray supports $60-90-g/m^2$ (16-24-lb) paper weights. The optional tray supports $60-120-g/m^2$ (16-32-lb) paper weights. The multipurpose feeder supports $60-163-g/m^2$ (16-43-lb) paper weights.

Paper type	250- or 550-sheet tray	Multipurpose feeder	Duplex mode	ADF	Scanner glass
Plain paper	✓	✓	✓	✓	✓
Card stock	х	✓	х	✓	✓
Transparencies	✓	✓	х	✓	✓
Recycled	✓	✓	√	✓	✓
Paper labels ¹	✓	✓	х	✓	✓
Bond	✓	✓	√	✓	✓
Envelope ²	х	✓	х	х	√
Rough envelope	х	✓	х	х	√
Letterhead	✓	✓	√	✓	√
Preprinted	✓	✓	✓	✓	√
Colored paper	✓	✓	✓	✓	√
Light paper	✓	✓	✓	✓	√
Heavy paper	✓	✓	✓	✓	✓
Rough/Cotton	✓	✓	х	✓	✓
Custom Type [x]	✓	✓	✓	✓	✓

¹ One-sided paper labels designed for laser printers are supported for occasional use. We recommend printing only up to 20 pages of paper labels per month. Vinyl, pharmacy, and two-sided labels are not supported.

 $^{^{\}rm 2}$ Use envelopes that lie flat when individually placed on a table facedown.

Printing

Printing a document

Printing from a computer

Note: For labels, card stock, and envelopes, set the paper size and type in the printer before sending the print job.

- **1** From the document that you are trying to print, open the Print dialog.
- **2** If necessary, adjust the settings.
- **3** Send the print job.

Adjusting toner darkness

Using the Embedded Web Server

1 Open a Web browser, and then type the IP address of the printer in the address field.

Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings > Print Settings > Quality Menu > Toner Darkness.
- 3 Adjust the toner darkness, and then click **Submit**.

Using the printer control panel

1 From the printer control panel, navigate to:



2 Adjust the toner darkness, and then press OK.

Printing from a mobile device

Note: Make sure that the printer and mobile device share the same wireless network. For information on configuring the wireless settings of your mobile device, see the documentation that came with the device.

Printing from a mobile device using Mopria Print Service

Mopria® Print Service is a mobile printing solution for mobile devices running on Android version 4.4 or later. It allows you to print directly to any Mopria-certified printer.

Note: Before printing, make sure that the Mopria Print Service is enabled.

- **1** From the home screen of your mobile device, launch a compatible application.
- 2 Tap Print, and then select the printer.
- **3** Send the print job.

Printing from a mobile device using Google Cloud Print

Google Cloud PrintTM is a mobile printing service that allows enabled applications on mobile devices to print to any Google Cloud Print-ready printer.

- 1 From the home screen of your mobile device, launch an enabled application.
- **2** Tap **Print**, and then select the printer.
- **3** Send the print job.

Printing from a mobile device using AirPrint

AirPrint is a mobile printing solution that allows you to print directly from Apple devices to an AirPrint-certified printer.

Note: This application is supported only in some Apple devices.

- 1 From the home screen of your mobile device, launch a compatible application.
- 2 Select an item to print, and then tap the share icon.
- **3** Tap **Print**, and then select the printer.
- 4 Send the print job.

Printing from a mobile device using Lexmark Mobile Print

LexmarkTM Mobile Print allows you to send documents and images directly to a supported Lexmark printer.

- 1 Open the document, and then send or share the document to Lexmark Mobile Print.
 - **Note:** Some third-party applications may not support the send or share feature. For more information, see the documentation that came with the application.
- **2** Select a printer.
- **3** Print the document.

Printing confidential and other held jobs

Storing print jobs in the printer

1 From the printer control panel, navigate to:



Print job type	Description
Max Invalid PIN	Limits the number of times an invalid PIN can be entered.
	Note: When the limit is reached, the print jobs for that user name and PIN are deleted.
Confidential Job Expiration	Lets you hold print jobs in the computer until you enter the PIN from the printer control panel.
	Note: The PIN is set from the computer. It must be four digits, using the numbers 0–9.
Repeat Job Expiration	Lets you print and store print jobs in the printer memory for reprinting.
Verify Job Expiration	Lets you print one copy of a print job while the printer holds the remaining copies. It allows you to examine if the first copy is satisfactory. The print job is automatically deleted from the printer memory once all copies are printed.
Reserve Job Expiration	Lets you store print jobs for printing at a later time. The print jobs are held until deleted from the Held Jobs menu.

Notes:

- Confidential, Verify, Reserve, and Repeat print jobs may be deleted if the printer requires extra memory to process additional held jobs.
- You can set the printer to store print jobs in the printer memory until you start the print job from the printer control panel.
- All print jobs that can be initiated by the user at the printer are called *held jobs*.



Printing held jobs

- **1** From the document you are trying to print, open the Print dialog.
- **2** Select the printer, and then do either of the following:
 - For Windows users, click **Properties** or **Preferences**, and then click **Print and Hold**.
 - For Macintosh users, select **Print and Hold**.
- **3** Select the print job type.
- **4** If necessary, assign a user name.
- **5** Send the print job.
- **6** From the printer home screen, select **Held Jobs**.
- **7** Send the print job.

Modifying confidential print settings

Note: This feature is available only in network printers or printers connected to print servers.

1 Open a Web browser, and then type the printer IP address in the address field.

Notes:

View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears
as four sets of numbers separated by periods, such as 123.123.123.

- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings tab > Security > Confidential Print Setup.
- **3** Modify the settings:
 - Set a maximum number of PIN entry attempts. When a user exceeds a specific number of PIN entry attempts, all of the jobs for that user are deleted.
 - Set an expiration time for confidential print jobs. When a user has not printed the jobs within the specified time, all of the jobs for that user are deleted.
- **4** Save the modified settings.

Printing information pages

Printing a font sample list

1 From the printer control panel, navigate to:



- **2** Press the up or down arrow button to select the font setting.
- 3 Press OK

Note: The PPDS fonts appear only when the PPDS data stream is activated.

Canceling a print job

Canceling a print job from the printer control panel

- **1** From the printer control panel, press
- 2 When a list of print jobs appears, select the job to cancel, and then press OK.
- **3** Press to go back to the home screen.

Canceling a print job from the computer


For Windows users

- **1** Open the printers folder, and then select your printer.
- 2 From the print queue, select the print job you want to cancel, and then delete it.

For Macintosh users

- **1** From System Preferences in the Apple menu, navigate to your printer.
- **2** From the print queue, select the print job you want to cancel, and then delete it.

Copying

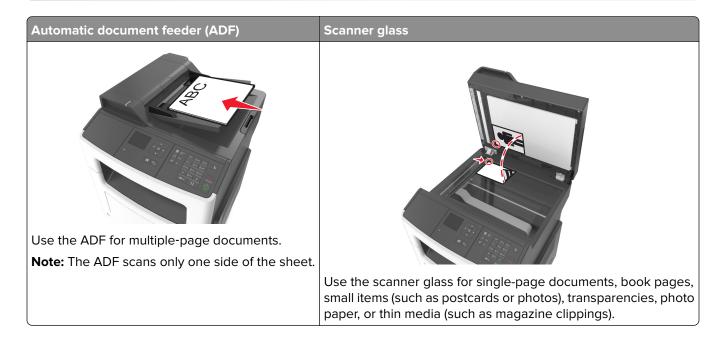

Making copies

Making a quick copy

1 Load an original document faceup, short edge first into the ADF tray or facedown on the scanner glass.

Notes:

- Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.
- The ADF indicator light comes on when the paper is loaded properly.
- 2 If you are loading a document into the ADF tray, then adjust the paper guides.

Note: To avoid a cropped image, make sure the size of the original document and the size of the copy paper are the same.

3 From the printer control panel, press



 
Copying using the ADF

1 Load an original document faceup, short edge first into the ADF tray.

Notes:

• Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.

- The ADF indicator light comes on when the paper is loaded properly.
- **2** Adjust the paper guides.





Copying using the scanner glass

- 1 Place an original document facedown on the scanner glass in the upper left corner.
- 2 From the printer control panel, use the keypad to enter the number of copies, and then press .

 Note: If you want to scan another document, then place the next document on the scanner glass, press the left or right arrow button to scroll to Scan the Next Page, and then press .
- 3 Press the left or right arrow button to scroll to **Finish the Job**, and then press

Copying photos

- **1** Place a photo facedown on the scanner glass in the upper left corner.
- **2** From the printer control panel, navigate to:



3 From the Content Source menu, choose a setting that best describes the original photo your are copying, and then press .

Note: If you want to copy another photo, then place it on the scanner glass, press the left or right arrow button to scroll to **Scan** the **Next Page**, and then press **OK**.

4 Press the left or right arrow button to scroll to **Finish the Job**, and then press OK

Copying on specialty media


Copying on transparencies

1 Load an original document faceup, short edge first into the ADF tray or facedown on the scanner glass.

Notes:

- Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.
- The ADF indicator light comes on when the paper is loaded properly.
- 2 If you are loading a document into the ADF tray, then adjust the paper guides.

3 From the printer control panel, navigate to:

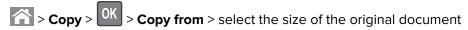

4 Navigate to:

Copy to > OK > select the tray containing the transparencies > OK > select the number of copies or enter a number on the keypad >

- **5** If there are no trays that contain transparencies, then do the following:
 - a Navigate to:

b Load transparencies into the multipurpose feeder, and then press .

Note: If you want to copy another document, then place it on the scanner glass, press the left or right arrow button to scroll to **Scan** the **Next Page**, and then press **OK**.

 
6 Press the left or right arrow button to scroll to **Finish the Job**, and then press

Copying on letterhead

1 Load an original document faceup, short edge first into the ADF tray or facedown on the scanner glass.

Notes:

- Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.
- The ADF indicator light comes on when the paper is loaded properly.
- 2 If you are loading a document into the ADF tray, then adjust the paper guides.
- **3** From the printer control panel, navigate to:



4 Navigate to:

Copy to > OK > select the tray containing the letterhead > OK > select the number of copies or enter a number on the keypad >

- **5** If there are no trays that contain letterhead, then do the following:
 - a Navigate to:

Copy to > OK > Manual Feeder > OK > select the size of the letterhead > Letterhead

b Place the letterhead faceup, top edge first into the multipurpose feeder, and then press

Note: If you want to copy another document, then place it on the scanner glass, press the left or right arrow button to scroll to Scan the Next Page, and then press OK

6 Press the left or right arrow button to scroll to **Finish the Job**, and then press



Customizing copy settings

Copying to a different size

1 Load an original document faceup, short edge first into the ADF tray or facedown on the scanner glass.

Notes:

- Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.
- The ADF indicator light comes on when the paper is loaded properly.
- 2 If you are loading a document into the ADF tray, then adjust the paper guides.
- **3** From the printer control panel, navigate to:
 - > Copy > OK > Copy from > select the size of the original document
- 4 Navigate to:
 - > select a new size for the copy > select the number of copies or enter a number on the kevpad >

Note: If you want to copy another document, then place it on the scanner glass, press the left or right arrow button to scroll to Scan the Next Page, and then press OK

5 Press the left or right arrow button to scroll to **Finish the Job**, and then press



Making copies using paper from a selected tray

1 Load an original document faceup, short edge first into the ADF tray or facedown on the scanner glass.


Notes:

- Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.
- The ADF indicator light comes on when the paper is loaded properly.
- 2 If you are loading a document into the ADF tray, then adjust the paper guides.
- **3** From the printer control panel, navigate to:
 - > Copy > OK > Copy from > select the size of the original document

4 Navigate to:

Copy to > OK > select the tray containing the paper size and type you want to use > OK > select the number of copies or enter a number on the keypad >

- 5 If there are no trays that contain the paper size and type you want to use, then do the following:
 - a Navigate to:

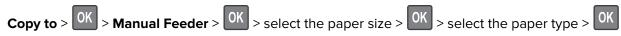

b Load the size and type of paper into the multipurpose feeder, and then press

Note: If you want to copy another document, then place it on the scanner glass, press the left or right arrow button to scroll to **Scan** the **Next Page**, and then press **OK**.

6 Press the left or right arrow button to scroll to **Finish the Job**, and then press


Reducing or enlarging copies

Copies can be scaled from 25% to 400% of the original document size.

1 Load an original document faceup, short edge first into the ADF tray or facedown on the scanner glass.

Notes:

- Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.
- The ADF indicator light comes on when the paper is loaded properly.
- 2 If you are loading a document into the ADF tray, then adjust the paper guides.
- **3** From the printer control panel, navigate to:

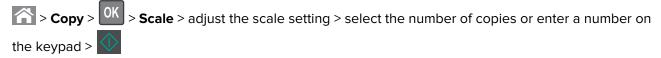

Note: If you want to copy another document, then place it on the scanner glass, press the left or right arrow button to scroll to **Scan the Next Page**, and then press **OK**.

4 Press the left or right arrow button to scroll to **Finish the Job**, and then press OK


Making a copy lighter or darker

1 Load an original document faceup, short edge first into the ADF tray or facedown on the scanner glass in the upper left corner.

Notes:

• Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.

- The ADF indicator light comes on when the paper is loaded properly.
- 2 If you are loading a document into the ADF tray, then adjust the paper guides.
- **3** From the printer control panel, navigate to:

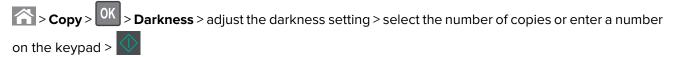

Note: If you want to copy another document, then place it on the scanner glass, press the left or right arrow button to scroll to **Scan** the **Next Page**, and then press **OK**.

4 Press the left or right arrow button to scroll to **Finish the Job**, and then press

Adjusting copy quality

1 Load an original document faceup, short edge first into the ADF tray or facedown on the scanner glass.

Notes:

- Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.
- The ADF indicator light comes on when the paper is loaded properly.
- **2** If you are loading a document into the ADF tray, then adjust the paper guides.
- **3** From the printer control panel, navigate to:
 - > Copy > OK > Content Type > select the content type of the original document
- **4** Press the left or right arrow button to scroll to one of the following:
 - **Text**—The content of the original document is mostly text or line art.
 - **Text/Photo**—The original document is a mixture of text and graphics or photos.
 - **Photo**—The original document is mostly a photo or an image.
 - **Graphics**—The original document is mostly business-type graphics, such as pie charts, bar charts, and animations.
- **5** Press the up or down arrow button until **Content Source** appears, and then press the left or right arrow button to scroll to one of the following:
 - Color Laser—The original document was printed using a color laser printer.
 - Inkjet—The original document was printed using an inkjet printer.
 - Magazine—The original document is from a magazine.
 - **Press**—The original document is from an offset press.
 - Black/White Laser—The original document was printed using a mono laser printer.
 - Photo/Film—The original document is a photo from a film.
 - Newspaper—The original document is from a newspaper.
 - Other—The original document was printed using an alternate or unknown printer.

 
6 Select the number of copies or enter a number on the keypad, and then press Note: If you want to copy another document, then place it on the scanner glass, press the left or right arrow button to scroll to Scan the Next Page, and then press OK

7 Press the left or right arrow button to scroll to **Finish the Job**, and then press



Collating copies

If you print multiple copies of a document, then you can choose to print each copy as a set (collated) or to print the copies as groups of pages (not collated).



To select a Collate setting:

1 Load an original document faceup, short edge first into the ADF tray or facedown on the scanner glass.

Notes:

- Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.
- The ADF indicator light comes on when the paper is loaded properly.
- 2 If you are loading a document into the ADF tray, then adjust the paper guides.
- **3** From the printer control panel, navigate to:
 - > Copy > OK > Collate > select the collate setting you want > select the number of copies or enter a number on the keypad >

Note: If you want to copy another document, then place it on the scanner glass, press the left or right arrow button to scroll to Scan the Next Page, and then press

4 Press the left or right arrow button to scroll to **Finish the Job**, and then press OK



Placing separator sheets between copies

1 Load an original document faceup, short edge first into the ADF tray or facedown on the scanner glass.

Notes:

- Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.
- The ADF indicator light comes on when the paper is loaded properly.
- 2 If you are loading a document into the ADF tray, then adjust the paper guides.

3 From the printer control panel, navigate to:



4 Select Between Copies, Between Jobs, Between Pages, or Off.

Select the number of copies or enter a number on the keypad, and then press
Note: If you want to copy another document, then place it on the scanner glass, press the left or right arrow button to scroll to Scan the Next Page, and then press
OK

6 Press the left or right arrow button to scroll to **Finish the Job**, and then press

Copying multiple pages onto a single sheet

To save paper, you can copy either two or four consecutive pages of a multiple-page document onto a single sheet of paper.

Notes:

- Make sure the paper size is set to letter, legal, A4, or JIS B5.
- The copy size must be set to 100%.
- 1 Load an original document faceup, short edge first into the ADF tray or facedown on the scanner glass.

Notes:

- Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.
- The ADF indicator light comes on when the paper is loaded properly.
- 2 If you are loading a document into the ADF tray, then adjust the paper guides.
- **3** From the printer control panel, navigate to:
 - > Copy > OK > Paper Saver > select the setting that you want
- 4 Select Off, 2-up Portrait, 2-up Landscape, 4-up Portrait, or 4-up Landscape.
- Select the number of copies or enter a number on the keypad, and then press .

 Note: If you want to copy another document, then place it on the scanner glass, press the left or right arrow button to scroll to Scan the Next Page, and then press .
- **6** Press the left or right arrow button to scroll to **Finish the Job**, and then press

Placing information on copies

Placing an overlay message on each page

1 Load an original document faceup, short edge first into the ADF tray or facedown on the scanner glass.

Notes:

• Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.

- The ADF indicator light comes on when the paper is loaded properly.
- 2 If you are loading a document into the ADF tray, then adjust the paper guides.
- **3** From the printer control panel, navigate to:
 - > Copy > OVerlay > select an overlay message you want
- 4 Select Off, Confidential, Copy, Draft, Urgent, or Custom.
- Select the number of copies or enter a number on the keypad, and then press .

 Note: If you want to copy another document, then place it on the scanner glass, press the left or right arrow button to scroll to Scan the Next Page, and then press OK.
- **6** Press the left or right arrow button to scroll to **Finish the Job**, and then press **OK**.

Canceling a copy job

Canceling a copy job from the printer control panel

- 1 From the printer control panel, press
- **2** When a list of copy jobs appears, select the job to cancel, and then press OK.
- **3** Press to go back to the home screen.

Understanding the copy options

Copies

This option lets you set the number of copies to be printed.

Copy from

This option opens a screen where you can select the paper size of the original document.

- To scroll to the paper size that matches the original document, press the left or right arrow button, and then
 press OK.
- To copy an original document that contains mixed paper sizes with the same width, press the left or right arrow button to scroll to Mixed Sizes, and then press OK.

• To set the printer to automatically detect the size of the original document, press the left or right arrow button to scroll to **Auto Size Sense**, and then press OK.

Copy to

This option lets you select the paper size and type on which your copies will be printed.

- To scroll to the paper size and type that matches the paper loaded in the tray or feeder, press the left or right arrow button, and then press OK.
- If the settings for "Copy from" and "Copy to" are different, then the printer automatically adjusts the Scale setting to accommodate the difference.
- If the paper type or size you want to use is not loaded in one of the trays, then press the left or right arrow button to scroll to **Manual Feeder**, press of and then manually load the paper in the manual feeder or multipurpose feeder.
- To match each copy to the paper size of the original document, set "Copy to" to Auto Size Match. If a matching
 paper size is not in one of the trays, then Paper size not found appears and prompts to load a paper
 in a tray, manual feeder, or multipurpose feeder.

Scale

This option lets you scale the document from 25% to 400% of the original document size. You can also set automatic scaling.

- When copying to a different paper size, such as from legal-size to letter-size paper, set the "Copy from" and
 "Copy to" paper sizes automatically to scale the scan image to fit the size of the paper onto which you are
 copying.
- To decrease or increase the value by 1%, press the left or right arrow button on the printer control panel. To make a continuous decrease or increase in value, press and hold the button for two or more seconds.

Darkness

This option lets you adjust how light or dark the copies are in relation to the original document.

Collate

This option keeps the pages of a print job stacked in sequence when printing multiple copies of the document.

Content Type

This option lets you set the original document type.

Select from the following content types:

- Graphics—The original document is mostly business-type graphics, such as pie charts, bar charts, and animations.
- **Photo**—The original document is mostly a photo or an image.

- Text—The content of the original document is mostly text or line art.
- Text/Photo—The original document is a mixture of text, graphics, and photos.

Content Source

This option lets you set the original document source.

Select from the following content sources:

- Color Laser—The original document was printed using a color laser printer.
- Black/White Laser—The original document was printed using a mono laser printer.
- Inkjet—The original document was printed using an inkjet printer.
- Photo/Film—The original document is a photo from a film.
- Magazine—The original document is from a magazine.
- Newspaper—The original document is from a newspaper.
- Press—The original document was printed using a printing press.
- Other—The original document was printed using an alternate or unknown printer.

Overlay

This option lets you create a watermark (or message) that overlays the content of your copy. You can choose from Confidential, Copy, Draft, Urgent, and Custom. You can type a custom message in the "Enter the Custom Text Overlay and press OK" field. The message will appear, faintly, in large print across each page.

Separator Sheets


This option lets you place a blank sheet of paper between copies, prints, pages, print jobs or copy jobs. The separator sheets can be drawn from a tray that contains a type or color of paper that is different from the paper your copies are printed on.

Paper Saver

This option lets you print two or more pages of an original document on the same page. Paper Saver is also called *N-up* printing where *N* stands for the number of pages. For example, 2-up would print two pages of your document on a single page, and 4-up would print four pages of your document on a single page.

E-mailing 67

E-mailing

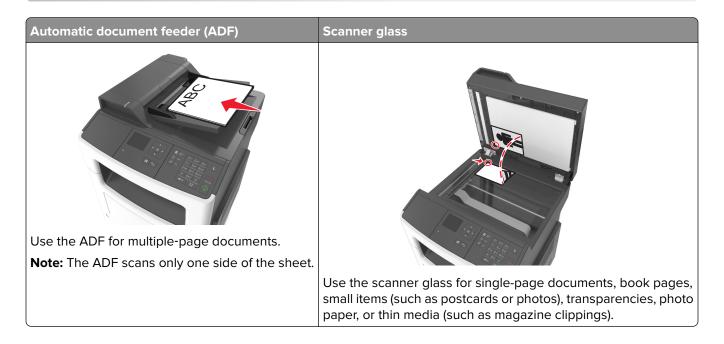

Setting up the printer to e-mail

Setting up the e-mail function

1 Open a Web browser, and then type the printer IP address in the address field.

Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings > E-mail/FTP Settings > E-mail Settings.
- **3** Enter the appropriate information, and then click **Submit**.

Configuring e-mail settings

1 Open a Web browser, and then type the printer IP address in the address field.

Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings > E-mail/FTP Settings > E-mail Settings.
- **3** Enter the appropriate information, and then click **Submit**.

68 E-mailing

Creating an e-mail shortcut

Creating an e-mail shortcut using the Embedded Web Server

1 Open a Web browser, and then type the printer IP address in the address field.

Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings > Manage Shortcuts > E-mail Shortcut Setup.
- **3** Type a name for the shortcut, and then enter the e-mail address.

Note: If you are entering multiple addresses, then separate each address with a comma (,).

- **4** Adjust the scan settings, if necessary.
- **5** Enter a shortcut number, and then click **Add**. If you enter a number that is already in use, then you are prompted to select another number.

E-mailing a document

Sending an e-mail using a shortcut number

1 Load an original document faceup, short edge first into the ADF tray or facedown on the scanner glass.

Notes:

- · Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.
- The ADF indicator light comes on when the paper is loaded properly.
- 2 If you are loading a document into the ADF tray, then adjust the paper guides.
- **3** Press #, then enter the shortcut number using the keypad, and then press OK




Canceling an e-mail

From the printer control panel, press



Faxing

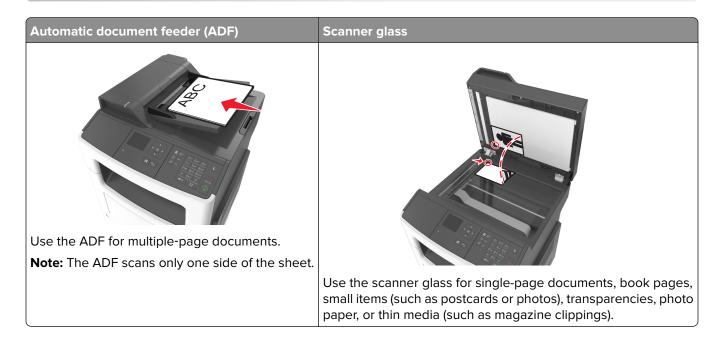

Setting up the printer to fax



CAUTION—SHOCK HAZARD: Do not use the fax feature during a lightning storm. Do not set up this product or make any electrical or cabling connections, such as the fax feature, power cord, or telephone, during a lightning storm.

Notes:

- The following connection methods are applicable only in some countries or regions.
- During the initial printer setup, clear the fax function check box and any other function you plan to set up later, and then select **Continue**.
- The indicator light may blink red if the fax function is enabled and not fully set up.

Warning—Potential Damage: Do not touch the cables or the printer in the area shown while actively sending or receiving a fax.



Initial fax setup

Many countries and regions require outgoing faxes to contain the following information in a margin at the top or bottom of each transmitted page, or on the first page of the transmission: fax name (identification of the business, other entity, or individual sending the message) and fax number (telephone number of the sending fax machine, business, other entity, or individual).

To enter your fax setup information, use the printer control panel, or use your browser to access the Embedded Web Server, and then open the Settings menu.

Note: If you do not have a TCP/IP environment, then you must use the printer control panel to enter your fax setup information.

Using the printer control panel for fax setup

When the printer is turned on for the first time, a series of start-up screens appear. If the printer has fax capabilities, then the Fax Name or Station Name and Fax Number or Station Number screens appear:

- 1 When Fax Name or Station Name appears, type the name to be printed on all outgoing faxes, and then press .
- 2 When Fax Number or Station Number appears, enter the printer fax number, and then press



Using the Embedded Web Server for fax setup

1 Open a Web browser, and then type the printer IP address in the address field.


Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings > Fax Settings > Analog Fax Setup.
- 3 In the Fax Settings menu, type the name to be printed on all outgoing faxes in the Fax Name or Station Name field.
- **4** In the Fax Number or Station Number field, enter the printer fax number.
- 5 Click Submit.

Choosing a fax connection

Scenario 1: Standard telephone line

Setup 1: Printer is connected to a dedicated fax line

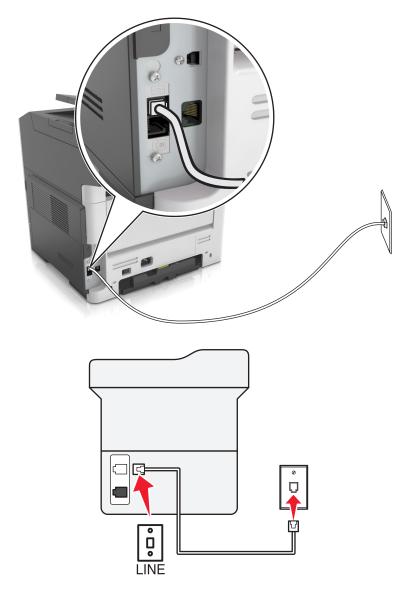


To connect:

- 1 Connect one end of the telephone cable that came with the printer to the i port of the printer.
- **2** Connect the other end of the telephone cable to an active analog wall jack.

Tips for this setup:

- You can set the printer to receive faxes automatically (Auto Answer On) or manually (Auto Answer Off).
- If you want to receive faxes automatically (Auto Answer On), then set the printer to pick up on any number of rings that you want.


Setup 2: Printer is sharing the line with an answering machine Connected to the same telephone wall jack

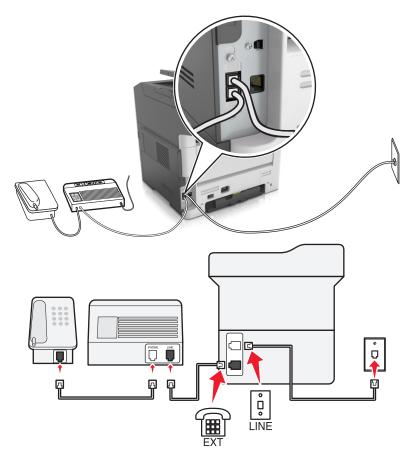

To connect:

- 1 Connect one end of the telephone cable that came with the printer to the i port of the printer.
- **2** Connect the other end of the telephone cable to an active analog wall jack.
- **3** Connect the answering machine to the method port of the printer.

Connected to different wall jacks

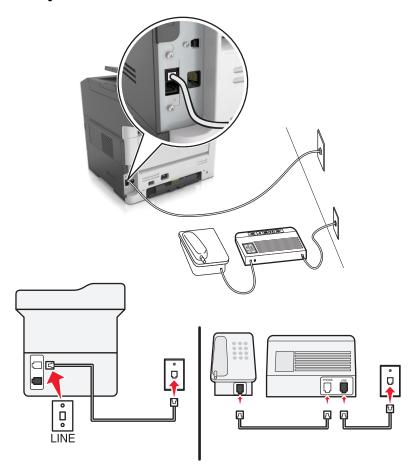


To connect:

- 1 Connect one end of the telephone cable that came with the printer to the $\dot{\underline{\cdot}}$ port of the printer.
- **2** Connect the other end of the telephone cable to an active analog wall jack.

Tips for this setup:

- If you have only one telephone number on your line, then you need to set the printer to receive faxes automatically (Auto Answer On).
- Set the printer to pick up calls two rings after the answering machine. For example, if the answering machine picks up calls after four rings, then set the printer to pick up after six rings. This way, the answering machine picks up calls first and your voice calls are received. If the call is a fax, then the printer detects the fax signal on the line and takes over the call.
- If you subscribe to a distinctive ring service provided by your telephone company, then make sure that you
 set the correct ring pattern for the printer. Otherwise, the printer does not receive faxes even if you have
 set it to receive faxes automatically.



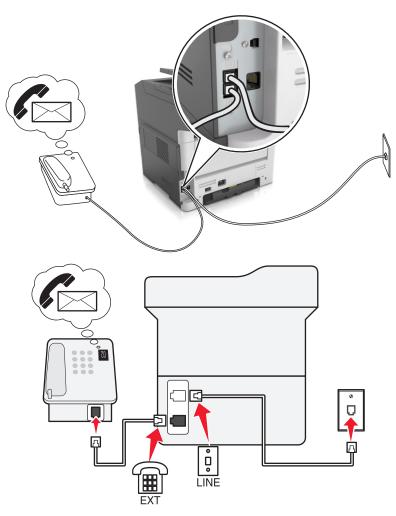


To connect:

- 1 Connect one end of the telephone cable that came with the printer to the i port of the printer.
- 2 Connect the other end of the telephone cable to an active analog wall jack.
- **3** Connect the telephone to the printer.

Tips for this setup:

- This setup works best if you subscribe to a distinctive ring service. If you have distinctive ring service, then
 make sure that you set the correct ring pattern for the printer. Otherwise, the printer does not receive faxes
 even if you have set it to receive faxes automatically.
- If you have only one telephone number on your line, then you need to set the printer to receive faxes manually (Auto Answer Off).
 - When you answer the telephone and you hear fax tones, press *9* or the manual answer code on the telephone to receive the fax.
- You can also set the printer to receive faxes automatically (Auto Answer On), but you need to turn off the
 voice mail service when you are expecting a fax. This setting works best if you are using voice mail more
 often than fax.

Scenario 2: Digital Subscriber Line (DSL)

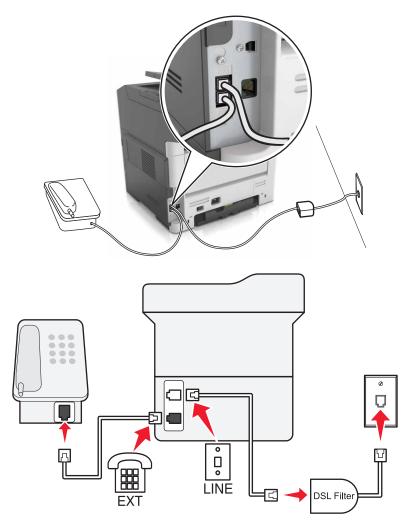

A Digital Subscriber Line splits your regular telephone line into two channels: voice and Internet. Telephone and fax signals travel through the voice channel, and Internet signals pass through the other channel. This way, you can use the same line for analog voice calls (including faxes) and digital Internet access.


To minimize interference between the two channels and ensure a quality connection, you need to install a DSL filter for the analog devices (fax machine, telephone, answering machine) in your network. Interference causes noise and static on the telephone, failed and poor quality faxes for the printer, and slow Internet connection on your computer.

Note: Contact your DSL provider to obtain a DSL filter.

To install a filter for the printer:

- **1** Connect the line port of the DSL filter to the wall jack.
- **2** Connect one end of the telephone cable that came with your printer to the i port of the printer. Connect the other end to the phone port on the DSL filter.
- **3** To connect a telephone to the printer, remove any installed adapter plug from the printer, and then connect the telephone to the port.

Scenario 3: VoIP telephone service

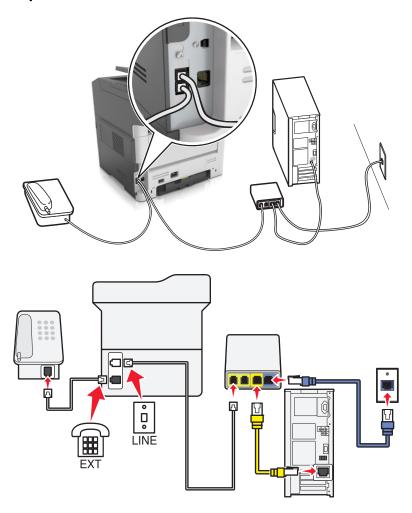

To connect:

- 1 Connect one end of the telephone cable that came with the printer to the $\dot{\underline{\bullet}}$ port of the printer.
- **2** Connect the other end of the cable to the port labeled **Phone Line 1** or **Phone Port** on the VoIP adapter.

Note: The port labeled **Phone Line 2** or **Fax Port** is not always active. VoIP providers may charge additional cost for activation of the second phone port.

3 Connect the telephone to the printer.


Tips for this setup:

- To make sure that the phone port on the VoIP adapter is active, plug an analog telephone into the phone port, and then listen for a dial tone. If you hear a dial tone, then the port is active.
- If you need two phone ports for your devices, but do not want to pay additional cost, then do not plug the printer into the second phone port. You can use a phone splitter. Plug the phone splitter into the port labeled **Phone Line 1** or **Phone Port**, and then plug the printer and telephone into the splitter.

Note: Make sure you use a phone splitter, *not* a line splitter. To make sure that you are using the correct splitter, plug an analog telephone into the splitter and then listen for a dial tone.

Scenario 4: Digital telephone service through a cable provider

Setup 1: Printer is connected directly to a cable modem

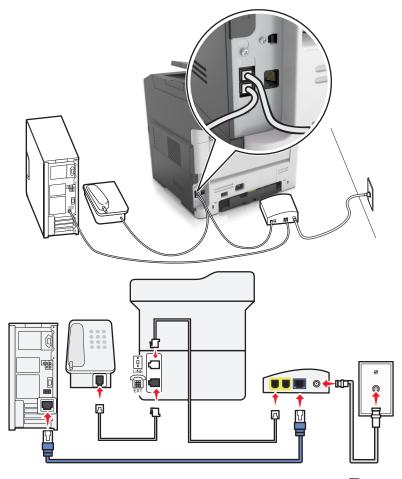

- 1 Connect one end of the telephone cable that came with your printer to the i port of the printer.
- 2 Connect the other end of the cable to the port labeled **Phone Line 1** or **Phone Port** on the cable modem.


Note: The port labeled **Phone Line 2** or **Fax Port** is not always active. VoIP providers may charge additional cost for activation of the second phone port.

3 Connect your analog telephone phone to the printer.

Notes:

- To make sure that the telephone port on the cable modem is active, plug an analog telephone into the telephone port, and then listen for a dial tone. If you hear a dial tone, then the port is active.
- If you need two telephone ports for your devices, but do not want to pay additional cost, then do not plug the printer into the second telephone port. You can use a phone splitter. Plug the phone splitter into the **Phone Line 1** or **Phone Port**, and then plug the printer and telephone into the splitter.
- Make sure you use a phone splitter, *not* a line splitter. To make sure that you are using the correct splitter, plug an analog telephone into the splitter and then listen for a dial tone.

Setup 2: Printer is connected to a wall jack; cable modem is installed elsewhere in the facility

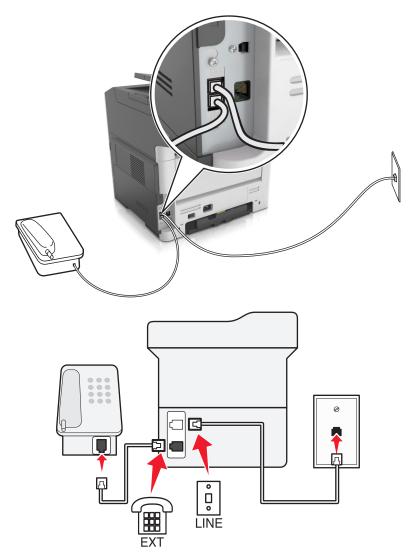


- **1** Connect one end of the telephone cable that came with your printer to the i port of the printer.
- 2 Connect the other end of the telephone cable to an active analog telephone wall jack.
- **3** Connect your analog telephone to the printer.


Scenario 5: Countries or regions with different telephone wall jacks and plugs

Some countries or regions may have different types of telephone wall jack connectors than those that came with the printer. The standard wall jack adopted by most countries or regions is RJ-11. Your printer comes with the RJ-11 jack and a telephone cable with the RJ-11 plug.

 If the wall jack or equipment in your facility is not compatible with this type of connection, then you need to use a telephone adapter. An adapter for your country or region may not come with your printer, and you may need to purchase it separately.




 There may be an adapter plug installed in the $\stackrel{\text{\tiny (III)}}{\text{\tiny (III)}}$ port of the printer. If you are using a telephone adapter or a facility that has a cascaded or serial wiring scheme, then do not remove the adapter plug from the $\stackrel{\text{\tiny (III)}}{\text{\tiny (III)}}$ port of the printer.



Part name	Part number
Lexmark adapter plug	40X8519

Connecting the printer to a non-RJ-11 wall jack

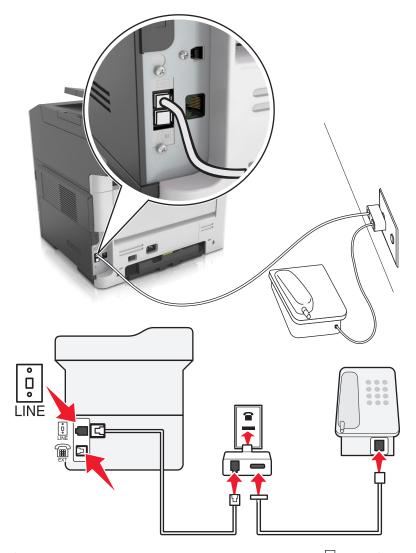


- **1** Connect one end of the telephone cable that came with printer to the jet port of the printer.
- **2** Connect the other end of the cable to the RJ-11 adapter, and then connect the adapter to the wall jack.
- **3** If you want to connect another device (telephone or answering machine) to the same wall jack, and if the device has a non-RJ-11 connector, then connect it directly to the telephone adapter.

Notes:


- The port of the printer may have an adapter plug for use with the adapter. Do *not* remove the plug from the port of the printer.
- In some countries or regions, the printer may not come with a telephone adapter or an adapter plug.

Connecting the printer to a wall jack in Germany

The German wall jack has two kinds of ports. The N ports are for fax machines, modems, and answering machines. The F port is for telephones.

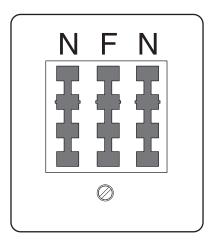

Connect the printer to any of the N ports.

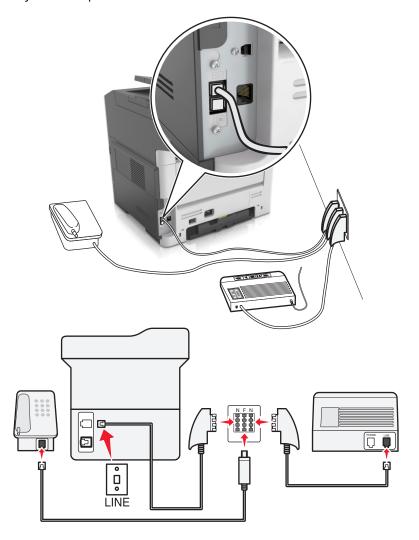

- 1 Connect one end of the telephone cable that came the printer to the inport of the printer.
- **2** Connect the other end of the telephone cable to the RJ-11 adapter, and then connect the adapter to an N port.


3 If you want to connect a telephone and answering machine to the same wall jack, then connect the devices as shown.

Note: Do *not* remove the adapter plug from the port of the printer if you are connecting to a serial or cascaded telephone system.

Connecting to a distinctive ring service

A distinctive ring service may be available from your telephone company. This service lets you have multiple telephone numbers on one telephone line, with each telephone number having a different ring pattern. This may be useful for distinguishing between fax and voice calls. If you subscribe to a distinctive ring service, then follow these steps to connect the equipment:

- 1 Connect one end of the telephone cable that came with the printer to the printer LINE port [i].
- 2 Connect the other end of the telephone cable to an active analog telephone wall jack.

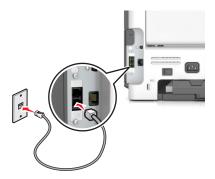

3 Change the Distinctive Rings setting to match the setting you want the printer to answer. From the printer control panel, navigate to:



Setting the outgoing fax or station name and number

1 Open a Web browser, and then type the printer IP address in the address field.

Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings > Fax Settings > Analog Fax Setup.
- **3** From the Fax Settings menu, type the name to be printed on all outgoing faxes in the Fax Name or Station Name field.

- 4 In the Fax Number or Station Number field, enter the printer fax number.
- 5 Click Submit.

Setting the date and time

You can set the date and time so that they are printed on every fax you send. If there is a power failure, then you may have to reset the date and time.

1 Open a Web browser, and then type the printer IP address in the address field.

Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings > Other Settings area > Security > Set Date and Time.
- 3 In the Set Date & Time field, enter the current date and time.
- 4 Click Submit.

Note: We recommend using the network time.

Configuring the printer to observe daylight saving time

Set the printer to automatically adjust for daylight saving time.

1 Open a Web browser, and then type the printer IP address in the address field.

Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Security > Set Date and Time.
- 3 Select the **Automatically Observe DST** check box, and then enter the DST start and end dates in the Custom Time Zone Setup section.
- 4 Click Submit.

Sending a fax

 
Sending a fax using the printer control panel

1 Load an original document faceup, short edge first into the ADF tray or facedown on the scanner glass.

Notes:

 Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.

- The ADF indicator light comes on when the paper is loaded properly.
- 2 If you are loading a document into the ADF tray, then adjust the paper guides.
- **3** From the printer control panel, navigate to:



Note: If you want to fax another document, then place it on the scanner glass, press the left or right arrow button to scroll to **Scan the Next Page**, and then press **OK**.

4 Press the left or right arrow button to scroll to **Finish the Job**, and then press

Sending a fax using the computer

For Windows users

- **1** From the document that you are trying to fax, open the Print dialog.
- 2 Select the printer, and then click Properties, Preferences, Options, or Setup.
- 3 Click Fax > Enable fax, and then enter the recipient fax number or numbers.
- **4** If necessary, configure other fax settings.
- **5** Apply the changes, and then send the fax job.

Notes:

- The fax option is available only with the PostScript® driver or the Universal Fax Driver. For more information, go to http://support.lexmark.com.
- To use the fax option with the PostScript driver, configure and enable it in the Configuration tab.

For Macintosh users

- 1 With a document open, choose File > Print.
- **2** Select the printer.
- **3** Enter the recipient fax number, and then configure other fax settings, if necessary.
- **4** Send the fax job.

Sending a fax using a shortcut number

Fax shortcuts are just like the speed dial numbers on a telephone or fax machine. A shortcut number (1–999) can contain a single recipient or multiple recipients.

1 Load an original document faceup, short edge first into the ADF tray or facedown on the scanner glass.

Notes:

 Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.

- The ADF indicator light comes on when the paper is loaded properly.
- 2 If you are loading a document into the ADF tray, then adjust the paper guides.
- **3** Press #, and then enter the shortcut number on the keypad.
- 4 Press 🔷

Sending a fax at a scheduled time

1 Load an original document faceup, short edge first into the ADF tray or facedown on the scanner glass.

Notes:

- Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.
- The ADF indicator light comes on when the paper is loaded properly into the ADF tray.
- 2 If you are loading a document into the ADF tray, then adjust the paper guides.
- **3** From the printer control panel, navigate to:
 - > Fax > OK > enter the fax number > Delayed Send > Send Later > select the date you want the fax to be sent > OK > select the time you want the fax to be sent > OK
- 4 Press

Note: The document is scanned, and then faxed at the scheduled time.

Creating a fax destination shortcut using the Embedded Web Server

Assign a shortcut number to a single fax number or a group of fax numbers.

1 Open a Web browser, and then type the printer IP address in the address field.

Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings > Manage Shortcuts > Fax Shortcut Setup.

Note: A password may be required. If you do not have an ID and password, then contact your system support person.

3 Type a name for the shortcut, and then enter the fax number.

Notes:

- To create a multiple-number shortcut, enter the fax numbers for the group.
- Separate each fax number in the group with a semicolon (;).

4 Assign a shortcut number.

Note: If you enter a number that is already in use, then you are prompted to select another number.

5 Click Add.

Customizing fax settings

Changing the fax resolution

1 Load an original document faceup, short edge first into the ADF tray or facedown on the scanner glass.

Notes:

- Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.
- The ADF indicator light comes on when the paper is loaded properly.
- 2 If you are loading a document into the ADF tray, then adjust the paper guides.
- **3** From the printer control panel, navigate to:
 - > Fax > OK > enter the fax number > Resolution > select the resolution you want

Note: You can choose from Standard (fastest speed) to Ultra Fine (slowest speed and best quality).

4 Press .

Making a fax lighter or darker

1 Load an original document faceup, short edge first into the ADF tray or facedown on the scanner glass.

Notes:

- Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.
- The ADF indicator light comes on when the paper is loaded properly.
- 2 If you are loading a document into the ADF tray, then adjust the paper guides.
- **3** From the printer control panel, navigate to:



Viewing a fax log

1 Open a Web browser, and then type the printer IP address in the address field.

Notes:

• View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.123.

- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings > Reports.
- 3 Click Fax Job Log or Fax Call Log.

Blocking junk faxes

1 Open a Web browser, and then type the printer IP address in the address field.

Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings > Fax Settings > Analog Fax Setup > Block No Name Fax.

Notes:

- This option blocks all incoming faxes that have a private caller ID or no fax name.
- In the Banned Fax List field, enter the phone numbers or fax names of specific fax callers you want to block.

Canceling an outgoing fax

Canceling a fax job while the original documents are still scanning

- If you are using the ADF tray and **Scanning page** appears, then press .
- If you are using the scanner glass and **Scanning page**, **Scan the Next Page**, or **Finish the Job** appears, then press .

Canceling a fax job after scanning the original documents

- 1 From the printer control panel, press
- **2** Press the left or right arrow button to scroll to the job you want to cancel.
- 3 Press OK > Delete Selected Jobs.

Holding and forwarding faxes

Holding faxes

This option lets you hold received faxes from printing until they are released. Held faxes can be released manually or at a scheduled day or time.

1 Open a Web browser, and then type the printer IP address in the address field.

Notes:

• View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.

- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings > Fax Settings > Analog Fax Setup > Holding Faxes.
- 3 From the Held Fax Mode menu, select Off, Always On, Manual, or Scheduled.
- **4** If you selected Scheduled, then continue with the following steps:
 - a Click Fax Holding Schedule.
 - **b** From the Action menu, select **Hold faxes**.
 - **c** From the Time menu, select the time you want the held faxes released.
 - **d** From the Day(s) menu, select the day you want the held faxes released.
- 5 Click Add.

Forwarding a fax

This option lets you print and forward received faxes to a fax number, e-mail address, FTP site, or LDSS.

1 Open a Web browser, and then type the printer IP address in the address field.

Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings > Fax Settings.
- **3** From the Fax Forwarding menu, select **Print**, **Print and Forward**, or **Forward**.
- 4 From the "Forward to" menu, select Fax, E-mail, FTP, LDSS, or eSF.
- **5** In the "Forward to Shortcut" field, enter the shortcut number where you want the fax forwarded.

Note: The shortcut number must be valid for the setting selected in the "Forward to" menu.

6 Click Submit.

Understanding the fax options

Original Size

This option lets you choose the size of the documents you are going to fax.

- 1 From the Fax area of the printer control panel, press the **Options** button. **Original Size** appears.
- 2 Press OK

3 Press the arrow buttons until the size of the original document appears, and then press



Resolution

This option lets you adjust the quality of the fax output. Increasing the image resolution increases the file size and the time needed to scan your original document. Decreasing the image resolution reduces the file size.

Select one of the following:

- Standard—Use this when faxing most documents.
- Fine 200 dpi—Use this when faxing documents with small prints.
- Super fine 300 dpi—Use this when faxing documents with fine details.
- **Ultra fine 600 dpi**—Use this when faxing documents with pictures or photos.

Darkness

This option lets you adjust how light or dark the faxes are in relation to the original document.

Content Type

This option lets you set the original document type.

Select from the following content types:

- **Graphics**—The original document is mostly business-type graphics, such as pie charts, bar charts, and animations.
- Photo—The original document is mostly a photo or an image.
- **Text**—The content of the original document is mostly text or line art.
- Text/Photo—The original document is a mixture of text, graphics, and photos.

Content Source

This option lets you set the original document source.

Select from the following content sources:

- Color Laser—The original document was printed using a color laser printer.
- Black/White Laser—The original document was printed using a mono laser printer.
- Inkjet—The original document was printed using an inkjet printer.
- **Photo/Film**—The original document is a photo from a film.
- Magazine—The original document is from a magazine.
- **Newspaper**—The original document is from a newspaper.
- Press—The original document was printed using a printing press.
- Other—The original document was printed using an alternate or unknown printer.

Orientation

This option lets you specify the orientation of the original document, and then change the Sides and Binding settings to match the orientation.


Binding

This option lets you specify if the original document is bound on the long-edge or short-edge side.

Scanning 91

Scanning

Scanning to an FTP address

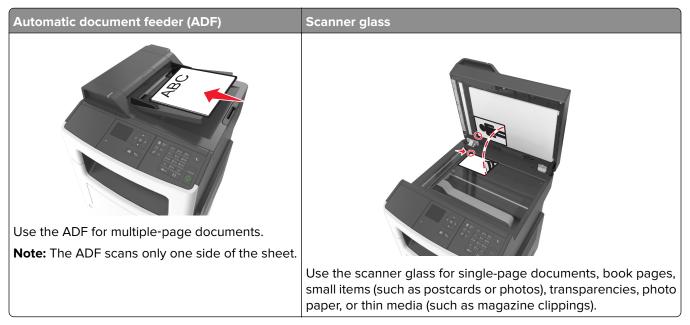

The scanner lets you scan documents directly to a File Transfer Protocol (FTP) server. Only one FTP address may be sent to the server at a time.

When an FTP destination has been configured by your system support person, the name of the destination becomes available as a shortcut number, or it is listed as a profile under the Held Jobs icon. An FTP destination could also be another PostScript printer.

Creating shortcuts

Creating an FTP shortcut using the Embedded Web Server

1 Open a Web browser, and then type the printer IP address in the address field.

Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- **2** Navigate to:

Settings > Other Settings area > Manage Shortcuts > FTP Shortcut Setup

3 Enter the appropriate information.

Note: A password may be required. If you do not have an ID and password, then contact your system support person.

Scanning 92

4 Enter a shortcut number.

If you enter a number that is already in use, then you are prompted to select another number.

5 Click Add.

Scanning to an FTP address

Scanning to an FTP address using a shortcut number

1 Load an original document faceup, short edge first into the ADF tray or facedown on the scanner glass.

Notes:

- Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.
- The ADF indicator light comes on when the paper is loaded properly.
- 2 If you are loading a document into the ADF tray, then adjust the paper guides.
- 3 From the printer control panel, press #, and then enter the FTP shortcut number.
- 4 Press

Scanning to a computer

Scanning to a computer

1 Open a Web browser, and then type the printer IP address in the address field.

Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Scan Profile > Create Scan Profile.
- 3 Select your scan settings, and then click **Next**.
- 4 Select a location on your computer where you want to save the scanned output file.
- **5** Type a scan name.

The scan name is the name that appears in the Scan Profile list on the display.

- 6 Click Submit.
- **7** Review the instructions on the Scan Profile screen.

A shortcut number is automatically assigned when you click **Submit**. You can use this shortcut number when you are ready to scan your documents.

a Load an original document faceup, short edge first into the ADF tray or facedown on the scanner glass.

Scanning 93

Notes:

• Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass.

- The ADF indicator light turns on when the paper is loaded properly.
- **b** If you are loading a document into the ADF tray, then adjust the paper guides.
- **c** From the printer control panel, press #, and then type the shortcut number using the keypad, or press the up or down arrow button to scroll to **Held Jobs**, and then press the up or down arrow button to scroll to **Profiles**.

After entering the shortcut number, the scanner scans and sends the document to the directory or program you specified. If you selected **Profiles** on the printer control panel, then locate your shortcut on the list.

8 View the file from the computer.

The output file is saved in the location or launched in the program you specified.

Understanding the printer menus

Menus list

Paper Menu	Reports	Network/Ports	Security	Settings
Default Source	Menu Settings Page	Active NIC	Confidential Print	General Settings
Paper Size/Type	Device Statistics	Standard Network ²	Security Audit Log	Copy Settings
Configure MP	Network Setup Page ¹	SMTP Setup	Set Date and Time	Fax Settings
Substitute Size	Shortcut List			E-mail Settings
Paper Texture	Fax Job Log			FTP Settings
Paper Weight	Fax Call Log			Print Settings
Paper Loading	Copy Shortcuts			
Custom Types	E-mail Shortcuts			
Custom Scan Sizes	Fax Shortcuts			
Universal Setup	FTP Shortcuts			
	Profiles List			
	Print Fonts			
	Asset Report			
Help	Manage Shortcuts			
Print All Guides	Fax Shortcuts			
Copy Guide	E-mail Shortcuts			
E-mail Guide	FTP Shortcuts			
Fax Guide	Copy Shortcuts			
FTP Guide	Profile Shortcuts			
Print Defects Guide				
Information Guide				
Supplies Guide				

¹ Depending on the printer setup, this menu item appears as Network Setup Page or Network [x] Setup Page.

² Depending on the printer setup, this menu item appears as Standard Network or Network [x].

Paper menu

Default Source menu

Use	То
Default Source	Set a default paper source for all print jobs.
Tray [x] MP Feeder Manual Paper	Notes: • Tray 1 (standard tray) is the factory default setting.
Manual Paper Manual Envelope	• From the Paper menu, set Configure MP to "Cassette" for MP Feeder to appear as a menu setting.
	 If two trays contain paper of the same size and type, and the trays have the same settings, then the trays are automatically linked. When one tray is empty, the print job continues using the linked tray.

Paper Size/Type menu

То
Specify the size of the paper loaded in each tray.
Notes:
 Letter is the U.S. factory default setting. A4 is the international factory default setting. If the same size and type of paper are loaded in two trays and the tray settings for paper size and type match, then the trays are automatically linked. The multipurpose feeder may also be linked. When one tray is empty, the job prints using paper from the linked tray. A6 is supported only in Tray 1 and in the multipurpose feeder.
 Notes: Plain Paper is the factory default setting for Tray 1. Custom Type [x] is the factory default setting for all other trays. If available, a user-defined name will appear instead of Custom Type [x]. Use this menu to configure automatic tray linking.

Use	То
MP Feeder Size	Specify the size of the paper loaded in the multipurpose feeder.
A4	Notes:
A5	
A6	Letter is the U.S. factory default setting. A4 is the international
JIS B5	factory default setting.
Letter	 From the Paper menu, set Configure MP to "Cassette" for MP Feeder Size to appear as a menu item.
Legal	·
Executive	 The multipurpose feeder does not automatically detect paper size. The paper size value must be set.
Oficio (Mexico)	The paper size value mast se sea
Folio	
Statement	
Universal	
7 3/4 Envelope	
9 Envelope	
10 Envelope	
DL Envelope	
C5 Envelope	
B5 Envelope	
Other Envelope	
MP Feeder Type	Specify the type of the paper loaded in the multipurpose feeder.
Plain Paper	Notes:
Card Stock	Plain Paper is the factory default setting.
Transparency	
Recycled	 From the Paper menu, set Configure MP to "Cassette" in order for MP Feeder Type to appear as a menu item.
Labels	Will I code! Type to appear as a mena item.
Bond	
Envelope	
Rough Envelope	
Letterhead	
Preprinted	
Colored Paper	
Light Paper	
Heavy Paper	
Rough/Cotton	
Custom Type [x]	

Note: Only installed trays and feeders are listed in this menu.

Use	То
Manual Paper Size	Specify the size of the paper being manually loaded.
Α4	Note: Letter is the U.S. factory default setting. A4 is the international
A5	factory default setting.
A6	
JIS B5	
Letter	
Legal	
Executive	
Oficio (Mexico)	
Folio	
Statement	
Universal	
Manual Paper Type	Specify the type of the paper being manually loaded.
Plain Paper	Notes:
Card Stock	Notes.
Transparency	 Plain Paper is the factory default setting.
Recycled	 From the Paper menu, set Configure MP to "Manual" in order for
Labels	Manual Paper Type to appear as a menu item.
Bond	
Letterhead	
Preprinted	
Colored Paper	
Light Paper	
Heavy Paper	
Rough/Cotton	
Custom Type [x]	
Manual Envelope Size	Specify the size of the envelope being manually loaded.
7 3/4 Envelope	Note: 10 Envelope is the U.S. factory default setting. DL Envelope is the
9 Envelope	international factory default setting.
10 Envelope	
DL Envelope	
C5 Envelope	
B5 Envelope	
Other Envelope	
Manual Envelope Type	Specify the type of the envelope being manually loaded.
Envelope	Note: Envelope is the factory default setting.
Rough Envelope	Hote. Livelope is the factory default setting.
Custom Type [x]	
Note: Only installed trays and fee	

Configure MP menu

Use	То
Configure MP	Determine when the printer selects paper from the multipurpose feeder.
Cassette	Notes:
Manual First	 Cassette is the factory default setting. Cassette configures the multipurpose feeder as the automatic paper source.
	 Manual sets the multipurpose feeder only for manual-feed print jobs. First configures the multipurpose feeder as the primary paper source.

Substitute Size menu

Use	То
Substitute Size Off	Substitute a specified paper size if the requested paper size is not available.
Statement/A5	Notes:
Letter/A4 All Listed	All Listed is the factory default setting. All available substitutions are allowed.
	Off indicates that no size substitutions are allowed.
	• Setting a size substitution lets the print job continue without Change Paper appearing.

Paper Texture menu

Use	То
Plain Texture Smooth Normal Rough	Specify the relative texture of the plain paper loaded. Note: Normal is the factory default setting.
Card Stock Texture Smooth Normal Rough	Specify the relative texture of the card stock loaded. Notes: Normal is the factory default setting. The options appear only if card stock is supported.
Transparency Texture Smooth Normal Rough	Specify the relative texture of the transparencies loaded. Note: Normal is the factory default setting.
Recycled Texture Smooth Normal Rough	Specify the relative texture of the recycled paper loaded. Note: Normal is the factory default setting.

Use	То
Labels Texture Smooth Normal Rough	Specify the relative texture of the labels loaded. Note: Normal is the factory default setting.
Bond Texture Smooth Normal Rough	Specify the relative texture of the bond paper loaded. Note: Rough is the factory default setting.
Envelope Texture Smooth Normal Rough	Specify the relative texture of the envelopes loaded. Note: Normal is the factory default setting.
Rough Envelope Texture Rough	Specify the relative texture of the rough envelopes loaded.
Letterhead Texture Smooth Normal Rough	Specify the relative texture of the letterhead loaded. Note: Normal is the factory default setting.
Preprinted Texture Smooth Normal Rough	Specify the relative texture of the preprinted paper loaded. Note: Normal is the factory default setting.
Colored Texture Smooth Normal Rough	Specify the relative texture of the colored paper loaded. Note: Normal is the factory default setting.
Light Texture Smooth Normal Rough	Specify the relative texture of the paper loaded. Note: Normal is the factory default setting.
Heavy Texture Smooth Normal Rough	Specify the relative texture of the paper loaded. Note: Normal is the factory default setting.
Rough/Cotton Texture Rough	Specify the relative texture of the cotton paper loaded.
Custom [x] Texture Smooth Normal Rough	Specify the relative texture of the custom paper loaded. Notes: Normal is the factory default setting. The options appear only if the custom type is supported.

Paper Weight menu

Use	То
Plain Weight Light Normal Heavy	Specify the relative weight of the plain paper loaded. Note: Normal is the factory default setting.
Card Stock Weight Light Normal Heavy	Specify the relative weight of the card stock loaded. Note: Normal is the factory default setting.
Transparency Weight Light Normal Heavy	Specify the relative weight of the transparencies loaded. Note: Normal is the factory default setting.
Recycled Weight Light Normal Heavy	Specify the relative weight of the recycled paper loaded. Note: Normal is the factory default setting.
Labels Weight Light Normal Heavy	Specify the relative weight of the labels loaded. Note: Normal is the factory default setting.
Bond Weight Light Normal Heavy	Specify the relative weight of the bond paper loaded. Note: Normal is the factory default setting.
Envelope Weight Light Normal Heavy	Specify the relative weight of the envelope loaded. Note: Normal is the factory default setting.
Rough Envelope Weight Light Normal Heavy	Specify the relative weight of the rough envelope loaded. Note: Normal is the factory default setting.
Letterhead Weight Light Normal Heavy	Specify the relative weight of the letterhead loaded. Note: Normal is the factory default setting.
Preprinted Weight Light Normal Heavy	Specify the relative weight of the preprinted paper loaded. Note: Normal is the factory default setting.

Use	То
Colored Weight Light Normal Heavy	Specify the relative weight of the colored paper loaded. Note: Normal is the factory default setting.
Light Weight Light	Specify that the relative weight of the paper loaded is light.
Heavy Weight Heavy	Specify the relative weight of the paper loaded is heavy.
Rough/Cotton Weight Light Normal Heavy	Specify the relative weight of the cotton or rough paper loaded. Note: Normal is the factory default setting.
Custom [x] Weight Light Normal Heavy	Specify the relative weight of the custom paper loaded. Notes: Normal is the factory default setting. The options appear only when the custom type is supported.

Paper Loading menu

Use	То
Recycled Loading Duplex Off	Determine and set two-sided printing for all print jobs that specify Recycled as the paper type.
Bond Loading Duplex Off	Determine and set two-sided printing for all print jobs that specify Bond as the paper type.
Letterhead Loading Duplex Off	Determine and set two-sided printing for all print jobs that specify Letterhead as the paper type.
Preprinted Loading Duplex Off	Determine and set two-sided printing for all print jobs that specify Preprinted as the paper type.
Colored Loading Duplex Off	Determine and set two-sided printing for all print jobs that specify Colored as the paper type.

Notes:

- Duplex sets two-sided printing as the default for all print jobs unless one-sided printing is set from Printing Preferences or Print dialog.
- If Duplex is selected, then all print jobs are sent through the duplex unit, including one-sided jobs.
- Off is the factory default setting for all the menus.

Use	То
Light Loading Duplex Off	Determine and set two-sided printing for all print jobs that specify Light as the paper type.
Heavy Loading Duplex Off	Determine and set two-sided printing for all print jobs that specify Heavy as the paper type.
Custom [x] Loading Duplex	Determine and set two-sided printing for all print jobs that specify Custom [x] as the paper type.
Off	Note: Custom [x] Loading is available only if the custom type is supported.

Notes:

- Duplex sets two-sided printing as the default for all print jobs unless one-sided printing is set from Printing Preferences or Print dialog.
- If Duplex is selected, then all print jobs are sent through the duplex unit, including one-sided jobs.
- Off is the factory default setting for all the menus.

Custom Types menu

Use	То
Custom Type [x] Paper Card Stock	Associate a paper or specialty media type with a factory default custom type name or a user-defined custom name created from the Embedded Web Server or from MarkVision TM Professional.
Transparency Rough/Cotton Labels Vinyl Labels Envelope	 Notes: Paper is the factory default setting. The custom media type must be supported by the selected tray or multipurpose feeder in order to print from that source.
Recycled Paper Card Stock Transparency Rough/Cotton Labels Vinyl Labels Envelope	Specify a paper type when Recycled is selected in other menus. Notes: Paper is the factory default setting. The custom media type must be supported by the selected tray or multipurpose feeder in order to print from that source.

Custom Scan Sizes menu

Use	То
Custom Scan Size [x]	Specify a custom scan size name, size, and page orientation.
Scan Size Name	Notes:
Width Height Orientation	8.5 inches is the U.S. factory default setting for Width. 216 mm is the international factory default setting for Width.
2 scans per side Off	• 14 inches is the U.S. factory default setting for Height. 356 mm is the international factory default setting for Height.
On	Portrait is the factory default setting for Orientation.
	Off is the factory default setting for 2 scans per side.

Universal Setup menu

Use	То
Units of Measure	Identify the units of measure.
Inches	Notes:
Millimeters	 Inches is the U.S. factory default setting.
	Millimeters is the international factory default setting.
Portrait Width	Set the portrait width.
3–14.17 inches	Notes:
76–360 mm	 If the width exceeds the maximum, then the printer uses the maximum width allowed.
	 8.5 inches is the U.S. factory default setting. You can increase the width in 0.01-inch increments.
	 216 mm is the international factory default setting. You can increase the width in 1-mm increments.
Portrait Height	Set the portrait height.
3–14.17 inches	Notes:
76–360 mm	 If the height exceeds the maximum, then the printer uses the maximum height allowed.
	• 14 inches is the U.S. factory default setting. You can increase the height in 0.01-inch increments.
	 356 mm is the international factory default setting. You can increase the height in 1-mm increments.
Feed Direction Short Edge	Specify the feed direction if the paper can be loaded in either direction.
Long Edge	Notes:
	Short Edge is the factory default setting.
	 Long Edge appears only when the longest edge is shorter than the maximum width supported in the tray.

Reports menu

Reports menu

Use	То
Menu Settings Page	Print a report containing information about the paper loaded into trays, installed memory, total page count, alarms, timeouts, printer control panel language, TCP/IP address, status of supplies, status of the network connection, and other information.
Device Statistics	Print a report containing printer statistics such as supply information and details about printed pages.
Network Setup Page	Print a report containing information about the network printer settings, such as the TCP/IP address information.
	Note: This menu item appears only in network printers or printers connected to print servers.
Shortcut List	Print a report containing information about configured shortcuts.
Fax Job Log	Print a report containing information about the last 200 completed faxes.
	Note: This menu item is available only when Enable Job Log is set to On in the Fax Settings menu.
Fax Call Log	Print a report containing information about the last 100 attempted, received, and blocked calls.
	Note: This menu item is available only when Enable Job Log is set to On in the Fax Settings menu.
Copy Shortcuts	Print a report containing information about copy shortcuts.
E-mail Shortcuts	Print a report containing information about e-mail shortcuts.
Fax Shortcuts	Print a report containing information about fax shortcuts.
FTP Shortcuts	Print a report containing information about FTP shortcuts.
Profiles List	Print a list of profiles stored in the printer.
Print Fonts	Print a report of all the fonts available for the printer language currently set in the printer.
Asset Report	Print a report containing asset information including the printer serial number and model name. The report contains text and UPC bar codes that can be scanned into an asset database.

Network/Ports menu

Active NIC menu

Use	То
Active NIC	Notes:
Auto	Auto is the factory default setting.
[list of available network cards]	This menu item appears only when an optional network card is installed.

Standard Network or Network [x] menu

Note: Only active ports appear in this menu.

Use	То
Energy Efficient Ethernet Enable	Reduce power consumption when the printer receives no data from the Ethernet network.
Disable	Note: Enable is the factory default setting.
PCL SmartSwitch On	Set the printer to automatically switch to PCL emulation when a print job requires it, regardless of the default printer language.
Off	Notes:
	On is the factory default setting.
	 If PCL SmartSwitch is disabled, then the printer does not examine incoming data and it uses the default printer language specified in the Setup menu.
PS SmartSwitch On	Set the printer to automatically switch to PS emulation when a print job requires it, regardless of the default printer language.
Off	Notes:
	On is the factory default setting.
	 If PS SmartSwitch is disabled, then the printer does not examine incoming data and it uses the default printer language specified in the Setup menu.
NPA Mode Off	Set the printer to perform the special processing required for bidirectional communication following the conventions defined by the NPA protocol.
Auto	Notes:
	Auto is the factory default setting.
	The printer automatically restarts when the setting is changed from the control panel.

Use	То
Network Buffer	Set the size of the network input buffer.
Auto	Notes:
3KB to [maximum size allowed]	Auto is the factory default setting.
	The maximum size allowed depends on the amount of memory in the printer, the size of the other link buffers, and whether Resource Save is set to On or Off.
	To increase the maximum size range for the Network Buffer, disable or reduce the size of the parallel, serial, and USB buffers.
	The printer automatically restarts when the setting is changed from the control panel.
Job Buffering Off	Temporarily store print jobs in the printer hard disk before printing. This menu only appears when a formatted disk is installed.
On	Notes:
Auto	Off is the factory default setting.
	The printer automatically restarts when the setting is changed from the control panel. The menu selection is then updated.
Mac Binary PS	Set the printer to process Macintosh binary PostScript print jobs.
On	Note: Auto is the factory default setting.
Off	
Auto	
Standard Network Setup OR	Show and set the printer network settings.
Network [x] Setup	Note: The Wireless menu appears only when the printer is connected to a
Reports	wireless network.
Network Card TCP/IP	
IPv6	
Wireless	
AppleTalk	

Reports menu

To access the menu, navigate to either of the following:

- Network/Ports > Standard Network > Standard Network Setup > Reports
- Network/Ports > Network [x] > Network [x] Setup > Reports

Use	То
Print Setup Page	Print a report containing information about the network printer settings, such as the TCP/IP address.

Network Card menu

To access the menu, navigate to either of the following:

- Network/Ports > Standard Network > Standard Network Setup > Network Card
- Network/Ports > Network [x] > Network [x] Setup > Network Card

Use	То
View Card Status Connected Disconnected	View the connection status of the wireless network adapter.
View Card Speed	View the speed of an active wireless network adapter.
Network Address UAA LAA	View the network addresses.
Job Timeout 0, 10–225 seconds	Set the amount of time it takes for a network print job to be canceled. Notes:
	 "90 seconds" is the factory default setting. A setting value of 0 disables the timeout. If a value between 1 and 9 is selected, then Invalid appears on the display, and the value is not saved.
Banner Page Off On	Allow the printer to print a banner page. Note: Off is the factory default setting.

TCP/IP menu

To access the menu, navigate to either of the following:

- Network/Ports > Standard Network > Standard Network Setup > TCP/IP
- Network/Ports > Network [x] > Network [x] Setup > TCP/IP

Note: This menu is available only in network printers or printers attached to print servers.

Use	То
Set Hostname	Set the current TCP/IP host name.
	Note: This can be changed only from the Embedded Web Server.
IP Address	View or change the current TCP/IP address.
	Note: Manually setting the IP address sets the Enable DHCP and Enable Auto IP settings to Off. It also sets Enable BOOTP and Enable RARP to Off on systems that support BOOTP and RARP.
Netmask	View or change the current TCP/IP netmask.
Gateway	View or change the current TCP/IP gateway.

Use	То
Enable DHCP	Specify the DHCP address and parameter assignment.
On	Note: On is the factory default setting.
Off	
Enable RARP	Specify the RARP address assignment setting.
On	Note: Off is the factory default setting.
Off	
Enable BOOTP	Specify the BOOTP address assignment setting.
On	Note: On is the factory default setting.
Off	
Enable AutoIP	Specify the Zero Configuration Networking setting.
Yes	Note: Yes is the factory default setting.
No	
Enable FTP/TFTP	Enable the built-in FTP server, which lets you send files to the printer using File
Yes	Transfer Protocol.
No	Note: Yes is the factory default setting.
Enable HTTP Server	Enable the built-in Web server (Embedded Web Server). When enabled, the
Yes	printer can be monitored and managed remotely using a Web browser.
No	Note: Yes is the factory default setting.
WINS Server Address	View or change the current WINS server address.
Enable DDNS	View or change the current DDNS setting.
Yes	Note: Yes is the factory default setting.
No	
Enable mDNS	View or change the current mDNS setting.
Yes	Note: Yes is the factory default setting.
No	
DNS Server Address	View or change the current DNS server address.
Backup DNS Server Address	View or change the backup DNS server addresses.
Backup DNS Server Address 2	
Backup DNS Server Address 3	
Enable HTTPS	View or change the current HTTPS setting.
Yes	Note: Yes is the factory default setting.
No	

IPv6 menu

To access the menu, navigate to any of the following:

- Network/Ports menu > Standard Network > Standard Network Setup > IPv6
- Network/Ports menu > Network [x] > Network [x] Setup > IPv6

Note: This menu is available only in network printers or printers that are attached to print servers.

Use	То
Enable IPv6	Enable IPv6 in the printer.
On	Note: On is the factory default setting.
Off	
Auto Configuration	Specify whether or not the network adapter accepts the automatic
On	IPv6 address configuration entries provided by a router.
Off	Note: On is the factory default setting.
Set Hostname	Set the host name.
View Address	Note: These settings can be changed only from the Embedded
View Router Address	Web Server.
Enable DHCPv6	Enable DHCPv6 in the printer.
On	Note: On is the factory default setting.
Off	

Wireless menu

Note: This menu is available only in printers connected to an Ethernet network and printers with a wireless network adapter attached.

To access the menu, navigate to either of the following:

- Network/Ports > Standard Network > Standard Network Setup > Wireless
- Network/Ports > Network [x] > Network [x] Setup > Wireless

Use	То
Wi-Fi Protected Setup (WPS) Start Push Button Method	Establish a wireless network connection and enable network security.
Start PIN Method	Notes:
	Start Push Button Method connects the printer to a wireless network when buttons on both the printer and the access point (wireless router) are pressed within a given period of time.
	 Start PIN Method connects the printer to a wireless network when a PIN on the printer is entered into the wireless settings of the access point.
Enable/Disable WPS Auto-detection Enable	Automatically detect the connection method that an access point with WPS uses—Start Push Button Method or Start PIN Method.
Disable	Note: Disable is the factory default setting.
Network Mode	Specify the network mode.
BSS Type	Notes:
Infrastructure Ad hoc	Infrastructure is the factory default setting. This lets the printer access a network using an access point.
	Ad hoc configures a wireless connection directly between the printer and a computer.

Use	То
Compatibility 802.11b/g 802.11b/g/n	Specify the wireless standard for the wireless network. Note: The 802.11b/g/n is the factory default setting.
Choose Network	Select an available network for the printer to use.
View Signal Quality	View the quality of the wireless connection.
View Security Mode	View the encryption method for the wireless network.

AppleTalk menu

To access the menu, navigate to either of the following:

- Network/Ports > Standard Network > Standard Network Setup > AppleTalk
- Network/Ports > Network [x] > Network [x] Setup > AppleTalk

Use	То
Activate	Enable or disable AppleTalk support.
Yes No	Note: No is the factory default setting.
View Name	Show the assigned AppleTalk name.
	Note: The AppleTalk name can be changed only from the Embedded Web Server.
View Address	Show the assigned AppleTalk address.
	Note: The AppleTalk address can be changed only from the Embedded Web Server.
Set Zone	Provide a list of AppleTalk zones available on the network.
[list of zones available on the network]	Note: The default zone for the network is the factory default setting.

SMTP Setup menu

Use	То
Primary SMTP Gateway	Specify SMTP server gateway and port information.
Primary SMTP Gateway Port	Note: 25 is the default SMTP gateway port.
Secondary SMTP Gateway	
Secondary SMTP Gateway Port	
SMTP Timeout 5–30	Specify the amount of time in seconds before the server stops trying to send an e-mail.
	Note: 30 seconds is the factory default setting.
Reply Address	Specify a reply address of up to 128 characters in the e-mail sent by the printer.

Use	То
Use SSL Disabled	Set the printer to use SSL for increased security when connecting to the SMTP server.
Negotiate	Notes:
Required	Disabled is the factory default setting.
	When the Negotiate setting is used, the SMTP server determines if SSL will be used.
SMTP Server Authentication	Specify the type of user authentication required for scan to e-mail
No authentication required	privileges.
Login/Plain	Note: "No authentication required" is the factory default setting.
CRAM-MD5	
Digest-MD5	
NTLM	
Kerberos 5	
Device-Initiated E-mail	Specify what credentials will be used when communicating to the
None	SMTP server.
Use Device SMTP Credentials	Notes:
Device Userid	None is the factory default setting for Device-Initiated E-mail.
Device Password	Device Userid and Device Password are used to log in to the SMTP server when Use Device SMTP Credentials is selected.

Security menu

Security Audit Log menu

Use	То
Export Log	Let an authorized user export the audit log.
	Notes:
	 To export the audit log from the printer control panel, a flash drive must be attached to the printer.
	 The audit log can be downloaded from the Embedded Web Server and saved on a computer.
Delete Log	Specify whether or not audit logs are deleted.
Yes	Note: Yes is the factory default setting.
No	

Use	То
Configure Log	Specify how and whether or not audit logs are created.
Enable Audit Yes	Notes:
No Enable Remote Syslog	 Enable Audit determines if events are recorded in the secure audit log and remote syslog. No is the factory default setting.
No	• Enable Remote Syslog determines if logs are sent to a remote server. No is the factory default setting.
Yes Remote Syslog Facility	 Remote Syslog Facility determines the value used to send logs to the remote syslog server. 4 is the factory default setting.
0–23 Severity of events to log 0–7	 If the security audit log is activated, then the severity value of each event is recorded. 4 is the factory default setting.

Set Date and Time menu

Use	То
Current Date and Time	View the current date and time settings for the printer.
Manually Set Date and Time	Enter the date and time.
[input date/time]	Notes:
	Manually setting the date and time sets Enable NTP to No.
	The wizard lets you set the date and time in YYYY-MM-DD-HH:MM format.
Time Zone	Select the time zone.
[list of time zones]	Note: GMT is the factory default settings.
Automatically observe DST On	Set the printer to use the applicable daylight saving time (DST) start and end times associated with the printer Time Zone setting.
Off	Note: On is the factory default setting.
Enable NTP On	Enable Network Time Protocol, which synchronizes the clocks of devices on a network.
Off	Notes:
	On is the factory default setting.
	This setting is turned off if you manually set the date and time.

Settings menu

General Settings menu

Use	То
Display Language	Set the language of the text that appears on the display.
English	
Francais	Note: Not all languages are available for all models. You may need to install special hardware for some languages.
Deutsch	need to instail special hardware for some languages.
Italiano	
Espanol	
Dansk	
Norsk	
Nederlands	
Svenska	
Portuguese	
Suomi	
Russian	
Polski	
Greek	
Magyar	
Turkce	
Cesky	
Simplified Chinese	
Traditional Chinese	
Korean	
Japanese	
Show Supply Estimates	View supply estimates on the control panel, Embedded Web
Show estimates	Server, menu settings, and device statistics reports.
Do not show estimates	Note: Show estimates is the factory default setting.
Eco-Mode	Minimize the use of energy, paper, or specialty media.
Off	Notes:
Energy	Off is the factory default setting.
Energy/Paper	-
Paper	Setting Eco-Mode to Energy or may affect printer performance, but not print quality.
ADF Loaded Beep	Enable an ADF beep sound when loading paper.
Enabled	Note: Enabled is the factory default setting.
Disabled	
Quiet Mode	Reduce printer noise.
Off	Note: Off is the factory default setting.
On	

Use	То
Run Initial Setup	Run the setup wizard.
Yes	
No	
Paper Sizes	Specify the unit of measurement for paper sizes.
US	Note: US is the factory default setting.
Metric	
Scan to PC Port Range [port range]	Specify a valid port range for printers behind a port blocking firewall.
	Note: 9751:12000 is the factory default setting.
Home screen customization Change Language Copy Fax Fax Shortcuts	Change the icons that appear on the home screen. Select from the following options: Display Do not display Notes:
E-mail Shortcuts FTP Shortcuts Search Held Jobs Held Jobs	 Do not display is the factory default setting for Change Language, Fax shortcuts, E-mail shortcuts, FTP shortcuts, Bookmarks, and Jobs by user.
Held Jobs Bookmarks Jobs by User	 Display is the factory default setting for Copy, Fax, Search Held Jobs, and Held Jobs.
One Page Copy	Set copies from the scanner glass to only one page at a time.
Off	Note: Off is the factory default setting.
On	
Allow Background Removal	Specify whether to allow image background removal.
On Off	Note: On is the factory default setting.
Allow Custom Job Scans	Scan multiple jobs to one file.
On Off	Note: On is the factory default setting.
Scanner Jam Recovery	Specify how to reload a scanned job when a paper jam occurs
Job Level	in the ADF.
Page Level	Note: Job Level is the factory default setting.
Alarms	Set an alarm when the printer requires user intervention.
Alarm Control Cartridge Alarm	Select from the following options: Off Single Continuous
	Notes:
	 Single is the factory default setting for Alarm Control. Off is the factory default setting for Cartridge Alarm.

Use	То
Timeouts Sleep Mode Disabled 1–120	Set the idle time before the printer begins operating in Sleep Mode. Notes: 20 minutes is the factory default setting. Disabled appears only when Energy Conserve is set to Off.
Timeouts Print with Display Off Allow printing with display off Display on when printing	Print a job with the display turned off. Note: Display on when printing is the factory default setting.
Timeouts Hibernate Timeout Disabled 20 minutes 1 hour 2 hours 3 hours 6 hours 1 day 2 days 3 days 1 week 2 weeks 1 month	Set the time before the printer enters Hibernate mode. Note: 3 days is the factory default setting.
Timeouts Hibernate Timeout on Connection Hibernate Do Not Hibernate	Set the printer to Hibernate mode when there is an active Ethernet connection. Note: Do Not Hibernate is the factory default setting.
Timeouts Screen Timeout 15–300	Set the idle time before the display returns to Ready state. Note: 30 seconds is the factory default setting.
Timeouts Print Timeout Disabled 1–255	Set the printer to end a print job after it has been idle for the specified amount of time. Notes: 90 seconds is the factory default setting. When the timer expires, any partially printed page still in the printer is printed. Print Timeout is available only when using PCL emulation.

Use	То
Timeouts	Set the time the printer waits to receive for more data before
Wait Timeout	canceling a print job.
Disabled	Notes:
15–65535	 40 seconds is the factory default setting.
	Wait Timeout is available only when the printer is using
	PostScript emulation.
Error Recovery	Automatically reboot the printer.
Auto Reboot	Note: Reboot always is the factory default setting.
Reboot when idle	and the second s
Reboot always	
Reboot never	
Error Recovery	Determine the number of automatic reboots the printer can
Max Auto Reboots	perform.
1-20	Note: 2 is the factory default setting.
Print Recovery	Let the printer automatically continue printing from certain
Auto Continue	offline situations when these are not resolved within the
Disabled	specified time period.
5–255	Note: Disabled is the factory default setting.
Print Recovery	Specify whether the printer reprints jammed pages.
Jam Recovery	Note: Auto is the factory default setting. The printer reprints
On	jammed pages unless other tasks need the memory required
Off	to hold pages.
Auto	
Print Recovery	Set the printer to check for jammed paper.
Jam Assist	Note: On is the factory default setting.
On	
Off	
Print Recovery	Set the printer to print the correct output for a page.
Page Protect	Note: Off is the factory default setting.
Off	
On	
Accessibility Settings	Adjust the Voice Guidance speaking rate.
Speech Rate	Note: Normal is the factory default setting.
Very Slow	
Slow	
Normal	
Fast	
Faster	
Very Fast	
Rapid	
Very Rapid	
Fastest	

Use	То
Accessibility Settings	Set the headphones volume.
Headphone Volume 1–10	Note: 5 is the factory default setting.
Information Sent to Lexmark	Send anonymous device usage information to Lexmark.
Supplies and Page Usage (Anonymous) On Off	Note: The default value depends on what you selected during the initial setup.
Press Sleep Button Do Nothing	Determine how the printer, while in idle state, reacts to a short press of the Sleep button.
Sleep Hibernate	Note: Sleep is the factory default setting.
Press and Hold Sleep Button Do Nothing	Determine how the printer, while in idle state, reacts to a long press of the Sleep button.
Sleep Hibernate	Note: Do Nothing is the factory default setting.
Factory Defaults	Restore the printer factory default settings.
Do Not Restore	Notes:
Restore Now	Do Not Restore is the factory default setting.All downloads stored in the RAM are deleted.
Custom Home Message Off IP Address Hostname Contact Name Location Zero Configuration Name	Select a custom home message that appears as an alternating display of the printer status.
Custom Text 1	
Export Configuration Package Export	Export the configuration package to a flash drive.
Export Compressed Logs File Export	Export the compressed logs file to a flash drive.

Copy Settings menu

Use	То
Content Type	Specify the content of the original document.
Text	Note: Text/Photo is the factory default setting.
Graphics	
Text/Photo	
Photo	

Use	То
Content Source Black/White Laser Color Laser Inkjet Photo/Film Magazine	Specify how the original document was produced. Note: Black/White Laser is the factory default setting.
Newspaper Press Other	
Sides (Duplex) 1 sided to 1 sided 1 sided to 2 sided 2 sided to 1 sided 2 sided to 2 sided	 Specify whether an original document is two-sided or one-sided, and then specify whether the copy should be two-sided or one-sided. Notes: The ADF scans only one side of the sheet. 1 sided to 1 sided is the factory default setting. This setting is selected when using a one-sided original document for a one-sided copy job.
Paper Saver Off 2-up Portrait 2-up Landscape 4-up Portrait 4-up Landscape	Copy two or four sheets of a document on one page. Note: Off is the factory default setting.
Print Page Borders On Off	Specify whether a border is printed. Note: Off is the factory default setting.
Collate (1,1,1) (2,2,2) (1,2,3) (1,2,3)	Stack the pages of a print job in sequence when printing multiple copies. Note: (1,2,3) (1,2,3) is the factory default setting.

Use	То
Original Size Letter Legal Executive Folio Statement Oficio (Mexico) Universal Auto Size Sense A4 A5 A6 JIS B5 Custom Scan Size [x] Book Original Business Card 3 x 5 in. 4 x 6 in. ID Card	Specify the size of the original document. Note: Letter is the U.S. factory default setting. A4 is the international factory default setting.
Copy To Source Tray [x] Auto Size Match MP Feeder	Specify the paper source for copy jobs. Note: Tray 1 is the factory default setting.
Transparency Separators On Off	Place a sheet of paper between transparencies. Note: On is the factory default setting.
Separator Sheets Off Between Copies Between Jobs Between Pages	Place a sheet of paper between pages, copies, or jobs. Note: Off is the factory default setting.
Separator Sheet Source Tray [x] MP Feeder	Specify the paper source for the separator sheet. Note: Tray 1 is the factory default setting.
Darkness 1–9	Lighten or darken the output. Note: 5 is the factory default setting.
Number of Copies 1–999	Specify the number of copies for the copy job. Note: 1 is the factory default setting.

Use	То
Overlay Confidential Copy Draft Urgent Custom Off	Specify the overlay text printed on each page of the copy job. Note: Off is the factory default setting.
Custom Overlay	Specify the custom overlay text.
Allow priority copies On Off	Allow interruption of a print job to copy a page or document. Note: On is the factory default setting.
Background Removal -4 to 4	Adjust the amount of background visible on a copy. Note: 0 is the factory default setting.
Auto Center Off On	Automatically align the content at the center of the page. Note: Off is the factory default setting.
Color Dropout Color Dropout None Red Green Blue Default Red Threshold 0-255 Default Green Threshold 0-255 Default Blue Threshold 0-255	 Specify which color to drop and to adjust the dropout setting for each color threshold. Notes: None is the factory default setting for Color Dropout. 128 is the factory default setting for each color threshold.
Contrast 0-5 Best for content	Specify the contrast of the output. Note: Best for content is the factory default setting.
Mirror Image Off On	Create a mirror image of the original document. Note: Off is the factory default setting.
Negative Image Off On	Create a negative image of the original document. Note: Off is the factory default setting.
Shadow Detail -4 to 4	Adjust the amount of shadow detail visible on a copy. Note: 0 is the factory default setting.
Scan edge to edge Off On	Specify if the original document is scanned edge-to-edge. Note: Off is the factory default setting.

Use	То
Sharpness	Adjust the amount of sharpness of a copy.
1–5	Note: 3 is the factory default setting.

Fax Settings menu

Fax Mode (Analog Fax Setup) menu

Analog Fax Setup mode sends the fax job through a telephone line.

General Fax Settings

(-
Use	То
Fax Name	Specify the name of the fax in the printer.
Fax Number	Specify the number assigned to the fax.
Fax ID	Specify how the fax is identified.
Fax Name	Note: Fax Number is the factory default setting.
Fax Number	
Enable Manual Fax	Set the printer to fax manually, which requires a line splitter and a telephone
On	handset.
Off	Notes:
	Off is the factory default setting.
	 Use a regular telephone to answer an incoming fax job and to dial a fax number.
	 Press # 0 on the numeric keypad to go directly to the Manual Fax function.
Memory Use	Define the allocation of non-volatile memory between sending and receiving fax jobs.
All receive Mostly receive	Note: Equal is the factory default setting.
Equal	Note. Equal is the factory default setting.
Mostly send	
All send	
Cancel Faxes	Specify whether canceling of fax jobs is allowed.
Allow	Note: Allow is the factory default setting.
Don't Allow	
Caller ID	Specify the type of caller ID being used.
Off	
Primary	
Alternate	

Use	То
Fax Number Masking Off From left From right	Specify the direction from where digits are masked in an outgoing fax number. Notes: Off is the factory default setting. The number of characters masked is determined by the Digits to Mask setting.
Digits to Mask 0-58	Specify the number of digits to mask in an outgoing fax number. Note: 0 is the factory default setting.
Fax Cover Page Fax Cover Page Off by default On by default Never use Always use Include to Field On Off Include from Field On Off Include Message Field On Off Include Logo On Off Include Footer [x] On	 Notes: Off by default is the factory default setting for Fax Cover Page. Off is the factory default setting for all other menu items.

Fax Send Settings

Use	То
Resolution	Specify quality in dots per inch (dpi). A higher resolution gives better print quality,
Standard	but increases the fax transmission time for outgoing faxes.
Fine 200 dpi	Note: Standard is the factory default setting.
Super Fine 300 dpi	
Ultra Fine 600 dpi	

Use	То
Original Size A4 A5 A6 JIS B5 Letter Legal Executive Folio Statement Oficio (Mexico) Universal Auto Size Sense Mixed Sizes Custom Scan Size [x] Book Original Business Card 3 x 5 in. 4 x 6 in.	Specify the size of the original document. Note: Mixed Sizes is the U.S. factory default setting. A4 is the international factory default setting.
Content Type Text Text/Photo Photo Graphics	Specify the content of the original document. Note: Text is the factory default setting.
Content Source Black/White Laser Color Laser Inkjet Photo/Film Magazine Newspaper Press Other	Specify how the original document was produced. Note: Black/White Laser is the factory default setting.
Darkness 1–9	Lighten or darken the output. Note: 5 is the factory default setting.
Dial Prefix	Enter a dialing prefix, such as 99. A numeric entry field is provided.
Automatic Redial	Specify the number of times the printer tries to send the fax to a specified number. Note: 5 is the factory default setting.
Redial Frequency 1–200	Specify the number of minutes between redials. Note: 3 is the factory default setting.

Use	То
Behind a PABX	Enable or disable switchboard blind dialing without a dial tone.
Yes	_
No	Note: No is the factory default setting.
Enable ECM	Enable or disable Error Correction Made for favious
Yes	Enable or disable Error Correction Mode for fax jobs.
No	Note: Yes is the factory default setting.
-	E. Charling and the state of
Enable Fax Scans	Fax files that are scanned at the printer.
On Off	Note: On is the factory default setting.
Driver to Fax	Allow the print driver to send fax jobs.
Yes	Note: Yes is the factory default setting.
No	
Allow Save as Shortcut	Save fax numbers as shortcuts in the printer.
On	Note: On is the factory default setting.
Off	
Dial Mode	Specify the dialing sound.
Tone	Note: Tone is the factory default setting.
Pulse	
Max Speed	Specify the maximum speed in baud at which faxes are sent.
2400	Note: 33600 is the factory default setting.
4800	
9600	
14400	
33600	
Background Removal	Adjust the amount of background visible on a scanned image.
-4 to 4	Note: 0 is the factory default setting.
Color Dropout	Specify which color to drop and to adjust the dropout setting for each color
Color Dropout	threshold.
None	Notes:
Red	
Green	None is the factory default setting for Color Dropout.
Blue	128 is the factory default setting for each color threshold.
Default Red Threshold	
0–255	
Default Green Threshold	
0–255	
Default Blue Threshold	
0–255	
Contrast	Specify the contrast in the scanned image.
0–5	Note: Best for content is the factory default setting.
Best for content	

Use	То
Mirror Image	Create a mirror image of the original document.
Off	Note: Off is the factory default setting.
On	
Negative Image	Create a negative image of the original document.
Off	Note: Off is the factory default setting.
On	
Shadow Detail	Adjust the amount of shadow detail visible.
-4 to 4	Note: 0 is the factory default setting.
Scan Edge to Edge	Specify whether the original document is scanned edge-to-edge.
Off	Note: Off is the factory default setting.
On	
Sharpness	Adjust the sharpness of a fax.
1–5	Note: 3 is the factory default setting.
Enable Color Fax Scans	Enable color faxing.
Off by default	Note: Off by default is the factory default setting.
On by default	
Never Use	
Always Use	
Auto Convert Color Faxes to	Convert all outgoing faxes to black and white.
Mono Faxes	Note: On is the factory default setting.
On	
Off	

Fax Receive Settings

Use	То
Enable Fax Receive	Allow the printer to receive fax jobs.
On Off	Note: On is the factory default setting.
Enable Caller ID	Allow the printer to show caller ID.
On Off	Note: On is the factory default setting.
Rings to Answer	Specify the number of rings before answering an incoming fax job.
1–25	Note: 3 is the factory default setting.
Auto Answer	Set the printer to receive faxes automatically.
Yes No	Note: Yes is the factory default setting.
Manual Answer Code	Enter a code on the telephone number pad to begin receiving a fax.
0–9	Notes:
	• *9* is the factory default setting.
	This menu item is used when the printer shares a line with a telephone.

Use	То
Auto Reduction On Off	Scale an incoming fax job so that it fits the size of the paper loaded in the designated fax source. Note: On is the factory default setting.
Paper Source Auto Tray [x] MP Feeder	Specify the paper source for printing incoming fax jobs. Note: Auto is the factory default setting.
Separator Sheets Off Before Job After Job	Enable the printer to include separator sheets for incoming fax jobs. Note: Off is the factory default setting.
Separator Sheet Source Tray [x] MP Feeder	Specify the paper source for the separator sheet. Note: Tray 1 is the factory default setting.
Fax Footer On Off	Print the transmission information at the bottom of each page from a received fax. Note: Off is the factory default setting.
Max Speed 2400 4800 9600 14400 33600	Specify the maximum speed in baud at which faxes are received. Note: 33600 is the factory default setting.
Fax Forwarding Print Print and Forward Forward	Enable forwarding of received faxes to another recipient. Note: Print is the factory default setting.
Forward to Fax E-mail FTP LDSS	Specify the type of recipient to which faxes are forwarded. Notes: Fax is the factory default setting. This menu is available only from the printer Embedded Web Server.
Forward to Shortcut	Enter the shortcut number that matches the recipient type (Fax, E-mail, FTP, or LDSS).
Block No Name Fax Off On	Enable blocking of incoming faxes sent from devices with no fax ID specified. Note: Off is the factory default setting.
Enable Color Fax Receive On Off	Enable the printer to receive fax in color and print it in grayscale. Note: On is the factory default setting.

Fax Log Settings

Use	То
Transmission Log Print log Do not print log Print only for error	Enable printing of a transmission log after each fax job. Note: Print log is the factory default setting.
Receive Error Log Print Never Print on Error	Enable printing of a received error log following a receive error. Note: Print Never is the factory default setting.
Auto Print Logs On Off	 Enable automatic printing of fax logs. Notes: On is the factory default setting. Logs print after every 200 fax jobs.
Log Paper Source Tray [x] MP Feeder	Specify the source of the paper used for printing logs. Note: Tray 1 is the factory default setting.
Logs Display Remote Station Name Dialed Number	Specify whether printed logs display the dialed number or fax name returned. Note: Remote Station Name is the factory default setting.
Enable Job Log On Off	Enable access to the Fax Job log. Note: On is the factory default setting.
Enable Call Log On Off	Enable access to the Fax Call log. Note: On is the factory default setting.

Speaker Settings

Use	То
Speaker Mode	Specify the mode of the speaker.
Always Off	Note: On until Connected is the factory default setting. A sound is issued until
On until Connected	the fax connection is made.
Always On	
Speaker Volume	Set the speaker volume to high or low.
High	Note: High is the factory default setting.
Low	
Ringer Volume	Enable or disable the ringer volume.
Off	Note: On is the factory default setting.
On	

Answer On

Use	То
All Rings	Specify ring patterns when the printer is answering calls.
Single Ring Only	Note: All Rings is the factory default setting.
Double Ring Only	
Triple Ring Only	
Single or Double Rings Only	
Single or Triple Rings Only	
Double or Triple Rings Only	

E-mail Settings menu

Use	То
E-mail Server Setup Send me a copy Never appears On by default Off by default Always On	Send a copy of the e-mail to the sender. Note: Never appears is the factory default setting.
E-mail Server Setup Max E-mail size 0–65535 KB	Specify the maximum e-mail size. Note: E-mails larger than the specified size are not sent.
Format PDF (.pdf) TIFF (.tif) JPEG (.jpg) XPS (.xps) RTF (.rtf) TXT (.txt)	 Specify the format of the scanned file. Notes: PDF (.pdf) is the factory default setting. To use the RTF (.rtf) or TXT (.txt) option, purchase and install the AccuRead OCR solution.
PDF Settings PDF Version 1.2–1.7 A–1a Secure PDF Off On Searchable PDF Off On	 Configure the PDF settings. Notes: 1.5 is the factory default setting for PDF Version. Off is the factory default setting for Secure PDF and Searchable PDF. Secure PDF requires you to enter your password twice. To use the Searchable PDF option, purchase and install the AccuRead OCR solution.
Content Type Text Graphics Text/Photo Photo	Specify the content of the original document. Note: Text/Photo is the factory default setting.

Use	То
Content Source	Specify how the original document was produced.
Black/White Laser Color Laser Inkjet Photo/Film Magazine Newspaper Press	Note: Black/White Laser is the factory default setting.
Other	
Color Off On	Specify whether the printer captures and transmits content in color. Note: On is the factory default setting.
Resolution 75 dpi 150 dpi 200 dpi 300 dpi 400 dpi 600 dpi	Specify the resolution of the scan in dots per inch. Note: 150 dpi is the factory default setting.
Darkness 1–9	Lighten or darken the output. Note: 5 is the factory default setting.
Orientation Portrait Landscape	Specify the orientation of the scanned image. Note: Portrait is the factory default setting.
Caridscape Original Size Letter Legal Executive Folio Statement Oficio (Mexico) Universal Auto Size Sense Mixed Sizes A4 A5 A6 JIS B5 Custom Scan Size [x] Book Original Business Card 3 x 5 in. 4 x 6 in.	Specify the size of the document being scanned. Note: Letter is the U.S. factory default setting. A4 is the international factory default setting.

Use	То
JPEG Quality Best for content	Set the quality of a JPEG photo image in relation to file size and quality of the image.
5–90	Notes:
	Best for content is the factory default setting.
	• 5 reduces the file size and quality of the image.
	90 provides the best image quality, but the file size is very large.
Text Default	Set the quality of a text image in relation to file size and quality of the image.
5–90	Note: 75 is the factory default setting.
Text/Photo Default 5–90	Set the quality of a text or photo image in relation to file size and the quality of the image.
	Note: 75 is the factory default setting.
Photo Default 5–90	Set the quality of a photo image in relation to file size and the quality of the image.
	Note: 50 is the factory default setting.
E-mail images sent as	Specify how the images are sent.
Attachment Web Link	Note: Attachment is the factory default setting.
Use Multi-page Tiff On Off	Provide a choice between single-page TIFF files and multiple-page TIFF files. For a multiple-page scan-to-e-mail job, either one TIFF file is created containing all the pages, or multiple TIFF files are created with one file for each page of the job.
	Note: On is the factory default setting.
Transmission Log	Enable printing of a transmission log after each e-mail job.
Print log Do not print log Print only for error	Note: Print log is the factory default setting.
Log Paper Source	Specify the paper source for printing e-mail logs.
Tray [x] MP Feeder	Note: Tray 1 is the factory default setting.
E-mail Bit Depth 1 bit	Enable the Text/Photo mode to produce smaller file sizes by using 1-bit images when Color is set to Off.
8 bit	Note: 8 bit is the factory default setting.
Allow Save as Shortcut	Save e-mail addresses as shortcuts.
On	Notes:
Off	On is the factory default setting.
	When set to Off, the Save as Shortcut button does not appear on the e-mail destination screen.
Background Removal -4 to 4	Adjust the amount of background visible on a scanned image. Note: 0 is the factory default setting.
	<u> </u>

Use	То
Color Dropout Color Dropout	Specify which color to drop and to adjust the dropout setting for each color threshold.
None Red Green Blue Default Red Threshold 0–255 Default Green Threshold 0–255 Default Blue Threshold 0–255	 None is the factory default setting for Color Dropout. 128 is the factory default setting for each color threshold.
Contrast 0-5 Best for content	Specify the contrast of the output. Note: Best for content is the factory default setting.
Mirror Image Off On	Create a mirror image of the original document. Note: Off is the factory default setting.
Negative Image Off On	Create a negative image of the original document. Note: Off is the factory default setting.
Shadow Detail -4 to 4	Adjust the amount of shadow detail visible on a scanned image. Note: 0 is the factory default setting.
Scan edge to edge Off On	Specify whether the original document is scanned edge-to-edge. Note: Off is the factory default setting.
Sharpness 1–5	Adjust the amount of sharpness on a scanned image. Note: 3 is the factory default setting.

FTP Settings menu

Use	То
Format	Specify the file format.
PDF (.pdf)	Notes:
TIFF (.tif)	• DDE (a df) in the effections defectly entire a
JPEG (.jpg)	PDF (.pdf) is the factory default setting.
XPS (.xps)	To use the RTF (.rtf) or TXT (.txt) option, purchase and install the
RTF (.rtf)	AccuRead OCR solution.
TXT (.txt)	

Use	То
PDF Settings PDF Version 1.2–1.7 A–1a Secure PDF Off On Searchable PDF Off On	Configure the PDF settings. Notes: 1.5 is the factory default setting for PDF Version. Off is the factory default setting for Secure PDF and Searchable PDF. Secure PDF requires you to enter your password twice. To use the Searchable PDF option, purchase and install the AccuRead OCR solution.
Content Type Text Graphics Text/Photo Photo	Specify the content of the original document. Note: Text/Photo is the factory default setting.
Content Source Black/White Laser Color Laser Inkjet Photo/Film Magazine Newspaper Press Other	Specify how the original document was produced. Note: Black/White Laser is the factory default setting.
Color Off On	Specify whether the printer captures and transmits content in color. Note: On is the factory default setting.
Resolution 75 dpi 150 dpi 200 dpi 300 dpi 400 dpi 600 dpi	Specify the quality of the scan in dots per inch (dpi). Note: 150 dpi is the factory default setting.
Darkness 1–9	Lighten or darken the output. Note: 5 is the factory default setting.
Orientation Portrait Landscape	Specify the orientation of the scanned image. Note: Portrait is the factory default setting.

Use	То
Criginal Size Letter Legal Executive Folio Statement Oficio (Mexico) Universal Auto Size Sense Mixed Sizes A4 A5 A6 JIS B5 Custom Scan Size [x] Book Original Business Card 3 x 5 in. 4 x 6 in.	Specify the size of the original document. Note: Letter is the U.S. factory default setting. A4 is the international factory default setting.
JPEG Quality Best for content 5–90	Set the quality of a JPEG photo image in relation to the file size and quality of the image. Notes: Best for content is the factory default setting. Treduces the image quality and the file size. 90 produces the best image quality, but the file size is very large.
Text Default 5-90 Text/Photo Default 5-90	Set the quality of the text in relation to the file size and quality of the image. Note: 75 is the factory default setting. Set the quality of a text or photo image in relation to the file size and quality of the image.
Photo Default 5–90	Note: 75 is the factory default setting. Set the quality of a photo image in relation to the file size and quality of the image. Note: 50 is the factory default setting.
Use Multi-Page TIFF On Off	Provide a choice between single-page TIFF files and multiple-page TIFF files. For a multiple-page scan-to-FTP job, either one TIFF file is created containing all the pages, or multiple TIFF files are created with one file for each page of the job. Note: On is the factory default setting.
Transmission Log Print log Do not print log Print only for error	Specify whether to print the transmission log. Note: Print log is the factory default setting.

Use	То
Log Paper Source Tray [x] MP Feeder	Specify a paper source when printing FTP logs. Note: Tray 1 is the factory default setting.
FTP Bit Depth 1 bit 8 bit	Enable the Text/Photo mode to have smaller file sizes by using 1-bit images. Note: 8 bit is the factory default setting.
Allow Save as Shortcut On Off	Enable shortcut creation for FTP addresses. Note: On is the factory default setting.
Background Removal -4 to 4	Adjust the amount of background visible on a copy. Note: 0 is the factory default setting.
Color Dropout Color Dropout None Red Green Blue Default Red Threshold 0–255 Default Green Threshold 0–255 Default Blue Threshold 0–255	Specify which color to drop and to adjust the dropout setting for each color threshold. Notes: None is the factory default setting for Color Dropout. 128 is the factory default setting for each color threshold.
Contrast 0-5 Best for content	Specify the contrast of the output. Note: Best for content is the factory default setting.
Mirror Image Off On	Create a mirror image of the original document. Note: Off is the factory default setting.
Negative Image Off On	Create a negative image of the original document. Note: Off is the factory default setting.
Shadow Detail -4 to 4	Adjust the amount of shadow detail visible on a scanned image. Note: 0 is the factory default setting.
Scan edge to edge Off On	Specify whether the original document is scanned edge-to-edge. Note: Off is the factory default setting.
Sharpness 1–5	Adjust the amount of sharpness of the scanned image. Note: 3 is the factory default setting.

Print Settings

Setup menu

Use	То
Printer Language	Set the default printer language.
PCL Emulation	Notes:
PS Emulation PPDS Emulation	PCL Emulation is the factory default setting.
1130 Emaladon	 This does not prevent a software program from sending print jobs that use another printer language.
Print Area	Set the logical and physical printable area.
Normal Whole Page	Note: Normal is the factory default setting. When attempting to print data in the non-printable area defined by the Normal setting, the printer clips the image at the boundary.
Resource Save On Off	Specify how the printer handles temporary downloads, such as fonts and macros stored in the RAM, when the printer receives a job that requires more memory than what is available.
	Notes:
	 Off is the factory default setting. This sets the printer to retain the downloads only until memory is needed. Downloads are deleted in order to process print jobs.
	 On retains the downloads during language changes and printer resets. If the printer runs out of memory, then Memory Full [38] appears and downloads are not deleted.
Print All Order	Specify the order in which confidential and held jobs are
Alphabetical	printed when Print All is selected.
Oldest First	Note: Alphabetical is the factory default setting.
Newest First	

Finishing menu

Use	То
Sides (Duplex) 1 sided	Specify whether two-sided (duplex) printing is set as the user default setting for all print jobs.
2 sided	Notes:
	"1 sided" is the factory default setting.
	You can set two-sided printing from the software program.
	For Windows users:
	Click File > Print , and then click Properties , Preferences , Options , or Setup .
	For Macintosh users:
	Choose File > Print , and then adjust the settings from the print dialog and pop-up menus.
Duplex Binding	Define the way two-sided pages are bound and printed.
Long Edge	Notes:
Short Edge	Long Edge is the factory default setting. This assumes binding along the long edge of the page (left edge for portrait and top edge for landscape).
	Short Edge assumes binding along the short edge of the page (top edge for portrait and left edge for landscape).
Copies	Specify the default number of copies for each print job.
1–999	Note: 1 is the factory default setting.
Blank Pages	Specify whether or not blank pages are inserted in a print job.
Do Not Print Print	Note: Do Not Print is the factory default setting.
Collate	Stack the pages of a print job in sequence when printing multiple copies.
(1,1,1) (2,2,2) (1,2,3) (1,2,3)	Note: "(1,2,3)" is the factory default setting.
Separator Sheets	Specify whether or not blank separator sheets are inserted.
Off	Notes:
Between Copies	Off is the factory default setting.
Between Jobs Between Pages	• Between Copies inserts a blank sheet between each copy of a print job if Collate is set to "(1,2,3) (1,2,3)." If Collate is set to "(1,1,1) (2,2,2)," then a blank page is inserted between each set of printed pages, such as after all page 1's and after all page 2's.
	Between Jobs inserts a blank sheet between print jobs.
	Between Pages inserts a blank sheet between each page of a print job. This setting is useful when printing transparencies or when inserting blank pages in a document.

Use	То
Separator Source Tray [x] MP Feeder	 Specify the paper source for separator sheet. Notes: Tray 1 (standard tray) is the factory default setting. From the Paper menu, set Configure MP to "Cassette" for MP Feeder to appear as a menu setting.
Paper Saver Off 2-Up 3-Up 4-Up 6-Up 9-Up 12-Up 16-Up	Print multiple pages on one sheet of paper. Notes: Off is the factory default setting. When the number of pages per sheet is selected, each page is scaled so that the number of pages you want can be displayed on the sheet.
Paper Saver Ordering Horizontal Reverse Horizontal Reverse Vertical Vertical	Specify the order in which pages are printed on a single sheet when using Paper Saver. Notes: Horizontal is the factory default setting. Positioning depends on the number of pages and whether they are in portrait or landscape orientation.
Paper Saver Orientation Auto Landscape Portrait	Specify the orientation in which pages are printed on a single sheet. Note: Auto is the factory default setting. The printer chooses between portrait and landscape.
Paper Saver Border None Solid	Print a border when using Paper Saver. Note: None is the factory default setting.

Quality menu

Use	То
Print Resolution	Specify the printed output resolution in dots per inch.
300 dpi	Note: 600 dpi is the factory default setting.
600 dpi	
1200 dpi	
1200 Image Q	
2400 Image Q	

Use	То
Pixel Boost Off	Enable more pixels to print in clusters for clarity, in order to enhance images horizontally or vertically, or to enhance fonts.
Fonts Horizontally Vertically Both directions Isolated	Note: Off is the factory default setting.
Toner Darkness	Lighten or darken the printed output.
1–10	Notes:
	8 is the factory default setting.
	Selecting a smaller number can help conserve toner.
Enhance Fine Lines On	Enable a print mode preferable for files such as architectural drawings, maps, electrical circuit diagrams, and flow charts.
Off	Notes:
	Off is the factory default setting.
	 You can set this option from the printer software. For Windows users, click File > Print, and then click Properties, Preferences, Options, or Setup. For Macintosh users, choose File > Print, and then adjust the settings from the Print dialog and pop-up menus.
	 To set this option using the Embedded Web Server, type the network printer IP address in the Web browser address field.
Gray Correction	Automatically adjust the contrast enhancement applied to images.
Auto	Note: Auto is the factory default setting.
Off	
Brightness -6 to 6	Adjust the printed output either by lightening or darkening it. You can conserve toner by lightening the output.
	Note: 0 is the factory default setting.
Contrast	Adjust the contrast of printed objects.
0–5	Note: 0 is the factory default setting.

Utilities menu

Use	То
Format Flash	Format the flash memory.
Yes No	Warning—Potential Damage: Do not turn off the printer while the flash memory is being formatted.
	Notes:
	Yes deletes all data stored in flash memory.
	No cancels the format request.
	Flash memory refers to the memory added by installing a flash memory card in the printer.
	The flash memory option card must not be read/write- or write-protected.
	 This menu item appears only when a non-defective flash memory card is installed.
Activate Hex Trace	Assist in isolating the source of a print job problem.
	Notes:
	When activated, all data sent to the printer is printed in hexadecimal and character representation, and control codes are not executed.
	To exit or deactivate Hex Trace, turn off or reset the printer.
Coverage Estimator Off	Provide an estimate of the percentage coverage of toner on a page. The estimate is printed on a separate page at the end of each print job.
On	Note: Off is the factory default setting.

XPS menu

Use	То
Print Error Pages	Print a page containing information on errors, including XML markup errors.
Off	Note: Off is the factory default setting.
On	

PDF menu

Use	То
Scale to Fit	Scale page content to fit the selected paper size.
Yes	Note: No is the factory default setting.
No	
Annotations	Print annotations in a PDF.
Do Not Print	Note: Do Not Print is the factory default setting.
Print	

PostScript menu

Use	То
Print PS Error	Print a page containing the PostScript error.
On	Note: Off is the factory default setting.
Off	
Lock PS Startup Mode	Enable the SysStart file.
On	Note: Off is the factory default setting.
Off	

PCL Emul menu

Lleo	То
Use	То
Font Source	Specify the set of fonts used in the Font Name menu.
Resident Download All	Notes:
	 "Resident" is the factory default setting. It shows the factory default set of fonts downloaded in the RAM.
	 "Download" shows all the fonts downloaded in the RAM.
	"All" shows all fonts available to any option.
Font Name	Identify a specific font and where it is stored.
Courier 10	Note: Courier 10 is the factory default setting.
Symbol Set	Specify the symbol set for each font name.
10U PC-8	Notes:
12U PC-850	 10U PC-8 is the U.S. factory default setting. 12U PC-850 is the international factory default setting.
	 A symbol set is a set of alphabetical and numeric characters, punctuation, and special symbols. Symbol sets support the different languages or specific programs, such as math symbols for scientific text. Only the supported symbol sets are shown.
PCL Emulation Settings	Change the point size for scalable typographic fonts.
Point Size 1.00–1008.00	Notes:
1.00 1000.00	• 12 is the factory default setting.
	 Point size refers to the height of the characters in the font. One point equals approximately 0.014 of an inch. This can be increased or decreased in 0.25-point increments.
PCL Emulation Settings	Specify the font pitch for scalable monospaced fonts.
Pitch 0.08–100.00	Notes:
	10 is the factory default setting.
	 Pitch refers to the number of fixed-space characters per inch (cpi). This can be increased or decreased in 0.01-cpi increments.
	 For non-scalable monospaced fonts, the pitch appears on the display but cannot be changed.

Use	То	
PCL Emulation Settings Orientation Portrait Landscape	 Specify the orientation of text and graphics on a page. Notes: Portrait is the factory default setting. It prints text and graphics parallel to the short edge of the page. Landscape prints text and graphics parallel to the long edge of the page. 	
PCL Emulation Settings Lines per Page 1–255	 Specify the number of lines that print on each page. Notes: 60 is the U.S. factory default setting. 64 is the international default setting. The printer sets the amount of space between each line based on the Lines per Page, Paper Size, and Orientation settings. Select the paper size and orientation before setting Lines per Page. 	
PCL Emulation Settings A4 Width 198 mm 203 mm	Set the printer to print on A4-size paper. Notes: 198 mm is the factory default setting. The 203-mm setting sets the width of the page to allow the printing of eighty 10-pitch characters.	
PCL Emulation Settings Auto CR after LF On Off	Specify whether the printer automatically performs a carriage return (CR) after a line feed (LF) control command. Note: Off is the factory default setting.	
PCL Emulation Settings Auto LF after CR On Off	Specify whether the printer automatically performs a line feed (LF) after a carriage return (CR) control command. Note: Off is the factory default setting.	

Use	То
Tray Renumber	Configure the printer to work with printer software or programs that use
Assign Multipurpose Feeder	different source assignments for trays and feeders.
Off	Notes:
None	"Off" is the factory default setting.
0–199	"None" ignores the Select Paper Feed command. This option
Assign Tray [x]	appears only when it is selected by the PCL 5e interpreter.
Off	• "0–199" allows a custom setting to be assigned.
None	
0–199	
Assign Manual Paper	
Off	
None	
0–199	
Assign Manual Envelope	
Off	
None 0–199	
Tray Renumber	Show the factory default setting assigned to each tray or feeder.
View Factory Defaults	
MPF Default = 8	
T1 Default = 1	
T2 Default = 4	
T3 Default = 5 T4 Default = 20	
T5 Default = 21	
Env Default = 6	
MPaper Default = 2	
MEnv Default = 3	
	Posts and the second for the second s
Tray Renumber	Restore all tray and feeder assignments to the factory default settings.
Restore Defaults Yes	
Yes No	
INU	

PPDS menu

Menu item	Description	
Orientation	Sets the orientation of the text and graphics on the page	
Portrait Landscape	Notes:	
Landscape	Portrait is the factory default setting.	
	Settings are duplicated in the PCL Emulation menu.	

Menu item	Description
Lines per Page	Sets the number of lines that print on each page
1–255	Notes:
	64 is the factory default setting.
	 The printer sets the amount of space between each line based on the Lines per Page, Paper Size, and Orientation settings. Select the desired Paper Size and Orientation before setting Lines per Page.
Lines per Inch	Sets the number of lines that print per inch
0.25–30.00	Notes:
	6 is the factory default setting.
	 Lines per Inch can be increased or decreased in 0.25-inch increments
Page Format	Sets the logical and physical printable area of the page
Print	Notes:
Whole	 Print is the factory default setting. Print data maintains its position with respect to edge of the paper.
	 When Whole is selected, document margins are calculated from the top left corner of the physical edge of the page.
	Printing does not occur outside the printable area.
Character Set	Specifies a default character set for PPDS print jobs
1 2	Notes:
2	 2 is the factory default setting. Character Set 2 is composed of printable characters and symbols used in non-US English languages. When Characters Set 1 is selected, values given to the printer are interpreted as printer commands.
Best Fit	
On	Replaces a missing font with a similar font Note: On is the factory default setting. If the requested font is not found,
Off	the printer will use a similar font.
Tray 1 Renumber	Configures the printer to work with printer software or programs that use different source assignments for trays, drawers, and feeders
Tray 2	Notes:
	Off is the factory default setting.
	Tray 2 is displayed only when it is installed.
Auto CR after LF	Specifies whether the printer automatically performs a carriage return (CR) after a line feed (LF) control command
Off	Notes:
	Off is the factory default setting.
	Settings are duplicated in the PCL Emulation menu.

Menu item	Description	
Auto LF after CR On	Specifies whether the printer automatically performs a line feed (LF) aft a carriage return (CR) control command	
Off	Notes:	
	Off is the factory default setting.	
	Settings are duplicated in the PCL Emulation menu.	

HTML menu

Use		То
Font Name	Joanna MT	Set the default font for HTML documents.
Albertus MT	Letter Gothic	Note: The Times font is used in HTML documents that do
Antique Olive	Lubalin Graph	not specify a font.
Apple Chancery	Marigold	
Arial MT	MonaLisa Recut	
Avant Garde	Monaco	
Bodoni	New CenturySbk	
Bookman	New York	
Chicago	Optima	
Clarendon	Oxford	
Cooper Black	Palatino	
Copperplate	StempelGaramond	
Coronet	Taffy	
Courier	Times	
Eurostile	TimesNewRoman	
Garamond	Univers	
Geneva	Zapf Chancery	
Gill Sans	NewSansMTCS	
Goudy	NewSansMTCT	
Helvetica	New SansMTJA	
Hoefler Text	NewSansMTKO	
Intl CG Times		
Intl Courier		
Intl Univers		

Use	То
Font Size	Set the default font size for HTML documents.
1–255 pt	Notes:
	• 12 pt is the factory default setting.
	Font size can be increased in 1-point increments.

Use	То
Scale	Scale the default font for HTML documents.
1–400%	Notes:
	• 100% is the factory default setting.
	Scaling can be increased in 1% increments.
Orientation	Set the page orientation for HTML documents.
Portrait	Note: Portrait is the factory default setting.
Landscape	
Margin Size	Set the page margin for HTML documents.
8–255 mm	Notes:
	19 mm is the factory default setting.
	Margin size can be increased in 1-mm increments.
Backgrounds	Specify whether to print backgrounds on HTML documents.
Do Not Print	Note: Print is the factory default setting.
Print	

Image menu

Use	То
Auto Fit On Off Invert On Off	Select the optimal paper size, scaling, and orientation. Note: On is the factory default setting. It overrides scaling and orientation settings for some images. Invert bitonal monochrome images. Notes: Off is the factory default setting.
Scaling Anchor Top Left Best Fit Anchor Center Fit Height/Width Fit Height Fit Width	 This setting does not apply to GIF or JPEG images. Scale the image to fit the selected paper size. Notes: Best Fit is the factory default setting. When Auto Fit is set to On, Scaling is automatically set to Best Fit.
Orientation Portrait Landscape Reverse Portrait Reverse Landscape	Set the image orientation. Note: Portrait is the factory default setting.

Help menu

Menu item	Description
Print All Guides	Prints all the guides
Copy Guide	Provides information about making copies and configuring the settings
E-mail Guide	Provides information about sending e-mails and configuring the settings
Fax Guide	Provides information about sending faxes and configuring the settings
FTP Guide	Provides information about scanning documents and configuring the settings
Print Defects Guide	Provides a template for determining the cause of repeating print quality defects, and lists settings that can be used to adjust print quality
Information Guide	Provides help in locating additional information
Supplies Guide	Provides information about ordering supplies

Saving money and the environment

Lexmark is committed to environmental sustainability and is continually improving its printers to reduce their impact on the environment. We design with the environment in mind, engineer our packaging to reduce materials, and provide collection and recycling programs. For more information, see:

- The Notices chapter
- The Environmental Sustainability section of the Lexmark Web site at www.lexmark.com/environment
- The Lexmark recycling program at www.lexmark.com/recycle

By selecting certain printer settings or tasks, you may be able to reduce your printer's impact even further. This chapter outlines the settings and tasks that may yield a greater environmental benefit.

Saving paper and toner

Studies show that as much as 80% of the carbon footprint of a printer is related to paper usage. You can significantly reduce your carbon footprint by using recycled paper and the following printing suggestions, such as printing on both sides of the paper and printing multiple pages on one side of a single sheet of paper.

For information on how you can quickly save paper and energy using one printer setting, see <u>"Using Eco-Mode"</u> on page 147.

Using recycled paper

As an environmentally conscious company, Lexmark supports the use of recycled office paper produced specifically for use in laser printers. For more information on recycled papers that work well with your printer, see "Using recycled paper and other office papers" on page 46.

Conserving supplies

• Print on both sides of the paper.

Note: Two-sided printing is the default setting in the print driver.

- Print multiple pages on a single sheet of paper.
- Use the preview feature to see how the document looks like before printing it.
- Print one copy of the document to check its content and format for accuracy.

Saving energy

Using Eco-Mode

Use Eco-Mode to quickly select one or more ways to reduce your printer's environmental impact.

1 From the printer control panel, navigate to:

Use	То	
Off	Use the factory default settings for all settings associated with Eco-Mode. This setting supports the performance specifications for your printer.	
Energy	Reduce energy use, especially when the printer is idle.	
	Notes:	
	 Printer engine motors do not start until a job is ready to print. You may notice a short delay before the first page is printed. 	
	The printer enters Sleep mode after one minute of inactivity.	
Energy/Paper	Use all the settings associated with Energy and Paper modes.	
Plain Paper	Enable automatic two-sided (duplex) printing.Turn off print log features.	

2 Press OK

Reducing printer noise

Enable Quiet mode to reduce the printer noise.

1 From the printer control panel, navigate to:

2 Select a setting.

Use	То
On	Reduce printer noise.
	Notes:
	Print jobs process at a reduced speed.
	 Printer engine motors do not start until a document is ready to print. There is a short delay before the first page is printed.
	The alarm control and cartridge alarm sounds are turned off.
	The printer ignores the Advance Start command.
Off	Use factory default settings.
	Note: This setting supports the performance specifications of the printer.

3 Press OK

Adjusting Sleep mode

1 From the control panel, navigate to:

- 2 In the Sleep Mode field, select the number of minutes the printer is idle before it enters Sleep mode.
- 3 Apply the changes.

Using Hibernate mode

Hibernate is an ultra-low-power saving mode.

Notes:

- Three days is the default amount of time before the printer enters Hibernate mode.
- Make sure to wake the printer from Hibernate mode before sending a print job. A hard reset or a long
 press of the Sleep button wakes the printer from Hibernate mode.
- If the printer is in Hibernate mode, then the Embedded Web Server is disabled.
- **1** From the control panel, navigate to:

- 2 Select Press Sleep Button or Press and Hold Sleep Button, and then press
- **3** Press **Hibernate** > OK

Adjusting the brightness of the printer display

To save energy, or if you have trouble reading the display, adjust its brightness settings.

Using the Embedded Web Server

1 Open a Web browser, and then type the printer IP address in the address field.

Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings > General Settings.
- 3 In the Screen Brightness field, enter the brightness percentage you want for the display.
- 4 Click Submit.

Using Schedule Power Modes

Schedule Power Modes lets the user schedule when the printer goes into a reduced power state or into the Ready state.

1 Open a Web browser, and then type the printer IP address in the address field.

Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears
 as four sets of numbers separated by periods, such as 123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings > General Settings > Schedule Power Modes.
- **3** From the Action menu, select the power mode.
- **4** From the Time menu, select the time.
- **5** From the Day(s) menu, select the day or days.
- 6 Click Add.

Recycling

Lexmark provides collection programs and environmentally progressive approaches to recycling. For more information, see:

- The Notices chapter
- The Environmental Sustainability section of the Lexmark Web site at www.lexmark.com/environment
- The Lexmark recycling program at www.lexmark.com/recycle

Recycling Lexmark products

To return Lexmark products for recycling:

- 1 Go to www.lexmark.com/recycle.
- **2** Select the product you want to recycle.

Note: Printer supplies and hardware not listed in the Lexmark Collection and Recycling Program may be recycled through your local recycling center.

Recycling Lexmark packaging

Lexmark continually strives to minimize packaging. Less packaging helps to ensure that Lexmark printers are transported in the most efficient and environmentally sensitive manner and that there is less packaging to dispose of. These efficiencies result in fewer greenhouse emissions, energy savings, and natural resource savings.

Lexmark cartons are 100% recyclable where corrugated recycling facilities exist. Facilities may not exist in your area.

The foam used in Lexmark packaging is recyclable where foam recycling facilities exist. Facilities may not exist in your area.

When you return a cartridge to Lexmark, you can reuse the box that the cartridge came in. Lexmark will recycle the box.

Returning Lexmark cartridges for reuse or recycling

The Lexmark Cartridge Collection Program allows you to return used cartridges for free to Lexmark for reuse or recycling. One hundred percent of the empty cartridges returned to Lexmark are either reused or demanufactured for recycling. The boxes used to return the cartridges are also recycled.

To return Lexmark cartridges for reuse or recycling, do the following:

- 1 Go to www.lexmark.com/recycle.
- **2** Select the product that you want to recycle.

Securing the printer 152

Securing the printer

Statement of Volatility

Your printer contains various types of memory that can store device and network settings, and user data.

Type of memory	Description
Volatile memory	Your printer uses standard <i>random access memory</i> (RAM) to temporarily buffer user data during simple print jobs.
Non-volatile memory	Your printer may use two forms of non-volatile memory: EEPROM and NAND (flash memory). Both types are used to store operating system, device settings, and network information.

Erase the content of any installed printer memory in the following circumstances:

- The printer is being decommissioned.
- The printer is being moved to a different department or location.
- The printer is being serviced by someone from outside your organization.
- The printer is being removed from your premises for service.
- The printer is being sold to another organization.

Erasing volatile memory

The volatile memory (RAM) installed in your printer requires a power source to retain information. To erase the buffered data, simply turn off the printer.

Erasing non-volatile memory

- Individual settings, device and network settings, security settings, and embedded solutions—Erase information and settings by selecting **Wipe All Settings** in the Configuration menu.
- Fax data—Erase fax settings and data by selecting Wipe All Settings in the Configuration menu.
- **1** Turn off the printer.
- 2 Hold down 2 and 6 while turning the printer on. Release the buttons only when the screen with the progress bar appears.
 - The printer performs a power-on sequence, and then the Configuration menu appears. When the printer is fully powered up, the printer displays a list of functions.
- 3 Press the up or down arrow button until Wipe All Settings appears.
 - The printer will restart several times during this process.

Note: Wipe All Settings securely removes device settings, solutions, jobs, faxes, and passwords from the printer memory.

4 Navigate to:

Back > Exit Config Menu

Securing the printer 153

The printer will perform a power-on reset, and then return to normal operating mode.

Finding printer security information

In high-security environments, it may be necessary to take additional steps to make sure that confidential data stored in the printer cannot be accessed by unauthorized persons. For more information, visit the **Lexmark security Web page**.

You can also see the *Embedded Web Server — Security: Administrator's Guide* for additional information:

- **1** Go to <u>www.lexmark.com</u>, and then navigate to **Support & Downloads** > select your printer.
- **2** Click the **Manuals** tab, and then select *Embedded Web Server Security: Administrator's Guide*.

Maintaining the printer

Cleaning printer parts

Cleaning the printer



CAUTION—SHOCK HAZARD: To avoid the risk of electrical shock when cleaning the exterior of the printer, unplug the power cord from the electrical outlet and disconnect all cables from the printer before proceeding.

Notes:

- Perform this task after every few months.
- Damage to the printer caused by improper handling is not covered by the printer warranty.
- 1 Turn off the printer, and then unplug the power cord from the electrical outlet.
- **2** Remove paper from the standard bin and multipurpose feeder.
- 3 Remove any dust, lint, and pieces of paper around the printer using a soft brush or vacuum.
- **4** Wipe the outside of the printer with a damp, soft, lint-free cloth.

Notes:

- Do not use household cleaners or detergents, as they may damage the finish of the printer.
- Make sure that all areas of the printer are dry after cleaning.
- **5** Connect the power cord to the electrical outlet, and then turn on the printer.



CAUTION—POTENTIAL INJURY: To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.

Cleaning the scanner glass

1 Open the scanner cover.



2 Wipe the areas shown with a damp, soft, lint-free cloth.



1	White underside of the scanner cover
2	Scanner glass
3	Automatic document feeder (ADF) glass
4	White underside of the ADF cover

3 Close the scanner cover.

Checking the status of parts and supplies

A message appears on the display when a replacement supply item is needed or when maintenance is required.

Checking the status of parts and supplies on the printer control panel

From the printer control panel, navigate to:



Checking the status of parts and supplies from the Embedded Web Server

Note: Make sure the computer and printer are connected to the same network.

1 Open a Web browser, and then type the printer IP address in the address field.

Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Device Status > More Details.

Estimated number of remaining pages

The estimated number of remaining pages is based on the recent printing history of the printer. Its accuracy may vary significantly and is dependent on many factors, such as actual document content, print quality settings, and other printer settings.

The accuracy of the estimated number of remaining pages may decrease when the actual printing consumption is different from the historical printing consumption. Consider the variable level of accuracy before purchasing or replacing supplies based on the estimate. Until an adequate print history is obtained on the printer, initial estimates assume future supplies consumption based on the International Organization for Standardization* test methods and page content.

^{*} Average continuous black declared cartridge yield in accordance with ISO/IEC 19752.

Ordering supplies

To order parts and supplies in the U.S., contact Lexmark at 1-800-539-6275 for information about Lexmark authorized supplies dealers in your area. In other countries or regions, go to www.lexmark.com or contact the place where you purchased the printer.

The Lexmark Return Program lets you purchase Lexmark supplies at a discounted price in exchange for your agreement to use the supplies only once and return them only to Lexmark for remanufacturing or recycling.

Using genuine Lexmark parts and supplies

Your Lexmark printer is designed to function best with genuine Lexmark supplies and parts. Use of third-party supplies or parts may affect the performance, reliability, or life of the printer and its imaging components. Use of third-party supplies or parts can affect warranty coverage. Damage caused by the use of third-party supplies or parts is not covered by the warranty. All life indicators are designed to function with Lexmark supplies and parts, and may deliver unpredictable results if third-party supplies or parts are used. Imaging component usage beyond the intended life may damage your Lexmark printer or its associated components.

Ordering a toner cartridge

Notes:

- The estimated cartridge yield is based on approximately 5% coverage per page.
- Extremely low print coverage for extended periods of time may negatively affect actual yield.

Part name	Part number
Toner Cartridge	24B6213

Ordering an imaging unit

Extremely low print coverage for extended periods of time may cause imaging unit parts to fail prior to exhaustion of toner from toner cartridge.

For more information on replacing the imaging unit, see the instruction sheet that came with the supply.

Part name	Part number
Imaging unit	24B6040

Ordering a maintenance kit

Notes:

- Using certain types of paper may require more frequent replacement of the maintenance kit.
- The separator roller, fuser, pick rollers, transfer roller, and redrive assembly are all included in the maintenance kit and can be individually ordered and replaced if necessary.
- Contact your service representative to replace the maintenance kit.

Maintenance kit	Part number
100-V maintenance kit [*]	40X9146
110-V maintenance kit	40X9135
220-V maintenance kit	40X9136
* This is available only in Japan.	

Ordering an ADF separator pad

Order an ADF separator pad when the ADF fails to pick paper or picks more than one sheet of paper at a time. For information on replacing the ADF separator pad, see the instruction sheet that came with the part.

Part name	Part number
Separator pad	40X6247

Storing supplies

Choose a cool, clean storage area for the printer supplies. Store supplies right side up in their original packing until you are ready to use them.


Do not expose supplies to:

- Direct sunlight
- Temperatures above 35°C (95°F)
- High humidity above 80%
- Salty air
- Corrosive gases
- Heavy dust


Replacing supplies

Replacing the toner cartridge

1 Press the button on the right side of the printer, and then open the front door.

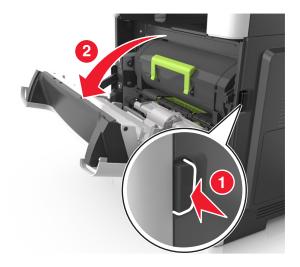

2 Pull the toner cartridge out using the handle.

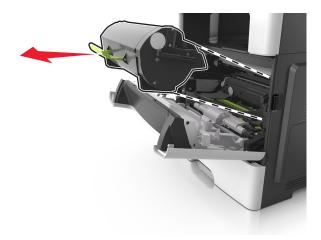


- **3** Unpack the toner cartridge, and then remove all packing materials.
- **4** Shake the new cartridge to redistribute the toner.



5 Insert the toner cartridge into the printer by aligning the side rails of the cartridge with the arrows on the side rails inside the printer.


Warning—Potential Damage: Do not expose the imaging unit to direct light for more than 10 minutes. Extended exposure to light may cause print quality problems.

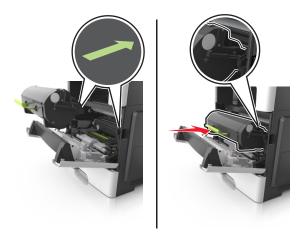


6 Close the front door.

Replacing the imaging unit


1 Press the button on the right side of the printer, and then open the front door.

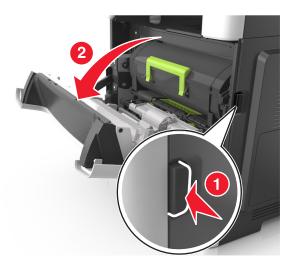


2 Pull the toner cartridge out using the handle.

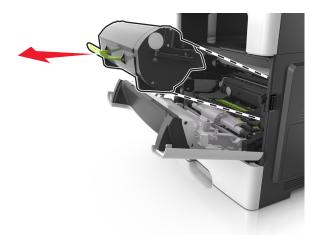

3 Lift the green handle, and then pull the imaging unit out of the printer.

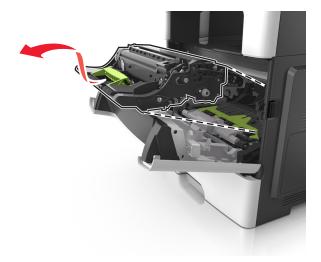


4 Unpack the new imaging unit, and then shake it.

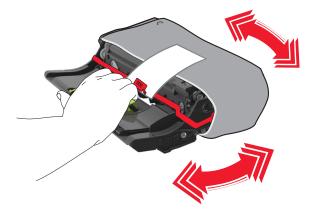


5 Remove all packing materials from the imaging unit.

Warning—Potential Damage: Do not expose the imaging unit to direct light for more than 10 minutes. Extended exposure to light may cause print quality problems.


Warning—Potential Damage: Do not touch the photoconductor drum. Doing so may affect the print quality of future print jobs.

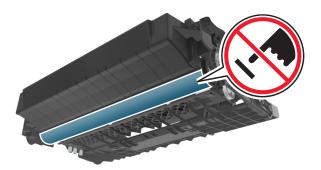

6 Insert the imaging unit into the printer by aligning the arrows on the side rails of the imaging unit with the arrows on the side rails inside the printer.

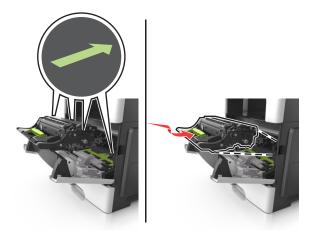

7 Insert the toner cartridge into the printer by aligning the side rails of the cartridge with the arrows on the side rails inside the printer.

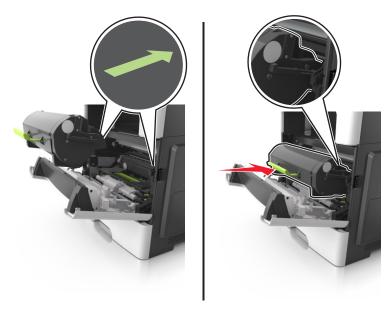

8 Close the front door.

Moving the printer




CAUTION—POTENTIAL INJURY: The printer weight is greater than 18 kg (40 lb) and requires two or more trained personnel to lift it safely.

Before moving the printer

CAUTION—POTENTIAL INJURY: Before moving the printer, follow these guidelines to avoid personal injury or printer damage:

- Turn the printer off using the power switch, and then unplug the power cord from the electrical outlet.
- Disconnect all cords and cables from the printer before moving it.
- If an optional tray is installed, then remove it from the printer. To remove the optional tray, slide the latch on the right side of the tray toward the front of the tray until it *clicks* into place.

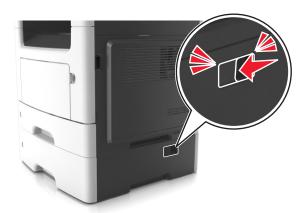

- Use the handholds located on both sides of the printer to lift it.
- Make sure your fingers are not under the printer when you set it down.
- Before setting up the printer, make sure there is adequate clearance around it.

Use only the power cord provided with this product or the manufacturer's authorized replacement.

Warning—Potential Damage: Damage to the printer caused by improper moving is not covered by the printer warranty.

Moving the printer to another location

The printer and its hardware options can be safely moved to another location by following these precautions:

- Any cart used to move the printer must have a surface able to support the full footprint of the printer.
- Any cart used to move the hardware options must have a surface able to support the dimensions of the hardware options.
- Keep the printer in an upright position.
- Avoid severe jarring movements.

Shipping the printer

When shipping the printer, use the original packaging or call the place of purchase for a relocation kit.

Managing the printer 164

Managing the printer

Finding advanced networking and administrator information

This chapter covers basic administrative support tasks using the Embedded Web Server. For more advanced system support tasks, see the *Networking Guide* on the *Software and Documentation* CD or the *Embedded Web Server — Security: Administrator's Guide* on the Lexmark support Web site at http://support.lexmark.com.

Accessing the remote control panel

The remote control panel on your computer screen lets you interact with the printer control panel, even when you are not physically near the network printer. From your computer screen, you can view the printer status and do print-related tasks you might normally do while standing at the network printer.

1 Open a Web browser, and then type the printer IP address in the address field.

Notes:

- Print a network setup page or menu settings page, and then locate the IP address in the TCP/IP section. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- **2** Press **Enter** to open the Web page of your printer.
- 3 Click Applications.

Note: The remote control panel requires a Java plug-in to launch.

Setting up e-mail alerts

Configure the printer to send you e-mail alerts when the supplies are getting low, when the paper needs to be changed or added, or when there is a paper jam.

1 Open a Web browser, and then type the printer IP address in the address field.

Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings.
- **3** From the Other Settings menu, click **E-mail Alert Setup**.
- 4 Select the items you want to be notified on, and then type the e-mail addresses.
- 5 Click Submit.

Note: For information on setting up the e-mail server, contact your system support person.

Managing the printer 165

Viewing reports

You can view some reports from the Embedded Web Server. These reports are useful for assessing the status of the printer, network, and supplies.

1 Open a Web browser, and then type the printer IP address in the address field.

Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- **2** Click **Reports**, and then click the type of report you want to view.

Configuring supply notifications from the Embedded Web Server

You can determine how you would like to be notified when supplies run nearly low, low, very low, or reach their end-of-life by setting the selectable alerts.

Notes:

- Selectable alerts can be set on the toner cartridge, imaging unit, and maintenance kit.
- All selectable alerts can be set for nearly low, low, and very low supply conditions. Not all selectable
 alerts can be set for the end-of-life supply condition. E-mail selectable alert is available for all supply
 conditions.
- The percentage of estimated remaining supply that prompts the alert can be set on some supplies for some supply conditions.
- 1 Open a Web browser, and then type the printer IP address in the address field.

Notes:

- View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.123.
- If you are using a proxy server, then temporarily disable it to load the Web page correctly.
- 2 Click Settings > Print Settings > Supply Notifications.
- **3** From the drop-down menu for each supply, select one of the following notification options:

Notification	Description
Off	The normal printer behavior for all supplies occurs.
E-mail Only	The printer generates an e-mail when the supply condition is reached. The status of the supply appears on the menus page and status page.
Warning	The printer displays the warning message and generates an e-mail about the status of the supply. The printer does not stop when the supply condition is reached.
¹ The printer generates an e-mail about the status of the supply when supply notification is enabled.	
² The printer stops when some supplies become empty to prevent damage.	

Managing the printer 166

Notification	Description	
Continuable Stop ¹	The printer stops processing jobs when the supply condition is reached, and the user needs to press a button to continue printing.	
Non Continuable Stop ^{1,2}	The printer stops processing jobs when the supply condition is reached. The supply must be replaced to continue printing.	
¹ The printer generates an e-mail about the status of the supply when supply notification is enabled.		
² The printer stops when some supplies become empty to prevent damage.		

4 Click Submit.

Restoring factory default settings

If you want to keep a list of the current menu settings for reference, then print a menu settings page before restoring the factory default settings. For more information, see "Printing a menu settings page" on page 28.

If you want a more comprehensive method of restoring the printer factory default settings, then perform the Wipe All Settings option. For more information, see <u>"Erasing non-volatile memory" on page 152</u>.

Warning—Potential Damage: Restoring factory defaults returns most printer settings to the original factory default settings. Exceptions include the display language, custom sizes and messages, and network/port menu settings. All downloads stored in the RAM are deleted. Downloads stored in the flash memory or in the printer hard disk are not affected.

From the printer control panel, navigate to:



Clearing jams


Carefully select paper and specialty media and load them properly to avoid most jams. If jams occur, then follow the steps outlined in this chapter.

Warning—Potential Damage: Never use any tool to remove a jam. Doing so could permanently damage the fuser.

Avoiding jams

Load paper properly

• Make sure that the paper lies flat in the tray.

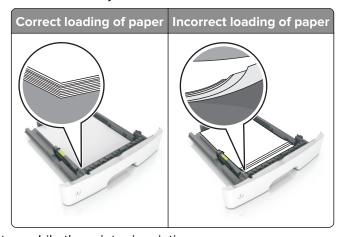

- Do not load or remove a tray while the printer is printing.
- Do not load too much paper. Make sure that the stack height is below the maximum paper fill indicator.
- Do not slide paper into the tray. Load paper as shown in the illustration.



 Make sure that the paper guides are positioned correctly and are not pressing tightly against the paper or envelopes.

• Push the tray firmly into the printer after loading paper.

Use recommended paper

- Use only recommended paper or specialty media.
- Do not load paper that is wrinkled, creased, damp, bent, or curled.
- Flex, fan, and align the paper edges before loading.



- Do not use paper that has been cut or trimmed by hand.
- Do not mix paper sizes, weights, or types in the same tray.
- Make sure that the paper size and type are set correctly on the computer or printer control panel.
- Store paper according to manufacturer recommendations.

Identifying jam locations

Notes:

- When Jam Assist is set to On, the printer flushes blank pages or pages with partial prints after a jammed page is cleared. Check your printed output stack for discarded pages.
- When Jam Recovery is set to On or Auto, the printer reprints jammed pages.



	Jam location
1	Automatic document feeder (ADF)
2	Standard bin
3	Front door
4	Multipurpose feeder


	Jam location
5	Duplex unit
6	Trays
7	Rear door

Paper jam in the front door




CAUTION—HOT SURFACE: The inside of the printer might be hot. To reduce the risk of injury from a hot component, allow the surface to cool before touching it.


1 Open the front door.

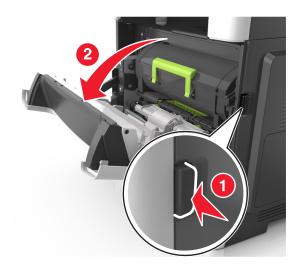

2 Remove the toner cartridge.

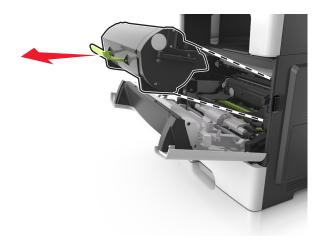


3 Remove the imaging unit.

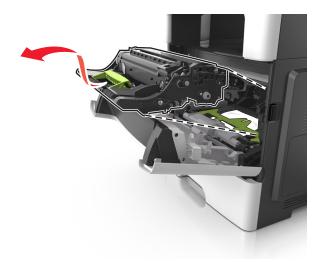

Warning—Potential Damage: Do not expose the imaging unit to direct light for more than 10 minutes. Extended exposure to light may cause print quality problems.

Warning—Potential Damage: Do not touch the shiny photoconductor drum under the imaging unit. Doing so may affect the quality of future print jobs.

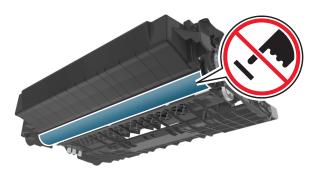

4 Remove the jammed paper.


Note: Make sure that all paper fragments are removed.






5 Insert the imaging unit.

Note: Use the arrows inside the printer as guides.

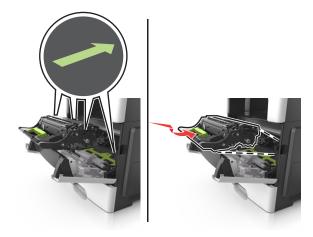

6 Insert the toner cartridge.

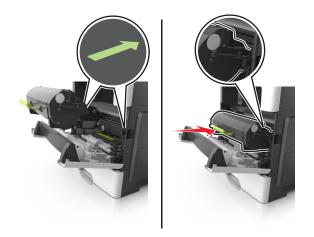

- **7** Close the front door.
- **8** If necessary, press OK on the control panel.

Paper jam in the rear door

1 Open the rear door.

CAUTION—HOT SURFACE: The inside of the printer might be hot. To reduce the risk of injury from a hot component, allow the surface to cool before touching it.



2 Remove the jammed paper.

Note: Make sure that all paper fragments are removed.




3 Close the rear door.

4 If necessary, press OK on the control panel.

Paper jam in the standard bin

1 Remove the jammed paper.

Note: Make sure that all paper fragments are removed.

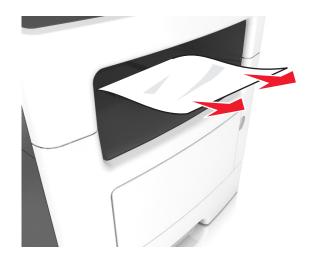

2 If necessary, press OK on the control panel.


Paper jam in the duplex unit

1 Remove the tray.



2 Remove the jammed paper.

Note: Make sure that all paper fragments are removed.

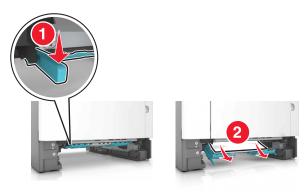

3 Insert the tray.


Paper jam in trays

1 Remove the tray.



2 Remove the jammed paper.

Note: Make sure that all paper fragments are removed.

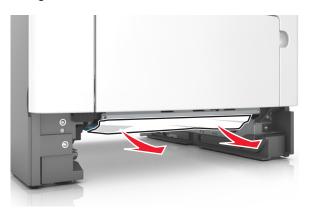

- **3** Insert the tray.
- 4 If necessary, press OK on the control panel.

Paper jam in the multipurpose feeder

- **1** Remove paper from the multipurpose feeder.
- **2** Remove the jammed paper.

Note: Make sure that all paper fragments are removed.



3 Flex, fan, and align the paper edges before loading.



4 Reload paper, and then adjust the paper guide.



5 If necessary, press OK on the control panel.

Paper jam in the automatic document feeder

1 Remove all original documents from the ADF tray.

2 Open the ADF cover.



3 Remove the jammed paper.

Note: Make sure that all paper fragments are removed.

4 Close the ADF cover.

5 If necessary, press OK from the control panel.

Troubleshooting

Understanding the printer messages

Cartridge, imaging unit mismatch [41.xy]

Use only a supported toner cartridge and imaging unit.

Note: For a list of supported supplies, go to www.lexmark.com.

Change [paper source] to [custom string] load [paper orientation]

Try one or more of the following:

• Load the correct size and type of paper in the tray, then verify that the paper size and type settings are specified in the Paper menu on the printer control panel, and then select **Finished changing paper**.

For non-touch-screen printer models, press oK to confirm.

• Cancel the print job.

Change [paper source] to [custom type name] load [orientation]

Try one or more of the following

- Load the correct paper size and type in the tray, verify the paper size and type settings are specified in the Paper menu on the printer control panel, and then select **Finished changing paper**. For non-touch-screen printer models, press oK to confirm.
- Cancel the print job.

Change [paper source] to [paper size] load [orientation]

Try one or more of the following:

- Load the correct paper size and type in the tray, verify the paper size and type settings are specified
 in the Paper menu on the printer control panel, and then select Finished changing paper. For
 non-touch-screen printer models, press or to confirm.
- Cancel the print job.

Change [paper source] to [paper type] [paper size] load [orientation]

Try one or more of the following:

- Load the correct paper size and type in the tray, verify the paper size and type settings are specified
 in the Paper menu on the printer control panel, and then select Finished changing paper. For
 non-touch-screen printer models, press or to confirm.
- Cancel the print job.

Close flatbed cover and load originals if restarting job [2yy.xx]

From the printer control panel, try one or more of the following:

- Select **Scan from automatic feeder** to continue scanning from the ADF immediately after the last successful scan job.
- Select **Scan from flatbed** to continue scanning from the scanner glass immediately after the last successful scan job.
- Select Finish job without further scanning to end the last successful scan job.

Note: This does not cancel the scan job. All successfully scanned pages will be processed further for copying, faxing, or e-mailing.

- Select **Cancel job** to clear the message and cancel the scan job.
- For non-touch-screen printer models, press oK to confirm.

Close front door

Close the front door of the printer.

Complex page, some data may not have printed [39]

Try one or more of the following:

- From the printer control panel, select **Continue** to ignore the message and continue printing. For non-touch-screen printer models, press of to confirm.
- Cancel the current print job. For non-touch-screen printer models, press OK to confirm.
- Install additional printer memory.

Configuration change, some held jobs were not restored [57]

Held jobs are invalidated because of any of the following possible changes in the printer:

- The printer firmware has been updated.
- The tray for the print job is removed.
- The print job is sent from a flash drive that is no longer attached to the USB port.
- The printer hard disk contains print jobs that were stored when the hard disk was installed in a different printer model.

From the printer control panel, select **Continue** to clear the message. For non-touch-screen printer models, press of to confirm.

Defective flash detected [51]

Try one or more of the following:

- Replace the defective flash memory card.
- From the printer control panel, select **Continue** to ignore the message and continue printing. For non-touch-screen printer models, press of to confirm.
- Cancel the current print job.

Error reading USB drive. Remove USB.

An unsupported USB device is inserted. Remove the USB device, and then insert a supported one.

Error reading USB hub. Remove hub.

An unsupported USB hub has been inserted. Remove the USB hub, and then install a supported one.

Fax memory full

From the printer control panel, touch Continue to clear the message.

Fax partition inoperative. Contact system administrator.

Try either of the following:

- From the printer control panel, select **Continue** to clear the message. For non-touch-screen printer models, press oK to confirm.
- Turn the printer off, and then turn it back on. If the message appears again, then contact your system support person or see the "Setting up the printer to fax" section of the *User's Guide*.

Fax server 'To Format' not set up. Contact system administrator.

Try either of the following:

- From the printer control panel, select **Continue** to clear the message. For non-touch-screen printer models, press OK to confirm.
- Complete the Fax Server setup. If the message appears again, then contact your system support person.

Fax Station Name not set up. Contact system administrator.

Try either of the following:

- From the printer control panel, select Continue to clear the message. For non-touch-screen printer models, press oK to confirm.
- Complete the Analog Fax Setup. If the message appears again after completing the setup, then contact
 your system support person.

Fax Station Number not set up. Contact system administrator.

Try either of the following:

• From the printer control panel, select **Continue** to clear the message. For non-touch-screen printer models, press oK to confirm.

• Complete the Analog Fax Setup. If the message appears again after completing the setup, then contact your system support person.

Imaging unit low [84.xy]

You may need to order an imaging unit. If necessary, select **Continue** on the printer control panel to clear the message and continue printing. For non-touch-screen printer models, press or to confirm.

Imaging unit nearly low [84.xy]

If necessary, select **Continue** on the printer control panel to clear the message and continue printing. For non-touch-screen printer models, press ok to confirm.

Imaging unit very low, [x] estimated pages remain [84.xy]

You may need to replace the imaging unit very soon. For more information, see the "Replacing supplies" section of the *User's Guide*.

If necessary, select **Continue** on the printer control panel to clear the message and continue printing. For non-touch-screen printer models, press ot confirm.

Incorrect paper size, open [paper source] [34]

Note: The paper source can be a tray or a feeder.

Try one or more of the following:

- Load the correct size of paper in the paper source.
- From the printer control panel, select **Continue** to clear the message and print using a different paper source. For non-touch-screen printer models, press or to confirm.
- Check the length and width guides of the paper source and make sure the paper is loaded properly.
- Make sure the correct paper size and type are specified in the Printing Preferences or in the Print dialog.
- Make sure the paper size and type are specified in the Paper menu on the printer control panel.
- Make sure that the paper size is correctly set. For example, if Multipurpose Feeder Size is set to Universal, then make sure the paper is large enough for the data being printed.
- Cancel the print job.

Insufficient memory, some Held Jobs were deleted [37]

The printer deleted some held jobs in order to process current jobs.

Select **Continue** to clear the message. For non-touch-screen printer models, press ot ocnfirm.

Insufficient memory, some held jobs will not be restored [37]

Try one or more of the following:

- From the printer control panel, select **Continue** to clear the message. For non-touch-screen printer models, press OK to confirm.
- Delete other held jobs to free up additional printer memory.

Insufficient memory to collate job [37]

Try one or more of the following:

- From the printer control panel, select **Continue** to print the part of the job already stored and begin collating the rest of the print job. For non-touch-screen printer models, press of to confirm.
- Cancel the current print job.

Insufficient memory to support Resource Save feature [35]

Install additional printer memory or select **Continue** on the printer control panel to disable Resource Save, clear the message, and continue printing. For non-touch-screen printer models, press or to confirm.

Load multipurpose feeder with [custom string] [orientation]

Try one or more of the following:

- Load the feeder with the correct paper size and type.
- Depending on your printer model, touch **Continue** or press ok to clear the message and continue printing.

Note: If no paper is loaded in the feeder, the printer manually overrides the request, and then prints from an automatically selected tray.

Cancel the current job.

Load multipurpose feeder with [custom type name] [orientation]

Try one or more of the following:

- Load the multipurpose feeder with the correct paper size and type.
- Depending on your printer model, touch **Continue** or press to clear the message and continue printing.

Note: If no paper is loaded in the feeder, the printer manually overrides the request, and then prints from an automatically selected tray.

• Cancel the current job.

Load multipurpose feeder with [paper size] [orientation]

Try one or more of the following:

Load the multipurpose feeder with the correct paper size.

• Depending on your printer model, touch **Continue** or press ok to clear the message and continue printing.

Note: If no paper is loaded in the feeder, the printer manually overrides the request, and then prints from an automatically selected tray.

• Cancel the current job.

Load multipurpose feeder with [paper type] [paper size] [orientation]

Try one or more of the following:

- Load the multipurpose feeder with the correct paper size and type.
- Depending on your printer model, touch **Continue** or press of to clear the message and continue printing.

Note: If no paper is loaded in the feeder, the printer manually overrides the request, and then prints from an automatically selected tray.

Cancel the current job.

Load [paper source] with [custom string] [paper orientation]

Try one or more of the following:

- Load the tray or feeder with the correct size and type of paper.
- To use the tray that has the correct size or type of paper, select Finished loading paper on the printer control panel. For non-touch-screen printer models, press ok to confirm.

Note: If the printer finds a tray that has the correct size and type of paper, then it feeds from that tray. If the printer cannot find a tray that has the correct size and type of paper, then it prints from the default paper source.

• Cancel the current job.

Load [paper source] with [custom type name] [paper orientation]

Try one or more of the following:

- Load the tray or feeder with the correct size and type of paper.
- To use the tray that has the correct size or type of paper, select Finished loading paper on the printer control panel. For non-touch-screen printer models, press oK to confirm.

Note: If the printer finds a tray that has the correct size and type of paper, then it feeds from that tray. If the printer cannot find a tray that has the correct size and type of paper, then it prints from the default paper source.

Cancel the current job.

Load [paper source] with [paper size] [paper orientation]

Try one or more of the following:

- Load the tray or feeder with the correct size of paper.
- To use the tray or feeder that has the correct size of paper, select Finished loading paper on the printer control panel. For non-touch-screen printer models, press oK to confirm.

Note: If the printer finds a tray that has the correct size and type of paper, then it feeds from that tray. If the printer cannot find a tray that has the correct size and type of paper, then it prints from the default paper source.

• Cancel the current job.

Load [paper source] with [paper type] [paper size] [paper orientation]

Try one or more of the following:

- Load the tray or feeder with the correct size and type of paper.
- To use the tray or feeder that has the correct size and type of paper, select **Finished loading paper** on the printer control panel. For non-touch-screen printer models, press or to confirm.

Note: If the printer finds a tray that has the correct size and type of paper, then it feeds from that tray. If the printer cannot find a tray that has the correct size and type of paper, then it prints from the default paper source.

• Cancel the current job.

Maintenance kit low [80.xy]

You may need to order a maintenance kit. For more information, visit the Lexmark support Web site at http://support.lexmark.com or contact customer support, and then report the message.

If necessary, select **Continue** to clear the message and continue printing. For non-touch-screen printer models, press or to confirm.

Maintenance kit nearly low [80.xy]

For more information, visit the Lexmark support Web site at http://support.lexmark.com or contact customer support, and then report the message.

If necessary, select **Continue** to clear the message and continue printing. For non-touch-screen printer models, press oK to confirm.

Maintenance kit very low [80.xy]

You may need to replace the maintenance kit very soon. For more information, contact customer support at http://support.lexmark.com or your service representative.

If necessary, select **Continue** on the printer control panel to clear the message and continue printing. For non-touch-screen printer models, press of to confirm.

Memory full, cannot print faxes

From the printer control panel, select **Continue** to clear the message without printing. For non-touch-screen printer models, press of to confirm.

Note: Held faxes will attempt to print after the printer restarts.

Memory full [38]

Try one or more of the following:

- From the printer control panel, select Cancel job to clear the message. For non-touch-screen printer models, press ok to confirm.
- Install additional printer memory.

Network [x] software error [54]

Try one or more of the following:

- From the printer control panel, select Continue to continue printing. For non-touch-screen printer models, press OK to confirm.
- Turn off the printer, wait for about 10 seconds, and then turn the printer back on.
- Update the network firmware in the printer or print server. For more information, visit the Lexmark support Web site at http://support.lexmark.com.

No analog phone line connected to modem, fax is disabled.

Connect the printer to an analog phone line.

Non-Lexmark [supply type], see User's Guide [33.xy]

Note: The supply type can be toner cartridge or imaging unit.

The printer has detected a non-Lexmark supply or part installed in the printer.

Your Lexmark printer is designed to function best with genuine Lexmark supplies and parts. Use of third-party supplies or parts may affect the performance, reliability, or life of the printer and its imaging components. For more information, see "Using genuine Lexmark parts and supplies" on page 157.

All life indicators are designed to function with Lexmark supplies and parts and may deliver unpredictable results if third-party supplies or parts are used. Imaging component usage beyond the intended life may damage your Lexmark printer or associated components.

Warning—Potential Damage: Use of third-party supplies or parts can affect warranty coverage. Damage caused by the use of third-party supplies or parts may not be covered by the warranty.

To accept any and all of these risks and to proceed with the use of non-genuine supplies or parts in your printer, press and hold and the # button on the control panel simultaneously for 15 seconds.

For non-touch-screen printer models, press on the control panel simultaneously for 15 seconds to clear the message and continue printing.

If you do not want to accept these risks, then remove the third-party supply or part from your printer and install a genuine Lexmark supply or part.

Note: For a list of supported supplies, see the "Ordering supplies" section or go to www.lexmark.com.

Not enough free space in flash memory for resources [52]

Try one or more of the following:

- From the printer control panel, select **Continue** to clear the message and continue printing. For non-touch-screen printer models, press OK to confirm.
- Delete fonts, macros, and other data stored in the flash memory.
- Upgrade to a larger capacity flash memory card.

Note: Downloaded fonts and macros that are not previously stored in the flash memory are deleted.

Printer had to restart. Last job may be incomplete.

From the printer control panel, touch to clear the message and continue printing. For non-touch-screen printer models, press or to confirm.

For more information, visit http://support.lexmark.com or contact customer support.

Reinstall missing or unresponsive cartridge [31.xy]

Try one or more of the following:

- Check if the toner cartridge is missing. If missing, then install the toner cartridge.
 For information on installing the toner cartridge, see the "Replacing supplies" section.
- If the toner cartridge is installed, then remove and reinstall the unresponsive toner cartridge.

Note: If the message appears after reinstalling the supply, then replace the toner cartridge. The cartridge may be defective or a non-genuine Lexmark supply. For more information, see <u>"Using genuine Lexmark parts and supplies"</u> on page 157.

Remove paper from standard output bin

Remove the paper stack from the standard bin. The printer automatically detects paper removal and resumes printing.

If removing the paper does not clear the message, then select **Continue** on the printer control panel. For non-touch-screen printer models, press ot confirm.

Replace all originals if restarting job.

From the printer control panel, try one or more of the following:

- Select Cancel job to clear the message and cancel the scan job.
- Select **Scan from automatic feeder** to continue scanning from the ADF immediately after the last successful scan job.
- Select **Scan from flatbed** to continue scanning from the scanner immediately after the last successful scan job.
- Select Finish job without further scanning to end the last successful scan job.
- Select **Restart job** to restart the scan job with the same settings from the previous scan job.
- For non-touch-screen printer models, press OK to confirm.

Replace cartridge, printer region mismatch [42.xy]

Install a toner cartridge that matches the region number of the printer. *x* indicates the value of the printer region. *y* indicates the value of the cartridge region. *x* and *y* can have the following values:

Printer and toner cartridge regions

Region number	Region
0	Global
1	United States, Canada
2	European Economic Area (EEA), Switzerland
3	Asia Pacific, Australia, New Zealand
4	Latin America
5	Africa, Middle East, rest of Europe
9	Invalid

Notes:

- The x and y values represent .xy in the code that appears on the printer control panel.
- The x and y values must match for printing to continue.

Replace defective imaging unit [31.xy]

Replace the defective imaging unit to clear the message. For more information, see the instruction sheet that came with the supply or see the "Replacing supplies" section of the *User's Guide*.

Note: If you do not have a replacement imaging unit, then see the "Ordering supplies" section of the *User's Guide* or visit **www.lexmark.com**.

Replace imaging unit, 0 estimated pages remain [84.xy]

Replace the imaging unit to clear the message and continue printing. For more information, see the instruction sheet that came with the supply or see the "Replacing supplies" section of the *User's Guide*.

Note: If you do not have a replacement imaging unit, then see the "Ordering supplies" section of the *User's Guide* or visit **www.lexmark.com**.

Replace jammed originals if restarting job.

From the printer control panel, try one or more of the following:

- Select Cancel job to clear the message and cancel the scan job. For non-touch-screen printer models,
 press ok to confirm.
- Select **Scan from automatic feeder** to continue scanning from the ADF immediately after the last successful scan job. For non-touch-screen printer models, press OK to confirm.
- Select **Scan from flatbed** to continue scanning from the scanner immediately after the last successful scan job. For non-touch-screen printer models, press of to confirm.
- Select Finish job without further scanning to end the last successful scan job. For non-touch-screen printer models, press
 OK to confirm.
- Select **Restart job** to restart the scan job with the same settings from the previous scan job. For non-touch-screen printer models, press or to confirm.

Replace maintenance kit [80.xy]

The printer is scheduled for maintenance. For more information, go to http://support.lexmark.com or contact your service representative, and then report the message.

Replace missing fuser [31.xyz]

Install the missing fuser. For more information, see the instruction sheet that came with the replacement part.

Replace missing imaging unit [31.xy]

Install the missing imaging unit to clear the message. For more information, see the "Replacing supplies" section of the *User's Guide*.

Replace unsupported cartridge [32.xy]

Remove the toner cartridge, and then install a supported one to clear the message and continue printing. For more information, see the instruction sheet that came with the supply.

This error can also be caused by installing a genuine Lexmark cartridge, such as a high yield cartridge, that is not intended to be used in this product.

The following error codes indicate that a non-genuine Lexmark toner cartridge is installed:

32.13

32.16

32.19

32.22

32.25 32.28 32.31 32.34 32.37

For more information, see "Using genuine Lexmark parts and supplies" on page 157.

Note: If you do not have a replacement cartridge, then see the "Ordering supplies" section or go to **www.lexmark.com**.

Replace unsupported imaging unit [32.xy]

Remove the imaging unit, and then install a supported one to clear the message and continue printing. For more information, see the instruction sheet that came with the supply.

This error can also be caused by installing a genuine Lexmark imaging unit, such as a MICR unit, that is not intended to be used in this product.

The following error codes indicate that a non-genuine Lexmark imaging unit is installed:

32.14

32.17

32.20

32.23

32.26

32.29

32.32 32.35

32.38

For more information, see "Using genuine Lexmark parts and supplies" on page 157.

Note: If you do not have a replacement imaging unit, then see the "Ordering supplies" section or go to **www.lexmark.com**.

Scanner automatic feeder cover open

Close the ADF cover.

Scanner disabled by admin [840.01]

Print without the scanner, or contact your system support person.

Scanner disabled. Contact system administrator if problem persists. [840.02]

From the printer control panel, try one or more of the following:

- Select Continue with scanner disabled to return to the home screen, and then contact your system support person.
- Select **Reboot and automatically enable scanner** to cancel the job.

Note: This attempts to enable the scanner.

• For non-touch-screen printer models, press OK to confirm.

Scanner jam, remove all originals from the scanner [2yy.xx]

Remove the jammed paper from the scanner.

Scanner jam, remove jammed originals from the scanner [2yy.xx]

Remove the jammed paper from the scanner.

SMTP server not set up. Contact system administrator.

From the printer control panel, select **Continue** to clear the message. For non-touch-screen printer models, press of to confirm.

Note: If the message appears again, then contact your system support person.

Some held jobs were not restored

Select **Continue** to clear the message. For non-touch-screen printer models, press oK to confirm

Note: Held jobs that are not restored remain in the printer hard disk and are inaccessible.

Standard network software error [54]

Try one or more of the following:

- From the printer control panel, select **Continue** to continue printing. For non-touch-screen printer models, press oK to confirm.
- Turn off the printer and then turn it back on.
- Update the network firmware in the printer or print server. For more information, visit the Lexmark support Web site at http://support.lexmark.com.

Standard USB port disabled [56]

From the printer control panel, select **Continue** to clear the message. For non-touch-screen printer models, press of to confirm.

Notes:

- The printer discards any data received through the USB port.
- Make sure the USB Buffer menu is not set to Disabled.

Supply needed to complete job

Do either of the following:

- Install the missing supply to complete the job.
- Cancel the current job.

The device is operating in Safe Mode. Some print options may be disabled or provide unexpected results.

Select **Continue** to clear the message. For non-touch-screen printer models, press of to confirm.

Too many flash options installed [58]

- **1** Turn off the printer.
- **2** Unplug the power cord from the electrical outlet.
- **3** Remove the extra flash memory.
- **4** Connect the power cord to a properly grounded electrical outlet.
- **5** Turn the printer back on.

Too many trays attached [58]

- **1** Turn off the printer.
- **2** Unplug the power cord from the electrical outlet.
- 3 Remove the extra trays.
- **4** Connect the power cord to a properly grounded electrical outlet.
- **5** Turn the printer back on.

Unformatted flash detected [53]

Try one or more of the following:

 From the printer control, select **Continue** to stop the defragmentation and continue printing. For non-touch-screen printer models, press ot confirm.

• Format the flash memory.

Note: If the error message remains, then the flash memory may be defective and need to be replaced.

Weblink server not set up. Contact system administrator.

Select **Continue** to clear the message. For non-touch-screen printer models, press ot confirm.

Note: If the message appears again, then contact your system support person.

Solving printer problems

- "Basic printer problems" on page 191
- "Hardware and internal option problems" on page 193
- "Paper feed problems" on page 195

Basic printer problems

The printer is not responding

Action	Yes	No
Step 1	Go to step 2.	Turn on the printer.
Make sure the printer is turned on.		
Is the printer turned on?		
Step 2 Check if the printer is in Sleep mode or Hibernate mode. Is the printer in Sleep mode or Hibernate mode?	Press the Sleep button to wake the printer from Sleep mode or Hibernate mode.	Go to step 3.
Step 3 Check if one end of the power cord is plugged into the printer and the other to a properly grounded electrical outlet. Is the power cord plugged into the printer and a properly grounded electrical outlet?	Go to step 4.	Plug one end of the power cord into the printer and the other to a properly grounded electrical outlet.

Action	Yes	No
Step 4 Check other electrical equipment plugged into the electrical outlet. Does other electrical equipment work?	Unplug the other electrical equipment, and then turn on the printer. If the printer does not work, then reconnect the other electrical equipment.	Go to step 5.
Step 5 Check if the cables connecting the printer and the computer are inserted in the correct ports. Are the cables inserted in the correct ports?	Go to step 6.	Make sure to match the following: The USB symbol on the cable with the USB symbol on the printer The appropriate Ethernet cable with the Ethernet port
Step 6 Make sure the electrical outlet is not turned off by a switch or breaker. Is the electrical outlet turned off by a switch or breaker?	Turn on the switch or reset the breaker.	Go to step 7.
Step 7 Check if the printer is plugged into any surge protectors, uninterruptible power supplies, or extension cords. Is the printer plugged into any surge protectors, uninterruptible power supplies, or extension cords?	Connect the printer power cord directly to a properly grounded electrical outlet.	Go to step 8.
Step 8 Check if one end of the printer cable is plugged into a port on the printer and the other to the computer, print server, option, or other network device. Is the printer cable securely attached to the printer and the computer, print server, option, or other network device?	Go to step 9.	Connect the printer cable securely to the printer and the computer, print server, option, or other network device.
Step 9 Make sure to install all hardware options properly and remove any packing material. Are all hardware options properly installed and all packing material removed?	Go to step 10.	Turn off the printer, remove all packing materials, then reinstall the hardware options, and then turn on the printer.
Step 10 Check if you have selected the correct port settings in the printer driver.	Go to step 11.	Use correct printer driver settings.
Are the port settings correct?		

Action	Yes	No
Step 11 Check the installed printer driver.	Go to step 12.	Install the correct printer driver.
Is the correct printer driver installed?		
Step 12 Turn off the printer, then wait for about 10 seconds, and then turn the printer back on.	The problem is solved.	Contact <u>customer</u> <u>support</u> .
Is the printer working?		

Printer display is blank

Action	Yes	No
Step 1 Press the Sleep button on the printer control panel. Does Ready appear on the printer display?	The problem is solved.	Go to step 2.
Step 2 Turn off the printer, then wait for about 10 seconds, and then turn the printer back on.	The problem is solved.	Turn off the printer, and then contact customer support.
Do Please wait and Ready appear on the printer display?		

Hardware and internal option problems

Cannot detect internal option

Action	Yes	No
Step 1 Turn off the printer, then wait for about 10 seconds, and then turn on the printer.	The problem is solved.	Go to step 2.
Does the internal option operate correctly?		
Step 2 Check if the internal option is properly installed in the controller board.	Go to step 3.	Connect the internal option to the controller board.
a Turn off the printer using the power switch, and then unplug the power cord from the electrical outlet.		
b Make sure the internal option is installed in the appropriate connector in the controller board.		
c Connect the power cord to the printer, then to a properly grounded electrical outlet, and then turn on the printer.		
Is the internal option properly installed in the controller board?		

Action	Yes	No
Step 3 Print a menu settings page, and then check to see if the internal option is listed in the Installed Features list.	Go to step 4.	Reinstall the internal option.
Is the internal option listed in the menu settings page?		
 Step 4 a Check if the internal option is selected. It may be necessary to manually add the internal option in the printer driver to make it available for print jobs. For more information, see "Adding available options in the print driver" on page 24. b Resend the print job. 	The problem is solved.	Contact <u>customer</u> <u>support</u> .
Does the internal option operate correctly?		

Tray problems

Action	Yes	No
 Step 1 a Pull out the tray, and then do one or more of the following: Check for paper jams or misfeeds. Check if the paper size indicators on the paper guides are aligned with the paper size indicators on the tray. If you are printing on custom-size paper, then make sure that the paper guides rest against the edges of the paper. Make sure the paper is below the maximum paper fill indicator. Make sure paper lies flat in the tray. b Check if the tray closes properly. 	The problem is solved.	Go to step 2.
 Step 2 a Turn off the printer, then wait about 10 seconds, and then turn the printer back on. b Resend the print job. Is the tray working? 	The problem is solved.	Go to step 3.
Step 3 Check if the tray is installed and recognized by the printer. Print a menu settings page, and then check if the tray is listed in the Installed Features list. Is the tray listed in the menu settings page?	Go to step 4.	Reinstall the tray. For more information, see the setup documentation that came with the tray.

Action	Yes	No
Step 4 Check if the tray is available in the printer driver.	The problem is solved.	Contact <u>customer</u> <u>support</u> .
Note: If necessary, manually add the tray in the printer driver to make it available for print jobs. For more information, see "Adding available options in the print driver" on page 24. Is the tray available in the printer driver?		

Paper feed problems

Jammed pages are not reprinted

A	Action		Yes	No
ć	ı T	urn on jam recovery. From the printer control panel, navigate to:	The problem is solved.	Contact <u>customer</u> <u>support</u> .
		Settings > General Settings > Print Recovery > Jam Recovery		
	2	2 Select On or Auto.		
	3	Depending on your printer model, press or touch Submit.		
k	F	Resend the pages that did not print.		
W	/ere	e the jammed pages reprinted?		

Paper frequently jams

Action	Yes	No
Step 1	Go to step 2.	The problem is
a Pull out the tray, and then do one or more of the following:		solved.
Make sure paper lies flat in the tray.		
 Check if the paper size indicators on the paper guides are aligned with the paper size indicators on the tray. 		
 Check if the paper guides are aligned against the edges of the paper. 		
 Make sure the paper is below the maximum paper fill indicator. 		
 Check if you are printing on a recommended paper size and type. 		
b Insert the tray properly.		
If jam recovery is enabled, then the print jobs will reprint automatically.		
Do paper jams still occur frequently?		

Action	Yes	No
Step 2	Go to step 3.	The problem is
a Load paper from a fresh package.		solved.
Note: Paper absorbs moisture due to high humidity. Store paper in its original wrapper until you use it.		
b Resend the print job.		
Do paper jams still occur frequently?		
Step 3	Contact <u>customer</u>	The problem is
a Review the tips on avoiding jams. For more information, see <u>"Avoiding jams" on page 167.</u>	support.	solved.
b Follow the recommendations, and then resend the print job.		
Do paper jams still occur frequently?		

Paper jam message remains after jam is cleared

Action	Yes	No
a Do either of the following:	Contact <u>customer</u>	The problem is
• For touch-screen printer models, touch or Done .	support.	solved.
• For non-touch-screen printer models, select Next > OK >		
Clear the jam, press OK > OK .		
b Follow the instructions on the printer display.		
Does the paper jam message remain?		

Solving print problems

Printing problems

Incorrect characters print

Action	Yes	No
Step 1 Make sure the printer is not in Hex Trace mode.	Deactivate Hex Trace mode.	Go to step 2.
Note: If Ready Hex appears on the printer display, then turn off the printer, and then turn it back on to deactivate Hex Trace mode. Is the printer in Hex Trace mode?		
 Step 2 a From the printer control panel, select Standard Network or Network [x], and then set SmartSwitch to On. b Resend the print job. Do incorrect characters print?	Contact <u>customer</u> <u>support</u> .	The problem is solved.

Job prints from the wrong tray or on the wrong paper

Action	Yes	No
Step 1 a Check if you are printing on paper that is supported by the tray. b Resend the print job.	The problem is solved.	Go to step 2.
Did the job print from the correct tray or on the correct paper?		
 Step 2 a From the Paper menu on the printer control panel, set the paper size and type to match the paper loaded in the tray. b Resend the print job. Did the job print from the correct tray or on the correct paper? 	The problem is solved.	Go to step 3.
 Step 3 a Depending on your operating system, open Printing Preferences or the Print dialog, and then specify the paper type. b Resend the print job. Did the job print from the correct tray or on the correct paper? 	The problem is solved.	Go to step 4.

Action	Yes	No
Step 4 a Check if the trays are not linked. b Resend the print job.	The problem is solved.	Contact <u>customer</u> <u>support</u> .
Did the job print from the correct tray or on the correct paper?		

Large jobs do not collate

Action	Yes	No
 Step 1 a From the Finishing menu on the printer control panel, set Collate to "(1,2,3) (1,2,3)." b Resend the print job. 	The problem is solved.	Go to step 2.
Did the job print and collate correctly?		
 Step 2 a From the printer software, set Collate to "(1,2,3) (1,2,3)." Note: Setting Collate to "(1,1,1) (2,2,2)" in the software overrides the setting in the Finishing menu. b Resend the print job. Did the job print and collate correctly? 	The problem is solved.	Go to step 3.
Step 3 Reduce the complexity of the print job by eliminating the number and size of fonts, the number and complexity of images, and the number of pages in the job. Did the job print and collate correctly?	The problem is solved.	Contact <u>customer</u> <u>support</u> .

Multiple-language PDF files do not print

A	ction	Yes	No
	cep 1 Check if the print options for the PDF output are set to embed all fonts.	The problem is solved.	Go to step 2.
	For more information, see the documentation that came with Adobe Acrobat.		
b	Generate a new PDF file, and then resend the print job.		
D	o the files print?		

Action	Yes	No
Step 2 a Open the document you want to print in Adobe Acrobat. b Click File > Print > Advanced > Print As Image > OK > OK.	The problem is solved.	Contact <u>customer</u> <u>support</u> .
Do the files print?		

Print jobs do not print

Action	Yes	No
 Step 1 a From the document you are trying to print, open the Print dialog and check if you have selected the correct printer. Note: If the printer is not the default printer, then you must select the printer for each document that you want to print. b Resend the print job. 	The problem is solved.	Go to step 2.
Do the jobs print? Step 2 a Check if the printer is plugged in and turned on, and if Ready appears on the printer display. b Resend the print job. Do the jobs print?	The problem is solved.	Go to step 3.
Step 3 If an error message appears on the printer display, then clear the message. Note: The printer continues to print after clearing the message. Do the jobs print?	The problem is solved.	Go to step 4.
Step 4 a Check if the ports (USB, serial, or Ethernet) are working and if the cables are securely connected to the computer and the printer. Note: For more information, see the setup documentation that came with the printer. b Resend the print job. Do the jobs print?	The problem is solved.	Go to step 5.
Step 5 a Turn off the printer, wait for about 10 seconds, and then turn the printer back on. b Resend the print job. Do the jobs print?	The problem is solved.	Go to step 6.

Action	Yes	No
Step 6 a Remove, and then reinstall the printer software. Fo information, see "Installing the printer software" or		Contact <u>customer</u> <u>support</u> .
Note: The printer software is available at http://support.lexmark.com . b Resend the print job.		
Do the jobs print?		

Print job takes longer than expected

Yes	No
The problem is solved.	Go to step 2.
The problem is solved.	Go to step 3.
The problem is solved.	Go to step 4.
The problem is solved.	Go to step 5.
:t	

Action	Yes	No
 Step 5 a Check if the cable connections to the printer and print server are secure. For more information, see the setup documentation that came with the printer. b Resend the print job. 	The problem is solved.	Contact <u>customer</u> <u>support</u> .
Did the job print?		

Printing slows down

Notes:

- When printing using narrow paper, the printer prints at a reduced speed to prevent damage to the fuser.
- The printer speed may be reduced when printing for long periods of time, or printing at elevated temperatures.

Action	Yes	No
Step 1	The problem is	Go to step 2.
a Make sure the size of the paper loaded in the tray matches the fuser type.	solved.	
Note: Use a 110-volt fuser for printing on letter-size paper and a 220-volt fuser for printing on A4-size paper.		
b Resend the print job.		
Does the print speed increase?		
Step 2	The problem is	Contact <u>customer</u>
a Replace the fuser. For more information on installing the fuser, see the instruction sheet that came with the part.	solved.	support.
b Resend the print job.		
Does the print speed increase?		

Tray linking does not work

Notes:

- The trays can detect paper length.
- The multipurpose feeder does not automatically detect the paper size. You must set the size from the Paper Size/Type menu.

Action	Yes	No
 Step 1 a Open the trays, and then check if they contain paper of the same size and type. Check if the paper guides are in the correct positions for the size of the paper loaded in each tray. Check if the paper size indicators on the paper guides are aligned with the paper size indicators on the tray. b Resend the print job. 	The problem is solved.	Go to step 2.
Do the trays link correctly?		
Step 2 a From the printer control panel, set the paper size and type in the Paper menu to match the paper loaded in the trays to be linked. Note: The paper size and type must match for trays to be linked. b Resend the print job.	The problem is solved.	Contact <u>customer</u> <u>support</u> .
Do the trays link correctly?		

Unexpected page breaks occur

Action	Yes	No
Step 1	The problem is	Go to step 2.
Adjust the print timeout settings.	solved.	
a From the printer control panel, navigate to:		
Settings > General Settings > Timeouts > Print Timeout		
b Select a higher setting and then, depending on your printer		
model, select OK or Submit .		
c Resend the print job.		
Did the file print correctly?		
	The problem is	Contact quaternar
Step 2	The problem is solved.	Contact <u>customer</u> support.
a Check the original file for manual page breaks.	Solved.	зарроте.
b Resend the print job.		
Did the file print correctly?		


Print quality problems

Characters have jagged or uneven edges



Action	Yes	No
Step 1 a Print a font sample list to check if the fonts you are using are supported by the printer. 1 From the printer control panel, navigate to: Menus > Reports > Print Fonts 2 Select PCL Fonts or PostScript Fonts. b Resend the print job.	Go to step 2.	Select a font that is supported by the printer.
Are you using fonts that are supported by the printer?		
Step 2 Check if the fonts installed on the computer are supported by the printer.	The problem is solved.	Contact customer support.
Are the fonts installed on the computer supported by the printer?		

 Clipped pages or images





Action	Yes	No
 Step 1 a Move the width and length guides in the tray to the correct positions for the paper loaded. b Resend the print job. 	Go to step 2.	The problem is solved.
Is the page or image clipped?		

Action	Yes	No
Step 2 From the printer control panel, set the paper size and type in the	Go to step 3.	Do one or more of the following:
Paper menu to match the paper loaded in the tray.		Specify the paper size from the tray
Do the paper size and type match the paper loaded in the tray?		settings to match the paper loaded in the tray.
		 Change the paper loaded in the tray to match the paper size specified in the tray settings.
Step 3	Go to step 4.	The problem is
a Depending on your operating system, specify the paper size		solved.
from Printing Preferences or from the Print dialog.		
b Resend the print job.		
Is the page or image clipped?		
Step 4	Contact <u>customer</u>	The problem is
a Reinstall the imaging unit.	support.	solved.
1 Remove the toner cartridge.		
2 Remove the imaging unit.		
Warning—Potential Damage: Do not expose the imaging unit to direct light for more than 10 minutes. Extended exposure to light may cause print quality problems.		
3 Install the imaging unit, and then the cartridge.		
b Resend the print job.		
Is the page or image clipped?		


Compressed images appear on prints

Note: Printing on letter-size paper using a 220-volt fuser compresses images.

Action	Yes	No
Step 1 a Make sure the size of the paper loaded in the tray matches the fuser type.	The problem is solved.	Go to step 2.
Note: Use a 110-volt fuser for printing on letter-size paper and a 220-volt fuser for printing on A4-size paper.		
b Resend the print job.		
Do compressed images still appear?		

Action	Yes	No
 Step 2 a Replace the fuser. For more information on installing the fuser, see the instruction sheet that came with the part. b Resend the print job. 	The problem is solved.	Contact <u>customer</u> <u>support</u> .
Do compressed images still appear?		

 Gray background on prints






Action	Yes	No
Step 1 a From the Quality Menu on the printer control panel, decrease the toner darkness. Note: 8 is the factory default setting.	The problem is solved.	Go to step 2.
b Resend the print job. Did the gray background disappear from the prints?		
Step 2 Reinstall the imaging unit and the toner cartridge. a Remove the toner cartridge. b Remove the imaging unit. Warning—Potential Damage: Do not expose the imaging unit to direct light for more than 10 minutes. Extended exposure to light can cause print quality problems. c Install the imaging unit, and then the cartridge. d Resend the print job. Did the gray background disappear from the prints?	The problem is solved.	Go to step 3.
Step 3 Replace the imaging unit, and then resend the print job. Did the gray background disappear from the prints?	The problem is solved.	Contact <u>customer</u> <u>support</u> .

Horizontal voids appear on prints



Action	Yes	No
Step 1 a Make sure your software program is using a correct fill pattern. b Resend the print job.	Go to step 2.	The problem is solved.
Do horizontal voids appear on prints?		
 Step 2 a Load the specified tray or feeder with a recommended type of paper. b Resend the print job. 	Go to step 3.	The problem is solved.
Do horizontal voids appear on prints?		
 a Redistribute the toner in the imaging unit. 1 Remove the toner cartridge, and then the imaging unit. 2 Firmly shake the imaging unit. Warning—Potential Damage: Do not expose the imaging unit to direct light for more than 10 minutes. Extended exposure to light may cause print quality problems. 3 Reinstall the imaging unit, and then the cartridge. b Resend the print job. 	Go to step 4.	The problem is solved.
Step 4 Replace the imaging unit, and then resend the print job. Do horizontal voids appear on prints?	Contact <u>customer</u> <u>support</u> .	The problem is solved.

 Incorrect margins on prints



Action	Yes	No
 Step 1 a Move the width and length guides in the tray to the correct positions for the paper size loaded. b Resend the print job. Are the margins correct?	The problem is solved.	Go to step 2.
Step 2 From the printer control panel, set the paper size in the Paper menu to match the paper loaded in the tray. Does the paper size match the paper loaded in the tray?	Go to step 3.	Do one or more of the following: • Specify the paper size from the tray settings to match the paper loaded in the tray. • Change the paper loaded in the tray to match the paper size specified in the tray settings.
 Step 3 a Depending on your operating system, specify the paper size from Printing Preferences or from the Print dialog. b Resend the print job. Are the margins correct?	The problem is solved.	Contact <u>customer</u> <u>support</u> .

Paper curl

Action	Yes	No
Step 1 Move the width and length guides in the tray to the correct positions for the size of the paper loaded.	Go to step 2.	Adjust the width and length guides.
Are the width and length guides positioned correctly?		
From the printer control panel, set the paper type and weight in the Paper menu to match the paper loaded in the tray. Do the paper type and weight match the type and weight of the paper in the tray?	Go to step 3.	Specify the paper type and weight from the tray settings to match the paper loaded in the tray.
 Step 3 a Depending on your operating system, specify the paper type and weight from Printing Preferences or from the Print dialog. b Resend the print job. 	Go to step 4.	The problem is solved.
Is the paper still curled?		
Step 4a Remove the paper from the tray, and then turn it over.b Resend the print job.	Go to step 5.	The problem is solved.
Is the paper still curled?		
Step 5 a Load paper from a fresh package. Note: Paper absorbs moisture due to high humidity. Store paper in its original wrapper until you use it. b Resend the print job.	Contact <u>customer</u> <u>support</u> .	The problem is solved.
Is the paper still curled?		

Print irregularities





Action	Yes	No
 Step 1 a Move the width and length guides in the tray to the correct positions for the size of the paper loaded in the tray. b Resend the print job. Do print irregularities still appear? 	Go to step 2.	The problem is solved.
	Co to stop 2	Specific the paper
Step 2 From the printer control panel, set the paper size and type in the Paper menu to match the paper loaded in the tray.	Go to step 3.	Specify the paper size and type from the tray settings to match the paper loaded in the tray.
Do the printer settings match the type and weight of the paper loaded in the tray?		loaded in the tray.
 Step 3 a Depending on your operating system, specify the paper type and weight from Printing Preferences or from the Print dialog. b Resend the print job. 	Go to step 4.	The problem is solved.
Do print irregularities still appear?		
Step 4 Check if the paper loaded in the tray has texture or rough finishes. Are you printing on textured or rough paper?	From the printer control panel, set the paper texture in the Paper menu to match the paper loaded in the tray.	Go to step 5.
 Step 5 a Load paper from a fresh package. Note: Paper absorbs moisture due to high humidity. Store paper in its original wrapper until you use it. b Resend the print job. Do print irregularities still appear? 	Go to step 6.	The problem is solved.
Step 6	Contact customer	The problem is
Replace the imaging unit, and then resend the print job.	support at http://support.lexm	solved.
Do print irregularities still appear?	ark.com or your service representative.	

Print is too dark



Action	Yes	No
Step 1 a From the Quality menu on the printer control panel, reduce the toner darkness. Note: 8 is the factory default setting. b Resend the print job. Is the print still too dark?	Go to step 2.	The problem is solved.
 Step 2 a From the printer control panel, set the paper type, texture and weight in the Paper menu to match the paper loaded in the tray. b Resend the print job. Is the tray set to the type, texture, and weight of the paper loaded? 	Go to step 3.	Do one or more of the following: • Specify the paper type, texture, and weight from the tray settings to match the paper loaded in the tray. • Change the paper loaded in the tray to match the paper type, texture and weight specified in the tray settings.
 Step 3 a Depending on your operating system, specify the paper type, texture and weight from Printing Preferences or from the Print dialog. b Resend the print job. Is the print still too dark? 	Go to step 4.	The problem is solved.
Step 4 Check if the paper loaded in the tray has texture or rough finishes. Are you printing on textured or rough paper?	From the printer control panel, change the texture settings in the Paper Texture menu to match the paper you are printing on.	Go to step 5.

Action	Yes	No
Step 5 a Load paper from a fresh package.	Go to step 6.	The problem is solved.
Note: Paper absorbs moisture due to high humidity. Store paper in its original wrapper until you use it. b Resend the print job.		
Is the print still too dark?	Contact customer	The problem is
Step 6 Replace the imaging unit, and then resend the print job.	support.	The problem is solved.
Is the print still too dark?		

Print is too light



Action	Yes	No
Step 1 a From the Quality menu on the printer control panel, increase the toner darkness.	Go to step 2.	The problem is solved.
Note: 8 is the factory default setting.b Resend the print job.		
Is the print still too light?		
Step 2 From the printer control panel, set the paper type, texture, and weight in the Paper menu to match the paper loaded in the tray. Is the tray set to the type, texture, and weight of the paper loaded?	Go to step 3.	Change the paper type, texture, and weight to match the paper loaded in the tray.
 Step 3 a Depending on your operating system, specify the paper type, texture, and weight from Printing Preferences or from the Print dialog. b Resend the print job. 	Go to step 4.	The problem is solved.
Is the print still too light?		

Action	Yes	No
Step 4 Make sure that the paper has no texture or rough finishes. Are you printing on textured or rough paper?	From the printer control panel, change the texture settings in the Paper Texture menu to match the paper you are printing on.	Go to step 5.
Step 5 a Load paper from a fresh package. Note: Paper absorbs moisture due to high humidity. Store paper in its original wrapper until you use it. b Resend the print job. Is the print still too light?	Go to step 6.	The problem is solved.
Step 6 a Redistribute the toner in the imaging unit. 1 Remove the toner cartridge, and then the imaging unit. 2 Firmly shake the imaging unit. Warning—Potential Damage: Do not expose the imaging unit to direct light for more than 10 minutes. Extended exposure to light may cause print quality problems. 3 Install the imaging unit, and then the cartridge. b Resend the print job. Is the print still too light?	Go to step 7.	The problem is solved.
Step 7 Replace the imaging unit, and then resend the print job. Is the print still too light?	Contact <u>customer</u> <u>support</u> .	The problem is solved.

Printer is printing blank pages

Action	Yes	No
 Step 1 a Check if there is packing material left on the imaging unit. 1 Remove the toner cartridge, and then the imaging unit. 2 Check if the packing material is properly removed from the imaging unit. Warning—Potential Damage: Do not expose the imaging unit to direct light for more than 10 minutes. Extended exposure to light may cause print quality problems. 3 Reinstall the imaging unit, and then the cartridge. b Resend the print job. 	Go to step 2.	The problem is solved.
Step 2 a Redistribute the toner in the imaging unit. 1 Remove the toner cartridge, and then the imaging unit. 2 Firmly shake the imaging unit. Warning—Potential Damage: Do not expose the imaging unit to direct light for more than 10 minutes. Extended exposure to light may cause print quality problems. 3 Reinstall the imaging unit, and then the cartridge. b Resend the print job. Is the printer still printing blank pages?	Go to step 3.	The problem is solved.
Step 3 Replace the imaging unit, and then resend the print job. Is the printer still printing blank pages?	Contact <u>customer</u> <u>support</u> .	The problem is solved.

Printer is printing solid black pages




Action	Yes	No
 Step 1 a Reinstall the imaging unit. 1 Remove the toner cartridge, and then the imaging unit. 	Go to step 2.	The problem is solved.
Warning—Potential Damage: Do not expose the imaging unit to direct light for more than 10 minutes. Extended exposure to light may cause print quality problems.		
2 Install the imaging unit, and then the cartridge.		
b Resend the print job.		
Is the printer printing solid black pages?		
Step 2	Contact <u>customer</u>	The problem is
Replace the imaging unit, and then resend the print job.	support.	solved.
Is the printer printing solid black pages?		

Repeating defects appear on prints



Action	Yes	No
Step 1 Measure the distance between the defects. Check for a distance between the defects that equals: 97 mm (3.82 in.) 47 mm (1.85 in.) 38 mm (1.5 in.) Is the distance between defects equal to one of the listed measurements?	Go to step 2.	1 Check if the distance between the defects equal to 80 mm (3.15 in.) 2 Take note of the distance, and then contact customer support at http://support.lexmark.com or your service representative.
Step 2	Contact <u>customer</u>	The problem is
Replace the imaging unit, and then resend the print job.	support at http://support.lexm	solved.
Do the repeating defects still appear?	ark.com or your service representative.	

 Shadow images appear on prints





Action	Yes	No
Step 1 Load paper with the correct paper type and weight in the tray. Is paper with the correct paper type and weight loaded in the tray?	Go to step 2.	Load paper with the correct paper type and weight in the tray.
Step 2 From the printer control panel, set the paper type and weight in the Paper menu to match the paper loaded in the tray. Is the tray set to the type and weight of the paper loaded?	Go to step 3.	Change the paper loaded in the tray to match the paper type and weight specified in the tray settings.
 Step 3 a Depending on your operating system, specify the paper type and weight from Printing Preferences or from the Print dialog. b Resend the print job. Do shadow images still appear on prints? 	Go to step 4.	The problem is solved.
Step 4 Replace the imaging unit, and then resend the print job. Do shadow images still appear on prints?	Contact <u>customer</u> <u>support</u> .	The problem is solved.

Skewed print



Action	Yes	No
 Step 1 a Move the width and length guides in the tray to the correct positions for the size of the paper loaded. b Resend the print job. 	Go to step 2.	The problem is solved.
Is the print still skewed?		
 Step 2 a Check if you are printing on a paper that is supported by the tray. b Resend the print job. 	Contact <u>customer</u> <u>support</u> .	The problem is solved.
Is the print still skewed?		


Streaked horizontal lines appear on prints




Action	Yes	No
 Step 1 a Depending on your operating system, specify the tray or feeder from Printing Preferences or the Print dialog. b Resend the print job. 	Go to step 2.	The problem is solved.
Do streaked horizontal lines appear on prints?		
Step 2 From the printer control panel, set the paper type and weight in the Paper menu to match the paper loaded in the tray. Do the paper type and weight match the type and weight of the paper in the tray?	Go to step 3.	Change the paper type and weight to match the paper loaded in the tray.
Step 3	Go to step 4.	The problem is
a Load paper from a fresh package.		solved.
Note: Paper absorbs moisture due to high humidity. Store paper in its original wrapper until you use it.		
b Resend the print job.		
Do streaked horizontal lines appear on prints?		

Action	Yes	No
Step 4 a Reinstall the imaging unit. 1 Remove the toner cartridge, and then the imaging unit. Warning—Potential Damage: Do not expose the imaging unit to direct light for more than 10 minutes. Extended	Go to step 5.	The problem is solved.
exposure to light may cause print quality problems. 2 Install the imaging unit, and then the cartridge.		
b Resend the print job.		
Do streaked horizontal lines appear on prints?		
Step 5	Contact <u>customer</u>	The problem is
Replace the imaging unit, and then resend the print job.	support.	solved.
Do streaked horizontal lines appear on prints?		

  Streaked vertical lines appear on prints






Action	Yes	No
 Step 1 a Depending on your operating system, specify the paper type, texture, and weight from Printing Preferences or from the Print dialog. b Resend the print job. 	Go to step 2.	The problem is solved.
Do streaked vertical lines appear on prints?		


Action	Yes	No
Step 2 From the printer control panel, set the paper texture, type, and weight in the Paper menu to match the paper loaded in the tray. Do the paper texture, type, and weight match the paper in the tray?	Go to step 3.	Do one or more of the following: • Specify the paper texture, type, and weight from the tray settings to match the paper loaded in the tray. • Change the paper loaded in the tray to match the paper texture, type, and weight specified in the tray settings.
 Step 3 a Load paper from a fresh package. Note: Paper absorbs moisture due to high humidity. Store paper in its original wrapper until you use it. b Resend the print job. Do streaked vertical lines appear on prints?	Go to step 4.	The problem is solved.
Step 4 a Reinstall the imaging unit. 1 Remove the toner cartridge, and then the imaging unit. Warning—Potential Damage: Do not expose the imaging unit to direct light for more than 10 minutes. Extended exposure to light may cause print quality problems. 2 Install the imaging unit, and then the cartridge. b Resend the print job. Do streaked vertical lines appear on prints?	Go to step 5.	The problem is solved.
Step 5 Replace the imaging unit, and then resend the print job. Do streaked vertical lines appear on prints?	Contact <u>customer</u> <u>support</u> at <u>http://support.lexm</u> <u>ark.com</u> or your service representative.	The problem is solved.

 Toner fog or background shading appears on prints



Action	Yes	No
Step 1 Reinstall the imaging unit. a Remove, and then install the imaging unit. b Resend the print job.	Go to step 2.	The problem is solved.
Does fog or shading appear on prints?		
Step 2 Replace the imaging unit, and then resend the print job. Does fog or shading appear on prints?	Contact <u>customer</u> <u>support</u> at http://support.lexm <u>ark.com</u> or your service representative.	The problem is solved.

Toner rubs off

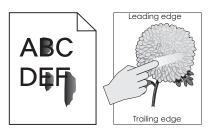

Action	Yes	No
Step 1 From the Paper menu on the printer control panel, check the paper type, texture, and weight.	Go to step 2.	Specify the paper type, texture, and weight from the tray settings to match the
Do the paper type, texture, and weight match the paper loaded in the tray?		paper loaded in the tray.
Step 2	Contact <u>customer</u>	The problem is
Resend the print job.	support.	solved.
Does the toner still rub off?		

Toner specks appear on prints

Action	Yes	No
Replace the imaging unit, and then resend the print job.	Contact <u>customer</u> <u>support</u> .	The problem is solved.
Do toner specks appear on prints?		

Transparency print quality is poor

Action	Yes	No
Step 1 From the printer control panel, set the paper type in the Paper menu to match the paper loaded in the tray.	Go to step 2.	Set the paper type to Transparency.
Is the paper type for the tray set to Transparency?		
Step 2 a Check if you are using a recommended type of transparency. b Resend the print job.	Contact <u>customer</u> <u>support</u> .	The problem is solved.
Is the print quality still poor?		

Uneven print density



Action	Yes	No
Replace the imaging unit, and then resend the print job.	Contact <u>customer</u> <u>support</u> .	The problem is solved.
Is the print density uneven?		

Vertical voids appear on prints



Action	Yes	No
 Step 1 a Make sure your software program is using a correct fill pattern. b Resend the print job. 	Go to step 2.	The problem is solved.
Do vertical voids appear on prints?		
 Step 2 a From the printer control panel, set the paper type and weight in the Paper menu to match the paper loaded in the tray. b Resend the print job. 	Go to step 3.	The problem is solved.
Do vertical voids appear on prints?		
 Step 3 Check if you are using a recommended type of paper. a Load the specified tray or feeder with a recommended type of paper. b Resend the print job. Do vertical voids appear on prints? 	Go to step 4.	The problem is solved.
 Step 4 a Redistribute the toner in the imaging unit. 1 Remove the toner cartridge, and then the imaging unit. 2 Firmly shake the imaging unit. Warning—Potential Damage: Do not expose the imaging unit to direct light for more than 10 minutes. Extended exposure to light may cause print quality problems. 3 Reinstall the imaging unit, and then the cartridge. b Resend the print job. 	Go to step 5.	The problem is solved.
Step 5 Replace the imaging unit, and then resend the print job.	Contact <u>customer</u> <u>support</u> .	The problem is solved.
Do vertical voids appear on prints?		

Solving copy problems

- "Copier does not respond" on page 222
- "Scanner unit does not close" on page 222
- "Poor copy quality" on page 222
- "Partial document or photo copies" on page 224

Copier does not respond

Action	Yes	No
Step 1 Check if an error or status message appears on the display.	Clear the error or status message.	Go to step 2.
Does an error or status message appear?		
Step 2 Check if the power cord is plugged into the printer and a properly grounded electrical outlet. Is the power cord plugged into the printer and a properly grounded electrical outlet?	Go to step 3.	Connect the power cord to the printer and a properly grounded electrical outlet.
Step 3 Turn off the printer, then wait for about 10 seconds, and then turn it back on. Did Performing Self Test and Ready appear?	The problem is solved.	Contact <u>customer</u> <u>support</u> .

Scanner unit does not close

Action	Yes	No
Check if there are no obstructions between the scanner unit and the printer.	The problem is solved.	Contact <u>customer</u> <u>support</u> .
a Lift the scanner unit.		
b Remove any obstruction that keeps the scanner unit open.		
c Lower the scanner unit.		
Did the scanner unit close properly?		

Poor copy quality

Action	Yes	No
Step 1 Check if an error or status message appears on the display.	Clear the error or status message.	Go to step 2.
Does an error or status message appear?		
Step 2	Go to step 3.	Increase the scan
Check the quality of the original document.		resolution setting for a higher-quality
Is the quality of the original document satisfactory?		output.

Action	Yes	No
Step 3	Go to step 4.	See <u>"Cleaning the</u>
If dark marks appear on prints, then clean the scanner glass and the ADF glass using a clean, lint-free cloth dampened with water.		scanner glass" on page 155.
Is the scanner glass clean?		
Step 4	Go to step 5.	See <u>"Print quality</u>
Send a print job, and then check for print quality problems.		problems" on
a From the General Settings menu, adjust the Eco-Mode settings.		<u>page 203</u> .
b From the Copy menu, adjust the Darkness setting.		
c If the print remains faded, then replace the toner cartridge.		
Is the print quality satisfactory?		
Step 5	Go to step 6.	Place the document
Check the placement of the document or photo.		or photo facedown
Make sure the document or photo is loaded facedown on the scanner glass in the upper left corner.		on the scanner glass in the upper left corner.
Is the document or photo loaded correctly?		
Step 6	Go to step 7.	Change the Content
Check the copy settings. From the Copy screen, check if the Content Type and Content Source settings are correct for the document being scanned.		Type and Content Source settings to match the document being scanned.
Are the Content Type and Content Source settings correct for the document being scanned?		
Step 7	Go to step 8.	The problem is
Check for patterns on print.		solved.
a From the printer control panel, navigate to:		
Copy > Sharpness > select a lower setting		
Note: Make sure no scaling is being selected.		
b Resend the copy job.		
Do patterns appear on prints?		
Step 8	Go to step 9.	The problem is
Check for missing or faded text on prints.		solved.
a From the Copy screen, adjust the settings of the following:		
Sharpness—Increase the sharpness setting.		
Contrast—Increase the contrast setting.		
b Resend the copy job.		
Do prints have missing or faded text?		

Action	Yes	No
Step 9 Check for washed-out or overexposed output. a From the Copy screen, adjust the settings of the following: • Background Removal—Reduce the current setting. • Darkness—Increase the current setting. b Resend the copy job.	Contact <u>customer</u> <u>support</u> .	The problem is solved.
Do pages show washed-out or overexposed prints?		

Partial document or photo copies

Action	Yes	No
Step 1 Check the placement of the document or photo. Make sure the document or photo is loaded facedown on the scanner glass in the upper left corner. Is the document or photo loaded correctly?	Go to step 2.	Place the document or photo facedown on the scanner glass in the upper left corner.
Step 2 Check if the paper size setting matches the size of the paper loaded in the tray. From the Paper menu on the printer control panel, check the Paper Size setting. Does the paper size setting match the size of the paper loaded in the tray.	Go to step 3.	Change the paper size setting to match the paper loaded in the tray, or load the tray with paper that matches the paper size setting.
 Step 3 a Specify the paper size. Depending on your operating system, specify the paper size in Printing Preferences or the Print dialog. b Resend the print job. Do copies print properly? 	The problem is solved.	Contact <u>customer</u> <u>support</u> .

Solving fax problems

- "Fax function is not set up" on page 225
- "Caller ID is not shown" on page 225
- "Cannot send or receive a fax" on page 226
- "Can send but not receive faxes" on page 228
- "Can receive but not send faxes" on page 229
- "Received fax has poor print quality" on page 230

Fax function is not set up

Before completing these instructions for network printers, check if the fax cables are connected.

Note: The indicator light blinks red until you set up fax.

Action	Yes	No
a From the printer control panel, navigate to:	The problem is	Contact <u>customer</u>
> Settings > OK > General Settings > OK > Run initial	solved.	support.
setup > OK > ◆		
b Turn off the printer, and then turn it back on.		
The "Select your language" screen appears on the printer display.		
c Select a language, and then press OK.		
d Select a country or region, and then press OK.		
e Select a time zone, and then press OK.		
f Press the up or down arrow button to scroll to Fax , and then		
press OK.		
Is the fax function set up?		

Caller ID is not shown

Action	Yes	No
Contact your telephone company to check if your telephone line is subscribed to the caller ID service.	The problem is solved.	Contact <u>customer</u> <u>support</u> .
Notes:		
 If your region supports multiple caller ID patterns, then you may have to change the default setting. There are two settings available: FSK (pattern 1) and DTMF (pattern 2). 		
The availability of these settings in the Fax menu depends on whether your country or region supports multiple caller ID patterns.		
Contact your telephone company to determine which pattern or switch setting to use.		
Does the caller ID appear?		

Cannot send or receive a fax

Action	Yes	No
Step 1 Check if an error or status message appears on the display. Is there an error or status message on the display?	Clear the error or status message.	Go to step 2.
Step 2 Check if the power cord is plugged into the printer and a properly grounded electrical outlet. Is the power cord plugged into the printer and a properly grounded electrical outlet?	Go to step 3.	Connect the power cord to the printer and a properly grounded electrical outlet.
Step 3 Check the power. Check if the printer is plugged in and turned on, and if Ready appears on the display. Is the printer turned on, and does Ready appear on the display?	Go to step 4.	Turn on the printer, and then wait until Ready appears on the display.
Step 4 Check the printer connections. If applicable, check if the cable connections for the following equipment are secure: • Telephone • Handset • Answering machine Are the cable connections secure?	Go to step 5.	Securely connect the cables.
 Step 5 a Check the telephone wall jack. 1 Plug the telephone cable into the wall jack. 2 Listen for a dial tone. 3 If you do not hear a dial tone, then plug a different telephone cable into the wall jack. 4 If you still do not hear a dial tone, then plug the telephone cable into a different wall jack. 5 If you hear a dial tone, then connect the printer to that wall jack. b Try sending or receiving a fax. Can you send or receive a fax? 	The problem is solved.	Go to step 6.

Action	Yes	No
 Step 6 Check if the printer is connected to an analog phone service or the correct digital connector. The fax modem is an analog device. Certain devices can be connected to the printer so that digital telephone services can be used. If you are using an ISDN telephone service, then connect the printer to an analog telephone port (an R-interface port) on an ISDN terminal adapter. For more information and to request an R-interface port, contact your ISDN provider. If you are using DSL, then connect to a DSL filter or router that will support analog use. For more information, contact your DSL provider. If you are using a PBX telephone service, then make sure you are connecting to an analog connection on the PBX. If none exists, then consider installing an analog telephone line for the fax machine. Is the printer connected to an analog phone service or the correct digital connector? 	Go to step 7.	Connect the printer to an analog phone service or the correct digital connector.
Step 7 Check for a dial tone. Did you hear a dial tone?	Go to step 8.	 Try calling the fax number to make sure that it is working properly. If the telephone line is being used by another device, then wait until the other device is finished before sending a fax. If you are using the On Hook Dial feature, then turn up the volume to check if you hear a dial tone.
Step 8 Temporarily disconnect other equipment (such as answering machines, computers with modems, or telephone line splitters) between the printer and the telephone line, and then try sending or receiving a fax. Can you send or receive a fax?	The problem is solved.	Go to step 9.

Action	Yes	No
 Step 9 a Temporarily disable call waiting. Contact your telephone company to obtain the keypad sequence for temporarily disabling call waiting. b Try sending or receiving a fax. 	The problem is solved.	Go to step 10.
Can you send or receive a fax?		
 Step 10 a Temporarily disable voice mail service. For more information, contact your telephone company. Note: If you want to use both voice mail and the printer, then consider adding a second telephone line for the printer. b Try sending or receiving a fax. Can you send or receive a fax? 	The problem is solved.	Go to step 11.
Step 11 Scan the original document one page at a time. a Dial the fax number. b Scan the document one page at a time. Can you send or receive a fax?	The problem is solved.	Contact <u>customer</u> <u>support</u> .

Can send but not receive faxes

Action	Yes	No
Step 1 Check the tray or feeder. If empty, then load paper in the tray or feeder.	The problem is solved.	Go to step 2.
Can you receive faxes?		

Action	Yes	No
Step 2 Check the ring count delay settings. a Open a Web browser, and then type the printer IP address in the address field.	The problem is solved.	Go to step 3.
Notes:		
 View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.123. 		
 If you are using a proxy server, then temporarily disable it to load the Web page correctly. 		
b Click Settings > Fax Settings > Analog Fax Setup .		
c In the "Rings to Answer" field, enter the number of times you want the phone to ring before the printer answers.		
d Click Submit.		
Can you receive faxes?		
Step 3	The problem is	Contact <u>customer</u>
Replace the toner cartridge. For more information, see the instruction sheet that came with the supply.	solved.	support.
Can you receive faxes?		

Can receive but not send faxes

Action	Yes	No
Step 1 Check if the printer is in Fax mode. From the printer control panel, press Fax to put the printer in fax mode, and then resend the fax job.	The problem is solved.	Go to step 2.
Can you send faxes?		

Action	Yes	No
Step 2 a Load the original document faceup, short edge first into the ADF tray or facedown on the scanner glass in the upper left corner.	The problem is solved.	Go to step 3.
Notes:		
 Do not load postcards, photos, small items, transparencies, photo paper, or thin media (such as magazine clippings) into the ADF tray. Place these items on the scanner glass. 		
 The ADF indicator light comes on when the paper is loaded properly. 		
b Resend the fax job.		
Can you send faxes?		
Step 3	The problem is	Contact <u>customer</u>
a Check if the shortcut number is configured for the number that you want to dial.	solved.	support.
Note: As an alternative, you can dial the telephone number manually.		
b Resend the fax job.		
Can you send faxes?		

Received fax has poor print quality

Action	Yes	No
Step 1 Ask the person who sent you the fax to: a Check if the quality of the original document is satisfactory. b Increase the fax scan resolution, if possible. c Resend the fax. There may have been a problem with the quality of the telephone line connection.	The problem is solved.	Go to step 2.
Is the fax print quality satisfactory?		

Action	Yes	No
Step 2 Decrease the incoming fax transmission speed. a Open a Web browser, and then type the printer IP address in the address field. Notes:	The problem is solved.	Go to step 3.
 View the printer IP address in the TCP/IP section in the Network/Ports menu. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.123. If you are using a proxy server, then temporarily disable it to load the Web page correctly. Click Settings > Fax Settings > Analog Fax Setup. In the Max Speed menu, click one of the following: 2400 4800 9600 14400 		
• 33600 d Click Submit .		
e Resend the fax.		
Is the fax print quality satisfactory?		
Step 3 Replace the toner cartridge. When Cartridge low [88.xy] appears, replace the cartridge, and then resend the fax.	The problem is solved.	Contact <u>customer</u> <u>support</u> .
Is the fax print quality satisfactory?		

Solving scanner problems

- "The scanner does not respond" on page 232
- "Scan job was not successful" on page 233
- "Scanner unit does not close" on page 233
- "Scanning takes too long or freezes the computer" on page 233
- "Poor scanned image quality" on page 234
- "Partial document or photo scans" on page 235

The scanner does not respond

Step 1 Check if the printer is turned on. Is the printer turned on? Step 2 Check if the printer cable is securely attached to the printer and the computer, print server, option, or other network device. Is the printer cable securely attached to the printer and the computer, print server, option, or other network device? Step 3 Check if the power cord is plugged into the printer and a properly grounded electrical outlet. Step 3 Check if the power cord plugged into the printer and a properly grounded electrical outlet? Go to step 2. Connect the printer and the computer, and the computer, print server, option, other network device? Go to step 4. Connect the printer and a properly grounded electrical outlet.	
Is the printer turned on? Step 2 Check if the printer cable is securely attached to the printer and the computer, print server, option, or other network device. Is the printer cable securely attached to the printer and the computer, print server, option, or other network device? Step 3 Check if the power cord is plugged into the printer and a properly grounded electrical outlet. Go to step 3. Connect the printer and the computer, print server, option, or other network device? Go to step 4. Connect the printer and a properly grounded electrical outlet. Step 3 Check if the power cord is plugged into the printer and a properly grounded electrical outlet.	ıter.
Step 2 Check if the printer cable is securely attached to the printer and the computer, print server, option, or other network device. Is the printer cable securely attached to the printer and the computer, print server, option, or other network device? Step 3 Check if the power cord is plugged into the printer and a properly grounded electrical outlet. Go to step 3. Connect the pricable securely printer and the computer, print server, option, other network device? Go to step 4. Connect the pricable securely printer and a properly grounded electrical outlet. Go to step 4.	
Check if the printer cable is securely attached to the printer and the computer, print server, option, or other network device. Is the printer cable securely attached to the printer and the computer, print server, option, or other network device? Step 3 Check if the power cord is plugged into the printer and a properly grounded electrical outlet. Go to step 4. Connect the printer and a properly grounded electrical outlet. Is the power cord plugged into the printer and a properly grounded electrical outlet?	
Check if the power cord is plugged into the printer and a properly grounded electrical outlet. Is the power cord plugged into the printer and a properly grounded electrical outlet? cord to the printer and a properly grounded outlet.	to the
	ter
Step 4 Turn on the switch or Go to step 5.	
Check if the electrical outlet is turned off by a switch or breaker.	
Is the electrical outlet turned off by a switch or breaker?	
Step 5 Connect the printer Go to step 6.	
Check if the printer is plugged into any surge protectors, uninterruptible power supplies, or extension cords. power cord directly to a properly grounded electrical	
Is the printer plugged into any surge protectors, uninterruptible power supplies, or extension cords?	
Step 6 Check other electrical equipment plugged into the outlet. Unplug the other electrical equipment and turn on the printer. If the printer	
Are the other electrical equipment working? does not work, then reconnect the other electrical equipment and then go to step 6.	
Step 7 The problem is Contact custor	<u>1er</u>
Turn off the printer, then wait for about 10 seconds, and then turn the printer back on.	
Are the printer and scanner working?	

Scan job was not successful

Action	Yes	No
Step 1 Check the cable connections. Make sure the Ethernet or USB cable is securely connected to the computer and the printer.	Go to step 2.	Connect the cables properly.
Are the cables securely connected?		
Step 2 Check if the file name is already in use.	Change the file name.	Go to step 3.
Is the file name already in use?		
Step 3 Check if the document or photo you want to scan is open in another application or being used by another user.	Close the file you are scanning.	Go to step 4.
Is the file you want to scan open by another application or user?		Calcalilla Assaul
Step 4 Check if either the Append time stamp or the Overwrite existing file check box is selected in the destination configuration settings. Is the Append time stamp or Overwrite existing file check box	Contact <u>customer</u> <u>support</u> .	Select the Append time stamp or Overwrite existing file check box in the destination configuration
selected in the destination configuration settings?		settings.

Scanner unit does not close

Action	Yes	No
 Check if there are obstructions in the scanner unit. a Lift the scanner unit. b Remove any obstruction keeping the scanner unit open. c Lower the scanner unit. 	The problem is solved.	Contact <u>customer</u> <u>support</u> .
Did the scanner unit close correctly?		

Scanning takes too long or freezes the computer

Action	Yes	No
Step 1 Check if other applications are interfering with the scan. Close all applications that are not being used.	Go to step 2.	The problem is solved.
Does scanning still take too long or freeze the computer?		

Action	Yes	No
Step 2	Contact <u>customer</u>	The problem is
Select a lower scan resolution.	support.	solved.
Does scanning still take too long or freeze the computer?		

Poor scanned image quality

Action	Yes	No
Step 1 Check if an error message appears on the display.	Clear the error message.	Go to step 2.
Is there an error message on the printer display?		
Step 2 Check the quality of the original document. Is the quality of the original document satisfactory?	Go to step 3.	Increase the scan resolution settings for a higher-quality output.
	Co to stop 4	Soo "Clooping the
Step 3 Clean the scanner glass and the ADF glass using a clean, lint-free cloth dampened with water.	Go to step 4.	See "Cleaning the scanner glass" on page 155.
Is the scanner glass clean?		
Step 4 Check the placement of the document or photo. Make sure the document or photo is loaded facedown on the scanner glass in the upper left corner. Is the document or photo loaded correctly?	Go to step 5.	Place the document or photo facedown on the scanner glass in the upper left corner.
Step 5	Go to step 6.	See <u>"Print quality</u>
 Send a print job, and then check for print quality problems. From the General Settings menu, adjust the Eco-Mode settings. From the Copy menu, adjust the Darkness setting. When the print becomes faded, replace the toner cartridge. Is the print quality satisfactory? 	Go to step o.	problems" on page 203.
	C - tt 7	
Step 6 Check the scan settings. From the Scan screen, make sure the Content Type and Content Source settings are correct for the document being scanned.	Go to step 7.	Change the Content Type and Content Source settings to match the document being scanned.
Are the Content Type and Content Source settings correct for the document being scanned?		

Action	Yes	No
Step 7	Problem solved.	Contact <u>customer</u>
Increase the scan resolution settings for a higher-quality output.		support.
Did the increased resolution produce a higher-quality output?		

Partial document or photo scans

Action	Yes	No
Check the placement of the document or photo. Make sure the document or photo is loaded facedown on the scanner glass in the upper left corner.	Contact <u>customer</u> <u>support</u> .	Load the document or photo facedown on the scanner glass in the upper left
Is the document or photo loaded correctly?		corner.

Embedded Web Server does not open

Action	Yes	No
Step 1 a Turn on the printer. b Open a Web browser, and then type the printer IP address.	The problem is solved.	Go to step 2.
c Press Enter. Does the Embedded Web Server open?		
Step 2 Make sure the printer IP address is correct.	The problem is solved.	Go to step 3.
a View the printer IP address:		
 From the TCP/IP section in the Network/Ports menu By printing a network setup page or menu settings page, and then finding the TCP/IP section 		
Note: An IP address appears as four sets of numbers separated by periods, such as 123.123.123.		
b Open a Web browser, and then type the IP address.		
Note: Depending on the network settings, you may need to type "https://" instead of "http://" before the printer IP address to access the Embedded Web Server.		
c Press Enter.		
Does the Embedded Web Server open?		

Action	Yes	No
Step 3	The problem is	Go to step 4.
Check if the network is working.	solved.	
a Print a network setup page.		
b Check the first section of the network setup page and confirm that the status is Connected.		
Note: If the status is Not Connected, then the connection may be intermittent, or the network cable may be defective. Contact your system support person for a solution, and then print another network setup page.		
c Open a Web browser, and then type the printer IP address.		
d Press Enter.		
Does the Embedded Web Server open?		
Step 4	The problem is	Go to step 5.
Check if the cable connections to the printer and print server are secure.	solved.	
a Connect the cables properly. For more information, see the setup documentation that came with the printer.		
b Open a Web browser, and then type the printer IP address.		
c Press Enter.		
Does the Embedded Web Server open?		
Step 5	The problem is	Contact your system
Temporarily disable the Web proxy servers.	solved.	support person.
Proxy servers may block or restrict you from accessing certain Web sites including the Embedded Web Server.		
Does the Embedded Web Server open?		

Contacting customer support

Before contacting customer support, make sure to have the following information:

- Printer problem
- Error message
- Printer model type and serial number

Go to http://support.lexmark.com to receive e-mail or chat support, or browse through the library of manuals, support documentation, drivers, and other downloads.

Technical support via telephone is also available. In the U.S. or Canada, call 1-800-539-6275. For other countries or regions, go to http://support.lexmark.com.

Notices

Product information

Product name:

Lexmark XM1135

Machine type:

7015

Model(s):

279

Edition notice

November 2017

The following paragraph does not apply to any country where such provisions are inconsistent with local law: LEXMARK INTERNATIONAL, INC., PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions. Improvements or changes in the products or the programs described may be made at any time.

References in this publication to products, programs, or services do not imply that the manufacturer intends to make these available in all countries in which it operates. Any reference to a product, program, or service is not intended to state or imply that only that product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any existing intellectual property right may be used instead. Evaluation and verification of operation in conjunction with other products, programs, or services, except those expressly designated by the manufacturer, are the user's responsibility.

For Lexmark technical support, visit http://support.lexmark.com.

For information on supplies and downloads, visit www.lexmark.com.

© 2012 Lexmark International, Inc.

All rights reserved.

GOVERNMENT END USERS

The Software Program and any related documentation are "Commercial Items," as that term is defined in 48 C.F.R. 2.101, "Computer Software" and "Commercial Computer Software Documentation," as such terms are used in 48 C.F.R. 12.212 or 48 C.F.R. 227.7202, as applicable. Consistent with 48 C.F.R. 12.212 or 48 C.F.R. 227.7202-1 through 227.7207-4, as applicable, the Commercial Computer Software and Commercial Software Documentation are licensed to the U.S. Government end users (a) only as Commercial Items and (b) with only those rights as are granted to all other end users pursuant to the terms and conditions herein.

Licensing notices

All licensing notices associated with this product can be viewed from the root directory of the documentation CD.

Trademarks

Lexmark, the Lexmark logo, MarkNet, and MarkVision are trademarks or registered trademarks of Lexmark International, Inc. in the United States and/or other countries.

Google Cloud Print is a trademark of Google Inc.

Mac and the Mac logo are trademarks of Apple Inc., registered in the U.S. and other countries.

Microsoft and Windows are either registered trademarks or trademarks of the Microsoft group of companies in the United States and other countries.

Mopria®, the Mopria® logo, and the Mopria® Alliance logo are registered trademarks and service marks of Mopria Alliance, Inc. in the United States and other countries. Unauthorized use is strictly prohibited.

PCL® is a registered trademark of the Hewlett-Packard Company. PCL is Hewlett-Packard Company's designation of a set of printer commands (language) and functions included in its printer products. This printer is intended to be compatible with the PCL language. This means the printer recognizes PCL commands used in various application programs, and that the printer emulates the functions corresponding to the commands.

PostScript is a registered trademark of Adobe Systems Incorporated in the United States and/or other countries.

The following terms are trademarks or registered trademarks of these companies:

Albertus	The Monotype Corporation plc
Antique Olive	Monsieur Marcel OLIVE
Apple-Chancery	Apple Computer, Inc.
Arial	The Monotype Corporation plc
CG Times	Based on Times New Roman under license from The Monotype Corporation plc, is a product of Agfa Corporation
Chicago	Apple Computer, Inc.
Clarendon	Linotype-Hell AG and/or its subsidiaries
Eurostile	Nebiolo
Geneva	Apple Computer, Inc.
GillSans	The Monotype Corporation plc
Helvetica	Linotype-Hell AG and/or its subsidiaries
Hoefler	Jonathan Hoefler Type Foundry
ITC Avant Garde Gothic	International Typeface Corporation
ITC Bookman	International Typeface Corporation
ITC Mona Lisa	International Typeface Corporation
ITC Zapf Chancery	International Typeface Corporation
Joanna	The Monotype Corporation plc

Marigold	Arthur Baker	
Monaco	Apple Computer, Inc.	
New York	Apple Computer, Inc.	
Oxford	Arthur Baker	
Palatino	Linotype-Hell AG and/or its subsidiaries	
Stempel Garamond	Linotype-Hell AG and/or its subsidiaries	
Taffy	Agfa Corporation	
Times New Roman	The Monotype Corporation plc	
Univers	Linotype-Hell AG and/or its subsidiaries	

All other trademarks are the property of their respective owners.

AirPrint and the AirPrint logo are trademarks of Apple, Inc.

Federal Communications Commission (FCC) compliance information statement

This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The FCC Class B limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your point of purchase or service representative for additional suggestions.

The manufacturer is not responsible for radio or television interference caused by using other than recommended cables or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate this equipment.

Note: To assure compliance with FCC regulations on electromagnetic interference for a Class B computing device, use a properly shielded and grounded cable such as Lexmark part number 1021231 for parallel attach or 1021294 for USB attach. Use of a substitute cable not properly shielded and grounded may result in a violation of FCC regulations.

Any questions regarding this compliance information statement should be directed to:

Director of Lexmark Technology & Services Lexmark International, Inc. 740 West New Circle Road Lexington, KY 40550 (859) 232–3000

Noise emission levels

The following measurements were made in accordance with ISO 7779 and reported in conformance with ISO 9296.

Note: Some modes may not apply to your product.

1-meter average sound pressure, dBA		
Printing	One-sided: 53; Two-sided: 52	
Scanning	55	
Copying	54	
Ready	N/A	

Values are subject to change. See **www.lexmark.com** for current values.

Temperature information

Ambient operating temperature	15.6 to 32.2°C (60 to 90°F)	
Shipping temperature	-40 to 43.3°C (-40 to 110°F)	
Storage temperature and relative humidity	1 to 35°C (34 to 95°F)	
	8 to 80% RH	

Waste from Electrical and Electronic Equipment (WEEE) directive



The WEEE logo signifies specific recycling programs and procedures for electronic products in countries of the European Union. We encourage the recycling of our products.

If you have further questions about recycling options, visit the Lexmark Web site at <u>www.lexmark.com</u> for your local sales office phone number.

India E-Waste notice

This product complies with the India E-Waste (Management and Handling) Rules, 2011, which prohibit use of lead, mercury, hexavalent chromium, polybrominated biphenyls, or polybrominated diphenyl ethers in concentrations exceeding 0.1% by weight and 0.01% by weight for cadmium, except for the exemption set in Schedule II of the Rules.

Product disposal

Do not dispose of the printer or supplies in the same manner as normal household waste. Consult your local authorities for disposal and recycling options.

Static sensitivity notice



This symbol identifies static-sensitive parts. Do not touch the areas near these symbols without first touching a metal surface in an area away from the symbol.

ENERGY STAR

Any Lexmark product bearing the ENERGY STAR emblem on the product or on a start-up screen is certified to comply with Environmental Protection Agency (EPA) ENERGY STAR requirements as configured when shipped by Lexmark.



Laser notice

The printer is certified in the U.S. to conform to the requirements of DHHS 21 CFR, Chapter I, Subchapter J for Class I (1) laser products, and elsewhere is certified as a Class I laser product conforming to the requirements of IEC 60825-1: 2014.

Class I laser products are not considered to be hazardous. The printer contains internally a Class IIIb (3b) laser that is nominally a 12-milliwatt gallium arsenide laser operating in the wavelength of 655–675 nanometers. The laser system and printer are designed so there is never any human access to laser radiation above a Class I level during normal operation, user maintenance, or prescribed service condition.

Laser advisory label

A laser notice label may be affixed to this printer as shown:

DANGER - Invisible laser radiation when cartridges are removed and interlock defeated. Avoid exposure to laser beam.

PERIGO - Radiação a laser invisível será liberada se os cartuchos forem removidos e o lacre rompido. Evite a exposição aos feixes de laser.

Opasnost - Nevidljivo lasersko zračenje kada su kasete uklonjene i poništena sigurnosna veza. Izbjegavati izlaganje zracima.

NEBEZPEČÍ - Když jsou vyjmuty kazety a je odblokována pojistka, ze zařízení je vysíláno neviditelné laserové záření. Nevystavujte se působení laserového paprsku. FARE - Usynlig laserstråling, når patroner fjernes, og spærreanordningen er slået fra. Undgå at blive udsat for laserstrålen.

GEVAAR - Onzichtbare laserstraling wanneer cartridges worden verwijderd en een vergrendeling wordt genegeerd. Voorkom blootstelling aan de laser.

DANGER - Rayonnements laser invisibles lors du retrait des cartouches et du déverrouillage des loquets. Eviter toute exposition au rayon laser.

VAARA - Näkymätöntä lasersäteilyä on varottava, kun värikasetit on poistettu ja lukitus on auki. Vältä lasersäteelle altistumista.

GEFAHR - Unsichtbare Laserstrahlung beim Herausnehmen von Druckkassetten und offener Sicherheitssperre. Laserstrahl meiden.

ΚΙΝΔΥΝΟΣ - Έκλυση αόρατης ακτινοβολίας laser κατά την αφαίρεση των κασετών και την απασφάλιση της μανδάλωσης. Αποφεύγετε την έκθεση στην ακτινοβολία laser.

VESZÉLY – Nem látható lézersugárzás fordulhat elő a patronok eltávolításakor és a zárószerkezet felbontásakor. Kerülje a lézersugárnak való kitettséget.

PERICOLO - Emissione di radiazioni laser invisibili durante la rimozione delle cartucce e del blocco. Evitare l'esposizione al raggio laser.

FARE – Usynlig laserstråling når kassettene tas ut og sperren er satt ut av spill. Unngå eksponering for laserstrålen.

NIEBEZPIECZEŃSTWO - niewidzialne promieniowanie laserowe podczas usuwania kaset i blokady. Należy unikać naświetlenia promieniem lasera.

ОПАСНО! Невидимое лазерное излучение при извлеченных картриджах и снятии блокировки. Избегайте воздействия лазерных лучей.

Pozor – Nebezpečenstvo neviditeľného laserového žiarenia pri odobratých kazetách a odblokovanej poistke. Nevystavujte sa lúčom.

PELIGRO: Se producen radiaciones láser invisibles al extraer los cartuchos con el interbloqueo desactivado. Evite la exposición al haz de láser.

FARA – Osynlig laserstrålning när patroner tas ur och spärrmekanismen är upphävd. Undvik exponering för laserstrålen.

危险 - 当移除碳粉盒及互锁失效时会产生看不见的激光辐射,请避免暴露在激光光束下。

危險 - 移除碳粉匣與安全連續開關失效時會產生看不見的雷射輻射。請避免曝露在雷射光束下。

危険 - カートリッジが取り外され、内部ロックが無効になると、見えないレーザー光が放射されます。 このレーザー光に当たらないようにしてください。

Power consumption

Product power consumption

The following table documents the power consumption characteristics of the product.

Note: Some modes may not apply to your product.

Mode	Description	Power consumption (Watts)
Printing	The product is generating hard-copy output from electronic inputs.	One-sided: 520; Two-sided: 340
Сору	The product is generating hard-copy output from hard-copy original documents.	540
Scan	The product is scanning hard-copy documents.	20
Ready	The product is waiting for a print job.	11
Sleep Mode	The product is in a high-level energy-saving mode.	3.2
Hibernate	The product is in a low-level energy-saving mode.	0.5
Off	The product is plugged into an electrical outlet, but the power switch is turned off.	0

The power consumption levels listed in the previous table represent time-averaged measurements. Instantaneous power draws may be substantially higher than the average.

Values are subject to change. See www.lexmark.com for current values.

Sleep Mode

This product is designed with an energy-saving mode called *Sleep Mode*. The Sleep Mode saves energy by lowering power consumption during extended periods of inactivity. The Sleep Mode is automatically engaged after this product is not used for a specified period of time, called the *Sleep Mode Timeout*.

Factory default Sleep Mode Timeout for this product (in minutes):

20

By using the configuration menus, the Sleep Mode Timeout can be modified between 1 minute and 120 minutes. Setting the Sleep Mode Timeout to a low value reduces energy consumption, but may increase the response time of the product. Setting the Sleep Mode Timeout to a high value maintains a fast response, but uses more energy.

Hibernate Mode

This product is designed with an ultra-low power operating mode called *Hibernate mode*. When operating in Hibernate Mode, all other systems and devices are powered down safely.

The Hibernate mode can be entered in any of the following methods:

- Using the Hibernate Timeout
- Using the Schedule Power modes
- Using the Sleep/Hibernate button

Factory default Hibernate Timeout for this product in all countries or regions

3 days

The amount of time the printer waits after a job is printed before it enters Hibernate mode can be modified between one hour and one month.

Off mode

If this product has an off mode which still consumes a small amount of power, then to completely stop product power consumption, disconnect the power supply cord from the electrical outlet.

Total energy usage

It is sometimes helpful to calculate the total product energy usage. Since power consumption claims are provided in power units of Watts, the power consumption should be multiplied by the time the product spends in each mode in order to calculate energy usage. The total product energy usage is the sum of each mode's energy usage.

Industry Canada compliance statement

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Standard ICES-003.

Avis de conformité aux normes de l'industrie du Canada

Cet appareil numérique de classe B est conforme aux exigences de la norme canadienne relative aux équipements pouvant causer des interférences NMB-003.

日本の VCCI 規定

製品にこのマークが表示されている場合、次の要件を満たしています。



この装置は、クラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。 取扱説明書に従って正しい取り扱いをしてください。

VCCI-B

European Community (EC) directives conformity

This product is in conformity with the protection requirements of EC Council directives 2014/30/EU, 2014/35/EU, 2009/125/EC, and 2011/65/EU on the approximation and harmonization of the laws of the Member States relating to electromagnetic compatibility, safety of electrical equipment designed for use within certain voltage limits, the ecodesign of energy-related products, and on the restrictions of use of certain hazardous substances in electrical and electronic equipment.

The manufacturer of this product is: Lexmark International, Inc., 740 West New Circle Road, Lexington, KY, 40550 USA. The authorized representative is: Lexmark International Technology Hungária Kft., 8 Lechner Ödön fasor, Millennium Tower III, 1095 Budapest HUNGARY. A declaration of conformity to the requirements of the Directives is available upon request from the Authorized Representative or may be obtained at www.lexmark.com/en_us/about/regulatory-compliance/european-union-declaration-of-conformity.html.

This product satisfies the Class B limits of EN 55022 and EN55032 and safety requirements of EN 60950-1.

Regulatory notices for telecommunication terminal equipment

This section contains regulatory information pertaining to products that contain telecommunication terminal equipment such as facsimile.

Notice to users of the US telephone network: FCC requirements

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the Administrative Council for Terminal Attachments (ACTA). On the back of this equipment is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, this number must be provided to your telephone company.

This equipment uses the RJ-11C Universal Service Order Code (USOC) jack.

A plug and jack used to connect this equipment to the premises' wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See your setup documentation for more information.

The Ringer Equivalence Number (REN) is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact your local telephone company. For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (for example, 03 is a REN of 0.3). For earlier products, the REN is shown separately on the label.

If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. If advance notice is not practical, the telephone company will notify the customer as soon as possible. You will also be advised of your right to file a complaint with the FCC.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of this equipment. If this happens, the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

If you experience trouble with this equipment, for repair or warranty information, contact Lexmark International, Inc. at www.lexmark.com or your Lexmark representative. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

This equipment contains no user serviceable parts. For repair and warranty information, contact Lexmark International, Inc. See the previous paragraph for contact information.

Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission, or corporation commission for information.

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

Telephone companies report that electrical surges, typically lightning transients, are very destructive to customer terminal equipment connected to AC power sources. This has been identified as a major nationwide problem. It is recommended that the customer install an appropriate AC surge arrestor in the AC outlet to which this device is connected. An appropriate AC surge arrestor is defined as one that is suitably rated, and certified by UL (Underwriter's Laboratories), another NRTL (Nationally Recognized Testing Laboratory), or a recognized safety certification body in the country/region of use. This is to avoid damage to the equipment caused by local lightning strikes and other electrical surges.

The Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or other electronic device, including fax machines, to send any message unless said message clearly contains in a margin at the top or bottom of each transmitted page or on the first page of the transmission, the date and time it is sent and an identification of the business or other entity, or other individual sending the message, and the telephone number of the sending machine or such business, other entity, or individual. (The telephone number provided may not be a 900 number or any other number for which charges exceed local or long-distance transmission charges.)

See your user documentation in order to program this information into your fax machine.

Notice to users of the Canadian telephone network

This product meets the applicable Industry Canada technical specifications. The Ringer Equivalence Number (REN) is an indication of the maximum number of terminals allowed to be connected to a telephone interface. The terminus of an interface may consist of any combination of devices, subject only to the requirement that the sum of the RENs of all the devices does not exceed five. The modem REN is located on the rear of the equipment on the product labeling.

Telephone companies report that electrical surges, typically lightning transients, are very destructive to customer terminal equipment connected to AC power sources. This has been identified as a major nationwide problem. It is recommended that the customer install an appropriate AC surge arrestor in the AC outlet to which this device is connected. An appropriate AC surge arrestor is defined as one that is suitably rated, and certified by UL (Underwriter's Laboratories), another NRTL (Nationally Recognized Testing Laboratory), or a recognized safety certification body in the country/region of use. This is to avoid damage to the equipment caused by local lightning strikes and other electrical surges.

This equipment uses CA11A telephone jacks.

Avis réservé aux utilisateurs du réseau téléphonique du Canada

Ce produit est conforme aux spécifications techniques d'Industrie Canada. Le numéro REN (ringer equivalence number : numéro d'équivalence de sonnerie) fournit une indication du nombre maximum de terminaux pouvant être connectés à l'interface téléphonique. En bout de ligne, le nombre d'appareils qui peuvent être connectés n'est pas directement limité, mais la somme des REN de ces appareils ne doit pas dépasser cinq. Le numéro REN du modem est indiqué sur l'étiquette produit située à l'arrière de l'équipement.

Les compagnies de téléphone constatent que les surtensions électriques, en particulier celles dues à la foudre, entraînent d'importants dégâts sur les terminaux privés connectés à des sources d'alimentation CA. Il s'agit-là d'un problème majeur d'échelle nationale. En conséquence, il vous est recommandé de brancher un parasurtenseur dans la prise de courant à laquelle l'équipement est connecté. Utilisez un parasurtenseur répondant à des caractéristiques nominales satisfaisantes et certifié par le laboratoire d'assureurs UL (Underwriter's Laboratories), un autre laboratoire agréé de type NRTL (Nationally Recognized Testing Laboratory) ou un organisme de certification agréé dans votre région ou pays. Ceci prévient tout endommagement de l'équipement causé par les orages et autres surtensions électriques.

Cet équipement utilise des prises de téléphone CA11A.

Notice to users of the New Zealand telephone network

The following are special conditions for the Facsimile User Instructions. The grant of a telepermit for any item of terminal equipment indicates only that Telecom has accepted that the item complies with minimum conditions for connection to its network. It indicates no endorsement of the product by Telecom, nor does it provide any sort of warranty. Above all, it provides no assurance that any item will work correctly in all respects with another item of telepermitted equipment of a different make or model, nor does it imply that any product is compatible with all of Telecom's network services.

This equipment shall not be set up to make automatic calls to the Telecom "111" Emergency Service.

This equipment may not provide for the effective hand-over of a call to another device connected to the same line.

This equipment should not be used under any circumstances that may constitute a nuisance to other Telecom customers.

This equipment is not capable, under all operating conditions, of correct operation at the higher speeds for which it is designed. Telecom will accept no responsibility should difficulties arise in such circumstances.

The decadic (or pulse) dialing on this device is unsuitable for use on the Telecom network in New Zealand.

For correct operation, the total of all the Ringer Equivalence Numbers (RENs) of all parallel devices connected to the same telephone line may not exceed 5. The REN of this device is located on the label.

This device uses an RJ-11C modular connector. Contact your point of purchase if a BT adapter is required. The Lexmark part number is 80D1873.

Some parameters required for compliance with Telecom's telepermit requirements are dependent on the equipment associated with this device. The associated equipment shall be set to operate within the following limits for compliance to Telecom's specifications:

- There shall be no more than 10 call attempts to the same number within any 30 minute period for any single manual call initiation, and
- The equipment shall go on-hook for a period of not less than 30 seconds between the end of one attempt and the beginning of the next call attempt.
- The equipment shall be set to ensure that automatic calls to different numbers are spaced such that there is not less than 5 seconds between the end of one call attempt and the beginning of another.

Japanese telecom notice

The installed optional modem is in compliance with Japanese Telecommunication Law and has been Certified by JATE, with Certification Number A11-0160001.



Using this product in Switzerland

This product requires a Swiss billing tone filter (Lexmark part number 80D1877) to be installed on any line which receives metering pulses in Switzerland. The filter must be used, as metering pulses are present on all analog telephone lines in Switzerland.

Utilisation de ce produit en Suisse

Cet appareil nécessite l'utilisation d'un filtre de tonalité de facturation suisse (n° de référence Lexmark : 80D1877) devant être installé sur toute ligne recevant des impulsions de comptage en Suisse. Ce filtre doit être utilisé pour toute installation car ces impulsions existent sur toutes les lignes téléphoniques suisses.

Verwendung dieses Produkts in der Schweiz

Für dieses Produkt muss ein schweizerischer Billing Tone Filter zur Zählzeichenübertragung (Lexmark Teilenummer 80D1877) für jede Leitung installiert werden, über die in der Schweiz Zeitsteuertakte übertragen werden. Die Verwendung des Filters ist obligatorisch, da in allen analogen Telefonleitungen in der Schweiz Zeitsteuertakte vorhanden sind.

Uso del prodotto in Svizzera

Questo prodotto richiede un filtro toni Billing svizzero, (codice Lexmark 80D1877) da installare su tutte le linee che ricevono impulsi remoti in Svizzera. È necessario utilizzare il filtro poiché gli impulsi remoti sono presenti su tutte le linee analogiche in Svizzera.

Notice to users in Brazil

Este equipamento opera em carater secundario, isto e, nao tem direito a protecao contra interferencia prejudicial, mesmo de estacoes do mesmo tipo, e nao pode causar interferencia a sistemas operando em carater primario. (Res.ANATEL 282/2001).

STATEMENT OF LIMITED WARRANTY FOR LEXMARK LASER PRINTERS, LEXMARK LED PRINTERS, AND LEXMARK MULTIFUNCTION LASER PRINTERS

Lexmark International, Inc., Lexington, KY

This limited warranty applies to the United States and Canada. For customers outside the U.S., refer to the country-specific warranty information that came with your product.

This limited warranty applies to this product only if it was originally purchased for your use, and not for resale, from Lexmark or a Lexmark Remarketer, referred to in this statement as "Remarketer."

Limited warranty

Lexmark warrants that this product:

- —Is manufactured from new parts, or new and serviceable used parts, which perform like new parts
- —Is, during normal use, free from defects in material and workmanship

If this product does not function as warranted during the warranty period, contact a Remarketer or Lexmark for repair or replacement (at Lexmark's option).

If this product is a feature or option, this statement applies only when that feature or option is used with the product for which it was intended. To obtain warranty service, you may be required to present the feature or option with the product.

If you transfer this product to another user, warranty service under the terms of this statement is available to that user for the remainder of the warranty period. You should transfer proof of original purchase and this statement to that user.

Limited warranty service

The warranty period starts on the date of original purchase as shown on the purchase receipt and ends 12 months later provided that the warranty period for any supplies and for any maintenance items included with the printer shall end earlier if it, or its original contents, are substantially used up, depleted, or consumed. Fuser Units, Transfer/Transport Units, Paper Feed items, if any, and any other items for which a Maintenance Kit is available are substantially consumed when the printer displays a "Life Warning" or "Scheduled Maintenance" message for such item.

To obtain warranty service you may be required to present proof of original purchase. You may be required to deliver your product to the Remarketer or Lexmark, or ship it prepaid and suitably packaged to a Lexmark designated location. You are responsible for loss of, or damage to, a product in transit to the Remarketer or the Lexmark designated location.

When warranty service involves the exchange of a product or part, the item replaced becomes the property of the Remarketer or Lexmark. The replacement may be a new or repaired item.

The replacement item assumes the remaining warranty period of the original product.

Replacement is not available to you if the product you present for exchange is defaced, altered, in need of a repair not included in warranty service, damaged beyond repair, or if the product is not free of all legal obligations, restrictions, liens, and encumbrances.

As part of your warranty service and/or replacement, Lexmark may update the firmware in your printer to the latest version. Firmware updates may modify printer settings and cause counterfeit and/or unauthorized products, supplies, parts, materials (such as toners and inks), software, or interfaces to stop working. Authorized use of genuine Lexmark products will not be impacted.

Before you present this product for warranty service, remove all print cartridges, programs, data, and removable storage media (unless directed otherwise by Lexmark).

For further explanation of your warranty alternatives and the nearest Lexmark authorized servicer in your area contact Lexmark on the World Wide Web.

Remote technical support is provided for this product throughout its warranty period. For products no longer covered by a Lexmark warranty, technical support may not be available or only be available for a fee.

Extent of limited warranty

Lexmark does not warrant uninterrupted or error-free operation of any product or the durability or longevity of prints produced by any product.

Warranty service does not include repair of failures caused by:

- -Modification or unauthorized attachments
- -Accidents, misuse, abuse or use inconsistent with Lexmark user's guides, manuals, instructions or guidance
- —Unsuitable physical or operating environment
- -Maintenance by anyone other than Lexmark or a Lexmark authorized servicer
- —Operation of a product beyond the limit of its duty cycle
- —Use of printing media outside of Lexmark specifications
- -Refurbishment, repair, refilling or remanufacture by a third party of products, supplies or parts
- -Products, supplies, parts, materials (such as toners and inks), software, or interfaces not furnished by Lexmark

TO THE EXTENT PERMITTED BY APPLICABLE LAW, NEITHER LEXMARK NOR ITS THIRD PARTY SUPPLIERS OR REMARKETERS MAKE ANY OTHER WARRANTY OR CONDITION OF ANY KIND, WHETHER EXPRESS OR IMPLIED, WITH RESPECT TO THIS PRODUCT, AND SPECIFICALLY DISCLAIM THE IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND SATISFACTORY QUALITY. ANY WARRANTIES THAT MAY NOT BE DISCLAIMED UNDER APPLICABLE LAW ARE LIMITED IN DURATION TO THE WARRANTY PERIOD. NO WARRANTIES, EXPRESS OR IMPLIED, WILL APPLY AFTER THIS PERIOD. ALL INFORMATION, SPECIFICATIONS, PRICES, AND SERVICES ARE SUBJECT TO CHANGE AT ANY TIME WITHOUT NOTICE.

Limitation of liability

Your sole remedy under this limited warranty is set forth in this document. For any claim concerning performance or nonperformance of Lexmark or a Remarketer for this product under this limited warranty, you may recover actual damages up to the limit set forth in the following paragraph.

Lexmark's liability for actual damages from any cause whatsoever will be limited to the amount you paid for the product that caused the damages. This limitation of liability will not apply to claims by you for bodily injury or damage to real property or tangible personal property for which Lexmark is legally liable. **IN NO EVENT WILL LEXMARK BE LIABLE FOR ANY LOST PROFITS, LOST SAVINGS, INCIDENTAL DAMAGE, OR OTHER ECONOMIC OR CONSEQUENTIAL DAMAGES.** This is true even if you advise Lexmark or a Remarketer of the possibility of such damages. Lexmark is not liable for any claim by you based on a third party claim.

This limitation of remedies also applies to claims against any Suppliers and Remarketers of Lexmark. Lexmark's and its Suppliers' and Remarketers' limitations of remedies are not cumulative. Such Suppliers and Remarketers are intended beneficiaries of this limitation.

Additional rights

Some states do not allow limitations on how long an implied warranty lasts, or do not allow the exclusion or limitation of incidental or consequential damages, so the limitations or exclusions contained above may not apply to you.

This limited warranty gives you specific legal rights. You may also have other rights that vary from state to state.

Index

C collate **Numerics** copy options 65 250-sheet tray cables collating copies 62 Ethernet 23 installing 20 Complex page, some data may **USB 23** 550-sheet tray not have printed [39] 178 installing 20 canceling compressed images appear on fax job 87 prints 204 canceling a copy job from the Α confidential data printer control panel 64 accessing the remote control information on securing 153 canceling a print job panel confidential jobs from a computer 54 Embedded Web Server 164 modifying print settings 53 from the printer control Active NIC menu 105 confidential print jobs 52 panel 54 adapter plug 78 Configuration change, some held canceling an e-mail 68 adding hardware options jobs were not restored [57] 178 cannot open Embedded Web print driver 24 configuration information Server 235 adding internal options wireless network 25 card stock print driver 24 Configure MP menu 98 loading, multipurpose address book button configuring feeder 35 printer control panel 13 supply notifications, imaging tips 44 **ADF** unit 165 Cartridge, imaging unit mismatch copying using 56 supply notifications, [41.xy] 177 adjusting printer display maintenance kit 165 Change [paper source] to brightness 149 supply notifications, toner [custom string] load [paper adjusting Sleep mode 149 cartridge 165 orientation] 177 adjusting toner darkness 51 configuring e-mail settings 67 Change [paper source] to administrator settings configuring supply notifications [custom type name] load Embedded Web Server 164 from the Embedded Web [orientation] 177 **AirPrint** Server 165 Change [paper source] to [paper using 52 connecting to a wireless network size] load [orientation] 177 answering machine using PBC, Push Button Change [paper source] to [paper setting up 71 Configuration method 27 type] [paper size] load AppleTalk menu 110 using PIN, Personal [orientation] 177 arrow buttons Identification Number checking an unresponsive printer control panel 13 method 27 printer 191 attaching cables 23 using the Embedded Web checking status of parts and available internal options 16 Server 28 supplies 156 avoiding jams 47 using wireless setup wizard 26 checking the status of parts and avoiding paper jams 167 conservation settings supplies 156 brightness, adjusting 149 cleaning R Eco-Mode 147 exterior of the printer 154 back button Hibernate mode 149 interior of the printer 154 Quiet mode 148 printer control panel 13 scanner glass 155 Schedule Power Modes 150 binding cleaning the printer 154 Sleep mode 149 fax options 90 Close flatbed cover and load blocking junk faxes 87 conserving supplies 147 originals if restarting job contacting customer [2yy.xx] 178 support 236

Close front door 178

control panel placing separator sheets E indicator light 14 between copies 62 Eco-Mode Sleep button light 14 quick copy 56 using 147 controller board reducing 60 **Embedded Web Server** accessing 16 selecting a tray 59 accessing the remote control copies to a different size 59 panel 164 copy options 64 using the ADF 56 adjusting brightness 149 copy from using the scanner glass 57 administrator settings 164 copy options 64 creating a fax destination checking the status of parts 156 copy job shortcut checking the status of using the Embedded Web canceling 64 supplies 156 copy options Server 85 creating a fax destination creating an FTP shortcut collate 65 shortcut 85 using the Embedded Web copies 64 creating an FTP shortcut 91 Server 91 copy from 64 creating e-mail shortcuts 68 copy to 65 custom paper type initial fax setup 70 darkness 65 assigning 40 modifying confidential print overlay 66 custom paper type name settings 53 paper saver 66 creating 40 networking settings 164 scale 65 Custom Scan Sizes menu 103 problem accessing 235 separator sheets 66 Custom Type [x] setting up e-mail alerts 164 copy quality assigning a paper type 40 Embedded Web Server adjusting 61 Custom Type [x] name Security: Administrator's Guide copy screen creating 40 where to find 164 content source 66 Custom Types menu 102 Embedded Web Server content type 65, 89 customer support Security: Administrator's Guide Copy Settings menu 117 contacting 236 where to find 153 copy to emission copy options 65 D notices 239, 240, 243, 244 copy troubleshooting darkness enlarging a copy 60 copier does not respond 222 copy options 65 envelopes partial document or photo fax options 89 loading, multipurpose copies 224 date and time, fax feeder 35 poor copy quality 222 setting 83 tips on using 42 poor scanned image daylight savings time, faxing 83 environmental settings quality 234 Default Source menu 95 Eco-Mode 147 scanner unit does not Defective flash detected [51] 179 Hibernate mode 149 close 222, 233 Digital Subscriber Line (DSL) printer display brightness, copying fax setup 75 adjusting 149 adding an overlay message 63 digital telephone service Quiet mode 148 adjusting quality 61 Schedule Power Modes 150 fax setup 77 canceling a copy job from the display troubleshooting Sleep mode 149 printer control panel 64 printer display is blank 193 erasing non-volatile memory 152 collating copies 62 display, printer control panel erasing volatile memory 152 enlarging 60 adjusting brightness 149 Error reading USB drive. Remove making a copy lighter or distinctive ring service USB. 179 darker 60 connecting to 82 Error reading USB hub. Remove multiple pages on one sheet 63 documents, printing hub. 179 on letterhead 58 from a computer 51 Ethernet network on transparencies 57 DSL filter 75 preparing to set up for Ethernet photos 57 printing 25

Ethernet port 23	Fax server 'To Format' not set up.	FCC notices 239, 244
Ethernet setup	Contact system	finding more information about
preparing for an 25	administrator. 179	the printer 9
EXT ports 23	fax setup	Finishing menu 136
e-mail	country- or region-specific 78	font sample list
canceling 68	digital telephone service 77	printing 54
e-mail alerts	DSL connection 75	forwarding faxes 88
low supply levels 164	standard telephone line	FTP address, scanning to
paper jam 164	connection 71	using a shortcut 92
setting up 164	VoIP 76	FTP Settings menu 131
e-mail function	Fax Station Name not set up.	-
setting up 67	Contact system	G
E-mail Settings menu 128	administrator. 179	General Settings menu 113
e-mail shortcuts, creating	Fax Station Number not set up.	Google Cloud Print
using the Embedded Web	Contact system	using 52
Server 68	administrator. 180	green settings
e-mail, sending	fax troubleshooting	Eco-Mode 147
using a shortcut number 68	caller ID is not shown 225	Hibernate mode 149
e-mailing	can receive but not send	Quiet mode 148
configuring e-mail settings 67	faxes 229	Schedule Power Modes 150
creating shortcuts using the	can send but not receive	
Embedded Web Server 68	faxes 228	Н
setting up e-mail function 67	cannot send or receive a	hardware options, adding
using a shortcut number 68	fax 226	print driver 24
_	received fax has poor print	held jobs 52
F	quality 230	printing from a Macintosh
factory defaults, restoring 166	fax, sending	computer 53
fax	using shortcuts 84	printing from Windows 53
options 88	using the printer control panel 83	held print jobs
fax button	faxing	printing from a Macintosh
printer control panel 13	blocking junk faxes 87	computer 53
fax connection	canceling a fax job 87	printing from Windows 53
connecting to a distinctive ring	changing resolution 86	Help menu 146
service 82	configuring the printer to	Hibernate mode
fax function	observe daylight saving	using 149
setting up 225	time 83	holding faxes 87
fax function is not set up 225	creating shortcuts using the	home button
fax log viewing 86	Embedded Web Server 85	printer control panel 13
Fax memory full 179	fax setup 70	HTML menu 144
Fax Mode (Analog Fax Setup)	forwarding faxes 88	
menu 121	holding faxes 87	l
fax options	making a fax lighter or	identifying jam locations 168
binding 90	darker 86	lmage menu 145
darkness 89	sending a fax at a scheduled	imaging unit
orientation 90	time 85	ordering 157
resolution 89	setting the date and time 83	replacing 160
Fax partition inoperative. Contact	setting the fax number or	Imaging unit low [84.xy] 180
system administrator. 179	station number 82	Imaging unit nearly low
fax ports 23	setting the outgoing fax name	[84.xy] 180
fax screen	or station name 82	

viewing a fax log 86

fax screen

content source 89

Imaging unit very low, [x]	Lexmark Print	Custom Types 102
estimated pages remain	using 52	Default Source 95
[84.xy] 180	line filter 75	E-mail Settings 128
Incorrect paper size, open [paper	LINE ports 23	Fax Mode (Analog Fax
source] [34] 180	linking trays 39	Setup) 121
indicator light	Load [paper source] with [custom	Finishing 136
printer control panel 13	string] [paper orientation] 182	FTP Settings 131
initial fax setup 70	Load [paper source] with [custom	General Settings 113
using the Embedded Web	type name] [paper	Help 146
Server 70	orientation] 182	HTML 144
installing an optional card 18	Load [paper source] with [paper	lmage 145
installing options	size] [paper orientation] 183	IPv6 108
order of installation 19	Load [paper source] with [paper	list of 94
installing the 250-sheet tray 20	type] [paper size] [paper	Network [x] 105
installing the 550-sheet tray 20	orientation] 183	Network Card 107
installing the printer software 24	Load multipurpose feeder with	Network Reports 106
Insufficient memory to collate job	[custom string] [orientation] 181	Paper Loading 101
[37] 181	Load multipurpose feeder with	Paper Size/Type 95
Insufficient memory to support	[custom type name]	Paper Texture 98
Resource Save feature [35] 181	[orientation] 181	Paper Weight 100
Insufficient memory, some Held	Load multipurpose feeder with	PCL Emul 140
Jobs were deleted [37] 180	[paper size] orientation] 182	PDF 139
Insufficient memory, some held	Load multipurpose feeder with	PostScript 140
jobs will not be restored [37] 181	[paper type] [paper size]	PPDS 142
internal options, adding	[orientation] 182	Quality 137
print driver 24	loading	Reports 104
IPv6 menu 108	multipurpose feeder 35	Security Audit Log 111
	trays 30	Set Date and Time 112
J	loading the optional tray 30	Setup 135
	loading the standard tray 30	SMTP Setup menu 110
jams avoiding 167	,	Standard Network 105
jams, clearing	M	Substitute Size 98
in automatic document	maintenance kit	TCP/IP 107
feeder 176	ordering 157	Universal Setup 103
multipurpose feeder 174	Maintenance kit low [80.xy] 183	Utilities 139
standard bin 172	Maintenance kit nearly low	Wireless 109
trays 174	[80.xy] 183	XPS 139
udys 174	Maintenance kit very low	menus list 94
K	[80.xy] 183	mobile device
	memory	printing from 51, 52
keypad	types installed on printer 152	Mopria Print Service
printer control panel 13	Memory full [38] 184	using 51
_	Memory full, cannot print	moving the printer 10, 163
L	faxes 184	multiple pages on one sheet 63
labels, paper	menu settings page	multipurpose feeder
tips on using 43	printing 28	loading 35
letterhead	menus	
copying on 58	Active NIC 105	N
loading, multipurpose	AppleTalk 110	Network [x] menu 105
feeder 35	Configure MP 98	Network [x] menu 103 Network [x] software error
tips on using 42	Conv Sottings 117	[5/1] 19/1

Copy Settings 117

Custom Scan Sizes 103

[54] 184

Network Card menu 107

tips on using 42

Network Reports menu 106	preprinted forms 45	checking, using the Embedded
network settings	recycled 46	Web Server 156
Embedded Web Server 164	selecting 45	using genuine Lexmark 157
network setup page	setting size 30	parts and supplies, status of
printing 29	setting type 30	checking, on printer control
Networking Guide	storing 47	panel 156
where to find 164	unacceptable 46	PCL Emul menu 140
No analog phone line connected	Universal size setting 30	PDF menu 139
to modem, fax is disabled. 184	using recycled 147	Personal Identification Number
noise emission levels 240	paper feed troubleshooting	method
noise, printer	message remains after jam is cleared 196	using 27
reducing 148 Non-Lexmark [supply type], see	paper jam in front door 169	phone splitter 76 photos
User's Guide [33.xy] 184	paper jam in the automatic	copying 57
non-volatile memory 152	document feeder 176	placing separator sheets
erasing 152	paper jam in the duplex unit 173	between copies 62
Not enough free space in flash	paper jam in the multipurpose	PostScript menu 140
memory for resources [52] 185	feeder 174	PPDS menu 142
notices 239, 240, 241, 242, 243,	paper jam in the rear door 171	preparing to set up the printer on
244, 246, 247, 248	paper jam in the standard	an Ethernet network 25
number of remaining pages	bin 172	print driver
estimate 156	paper jam in trays 174	hardware options, adding 24
	paper jam, clearing	print irregularities 208
0	in automatic document	print job
optional card	feeder 176	canceling from the printer
installing 18	in front door 169	control panel 54
optional tray	in the duplex unit 173	canceling, from computer 54
loading 30	in the rear door 171	print quality
options	multipurpose feeder 174	cleaning the scanner glass 155
250-sheet tray, installing 20	standard bin 172	print quality troubleshooting
550-sheet tray, installing 20	trays 174	blank pages 212
fax 88	paper jams	characters have jagged
memory cards 16	avoiding 167	edges 203
ordering	paper labels	clipped pages or images 203
imaging unit 157	loading, multipurpose feeder 35	compressed images appear on prints 204
maintenance kit 157	Paper Loading menu 101	gray background on prints 205
ordering supplies	paper saver	horizontal voids appear on
toner cartridge 157	copy options 66	prints 206
orientation	Paper Size/Type menu 95	print irregularities 208
fax options 90	paper sizes	print in egalarities 200 print is too dark 210
overlay	supported 48	print is too light 211
copy options 66	Paper Texture menu 98	printer is printing solid black
overlay message, adding copying 63	paper types	pages 213
copying 65	supported by printer 50	repeating print defects appear
Р	where to load 50	on prints 214
	Paper Weight menu 100	shadow images appear on
paper	paper weights	prints 215
characteristics 44	supported by printer 50	skewed print 215
letterhead 45	parts	streaked horizontal lines appear
loading, multipurpose feeder 35	checking status 156	on prints 216
reeder 33		streaked vertical lines 217

toner fog or background Insufficient memory, some held Change [paper source] to shading 219 [custom type name] load jobs will not be restored toner rubs off 219 [37] 181 [orientation] 177 toner specks appear on Change [paper source] to Load [paper source] with prints 220 [paper size] load [custom string] [paper transparency print quality is [orientation] 177 orientation] 182 poor 220 Change [paper source] to Load [paper source] with [custom type name] [paper uneven print density 220 [paper type] [paper size] load white streaks 220 [orientation] 177 orientation] 182 print troubleshooting Close flatbed cover and load Load [paper source] with [paper incorrect characters print 197 originals if restarting job size] [paper orientation] 183 incorrect margins on prints 207 Load [paper source] with [paper [2yy.xx] 178 jammed pages are not Close front door 178 type] [paper size] [paper reprinted 195 Complex page, some data may orientation] 183 job prints from wrong tray 197 not have printed [39] 178 Load multipurpose feeder with job prints on wrong paper 197 Configuration change, some [custom type name] jobs do not print 199 held jobs were not restored [orientation] 181 Large jobs do not collate 198 [57] 178 Load multipurpose feeder with multiple-language PDF files do Defective flash detected [paper size] [orientation] 182 Load multipurpose feeder with not print 198 [51] 179 Error reading USB drive. paper curl 208 [paper type] [paper size] paper frequently jams 195 Remove USB. 179 [orientation] 182 print job takes longer than Error reading USB hub. Remove Load multipurpose feeder with expected 200 hub. 179 custom string] [orientation] 181 tray linking does not work 201 Fax memory full 179 Maintenance kit low [80.xy] 183 unexpected page breaks Fax partition inoperative. Maintenance kit nearly low occur 202 [80.xy] 183 Contact system printer administrator. 179 Maintenance kit very low basic model 11 Fax server 'To Format' not set [80.xy] 183 fully configured 11 up. Contact system Memory full [38] 184 administrator. 179 minimum clearances 10 Memory full, cannot print moving 10, 163 Fax Station Name not set up. faxes 184 selecting a location 10 Contact system Network [x] software error [54] 184 shipping 163 administrator. 179 Fax Station Number not set up. printer configurations 11 No analog phone line printer control panel Contact system connected to modem, fax is adjusting brightness 149 administrator. 180 disabled. 184 factory defaults, restoring 166 Imaging unit low [84.xy] 180 Non-Lexmark [supply type], see using 13 Imaging unit nearly low User's Guide [33.xy] 184 Printer had to restart. Last job [84.xy] 180 Not enough free space in flash may be incomplete. 185 Imaging unit very low, [x] memory for resources [52] 185 printer information estimated pages remain Printer had to restart. Last job where to find 9 [84.xy] 180 may be incomplete. 185 printer is printing blank Incorrect paper size, open Reinstall missing or pages 212 [paper source] [34] 180 unresponsive cartridge printer messages Insufficient memory to collate [31.xy] 185 Cartridge, imaging unit job [37] 181 Remove paper from standard mismatch [41.xy] 177 Insufficient memory to support output bin 185 Change [paper source] to Resource Save feature [35] 181 Replace all originals if restarting [custom string] load [paper Insufficient memory, some Held job. 186 orientation] 177 Jobs were deleted [37] 180 Replace cartridge, printer region

mismatch [42.xy] 186

Replace defective imaging unit printer options troubleshooting Replace all originals if restarting [31.xy] 186 internal option is not job. 186 Replace imaging unit, 0 detected 193 Replace cartridge, printer region estimated pages remain tray problems 194 mismatch [42.xy] 186 [84.xy] 186 printer problems, solving Replace defective imaging unit Replace jammed originals if basic 191 [31.xy] 186 restarting job. 187 printer security Replace imaging unit, 0 Replace maintenance kit information on 153 estimated pages remain [80.xy] 187 printer software, installing 24 [84.xy] 186 Replace missing fuser printing Replace jammed originals if [31.xyz] 187 font sample list 54 restarting job. 187 Replace missing imaging unit from a computer 51 Replace maintenance kit [31.xy] 187 from a mobile device 51, 52 [80.xy] 187 Replace unsupported cartridge menu settings page 28 Replace missing fuser [32.xy] 187 network setup page 29 [31.xyz] 187 printing a network setup Replace missing imaging unit Replace unsupported imaging unit [32.xy] 188 page 29 [31.xy] 187 Scanner automatic feeder cover printing held jobs Replace unsupported cartridge from a Macintosh computer 53 open 188 [32.xy] 187 Scanner disabled by admin from Windows 53 Replace unsupported imaging [840.01] 188 printing slows down 201 unit [32.xy] 188 Scanner disabled. Contact publications replacing system administrator if where to find 9 imaging unit 160 **Push Button Configuration** problem persists. [840.02] 189 toner cartridge 159 Scanner jam, remove all method reports originals from the scanner using 27 viewing 165 Reports menu 104 [2yy.xx] 189 Scanner jam, remove jammed reserve print jobs 52 originals from the scanner printing from Windows 53 Quality menu 137 [2yy.xx] 189 reset button Quiet mode 148 SMTP server not set up. Contact printer control panel 13 system administrator. 189, 191 resolution R Some held jobs were not fax options 89 recycled paper restored 189 resolution, fax using 46, 147 Standard network software changing 86 recycling error [54] 189 RJ-11 adapter 78 Lexmark packaging 150 Standard USB port disabled Lexmark products 150 [56] 190 S toner cartridges 151 Supply needed to complete safety information 6, 7, 8 reducing a copy 60 job 190 scale reducing noise 148 The device is operating in safe copy options 65 Reinstall missing or unresponsive mode. Some print options may scan troubleshooting cartridge [31.xv] 185 be disabled or provide partial document or photo remote control panel unexpected results. 190 scans 235 using Embedded Web Too many flash options installed scan job was not Server 164 [58] 190 successful 233 Remove paper from standard Too many trays attached scanner unit does not output bin 185 [58] 190 close 222, 233 repeat print jobs 52 Unformatted flash detected scanning takes too long or repeating print defects appear on [53] 191 freezes the computer 233 prints 214 Unsupported USB hub, please

remove 179

scanner	separator sheets	storing
Automatic document feeder	copy options 66	paper 47
(ADF) 13	Set Date and Time menu 112	supplies 158
functions 12	setting	storing print jobs 52
scanner glass 13	paper size 30	streaked horizontal lines appear
Scanner automatic feeder cover	paper type 30	on prints 216
open 188	TCP/IP address 107	streaked vertical lines appear on
Scanner disabled by admin	setting the fax number or station	prints 217
[840.01] 188	number 82	streaks appear 220
Scanner disabled. Contact	setting the outgoing fax name or	Substitute Size menu 98
system administrator if problem	station name 82	supplies
persists. [840.02] 189	setting the Universal paper	checking status 156
scanner glass	size 30	checking, using the Embedded
cleaning 155	setting up e-mail alerts 164	Web Server 156
copying using 57	setting up fax	conserving 147
Scanner jam, remove all originals	country- or region-specific 78	storing 158
from the scanner [2yy.xx] 189	digital telephone service 77	using genuine Lexmark 157
Scanner jam, remove jammed	DSL connection 75	using recycled paper 147
originals from the scanner	standard telephone line	supplies, ordering
[2yy.xx] 189	connection 71	imaging unit 157
scanning	VoIP connection 76	maintenance kit 157
quick copy 56	setting up fax function 225	separator pad 158
to a computer 92	Setup menu 135	toner cartridge 157
scanning to a computer 92	shipping the printer 163	Supply needed to complete
scanning to an FTP address	shortcuts, creating	job 190
creating shortcuts using the	e-mail 68	supply notifications
computer 91	fax destination 85	configuring 165
using a shortcut 92	FTP destination 91	supported paper sizes 48
Schedule Power Modes	sleep button	-
using 150	printer control panel 13	Т
security	Sleep mode adjusting 149	TCP/IP menu 107
modifying confidential print settings 53	SMTP server not set up. Contact	telecommunication
Security Audit Log menu 111	system administrator. 189, 191	notices 244, 246, 247
security slot 23	SMTP Setup menu 110	The device is operating in safe
security Web page	Some held jobs were not	mode. Some print options may
where to find 153	restored 189	be disabled or provide
select button	Standard Network menu 105	unexpected results. 190
printer control panel 13	Standard network software error	the scanner does not
selecting a location for the	[54] 189	respond 232
printer 10	standard tray	tips
selecting paper 45	loading 30	card stock 44
sending a fax using the	Standard USB port disabled	letterhead 42
computer 84	[56] 190	on using envelopes 42
sending fax	start button	on using labels 43
using shortcuts 84	printer control panel 13	transparencies 42
using the printer control	statement of volatility 152	tips on using envelopes 42
panel 83	status of parts and supplies	toner cartridge
sending fax at a scheduled	checking 156	ordering 157
time 85	stop or cancel button	replacing 159
separator pad	printer control panel 13	toner cartridges
ordering 158	•	recycling 151

ordering 158

toner darkness jammed pages are not adjusting 51 reprinted 195 Too many flash options installed job prints from wrong tray 197 [58] 190 job prints on wrong paper 197 Too many trays attached [58] 190 jobs do not print 199 transparencies Large jobs do not collate 198 multiple-language PDF files do copying on 57 loading, multipurpose not print 198 feeder 35 paper curl 208 tips 42 paper frequently jams 195 trays print job takes longer than linking 39 expected 200 loading 30 tray linking does not work 201 unlinking 39 unexpected page breaks troubleshooting occur 202 cannot open Embedded Web troubleshooting, print quality Server 235 blank pages 212 checking an unresponsive characters have jagged printer 191 edges 203 fax function is not set up 225 clipped pages or images 203 compressed images appear on solving basic printer problems 191 prints 204 the scanner does not gray background on prints 205 respond 232 horizontal voids appear on troubleshooting, copy prints 206 copier does not respond 222 print irregularities 208 partial document or photo print is too dark 210 copies 224 print is too light 211 poor copy quality 222 printer is printing solid black poor scanned image pages 213 quality 234 repeating print defects appear scanner unit does not on prints 214 close 222, 233 shadow images appear on troubleshooting, display prints 215 printer display is blank 193 skewed print 215 troubleshooting, fax streaked horizontal lines appear caller ID is not shown 225 on prints 216 can receive but not send streaked vertical lines 217 faxes 229 toner fog or background can send but not receive shading 219 faxes 228 toner rubs off 219 cannot send or receive a toner specks appear on fax 226 prints 220 received fax has poor print transparency print quality is quality 230 poor 220 troubleshooting, paper feed uneven print density 220 message remains after jam is white streaks on a page 220 cleared 196 troubleshooting, printer options troubleshooting, print internal option is not detected 193 incorrect characters print 197 incorrect margins on prints 207 tray problems 194

troubleshooting, printing printing slows down 201 troubleshooting, scan partial document or photo scans 235 scan job was not successful 233 scanner unit does not close 222, 233 scanning takes too long or freezes the computer 233

U

uneven print density 220 Unformatted flash detected [53] 191 Universal paper size setting 30 Universal Setup menu 103 unlinking trays 39 Unsupported USB hub, please remove 179 USB port 23 using Hibernate mode 149 using recycled paper 147 using Schedule Power Modes 150 using shortcuts sending fax 84 Utilities menu 139

V

verify print jobs 52 vertical voids appear 220 viewing reports 165 viewing a fax log 86 voice mail setting up 71 Voice over Internet Protocol (VoIP) fax setup 76 voids appear 220 VoIP adapter 76 volatile memory 152 erasing 152 volatility statement of 152

W

Wireless menu 109

wireless network
configuration information 25
wireless network setup
using the Embedded Web
Server 28
wireless setup wizard
using 26



XPS menu 139