



Lexmark™

Eco-Settings

Version 5.2

User's Guide

July 2019

www.lexmark.com

Contents

- Change history..... 3**
- Overview..... 4**
- Using the application..... 5**
 - Managing the energy consumption and paper usage settings..... 5
 - Managing power modes..... 5
- Troubleshooting..... 6**
 - Application error..... 6
 - Check the diagnostic log.....6
 - If the printer is running on firmware level 4, then downgrade the application version6
 - Contact your Lexmark representative6
- Notices..... 7**
- Index..... 8**

Change history

July 2019

- Updated instructions on managing the energy consumption and paper usage settings.

August 2017

- Added information on accessing the application settings.
- Added instructions for resolving application errors.

July 2016

- Added support for Croatian, Romanian, Serbian, Slovak, and Slovenian.

January 2016

- Initial document release for multifunction products with a tablet-like touch-screen display.

Overview


Use the application to manage energy consumption, noise, toner usage, and paper usage settings to help reduce the environmental impact of the printer.

This document provides instructions on how to use the application.




Using the application

Note: The application overrides the printer settings.

Managing the energy consumption and paper usage settings

- 1 From the home screen, touch the application icon.
- 2 Depending on your printer model, do either of the following:
 - Touch **Eco-Mode**.
 - Touch  > **Eco-Mode**.
- 3 Change one or more of the following settings:
 - **Two-Sided Printing**—Print on both sides of the paper.
 - **Quiet Mode**—Reduce the noise produced by the printer. Quiet Mode may reduce the processing speed, which may delay the print time of the first page.
 - **Sleep Mode**—Set how many minutes before the printer goes into a low-power mode.
 - **Screen Brightness**
 - **Toner Darkness**—Set the darkness of the printed documents.
- 4 Touch **Save**.

Managing power modes

- 1 From the home screen, touch the application icon.
- 2 Depending on your printer model, do either of the following:
 - Touch **Scheduled Power Modes**.
 - Touch  > **Scheduled Power Modes**.
- 3 Do any of the following:
 - To add a schedule, do the following:
 - a Touch **Add Schedule**, and then select a power mode.
 - **Sleep**—Set the printer to lower its power consumption during extended periods of inactivity.
 - **Wake**—Set the printer to be active and let it remain active even after extended periods of inactivity.
 - **Hibernate**—Set the printer to an ultra-low-power mode.
 - b Touch **Next**, and then select the day and time.
 - c Touch **Set**.
 - To edit a schedule, select a scheduled power mode, and then change the power mode, day, or time.
 - To delete a schedule, touch  beside the schedule.
 - To delete all schedules, touch  > **Delete All**.

Troubleshooting

Application error

Try one or more of the following:

Check the diagnostic log

- 1 Open a web browser, and then type **IP/se**, where **IP** is the printer IP address.
- 2 Click **Embedded Solutions**, and then do the following:
 - a Clear the log file.
 - b Set the logging level to **Yes**.
 - c Generate the log file.
- 3 Analyze the log, and then resolve the problem.

Note: After resolving the problem, set the logging level to **No**.

If the printer is running on firmware level 4, then downgrade the application version

Note: This feature is available only in some printer models.

From the Embedded Web Server, do either of the following:

Check the printer firmware level

- 1 Click **Status**.
- 2 From the Printer section, check the firmware level.

The firmware level must be at least **yyyyyy.04y.yyyy**, where **y** is the printer details.

Downgrade the application version

Note: Downgrading the application version removes the existing application configurations.

- 1 Click **Apps**.
- 2 From the list, select the application, and then click **Downgrade**.

Contact your Lexmark representative

Notices

Edition notice

July 2019

The following paragraph does not apply to any country where such provisions are inconsistent with local law: LEXMARK INTERNATIONAL, INC., PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions. Improvements or changes in the products or the programs described may be made at any time.

References in this publication to products, programs, or services do not imply that the manufacturer intends to make these available in all countries in which it operates. Any reference to a product, program, or service is not intended to state or imply that only that product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any existing intellectual property right may be used instead. Evaluation and verification of operation in conjunction with other products, programs, or services, except those expressly designated by the manufacturer, are the user's responsibility.

For Lexmark technical support, go to <http://support.lexmark.com>.

For information on Lexmark's privacy policy governing the use of this product, go to www.lexmark.com/privacy.

For information on supplies and downloads, go to www.lexmark.com.

© 2015 Lexmark International, Inc.

All rights reserved.

GOVERNMENT END USERS

The Software Program and any related documentation are "Commercial Items," as that term is defined in 48 C.F.R. 2.101, "Computer Software" and "Commercial Computer Software Documentation," as such terms are used in 48 C.F.R. 12.212 or 48 C.F.R. 227.7202, as applicable. Consistent with 48 C.F.R. 12.212 or 48 C.F.R. 227.7202-1 through 227.7207-4, as applicable, the Commercial Computer Software and Commercial Software Documentation are licensed to the U.S. Government end users (a) only as Commercial Items and (b) with only those rights as are granted to all other end users pursuant to the terms and conditions herein.

Trademarks

Lexmark and the Lexmark logo are trademarks or registered trademarks of Lexmark International, Inc. in the United States and/or other countries.

All other trademarks are the property of their respective owners.

Index

A

adding schedules 5
application error 6

C

change history 3

D

deleting schedules 5

E

editing schedules 5
energy
 saving 5
energy-conservation settings 5

G

green settings 5

M

managing power modes 5

N

noise
 reducing 5

O

overview 4

P

paper
 saving 5
power modes
 managing 5
 scheduling 5

R

reducing noise 5

S

saving energy 5
saving paper 5
schedules
 adding 5
 deleting 5

editing 5
scheduling power modes 5
settings
 conserving energy and paper 5

T

troubleshooting
 application error 6