

Supplies guide

The following table lists the part numbers for ordering supply items.

Part numbers

Part name	Part number	For printer(s)
Cyan High Yield Return Program Toner Cartridge	C736H1CG	C736
Magenta High Yield Return Program Toner Cartridge	C736H1MG	C736
Yellow High Yield Return Program Toner Cartridge	C736H1YG	C736
Black High Yield Return Program Toner Cartridge	C736H1KG	C736
Cyan Return Program Toner Cartridge	C734A1CG	C734, C736
Magenta Return Program Toner Cartridge	C734A1MG	C734, C736
Yellow Return Program Toner Cartridge	C734A1YG	C734, C736
Black Return Program Toner Cartridge	C734A1KG	C734, C736
Cyan High Yield Toner Cartridge	C736H2CG	C736
Magenta High Yield Toner Cartridge	C736H2MG	C736
Yellow High Yield Toner Cartridge	C736H2YG	C736
Black High Yield Toner Cartridge	C736H2KG	C736
Cyan Toner Cartridge	C734A2CG	C734, C736
Magenta Toner Cartridge	C734A2MG	C734, C736
Yellow Toner Cartridge	C734A2YG	C734, C736
Black Toner Cartridge	C734A2KG	C734, C736
Photoconductor	C734X20G	C734, C736
Photoconductor, Multi-Pack	C734X24G	C734, C736
Fuser (100V)	40X5095	C734, C736
Fuser (115V)	40X5093	C734, C736
Fuser (230V)	40X5094	C734, C736
Transfer Module	40X5096	C734, C736
Waste Toner Box	C734X77G	C734, C736

Ordering toner cartridges

When 88 Cyan cartridge low, 88 Magenta cartridge low, 88 Yellow cartridge low, or 88 Black cartridge low appears, order a new cartridge.

When **88 Replace Cyan cartridge**, **88 Replace Magenta cartridge**, **88 Replace Yellow cartridge**, or **88 Replace Black cartridge** appears, you *must* replace the specified cartridge.

Estimated cartridge yield is based on the ISO / IEC 19798 standard (with about 5% coverage per color). Extremely low print coverage (less than 1.25% for a color) for extended periods of time may negatively affect actual yield for that color and may cause cartridge parts to fail prior to exhaustion of toner.

Ordering photoconductors

When **84 photoconductor low**, or **84 <color> photoconductor nearly low** appears, order a replacement photoconductor.

When **84 Replace <color> photoconductor** appears, you *must* replace the specified photoconductor.

Part name	Part number
Photoconductor	C734X20G
Photoconductor, Multi-Pack	C734X24G

Ordering a fuser or a transfer module

When **80 Fuser Life Warning** or **83 Transfer Module Life Warning** appears, order a replacement fuser or a transfer module.

When **80 Replace Fuser** or **83 Replace Transfer Module** appears, install the new fuser or the new transfer module. For installation information, see the documentation that came with the part.

Part name	Part number
Fuser	40X5095 (100 volt) 40X5093 (115 volt) 40X5094 (230 volt)
Transfer Module	40X5096

Ordering a waste toner box

When **82 Waste toner box nearly full** appears, order a replacement waste toner box. When **82 Replace waste toner box** appears, you *must* replace the waste toner box.

Note: Waste toner box reuse is not recommended.

Part name	Part number
Waste Toner Box	C734X77G