

Menu map

Menus list

Supplies Menu

Replace Supply
 Cyan Cartridge
 Magenta Cartridge
 Yellow Cartridge
 Black Cartridge
 Cyan Photoconductor
 Magenta Photoconductor
 Yellow Photoconductor
 Black Photoconductor
 Waste Toner Bottle
 Fuser
 Transfer Module

Security

Miscellaneous Security Settings
 Confidential Print
 Disk Wiping¹
 Security Audit Log
 Set Date and Time

Paper Menu

Default Source
 Paper Size/Type
 Configure MP
 Substitute Size
 Paper Texture
 Paper Weight
 Paper Loading
 Custom Types
 Universal Setup

Network/Ports

Active NIC
 Standard Network or Network [x]²
 Standard USB
 Parallel [x]
 Serial [x]
 SMTP Setup

Reports

Menu Settings Page
 Device Statistics
 Network Setup Page
 Network [x] Setup Page
 Profiles List
 Print Fonts
 Print Directory
 Asset Report

Settings

General Settings
 Flash Drive Menu
 Print Settings


Help

Print All Guides
 Color Quality
 Print Quality
 Printing Guide
 Media Guide
 Print Defects Guide
 Menu Map
 Information Guide
 Connection Guide
 Moving Guide
 Supplies Guide

¹ This menu appears only when a printer hard disk is installed.

² Depending on the printer setup, this menu appears as Standard Network, Wireless Network or Network [x].

Using the four-arrow-button printer control panel

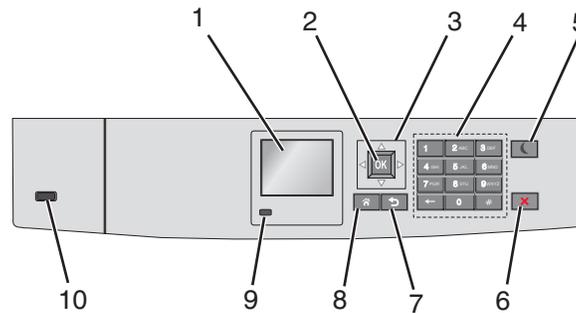

Use the		To
1	Display	View the printer status. Allow printer setup and operation.
2	Select button	Submit changes made in the printer settings.
3	Navigation buttons	Scroll up and down or left and right.
4	Keypad	Enter numbers, letter, or symbols.
5	Sleep button	<p>Enable Sleep mode.</p> <p>The following are the statuses based on the indicator light and the Sleep button:</p> <ul style="list-style-type: none"> • Entering or waking from Sleep mode <ul style="list-style-type: none"> – The indicator light is illuminated solid green. – The Sleep button is unilluminated. • Operating in Sleep mode <ul style="list-style-type: none"> – The indicator light is illuminated solid green. – The Sleep button is illuminated solid amber. • Entering or waking from Hibernate mode <ul style="list-style-type: none"> – The indicator light is illuminated solid green. – The Sleep button is illuminated blinking amber. • Operating in Hibernate mode <ul style="list-style-type: none"> – The indicator light is unilluminated. – The Sleep button is blinking amber for 0.1 second, and then goes completely unilluminated for 1.9 seconds in pulsing pattern. <p>The following actions wake the printer from Sleep mode:</p> <ul style="list-style-type: none"> • Pressing any hard button • Opening Tray 1 or loading paper in the multipurpose feeder • Opening a door or cover • Sending a print job from the computer • Performing a power-on reset with the main power switch • Attaching a device to a USB port
6	Stop/Cancel button	Stop all printer activity. Note: A list of options is displayed once Stopped appears on the display.
7	Back button	Return to the previous screen.
8	Home button	Go to the home screen.

Use the		To
9	Indicator light	Check the status of the printer. <ul style="list-style-type: none">• Off—The printer is off.• Blinking green—The printer is warming up, processing data, or printing.• Solid green—The printer is on, but idle.• Blinking red—The printer requires operator intervention.
10	USB port	Connect a flash drive to the printer.