

Supplies guide

Ordering a toner cartridge

When a message on the printer display indicates which toner cartridge needs to be replaced, order a new toner cartridge immediately.

For information on replacing a toner cartridge, see the instruction sheet that came with the supply.

Estimated cartridge yield is based on the ISO/IEC 19798 standard (with about 5% coverage per color). Extremely low print coverage (less than 1.25%) for extended periods of time may negatively affect actual yield for that color and may cause cartridge parts to fail prior to exhaustion of toner.

Recommended toner cartridges and part numbers

Part name	Lexmark Return Program Cartridge	Regular cartridge
Cyan Toner Cartridge	C746A1CG	C746A2CG
Cyan High Yield Toner Cartridge*	C748H1CG	C748H2CG
Magenta Toner Cartridge	C746A1MG	C746A2MG
Magenta High Yield Toner Cartridge*	C748H1MG	C748H2MG
Yellow Toner Cartridge	C746A1YG	C746A2YG
Yellow High Yield Toner Cartridge*	C748H1YG	C748H2YG
Black High Yield Toner Cartridge	C746H1KG	C746H2KG
* These toner cartridges are supported only in C748x printer models.		

Ordering a photoconductor

A message will appear on the printer display when a photoconductor needs to be replaced.

For information on replacing a photoconductor, see the instruction sheet that came with the supply.

Recommended part numbers

Part name	Part number
Photoconductor	C734X20G
Photoconductor, Multi-Pack	C734X24G

Notes:

- All four photoconductors should be replaced at the same time.
- Reset the maintenance counter back to zero after installing the four new photoconductors.

Ordering a fuser or a transfer module

A message on the printer display appears when the fuser or transfer module needs to be replaced.

For information on replacing the fuser or transfer module, see the instruction sheet that came with the supply.

Recommended part numbers

Part name	Part number
Fuser	40X8112 (100 V) 40X8110 (115 V) 40X8111 (230 V)
Transfer module	40X8307

Ordering a waste toner bottle

A message on the printer display appears when the waste toner bottle needs to be replaced.

For information on replacing the waste toner bottle, see the instruction sheet that came with the supply.

Note: Waste toner bottle reuse is not recommended.

Recommended part number

Part name	Part number
Waste toner bottle	C734X77G