

Supplies guide

The following table lists the part numbers for ordering supply items.

Ordering a print cartridge

When **88 [color] cartridge low** or **88 [color] cartridge nearly low** appears, order a new cartridge.

Estimated cartridge yield is based on the ISO/IEC 19798 standard. Extremely low print coverage (less than 1.25%) for extended periods of time may negatively affect actual yield and may cause cartridge parts to fail prior to exhaustion of toner.

Recommended print cartridge and part number

Part name	Lexmark Return Program Cartridge	Regular cartridge
Cyan Print Cartridge	C792A1CG	C792A2CG
Cyan Extra High Yield Print Cartridge	C792X1CG	C792X2CG
Magenta Print Cartridge	C792A1MG	C792A2MG
Magenta Extra High Yield Print Cartridge	C792X1MG	C792X2MG
Yellow Print Cartridge	C792A1YG	C792A2YG
Yellow Extra High Yield Print Cartridge	C792X1YG	C792X2YG
Black Print Cartridge	C792A1KG	C792A2KG
Black Extra High Yield Print Cartridge	C792X1KG	C792X2KG

Ordering a fuser or a transfer module

When **80 Fuser Life Warning** or **83 Transfer Module Life Warning** appears, order a replacement fuser or a transfer module.

When **80 Replace Fuser** or **83 Replace Transfer Module** appears, install the new fuser or the new transfer module. For installation information, see the documentation that came with the part.

Part name	Part number
Fuser	40X7102 (100 volts) 40X7100 (115 volts) 40X7101 (230 volts)
Transfer Module	40X7103

Ordering a waste toner bottle

When **82 Waste toner bottle nearly full** appears, order a replacement waste toner bottle.

When **82 Replace waste toner bottle** appears, replace the waste toner bottle.

Note: Waste toner bottle reuse is not recommended.

Part name	Part number
Waste toner bottle	C792X77G