

Menu map

Menus list

Supplies

Cyan Cartridge
 Magenta Cartridge
 Yellow Cartridge
 Black Cartridge
 Cyan Photoconductor Unit
 Magenta Photoconductor Unit
 Yellow Photoconductor Unit
 Black Photoconductor Unit
 Waste Toner Bottle
 Fuser
 Transfer Module
 Staple Cartridge
 Hole Punch Box

Paper Menu

Default Source
 Paper Size/Type
 Configure MP
 Substitute Size
 Paper Texture
 Paper Weight
 Paper Loading
 Custom Types
 Custom Names
 Custom Bin Names
 Universal Setup
 Bin Setup

Reports

Menu Settings Page
 Device Statistics
 Network Setup Page
 Network [x] Setup Page
 Profiles List
 Print Fonts
 Print Directory
 Print Demo
 Asset Report

Settings

General Settings
 Flash Drive
 Setup
 Job Accounting
 Finishing
 Quality
 Utilities
 XPS
 PDF
 PostScript
 PCL Emul
 HTML
 Image
 PictBridge

Security

Miscellaneous Security Settings
 Confidential Print
 Disk Wiping
 Security Audit Log
 Set Date and Time

Network/Ports

Active NIC
 Network*
 Standard USB
 Parallel [x]
 Serial [x]
 SMTP Setup

Help


Print All Guides
 Color Quality
 Print Quality
 Printing Guide
 Media Guide
 Print Defects Guide
 Menu Map
 Information Guide
 Connection Guide
 Moving Guide
 Supplies Guide

* Depending on the printer setup, this menu appears as Standard Network, Wireless Network, or Network [x].

Understanding the home screen

When the printer is turned on, the display shows a basic screen, referred to as the home screen. Use the home screen buttons and icons to initiate an action.

Note: Your home screen, icons, and the buttons may vary depending on your home screen customization settings, administrative setup, and active embedded solutions.

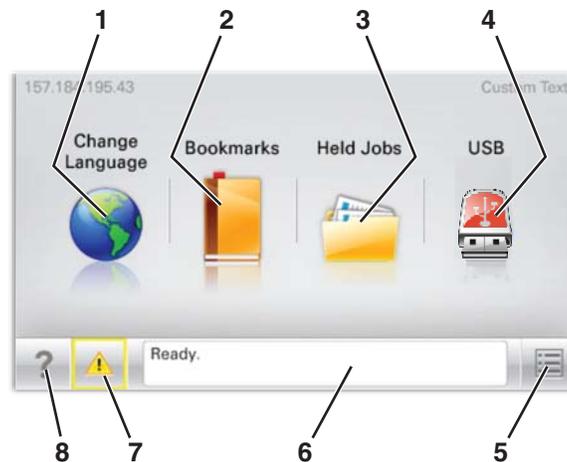

Touch		To
1	Change Language	Change the primary language of the printer.
2	Bookmarks	Create, organize, and save a set of bookmarks (URLs) into a tree view of folders and file links. Note: The tree view does not include bookmarks created within Forms and Favorites , and the ones in the tree are not usable from within Forms and Favorites .
3	Held Jobs	Display all current held jobs.
4	USB or USB Thumbdrive	View, select, or print photos and documents from a flash drive. Note: This icon appears only when you return to the home screen while a memory card or flash drive is connected to the printer.
5	Menus	Access printer menus. Note: These menus are available only when the printer is in the Ready state.
6	Status message bar	<ul style="list-style-type: none"> • Show the current printer status such as Ready or Busy. • Show printer conditions such as Fuser missing or Cartridge Low. • Show intervention messages and the instructions on how to clear them.
7	Status/Supplies	<ul style="list-style-type: none"> • Display a warning or error message whenever the printer requires intervention to continue processing. • Access the messages screen for more information on the message, and how to clear it.
8	Tips	Open a context-sensitive Help information on the touch screen.

This may also appear on the home screen:

Touch	To
Search Held Jobs	Search current held jobs.