

Supplies guide

When a cartridge low message appears meaning that the toner in the cartridge is low, you should order a new toner cartridge.

You may be able to print a limited number of pages when the message first appears, but it is best to have the new cartridge available when the current one runs out.


Note: Shake your new toner cartridge gently before installing it into the printer to maximize its yield.

The following table lists the part numbers for ordering items.

Ordering toner cartridges

When **88 Cartridge low** appears or when the print becomes faded, you may be able to extend the life of the toner cartridge:

- 1 Remove the toner cartridge.
- 2 Firmly shake the cartridge side-to-side and front-to-back several times to redistribute toner.

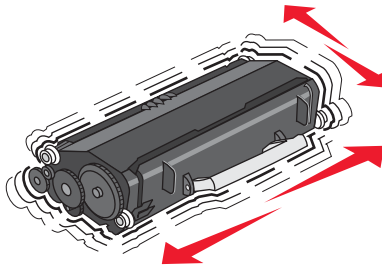

- 3 Reinsert the cartridge and continue printing.

Note: Repeat this procedure multiple times until the print remains faded, and then replace the cartridge.

Recommended toner cartridges and part numbers

Part name	Lexmark Return Program Cartridge	Regular cartridge
For the US and Canada		
Toner cartridge	E260A11A	E260A21A
High Yield Toner Cartridge	E360H11A	E360H21A
Extra High Yield Toner Cartridge	E462U11A	E462U21G
For Europe, the Middle East, and Africa		
Toner cartridge	E260A11E	E260A21E
High Yield Toner Cartridge	E360H11E	E360H21E
Extra High Yield Toner Cartridge	E462U11E	E462U21G
For the Asia Pacific Region, including Australia and New Zealand		
Toner cartridge	E260A11P	E260A21P
High Yield Toner Cartridge	E360H11P	E360H21P
Extra High Yield Toner Cartridge	E462U11P	E462U21G

Part name	Lexmark Return Program Cartridge	Regular cartridge
For Latin America		
Toner cartridge	E260A11L	E260A21L
High Yield Toner Cartridge	E360H11L	E360H21L
Extra High Yield Toner Cartridge	E462U11L	E462U21G

Ordering a photoconductor kit

Depending on your printer model, the printer issues a message or a light sequence to let you know the photoconductor kit is near its end of life. At this time, order a photoconductor kit. You can also see the status of the photoconductor kit by printing a network setup page.

Part name	Part number
Photoconductor kit	E260X22G

Ordering a maintenance kit

80 Routine maintenance needed appears on the display after 120,000 pages have printed to let you know it is time to replace printer maintenance items. Order a maintenance kit when this message first appears. The maintenance kit contains all the items necessary to replace the fuser and transfer roller.

Notes:

- The maintenance kit may not be available in all geographies.
- Using certain types of paper or specialty media may require more frequent replacement of the maintenance kit.

See the following table for the maintenance kit part number for your printer:

Part name	Part number
Maintenance kit	3013223 (100 V)* 3013221 (115 V) 3013222 (230 V)
* Designed for use only in Japan	