

# Menu Map

## Menus list

### Paper Menu

Default Source  
Paper Size/Type  
Configure MP  
Substitute Size  
Paper Texture  
Paper Weight  
Paper Loading  
Custom Types  
Custom Names<sup>1</sup>  
Universal Setup

### Reports

Menu Settings Page  
Device Statistics  
Network Setup Page<sup>2</sup>  
Profiles List  
Print Fonts  
Print Directory  
Print Demo  
Asset Report

### Network/Ports

Active NIC  
Standard Network<sup>3</sup>  
Reports  
Network Card  
TCP/IP  
IPv6  
Wireless  
AppleTalk  
Standard USB  
Parallel<sup>4</sup>  
SMTP Setup

### Security

Miscellaneous Security Settings<sup>4</sup>  
Confidential Print  
Erase Temporary Data Files<sup>4</sup>  
Security Audit Log  
Set Date and Time

### Settings

General Settings  
Flash Drive Menu<sup>4</sup>  
Print Settings

### Help

Print All Guides  
Print Quality  
Media Guide  
Print Defects Guide  
Menu Map  
Information Guide  
Connection Guide  
Moving Guide  
Supplies Guide


<sup>1</sup> This menu appears only in touch-screen printer models.

<sup>2</sup> Depending on the printer setup, this menu item appears as Network Setup Page or Network [x] Setup Page.

<sup>3</sup> Depending on the printer setup, this menu item appears as Standard Network or Network [x].

<sup>4</sup> This feature is available only in select printer models.

## Using the printer control panel

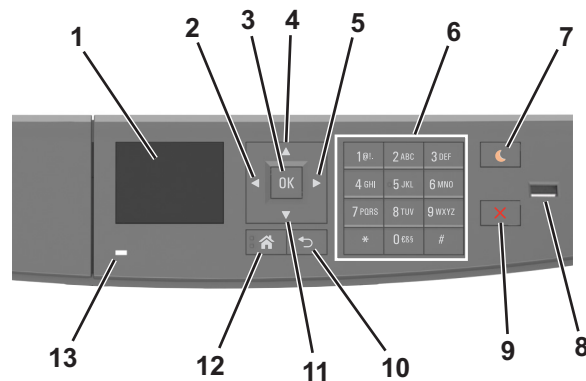

	Use the	To
1	Display	View the printer status and messages. Set up and operate the printer.
2	Left arrow button	Scroll to the left.
3	Select button	Select menu options. Save settings.
4	Up arrow button	Scroll up.
5	Right arrow button	Scroll to the right.
6	Keypad	Enter numbers, letters, or symbols.
7	Sleep button	Enable Sleep mode or Hibernate mode. The following actions wake the printer from Sleep mode: <ul style="list-style-type: none"> <li>• Pressing any hard button</li> <li>• Opening a tray or the front door</li> <li>• Sending a print job from the computer</li> <li>• Performing a power-on reset using the main power switch</li> <li>• Attaching a device in the USB port</li> </ul>
8	USB port	Connect a flash drive to the printer. <b>Notes:</b> <ul style="list-style-type: none"> <li>• Only the front USB port supports flash drives.</li> <li>• This feature is available only in select printer models.</li> </ul>
9	Stop or cancel button	Stop all printer activities.
10	Back button	Return to the previous screen.
11	Down arrow button	Scroll down.
12	Home button	Go to the home screen.
13	Indicator light	Check the status of the printer.

## Understanding the colors of the indicator and Sleep button lights

The colors of the indicator and Sleep button lights on the printer control panel signify a certain printer status or condition.

Indicator light	Printer status
Off	The printer is off or in Hibernate mode.
Blinking green	The printer is warming up, processing data, or printing.
Solid green	The printer is on, but idle.
Blinking red	The printer requires user intervention.

Sleep button light	Printer status
Off	The printer is idle or in Ready state.
Solid amber	The printer is in Sleep mode.
Blinking amber	The printer is waking from or entering Hibernate mode.

Sleep button light	Printer status
Blinking amber for 0.1 second, then goes completely off for 1.9 seconds in pulsing pattern	The printer is in Hibernate mode.