

Printing

Paper handling


Maintenance

Troubleshooting

Administration

Index

These instructions can help you remove memory or option cards. Use the following illustration to locate the connector for the card you want to remove.

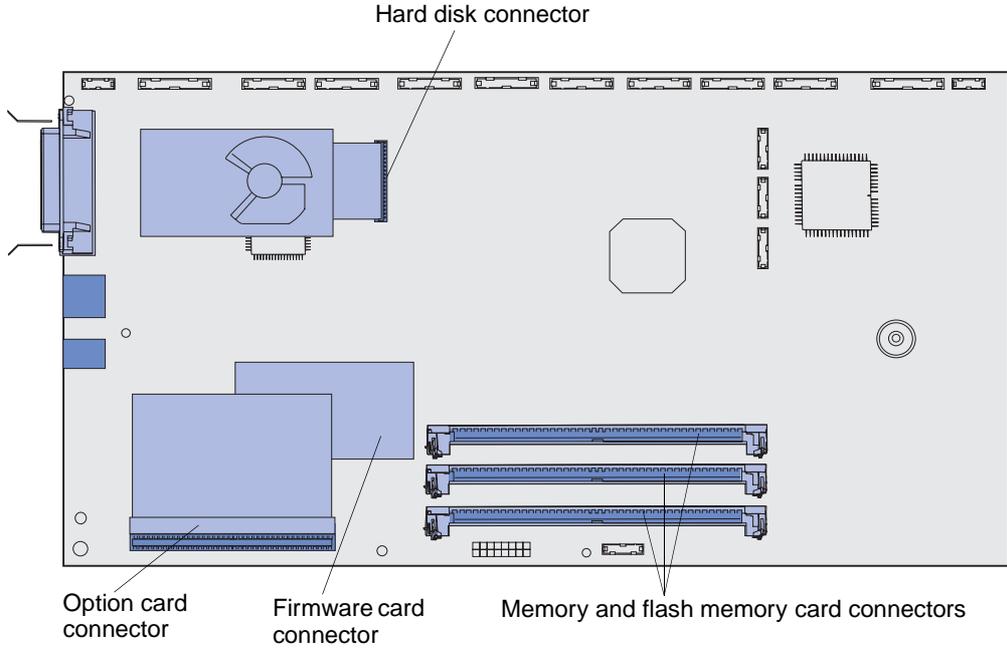

Printing

Paper handling

Maintenance


Troubleshooting

Administration

Index

Accessing the printer system board

- 1 Turn the printer off.
- 2 Unplug the printer power cord.
- 3 Disconnect all cables from the back of the printer.
- 4 Locate the access cover on the back of the printer.
- 5 Loosen the four screws at the top of the access cover, but do not remove the screws completely.

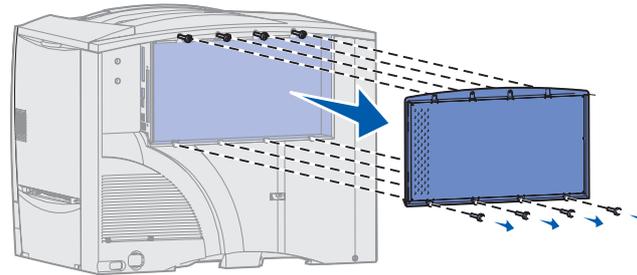

- 6 Remove the four screws at the bottom of the cover.
- 7 Slide the cover down to remove it.

Printing

Paper handling

Maintenance

Troubleshooting

Administration

Index

Removing memory cards

Complete the following steps to remove printer memory or flash memory cards.

Warning: Printer memory and flash memory cards are easily damaged by static electricity. Touch something metal on the printer before you touch a memory card.

- 1 Remove the system board access cover. See [Accessing the printer system board](#).
- 2 Locate the memory card you want to remove.



Printing

Paper handling


Maintenance

Troubleshooting

Administration

Index

- 3 Push open the latches on both ends of the connector away from the card.
- 4 Pull the card straight out of the connector.

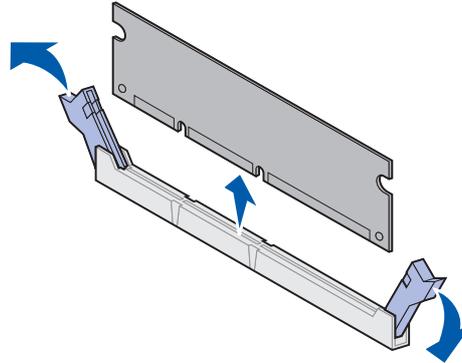

- 5 Place the card in its original packaging, or wrap the card in paper and store it in a box.
- 6 Reinstall the system board access cover. See **Reinstalling the system board access cover**.



Printing

Paper handling

Maintenance

Troubleshooting

Administration


Index

Removing an option card

Complete the following steps to remove an internal print server, Tri-Port Adapter, Infrared Adapter, Coax/Twinax Adapter, or USB/Parallel Interface Card.

Warning: Option cards are easily damaged by static electricity. Touch something metal on the printer before you touch an option card.

- 1 Remove the system board access cover. See [Accessing the printer system board](#).
- 2 Locate the option card.
- 3 Remove the screw that secures the card to the system board connector slot.

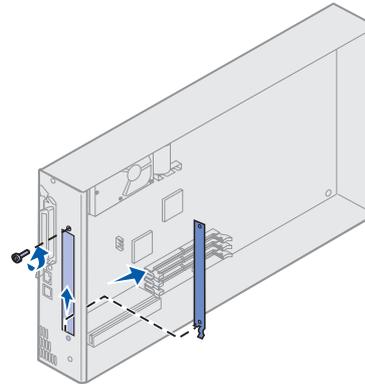

Printing

Paper handling

Maintenance

Troubleshooting

Administration

Index

- 4 Gently pull the card out of the connector.
- 5 If you saved the metal plate that covers the connector slot and you do not plan to insert another card, attach the plate:
 - a Slide the clip side of the plate in first, making sure the clip end covers the groove on the system board.
 - b Use the screw to secure the other end of the metal plate to the system board.
- 6 Place the card in its original packaging, or wrap the card in paper and store it in a box.
- 7 Replace the system board access cover. See **Reinstalling the system board access cover**.

Removing a hard disk

Complete the following steps to remove a hard disk. If an option card has been installed, you must remove it before removing the firmware card. See **Removing an option card**.

Warning: Hard disks are easily damaged by static electricity. Touch something metal on the printer before you touch a disk.

- 1 Remove the system board access cover. See **Accessing the printer system board**.
- 2 Locate the hard disk.



Printing

Paper handling


Maintenance

Troubleshooting

Administration

Index

- 3 Gently pull the three posts on the hard disk mounting plate out of the holes on the system board.

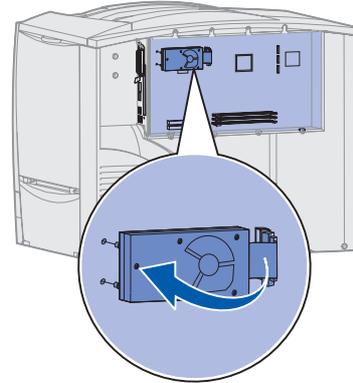

- 4 Gently pull the ribbon cable connector out of the connector on the system board.
- 5 Place the disk in its original packaging, or wrap the disk in paper and store it in a box.
- 6 Replace the system board access cover. See **Reinstalling the system board access cover**.



Printing

Paper handling

Maintenance

Troubleshooting

Administration


Index

Removing a firmware card

Complete the following steps to remove a firmware card. If an option card has been installed, you must remove it before removing the firmware card. See [Removing an option card](#).

Warning: Optional firmware cards are easily damaged by static electricity. Touch something metal on the printer before you touch an optional firmware card.

- 1 Remove the system board access cover. See [Accessing the printer system board](#).
- 2 Grasp the firmware card gently and pull it straight out in one motion. Do not pull one side and then the other.

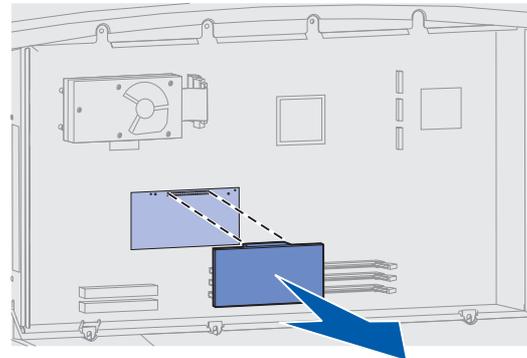

- 3 Place the card in its original packaging, or wrap the card in paper and store it in a box.



Printing

Paper handling

Maintenance

Troubleshooting

Administration

Index

- 4 Replace the system board access cover. See **Reinstalling the system board access cover**.

Reinstalling the system board access cover

- 1 Align the slots at the top of the access cover with the screws near the top of the printer.
- 2 Slide the cover up under the top cover lip as far as it will go, and then tighten the screws at the top of the cover.



Printing

Paper handling


Maintenance

Troubleshooting

Administration

Index

- 3 Insert and tighten the four screws to the bottom of the cover.

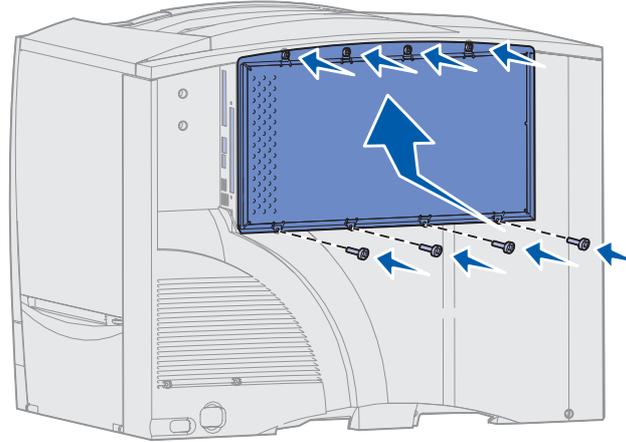

- 4 Reconnect all cables on the back of the printer.
- 5 Plug in the printer power cord.
- 6 Turn the printer on. ▲

