




C752

Setup Guide

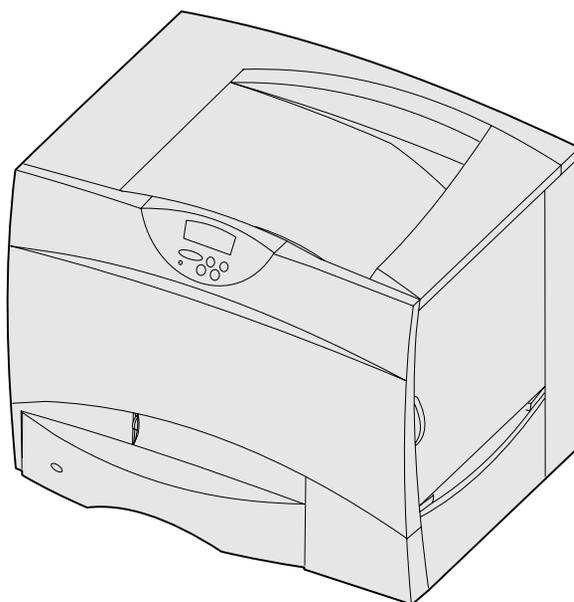

June 2003

www.lexmark.com

Lexmark and Lexmark with diamond design are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

© 2003 Lexmark International, Inc.

740 West New Circle Road
Lexington, Kentucky 40550

English

Edition: June 2003

The following paragraph does not apply to any country where such provisions are inconsistent with local law: LEXMARK INTERNATIONAL, INC., PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions. Improvements or changes in the products or the programs described may be made at any time.

Comments about this publication may be addressed to Lexmark International, Inc., Department F95/032-2, 740 West New Circle Road, Lexington, Kentucky 40550, U.S.A. In the United Kingdom and Eire, send to Lexmark International Ltd., Marketing and Services Department, Westhorpe House, Westhorpe, Marlow Bucks SL7 3RQ. Lexmark may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you. You can purchase additional copies of publications related to this product by calling 1-800-553-9727. In the United Kingdom and Eire, call +44 (0)8704 440 044. In other countries, contact your point of purchase.

References in this publication to products, programs, or services do not imply that the manufacturer intends to make these available in all countries in which it operates. Any reference to a product, program, or service is not intended to state or imply that only that product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any existing intellectual property right may be used instead. Evaluation and verification of operation in conjunction with other products, programs, or services, except those expressly designated by the manufacturer, are the user's responsibility.

Lexmark, Lexmark with diamond design, and MarkNet are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

ImageQuick is a trademark of Lexmark International, Inc.

PostScript® is a registered trademark of Adobe Systems Incorporated. PostScript 3 is Adobe Systems' designation of a set of printer commands (language) and functions included in its software products. This printer is intended to be compatible with the PostScript 3 language. This means the printer recognizes PostScript 3 commands used in various application programs, and that the printer emulates the functions corresponding to the commands.

Other trademarks are the property of their respective owners.

© 2003 Lexmark International, Inc.

All rights reserved.

UNITED STATES GOVERNMENT RIGHTS

This software and any accompanying documentation provided under this agreement are commercial computer software and documentation developed exclusively at private expense.

Federal Communications Commission (FCC) compliance information statement

This printer complies with the limits for a Class B digital device (without a network cable or high-capacity output finisher installed) and for a Class A digital device (with a network cable or high-capacity output finisher installed), pursuant to Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any questions on this statement should be directed to:

Director of Lexmark Technology & Services
Lexmark International, Inc.
740 West New Circle Road
Lexington, KY 40550
(859) 232-3000

Refer to the online documentation for additional compliance information.

Safety information

- The power cord *must* be connected to a properly grounded electrical outlet that is near the product and easily accessible. **CAUTION:** Do not set up this product or make any electrical or cabling connections, such as the power cord or telephone, during a lightning storm.
- Refer service or repairs, other than those described in the operating instructions, to a professional service person.
- This product is designed, tested, and approved to meet strict global safety standards with the use of specific Lexmark components. The safety features of some parts may not always be obvious. Lexmark is not responsible for the use of other replacement parts.
- Your product uses a laser. **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
- Your product uses a printing process that heats the print media, and the heat may cause the media to release emissions. You must understand the section in your operating instructions that discusses the guidelines for selecting print media to avoid the possibility of harmful emissions.
- **CAUTION:** Do not set up this product, make electrical connections, or use a fax modem feature during a lightning storm.

Conventions

It may help you to recognize the caution, warning, and note conventions used in this book. These appear in the left column for easy reference.

CAUTION: A caution identifies something that could cause you harm.

Warning: A warning identifies something that could damage your printer hardware or software.

Note: A note provides information you may find useful.

Attention!



This symbol identifies static-sensitive parts. Do not touch in the areas near these symbols without first touching the metal frame of the printer.


Contents

Introduction	vi
About your printer	vi
Other sources of information	vii
Step 1: Unpack the printer	1
Setting up a multifunction printer	1
Unpacking	1
Step 2: Set up the printer and paper handling options ...	3
Installing a 2000-sheet drawer	4
Installing a 500-sheet drawer	6
Installing a duplex unit	7
Positioning the printer	8
Installing an output expander	10
Installing a 5-bin mailbox	12
Step 3: Set up the print supplies	14
Setting up the print cartridges	14
Attaching an adhesive operator panel overlay	19
Step 4: Install memory, firmware, or option cards	21
Removing the system board access cover	22
Installing a memory card	24
Installing a firmware card	25
Installing a hard disk	26
Installing an option card	28
Replacing the system board access cover	30
Applying the Option Added label	30

Step 5: Load paper	31
Loading the 500-sheet trays	32
Loading the 2000-sheet tray	34
Loading the multipurpose feeder	36
Step 6: Attach cables and power cord	39
Attaching a local cable	39
Attaching a network cable	42
Step 7: Install drivers for local printing	44
Windows	45
Macintosh	49
UNIX/Linux	51
Step 8: Verify printer setup	52
Printing a menu settings page	52
Printing a network setup page	53
Printing Quick Reference information	53
Step 9: Configure for TCP/IP	54
Assigning a printer IP address	54
Verifying the IP settings	55
Configuring for Pull Printing	55
Step 10: Install drivers for network printing	56
Windows	56
Macintosh	60
UNIX/Linux	63
NetWare	63
Step 11: Using the publications CD	64
Viewing and using the CD contents	64

Introduction

About your printer

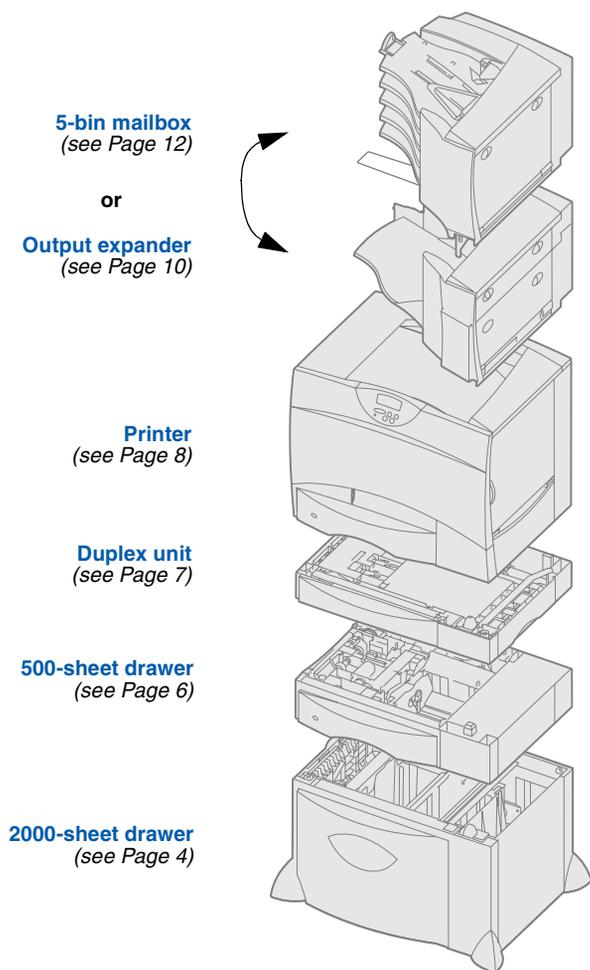

Your printer is available in five models:

- **Lexmark C752** (*base model*)
 - 1200 dots per inch (dpi) resolution
 - 128MB of standard memory
 - One 500-sheet tray
 - USB and parallel connectors
- **Lexmark C752n** (*network model*)
 - 128MB of standard memory
 - Ethernet 10BaseT/100BaseTx print server installed
 - USB and Ethernet connectors
- **Lexmark C752dn** (*network, plus:*)
 - Duplex unit
- **Lexmark C752dtn** (*network, plus:*)
 - Duplex unit
 - 256MB of standard memory
 - One additional 500-sheet drawer
- **Lexmark C752fn** (*network, plus:*)
 - Duplex unit
 - 256MB of standard memory
 - Hard disk installed
 - One additional 500-sheet drawer
 - 2000-sheet drawer
 - Finisher

You can purchase several different options for your printer. Refer to the publications CD for more information.

If you purchased a multifunction printer (MFP) that copies, faxes, and scans, refer to the documentation that came with the device to see if furniture or other hardware needs to be set up first. More information is available on our Lexmark

Web site at
www.lexmark.com/multifunctionprinters.

If you purchased a finisher to go with your printer, refer to the documentation that came with the finisher for information about setting it up with the printer.

Other sources of information

If you need more information after you have completed setup, refer to the other printer documentation.

Publications CD

The publications CD provides information about loading paper, clearing error messages, ordering and replacing supplies, installing maintenance kits, and troubleshooting. It also provides general information for administrators.

In addition, the publications CD contains copies of the printer's Quick Reference pages.

The information on the publications CD is also available on our Lexmark Web site at www.lexmark.com/publications.

Quick Reference pages

Quick Reference pages are stored inside the printer. They provide information about loading print media, diagnosing and solving print problems, and clearing jams from the printer. The following is a list of guides available from the Help Menu:

- Printing Guide
- Color Quality
- Print Quality
- Connection Guide
- Help Guide
- Media Guide
- Jam Clearance
- Print Defects
- Supplies Guide
- Moving Guide

To print these pages:

- 1** On the operator panel, press **Menu** until you see Help Menu.
- 2** Press **Menu** until you see the topic you want to print, and then press **Select**.

We strongly recommend that you print the Jam Clearance guide and keep it by the printer. These pages are also available on the publications CD that shipped with your printer.

Quick Reference and Clearing Jams sheets

The *Quick Reference* card and *Clearing Jams* sheets provide easy access to information about loading print media, understanding common printer messages, and clearing paper jams.

Drivers CD

The drivers CD contains all the necessary files to get your printer up and running. It may also contain printer utilities, screen fonts, and additional documentation.

Lexmark's Web site

Visit our Web site at www.lexmark.com for updated printer drivers, utilities, and other printer documentation.

Step 1: Unpack the printer


Setting up a multifunction printer

Note: More information is available on our Lexmark Web site at www.lexmark.com/multifunctionprinters.

If you purchased a multifunction printer (MFP) that copies, faxes, and scans, refer to the documentation that came with the device to see if furniture or other hardware needs to be set up first.

Unpacking

CAUTION: The printer weighs 47.7 kg (105 lb) and requires at least two people to lift it safely.

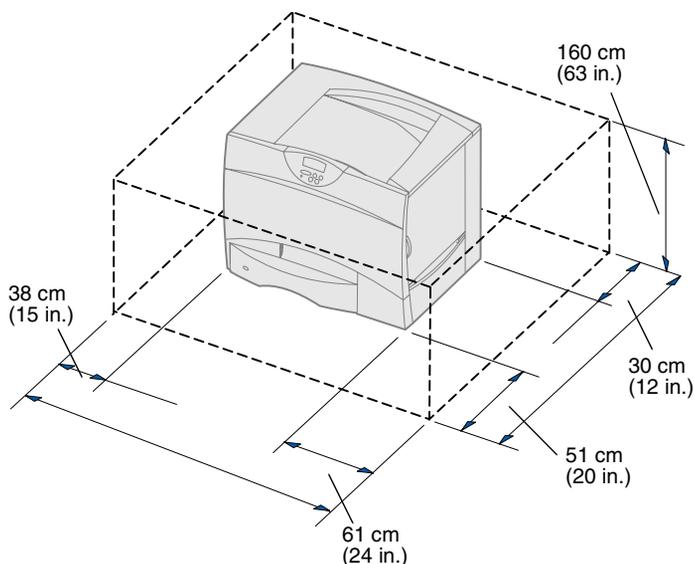

1 Select a location for your Lexmark™ C752 printer:

- Leave enough room to open the printer trays, covers, and doors; access options; and allow for proper ventilation.
- Provide the proper environment:
 - A firm, level surface
 - Away from the direct airflow of air conditioners, heaters, or ventilators
 - Free of temperature, sunlight, or humidity extremes or fluctuations
 - Clean, dry, and free of dust

Unpack the printer

Note: Leave the printer in the box until you are ready to install it. Then have someone help you lift it using the handholds (see “Positioning the printer” on page 8).


2 Remove all items *except the printer* from the box.

Make sure you have the following items:

- Printer with one 500-sheet tray
- Power cord
- Four print cartridges (preinstalled)
- *Setup Guide* with a publications CD
- *Quick Reference and Clearing Jams* sheets
- Drivers CD

If any items are missing or damaged, refer to the publications CD for information about contacting Lexmark Customer Support.

Save the carton and packing materials in case you need to repack the printer.

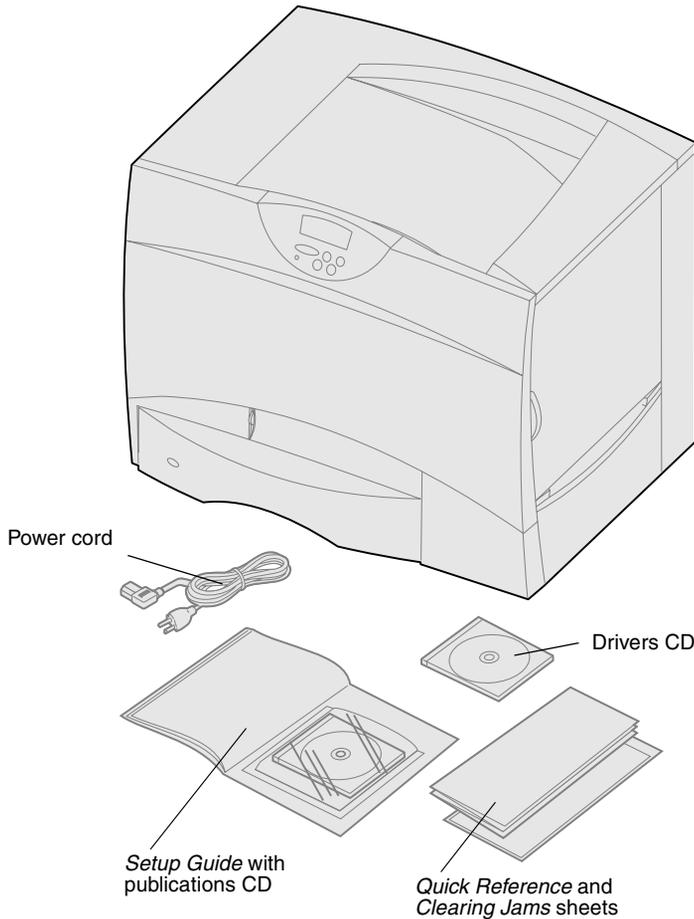

Unpack the printer

Step 2: Set up the printer and paper handling options

Note: Be sure to set up the items in the order listed in the table.


If you only purchased a base printer with no options, follow the directions under “Positioning the printer” on page 8.

Use the following table to locate the instructions you need to set up your printer and any paper handling options you may have purchased.

Topic	Go to page...
Installing a 2000-sheet drawer	4
Installing a 500-sheet drawer	6
Installing a duplex unit	7
Positioning the printer	8
Installing an output expander	10
Installing a 5-bin mailbox	12

Installing a 2000-sheet drawer


Warning: If you have an optional duplex unit and a 2000-sheet drawer, you must install a 500-sheet drawer between the duplex unit and the 2000-sheet drawer.

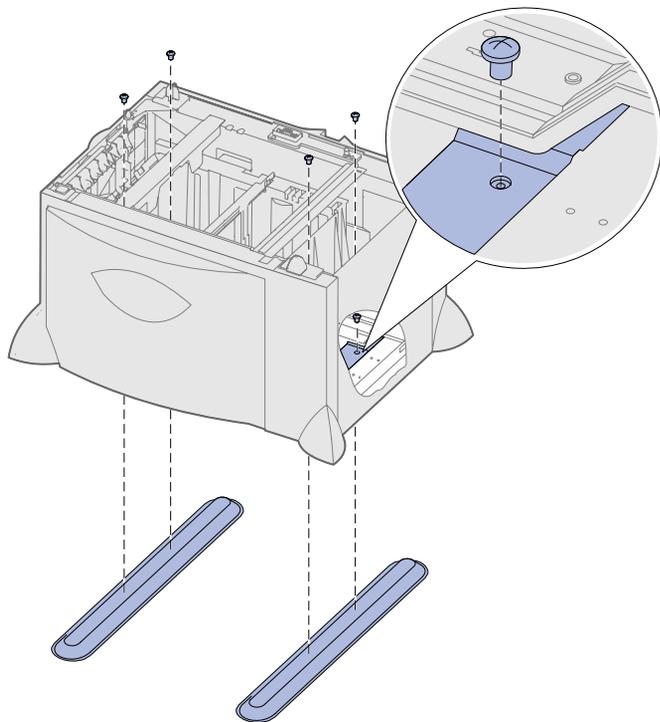

Your printer supports one optional 2000-sheet drawer.

- 1** Unpack the 2000-sheet drawer and remove any packing material.
- 2** Place the drawer in the location you have chosen for your printer.
- 3** If you are installing a 500-sheet drawer on top of the 2000-sheet drawer, attach the stabilizing bars:
 - a** Place the two stabilizing bars on the ground, narrow side up.
 - b** Lower the 2000-sheet drawer onto the bars, making sure you align the holes in the drawer with the holes in the bars.
 - c** Screw the bars into place using four screws (two screws for each bar).


- 4 Adjust the four leveling feet on the bottom of the drawer, if necessary.
- 5 Continue with “Installing a 500-sheet drawer” on page 6 or “Positioning the printer” on page 8.

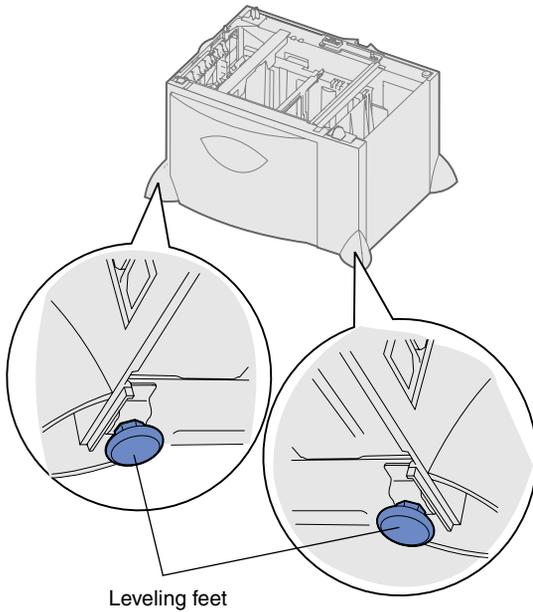

Note: You will install the power cord for the 2000-sheet drawer later.

Installing a 500-sheet drawer

Warning: If you have an optional duplex unit and a 2000-sheet drawer, you must install a 500-sheet drawer between the duplex unit and the 2000-sheet drawer.

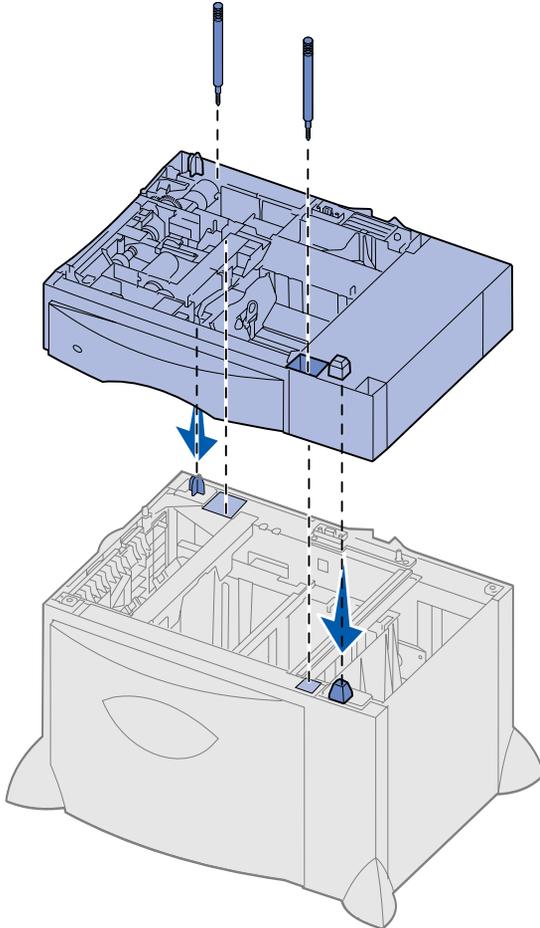


Your printer supports up to three additional 500-sheet drawers. However, if you install a 2000-sheet drawer, you can only add one additional 500-sheet drawer.

- 1** Unpack the 500-sheet drawer and remove any packing material.
- 2** Place the drawer in the location you have chosen for your printer or install it on another drawer:
 - a** Align the holes in the 500-sheet drawer with the positioning posts on the lower drawer.
 - b** Lower the 500-sheet drawer into place. Make sure it is seated securely on the other drawer.
- 3** If you are installing a 500-sheet drawer on top of a 2000-sheet drawer, secure them with stabilizing screws.
 - a** Insert the screws through the holes next to the positioning posts on the 500-sheet drawer.
 - b** Hand-tighten the screws.

Even when fully inserted, the screws allow some space between the drawers.
- 4** Install another 500-sheet drawer, or continue with “Installing a duplex unit” on page 7 or “Positioning the printer” on page 8.

Installing a duplex unit

Warning: If you have an optional duplex unit and a 2000-sheet drawer, you must install a 500-sheet drawer between the duplex unit and the 2000-sheet drawer.


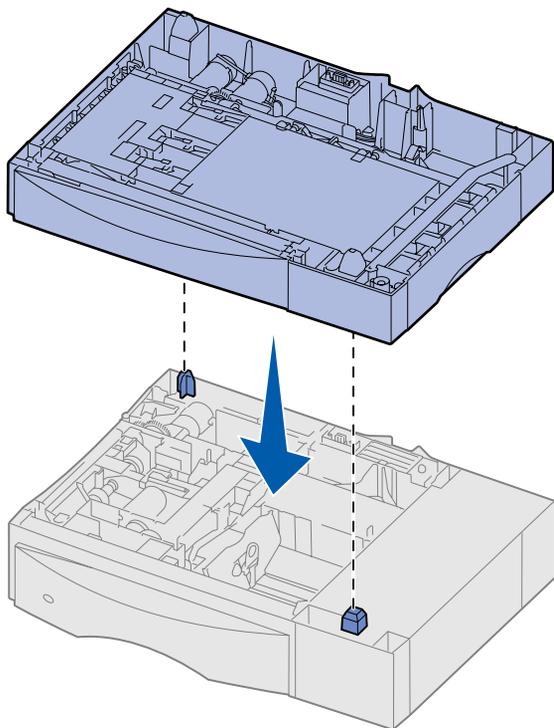


Your printer supports an optional duplex unit that lets you print on both sides of a sheet of paper.

- 1** Unpack the duplex unit and remove any packing material.
- 2** Place the duplex unit in the location you have chosen for your printer or install it on a 500-sheet drawer:
 - a** Align the positioning posts on the drawer with the holes in the duplex unit.
 - b** Lower the duplex unit into place. Make sure it is seated securely on the drawer.
- 3** Continue with “Positioning the printer” on page 8.

Positioning the printer

CAUTION: The printer weighs 47.7 kg (105 lb) and requires at least two people to lift it safely.

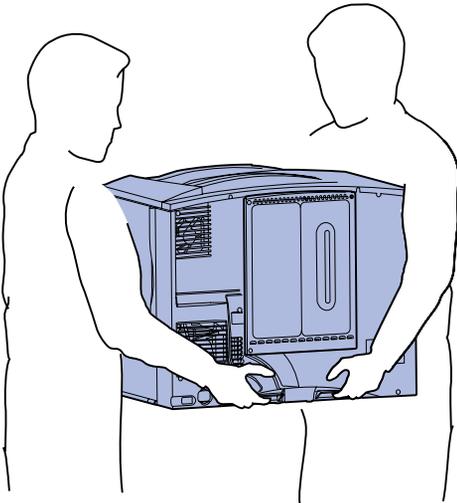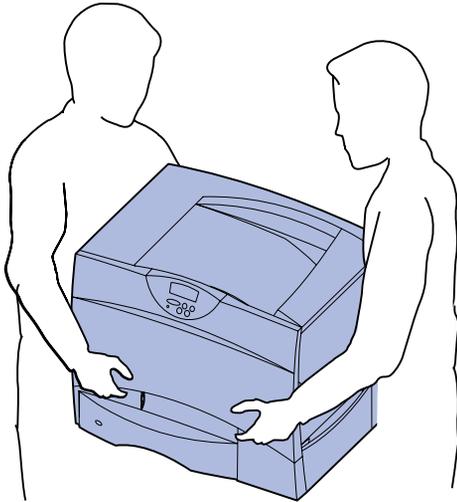


Once you have selected a location and set up any optional drawers or a duplex unit, you are ready to position the printer.

- 1 Have someone help you lift the printer out of the box.

Use the handholds on the front and rear of the printer.

Set up the printer and paper handling options

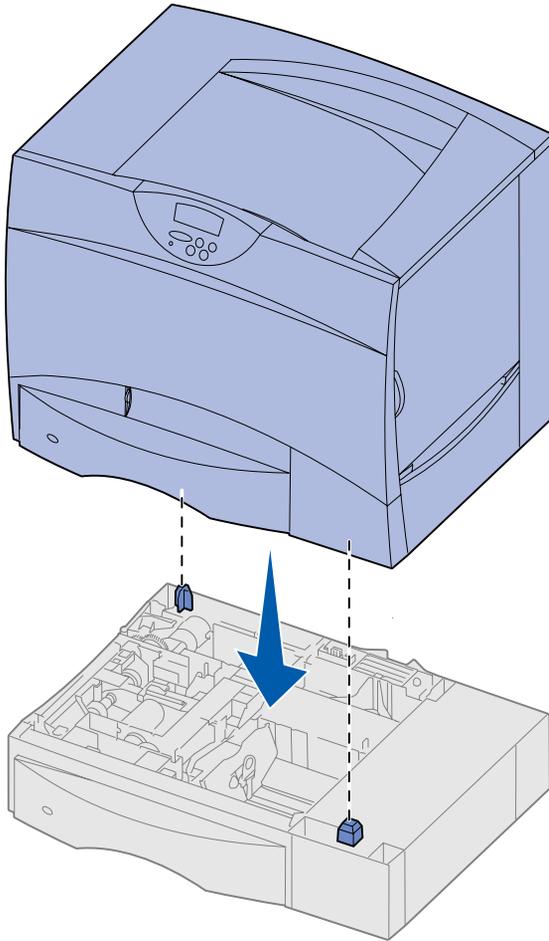

- 2** Have someone help you place the printer in the location you have chosen.


If you are installing the printer on an optional drawer or a duplex unit, align the positioning posts on the option with the holes in the printer. Make sure the printer is seated securely on the option.

- 3** Remove any tape or packing material from the outside of the printer.
- 4** If you purchased an output expander or mailbox, continue with this chapter.


Otherwise, skip to Step 3: “Set up the print supplies” on page 14.

Installing an output expander

Note: After you unpack the output expander, install it immediately. Otherwise, the edges of the mounting brackets could damage tabletops or fabrics.

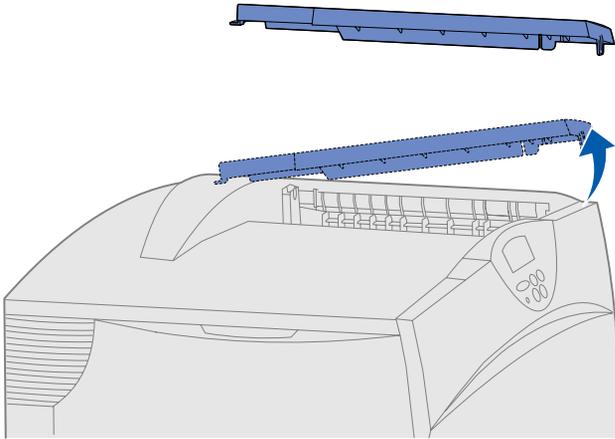

Warning: The output expander tray is designed to hold the weight of print material only. Do not use it as a shelf; excess weight may cause it to disengage from the output expander.

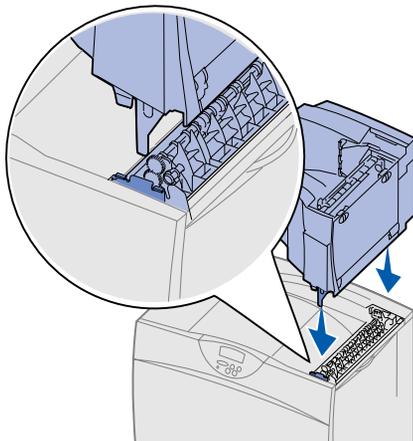


Your printer supports an optional output expander that lets you stack up to 650 sheets of paper in one bin.

- 1 Unpack the output expander and remove any packing material.
- 2 Remove the printer top cover.

- 3 Align the mounting brackets on the bottom of the output expander with the slots in the top of the printer.
- 4 Lower the output expander into place.


Set up the printer and paper handling options

- 5 Attach the printer top cover to the output expander.

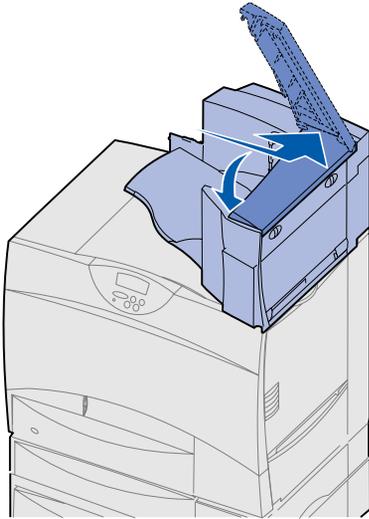

- 6 Attach the output expander paper bail to the top cover.


- 7 Go to Step 3: "Set up the print supplies" on page 14.

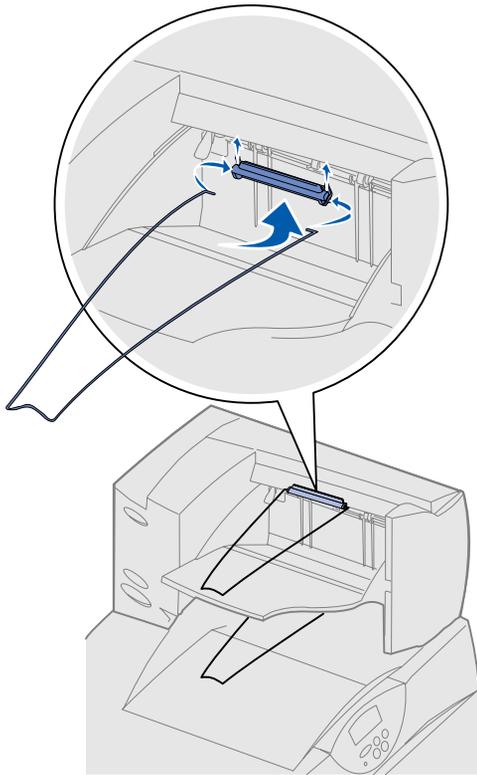


Set up the printer and paper handling options

Installing a 5-bin mailbox

Note: After you unpack the mailbox, install it immediately. Otherwise, the edges of the mounting brackets could damage tabletops or fabrics.

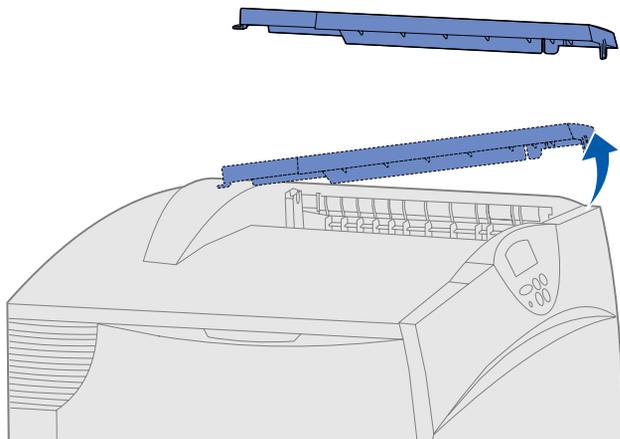


Warning: The mailbox is designed to hold the weight of print material only. Do not use it as a shelf; excess weight may damage it.

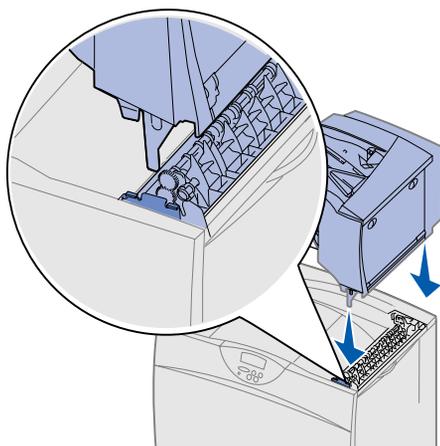


Your printer supports a 5-bin mailbox that lets you collate and stack up to 500 sheets of paper.

- 1 Unpack the mailbox and remove any packing material.
- 2 Remove the printer top cover.
- 3 Align the mounting brackets on the bottom of the mailbox with the slots in the top of the printer.
- 4 Lower the mailbox into place.

- 5** Attach the printer top cover to the mailbox.

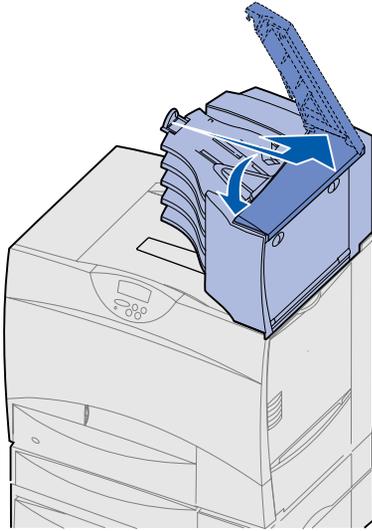

- 6** Attach the mailbox paper bail to the top cover.

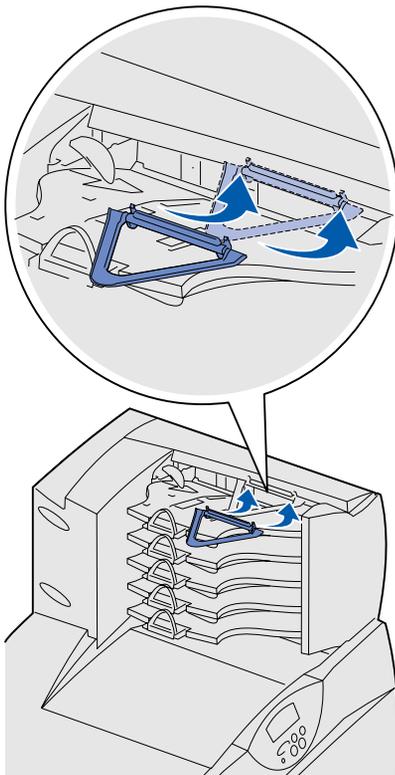

Set up the printer and paper handling options


Step 3: Set up the print supplies

Warning: Be sure to remove all packing materials or the printer may be damaged.


This step describes how to prepare the print cartridges and remove the packing materials inside the printer.

Setting up the print cartridges

- 1 Open the printer front cover.

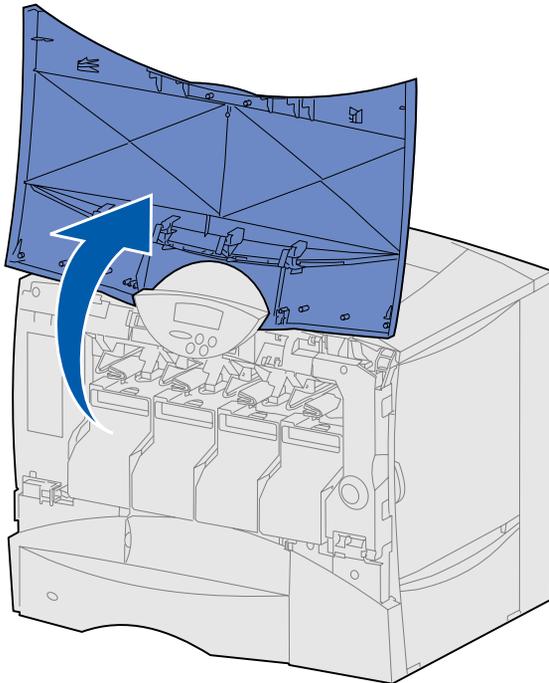



- 2** Remove the packing material on top of the cartridges.

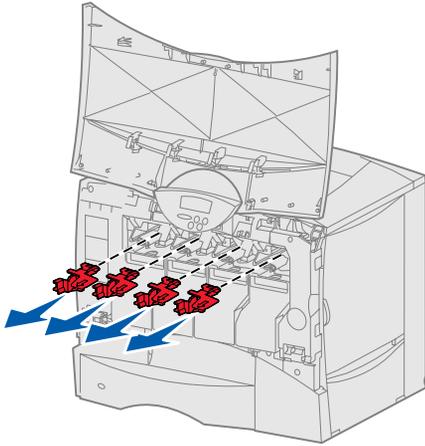

- 3** Remove the print cartridges. For each cartridge:


- a** Pull up slightly on the handle.
- b** Pull the cartridge straight out and use the handle to lift it off the guides.
- c** Set the cartridge on a hard, flat, clean surface in the upright position.

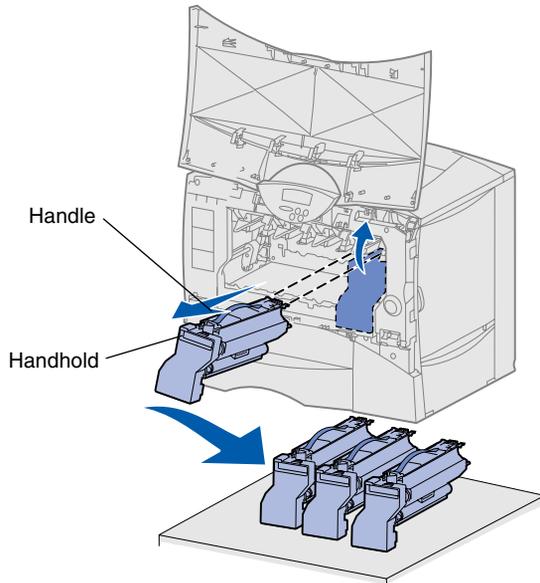


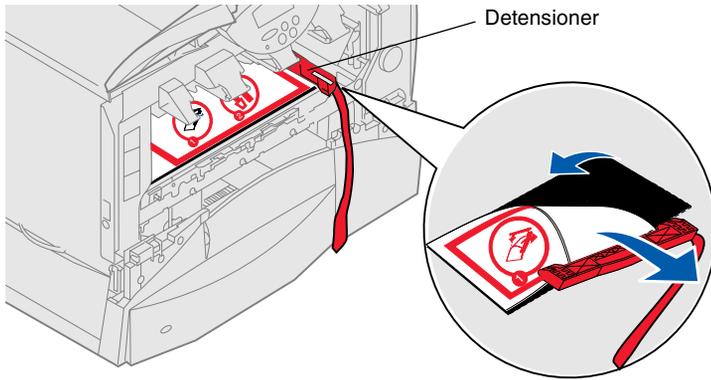

- 4 Remove the packing material from the image transfer unit belt:
 - a Grasp the detensioner located on the right side on the inside of the machine.
 - b Gently but firmly pull the detensioner and the attached sheet up and out of the printer.

Warning: Do not touch the image transfer unit belt with your fingers.

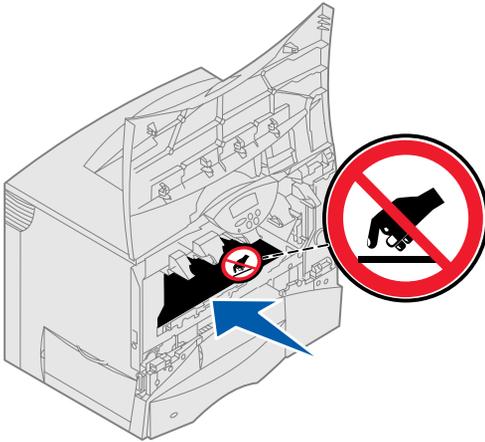


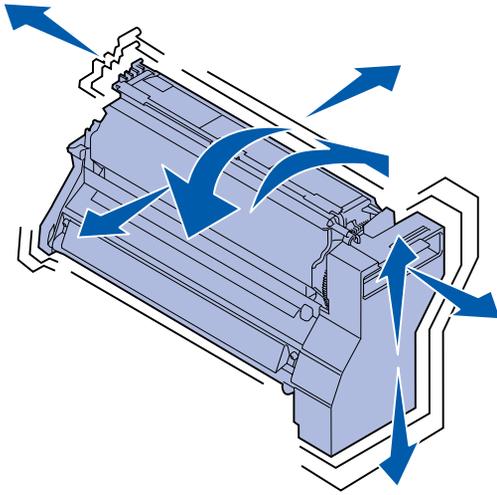

5 Reinstall the print cartridges. For each cartridge:


- a** Rotate the cartridge in all directions to distribute the toner.
- b** Turn the cartridge over so that the handle is on the bottom.

Warning: Failure to remove the packing material from the print cartridges damages the printer.

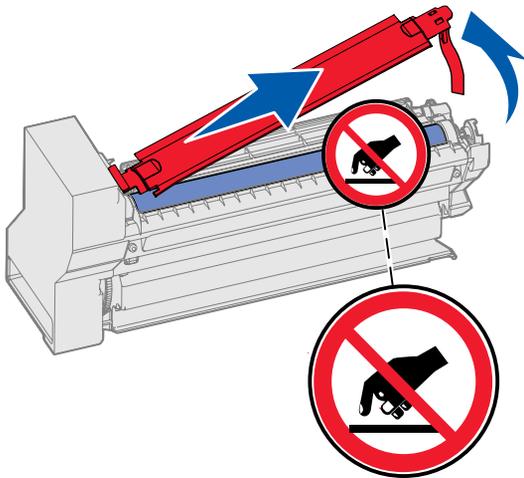


- c** Remove the plastic packing material from the photoconductor drum.
Discard the packing material.
- d** Turn the cartridge so that the handle is on the top.

Warning: Do not touch the photoconductor drum on the bottom of the print cartridge.

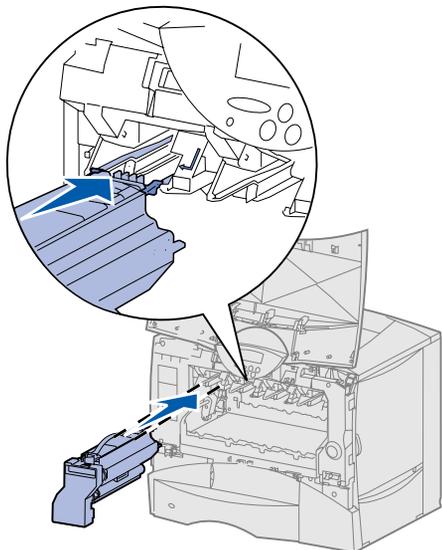

- e Holding the cartridge by the handle, rest the spokes on the cartridge on top of the guides inside the printer.


Be sure to match the cartridge color with the colored label in the printer.

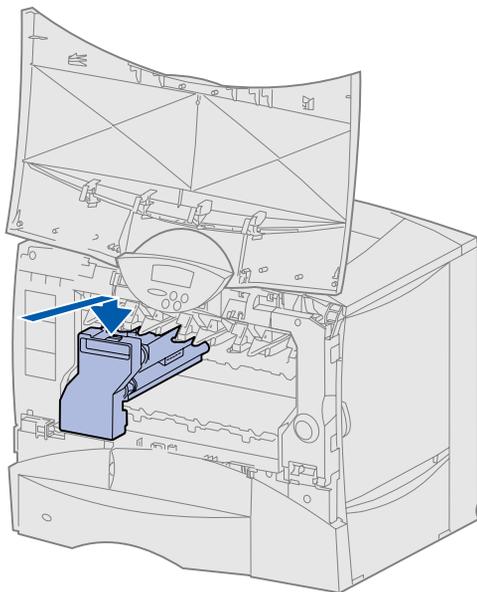

- f Slide the cartridge in as far as it will go.


The cartridge lowers into place.

6 Close the front cover.

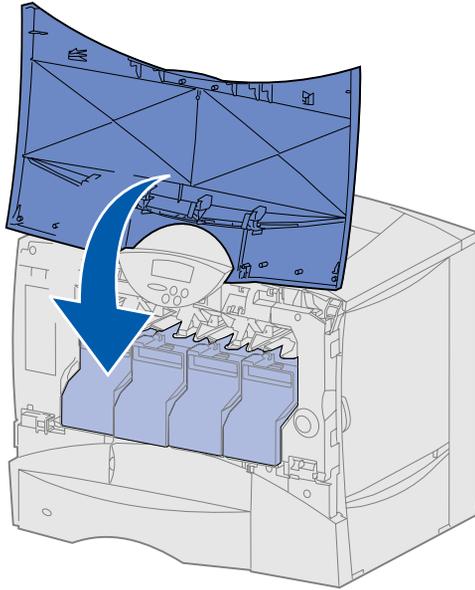

Warning: If the front cover does not close completely, reopen the cover and press in firmly on the cartridges to make sure they are fully seated.

Attaching an adhesive operator panel overlay

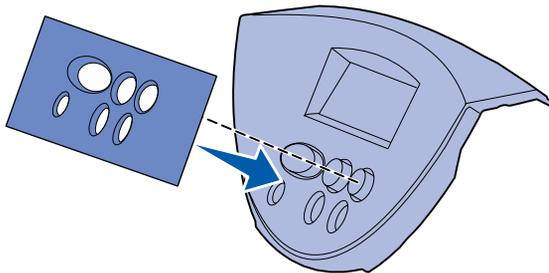

If English is not your preferred language and your printer shipped with an adhesive operator panel overlay, attach the overlay that has the appropriately translated button names:

- 1** Locate the adhesive overlay packaged with your printer.
- 2** Peel the protective backing off the overlay.
- 3** Align the holes in the overlay with the buttons on the operator panel, and then press it into place.
- 4** Peel the protective covering away from the overlay.

Refer to the publications CD for instructions on changing the language of the text displayed on the operator panel.

What do I do next?

Task	Go to page...
Install memory, firmware, or option cards	21
Load paper	31

Step 4: Install memory, firmware, or option cards

CAUTION: If you are installing memory or option cards sometime after setting up the printer, turn the printer off and unplug the power cord before continuing.

Note: You need a small Phillips screwdriver to remove the system board access cover and to install some of the cards.


If you do not have any memory, firmware, or option cards to install, skip this step and go to Step 5: “Load paper” on page 31.

You can customize your printer memory capacity and connectivity by adding optional cards.

The instructions in this section help you install any of the following:


- Memory cards
 - Printer memory
- Firmware cards
 - Additional functionality
 - Internet capabilities
 - Flash memory
- Option cards
 - Hard disk with adapter card
 - MarkNet™ internal print servers (also called internal network adapters or INAs)
 - Serial Interface Card
 - Parallel 1284-B Interface Card

Removing the system board access cover

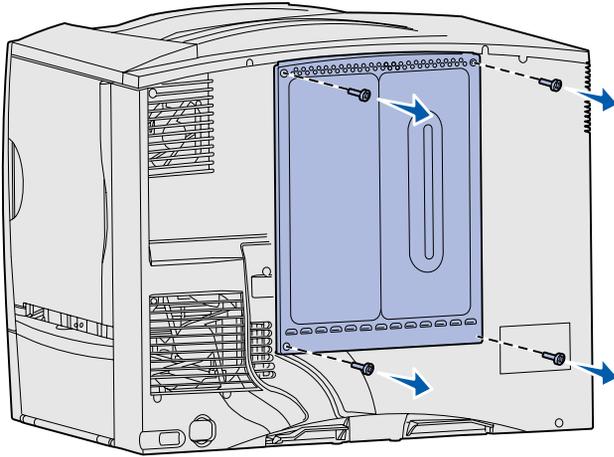

- 1** Locate the access cover on the back of the printer.
- 2** Remove the four access cover screws (two at top, two at bottom).
- 3** Remove the access cover.
- 4** Use the illustration on Page 23 to locate the connector for the card you want to install.

5 Use the following table to locate the instructions you need.

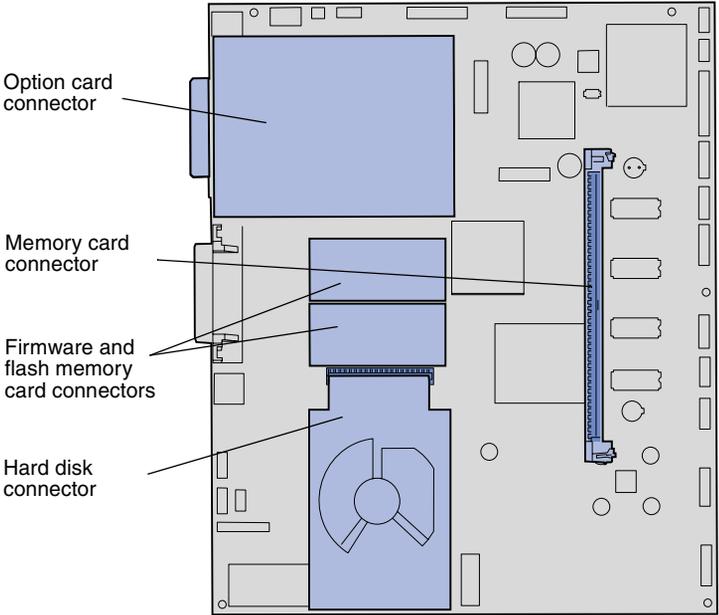


To install a...	Go to page...
Memory card	24
Firmware card	25
Hard disk	26
Option card	28

Installing a memory card

Note: Some memory options offered for other Lexmark printers cannot be used with your printer. Refer to the publications CD for memory specifications.

Warning: Memory cards are easily damaged by static electricity. Touch something metal on the printer before you touch a card.

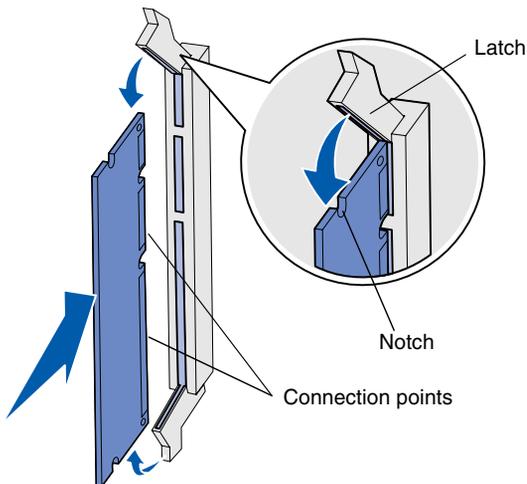

Follow the instructions in this section to install a printer memory card. Memory cards must have 168-pin connectors.

- 1** Remove the system board access cover (see Page 22).
- 2** Unpack the memory card.
Avoid touching the connection points along the edge of the card. Save the packaging.
- 3** Push open the latches on both ends of the memory connector.
- 4** Align the notches on the bottom of the card with the notches on the connector.
- 5** Push the memory card firmly into the connector until the latches on either end of the connector *snap* into place.
It may require some force to fully seat the card.
- 6** Make sure each latch fits over the notch on the end of the card.


What do I do now?

Task	Go to page...
Installing a firmware card	25
Installing a hard disk	26
Installing an option card	28
Replacing the system board access cover	30

Installing a firmware card

Note: Firmware and flash memory cards offered for other Lexmark printers cannot be used with your printer.

Warning: Firmware and flash memory cards are easily damaged by static electricity. Touch something metal on the printer before you touch a card.

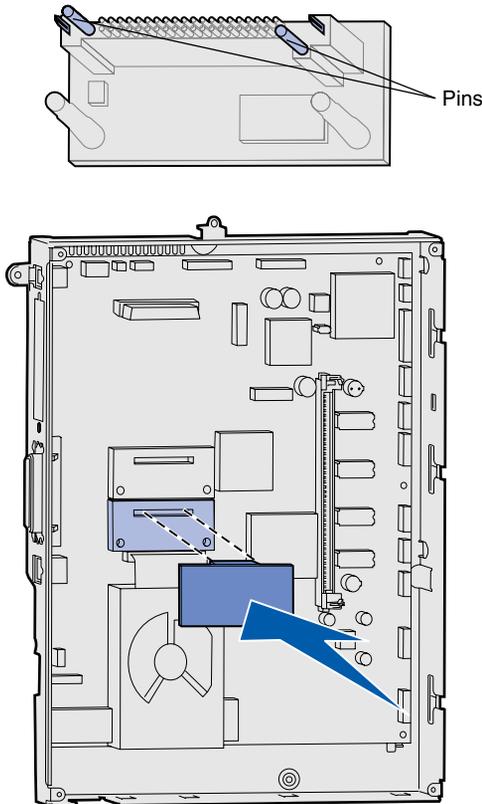

Follow the instructions in this section to install an optional firmware or flash memory card.

Only one of each type of card is supported.

1 Remove the system board access cover (see Page 22).

2 Unpack the card.

Avoid touching the metal pins on the bottom of the card. Save the packaging.

3 Holding the card by its sides, align the pins on the card with the holes on the system board.

4 Push the card firmly into place.

The entire length of the connector on the card must touch the system board.

Be careful not to damage the card connectors.



What do I do now?

Task	Go to page...
Installing a hard disk	26
Installing an option card	28
Replacing the system board access cover	30

Install memory, firmware, or option cards

Installing a hard disk

Warning: Hard disks are easily damaged by static electricity. Touch something metal on the printer before you touch a disk.

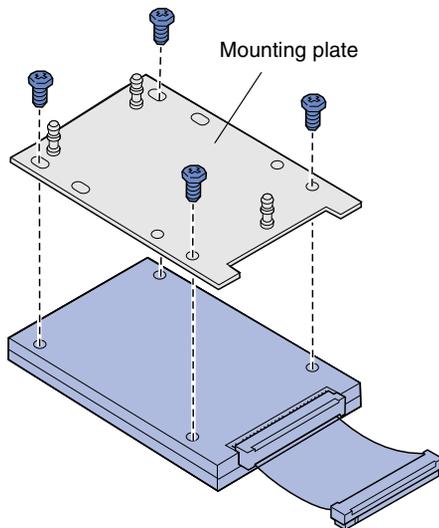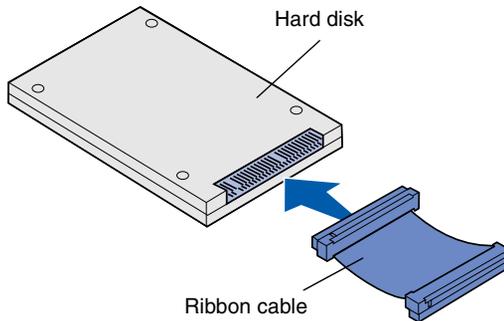


Follow the instructions in this section to install an optional hard disk. You need a small Phillips screwdriver to attach the hard disk to the mounting plate.


If an option card has been installed, you may need to remove it before installing the hard disk.

- 1** Remove the system board access cover (see Page 22).
- 2** Remove the mounting plate, hard disk, ribbon cable, and attachment screws from the package.
- 3** Align the ribbon cable connector with the connector pins on the hard disk.
- 4** Attach the ribbon cable to the hard disk.
- 5** Align the screw holes on the mounting plate with the holes in the hard disk.
- 6** Secure the mounting plate to the hard disk with the screws.

- 7 Press the ribbon cable connector into the connector on the system board.

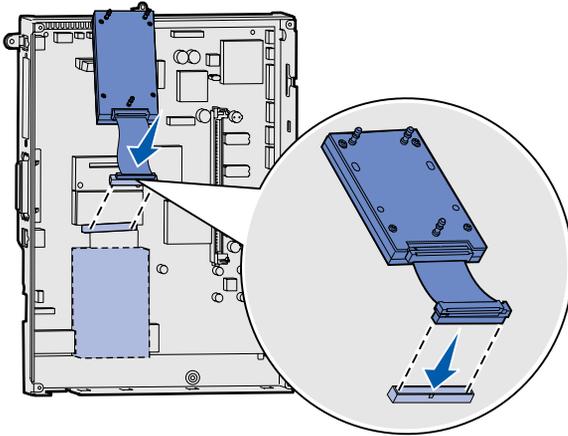

- 8 Flip the hard disk over, and then press the three posts on the mounting plate into the holes on the system board. The hard disk *snaps* into place.

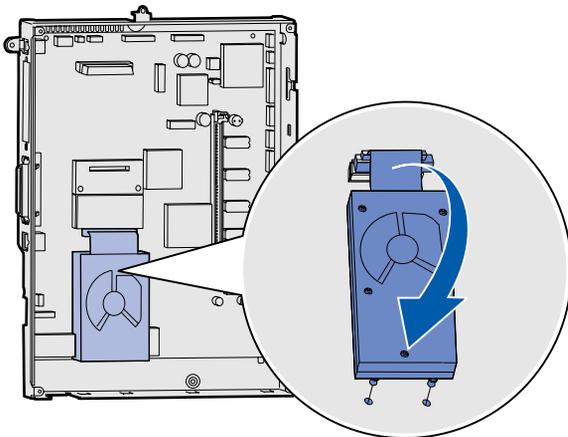

What do I do now?

Task	Go to page...
Installing an option card	28
Replacing the system board access cover	30


Installing an option card

Your printer has one expansion card slot that supports a number of option cards. The following table describes their function.

Card	Function
MarkNet internal print server	Adds an Ethernet or Token-Ring port so you can connect your printer to a network. Install a MarkNet™ N2501e or N2401e internal print server if you received either of these cards as part of a multifunction printer upgrade.
Parallel 1284-B Interface Card	Adds a parallel port.
Coax/Twinax Adapter for SCS	Adds a coaxial/twinaxial port.
Serial Interface Card	Adds a serial port.

Note: The network models ship with an Ethernet print server already installed.

You need a small Phillips screwdriver to install these options.

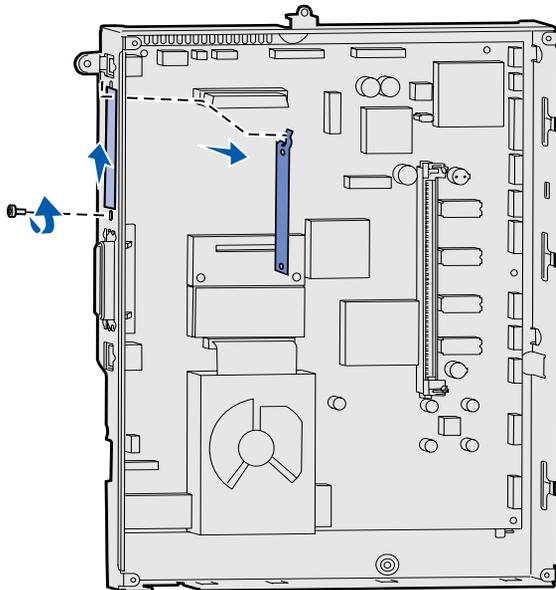


- 1 Remove the system board access cover (see Page 22).
- 2 Remove the screw from the metal plate that covers the connector slot, and then lift the plate off.

Save the screw.

- 3 Unpack the option card.
Save the packing materials.


Warning: Option cards are easily damaged by static electricity. Touch something metal on the printer before you touch an option card.

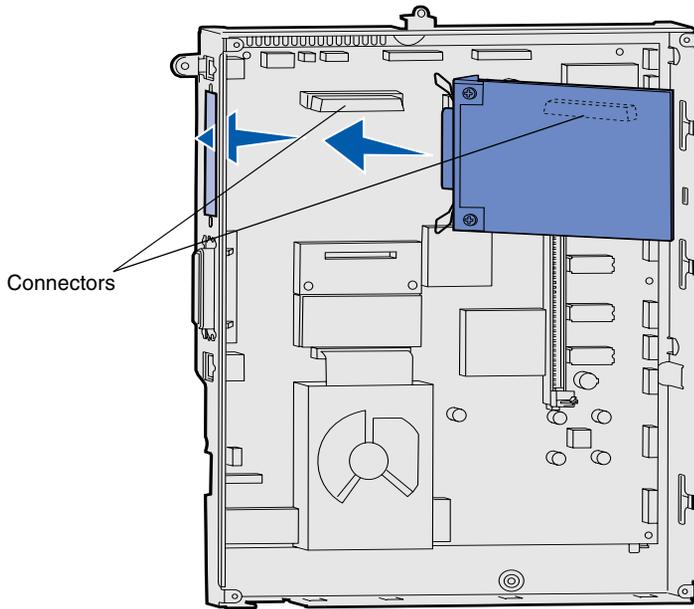

- 4 Align the connector on the option card with the connector on the system board.


The cable connectors on the side of the option card must fit through the connector slot.

- 5 Push the option card firmly into the option card connector.

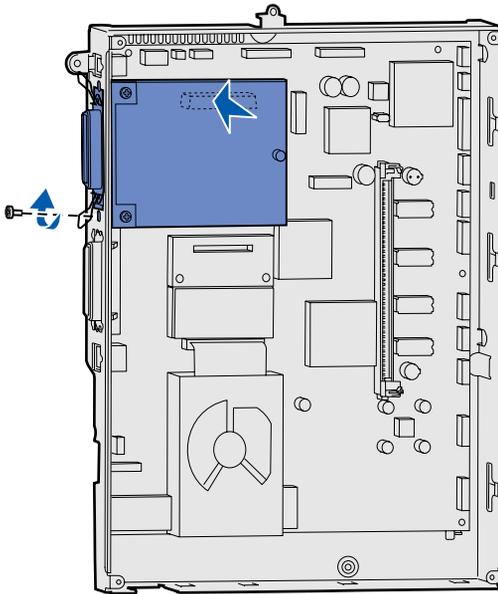

- 6 Secure the card to the system board with the screw.

Replacing the system board access cover

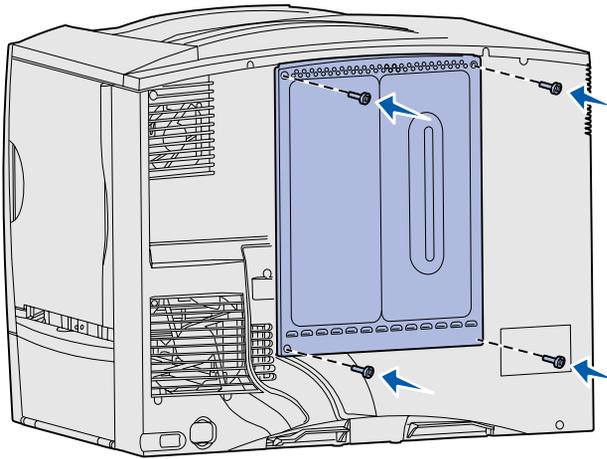


After you have finished installing cards on the printer system board, you must replace the system board access cover.

- 1** Align the slots at the top of the access cover with the screws near the top of the printer.
- 2** Slide the cover up under the top cover lip as far as it will go, and then tighten the screws at the top of the cover.
- 3** Insert and tighten the four screws to the bottom of the cover.

If you installed a firmware card in your printer, see the following section for information about applying the Option Added label.

Applying the Option Added label

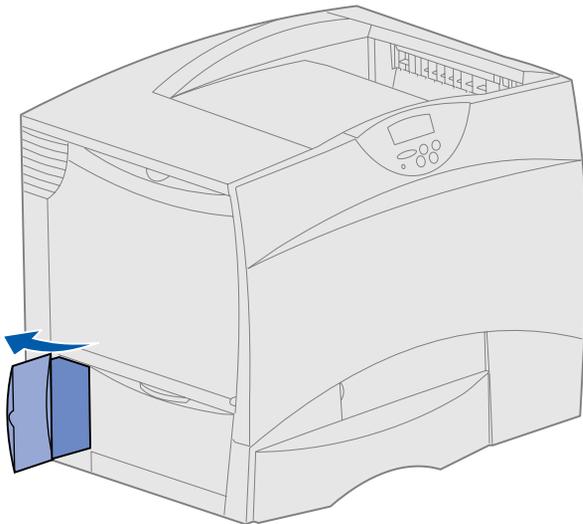

The Option Added label alerts service personnel that additional options have been installed in your printer.

Follow the instructions in this section to apply the Option Added label to your printer.

- 1** Remove the backing from the Option Added label.
- 2** Place the label on your printer next to the printer model and serial number label.

Step 5: Load paper

Note: When loading specialty media such as transparencies or card stock, refer to the *User's Reference* on the publications CD.

The following table lists page numbers where you can find loading instructions for the standard and optional trays, as well as for the multipurpose feeder.

Source	Paper sizes supported	Paper types supported	Capacity	Go to page...
500-sheet trays	Letter, A4, A5, Legal, Executive, JIS B5, Folio ^a , Statement ^a , Universal ^{b,c}	Paper, transparencies, labels, card stock	<ul style="list-style-type: none"> • 500 sheets of 20 lb paper • 350 transparencies^e • 200 sheets of labels or card stock^{d,e} 	32
2000-sheet tray	Letter, A4, A5, Legal, Executive, JIS B5	Paper	<ul style="list-style-type: none"> • 2000 sheets of 20 lb paper 	34
Multipurpose feeder	Letter, A4, A5, Legal, Executive, JIS B5, Folio, Statement, Universal ^{b,c}	Paper, transparencies, labels, card stock	<ul style="list-style-type: none"> • 100 sheets of 20 lb paper • 75 transparencies^e • 40 sheets of labels or card stock^{d,e} 	36
	7¼, 9, 10, DL, C5, B5, other ^f	Envelopes	10 envelopes	

^a Supported as selected paper with tray size sensing turned off in the appropriate trays.

^b When selected, the page is formatted for 215.9 x 355.6 mm (8.5 x 14 in.) unless otherwise specified.

^c Load narrow media with the length in the feed direction (portrait).

^d If you print large quantities of labels or other glossy specialty media, replace the fuser housing with a web oiler field upgrade kit. Refer to the publications CD for more information.

^e Capacity varies with media weight and construction.


^f Size can vary from 98.4 x 62 mm to 176 x 250 mm (3.87 x 6.38 in. to 6.93 x 9.84 in.).

Loading the 500-sheet trays

Warning: Never remove paper trays while a print job is printing. It could damage the tray or the printer.

Follow these instructions to load any of the 500-sheet trays.


1 Remove the tray.

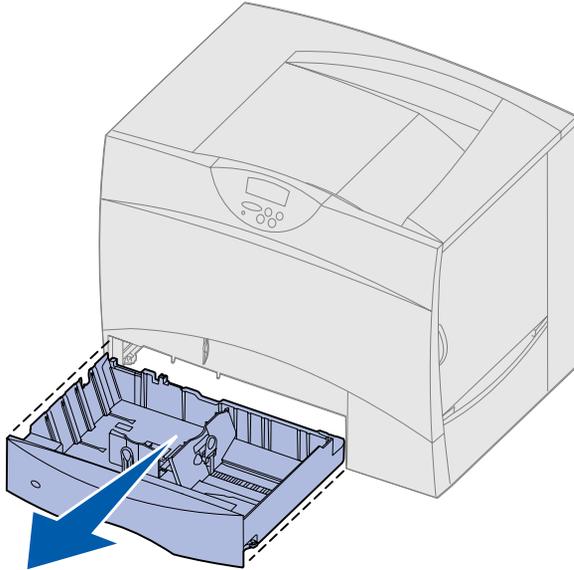


2 Squeeze the front guide lever and slide the guide to the front of the tray.

3 Squeeze the side guide lever and slide the guide to the correct position for the size paper you are loading.

Icons along the back of the tray indicate paper sizes.

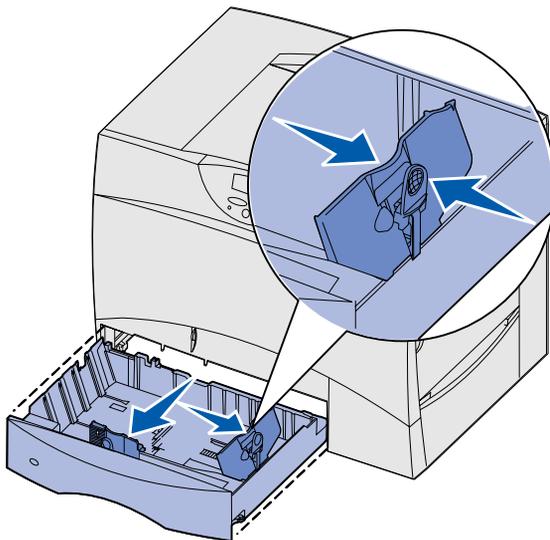

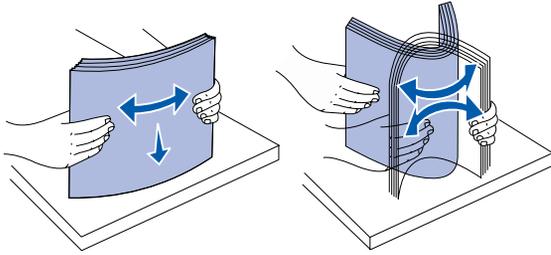


- 4 Flex the sheets back and forth to loosen them, and then fan them.


Do not fold or crease the paper. Straighten the edges of the stack on a level surface.

- 5 Place the paper against the back left corner of the tray, print side down.

Do not load bent or wrinkled paper.

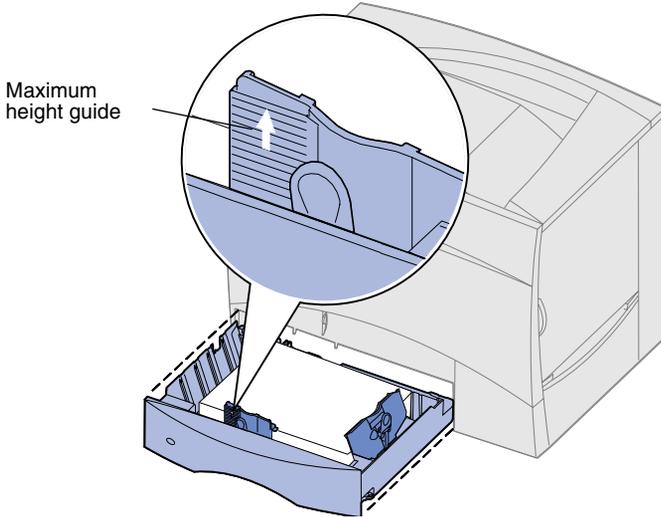

Note: Do not exceed the maximum stack height indicated on the front guide. Overfilling the tray may cause jams.

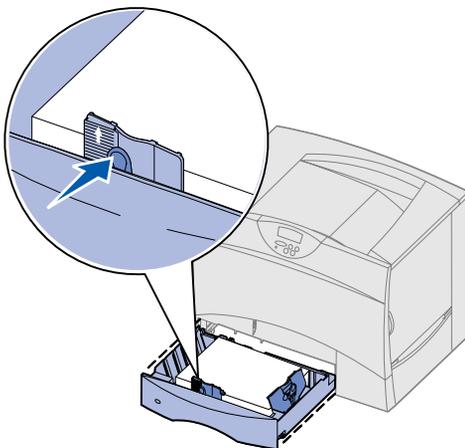

- 6 Squeeze the front guide lever and slide the guide until it firmly touches the stack of paper.


- 7 Reinstall the tray.

Make sure the tray is pushed completely into the printer.


Loading the 2000-sheet tray

Follow these instructions to load a 2000-sheet tray. *Do not load any print media other than paper in the 2000-sheet tray.*


1 Pull open the tray.

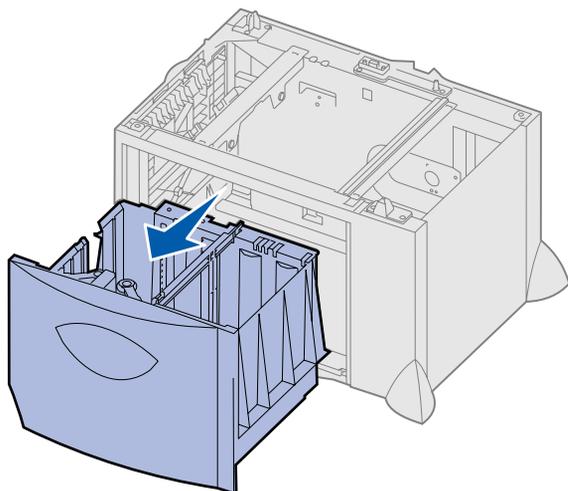


2 Squeeze the side guide lever, lift the guide, and place it into the appropriate slot for the size paper you are loading.

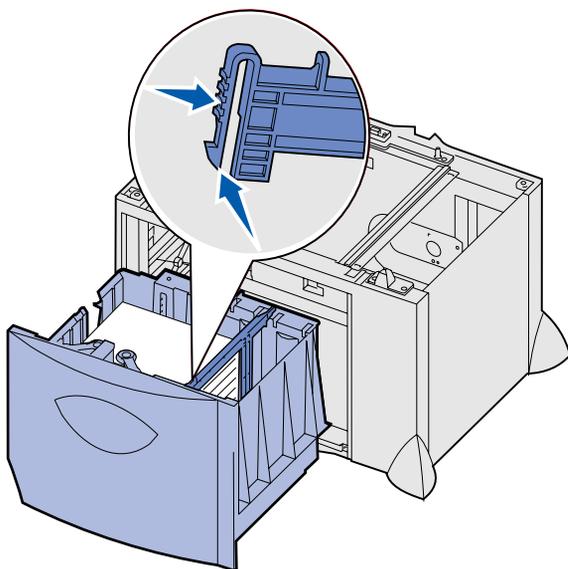


Load paper

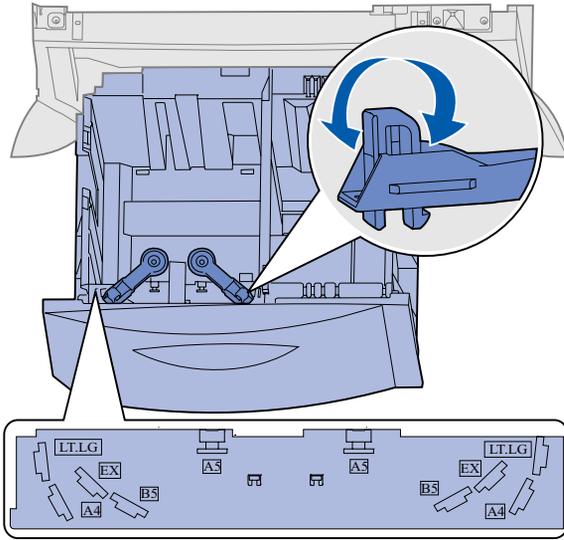

- 3 Squeeze the two front guide levers and slide the guide to the correct position for the size paper you are loading.

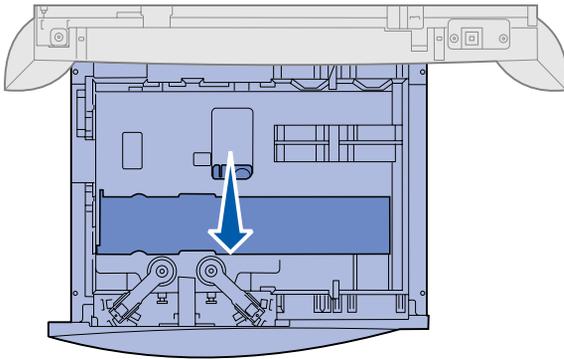


- 4 Slide the bottom support toward the front of the tray until it touches the front guide.

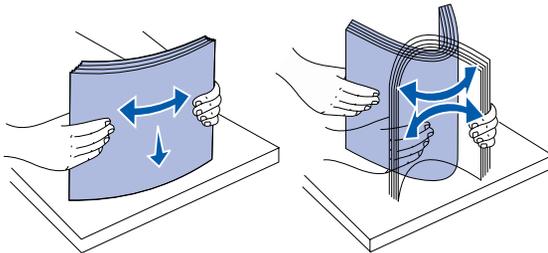

- 5 Flex the sheets back and forth to loosen them, and then fan them.

Do not fold or crease the paper. Straighten the edges of the stack on a level surface.

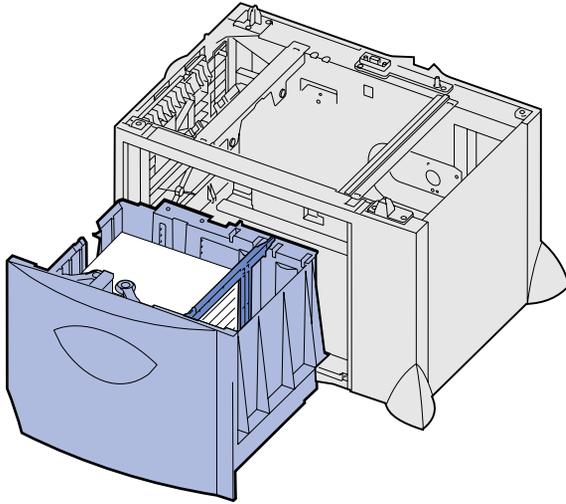

- 6 Place the paper against the back left corner of the tray, print side down.


Do not load bent or wrinkled paper.

- 7 Close the tray.

Make sure the tray is pushed completely into the printer.

Note: Do not exceed the maximum stack height. Overfilling the tray may cause jams.

Loading the multipurpose feeder


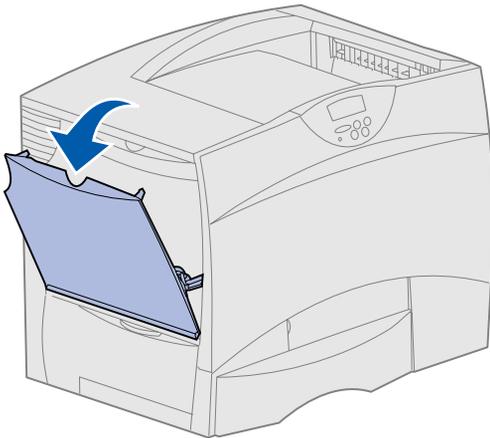


You can use the multipurpose feeder one of two ways:

- **Paper tray**—As a paper tray, you can load paper in the feeder with the intention of leaving it in the feeder.
- **Manual bypass feeder**—As a manual bypass feeder, you send a print job to the feeder while specifying the type and size of media from your computer. The printer then prompts you to load the appropriate paper or specialty media before it prints.


Follow these instructions to load the multipurpose feeder.

- 1** Open the multipurpose feeder.
- 2** Squeeze the paper guide lever and slide the guide all the way toward the front of the printer.

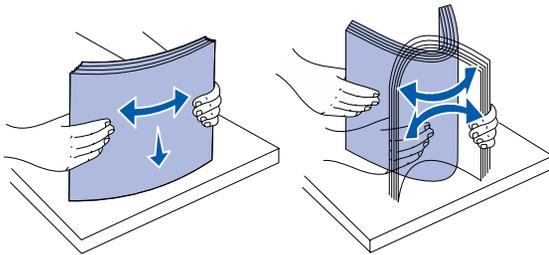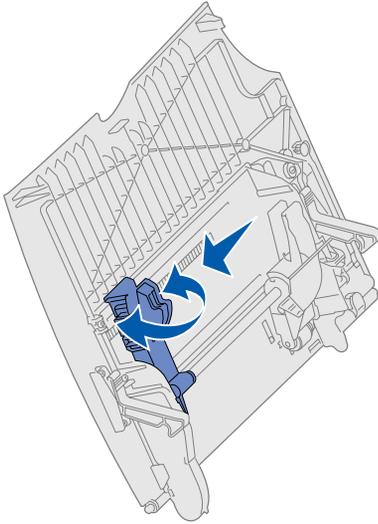

- 3** Flex the sheets back and forth to loosen them, and then fan them.


Do not fold or crease the paper or specialty media. Straighten the edges of the stack on a level surface.

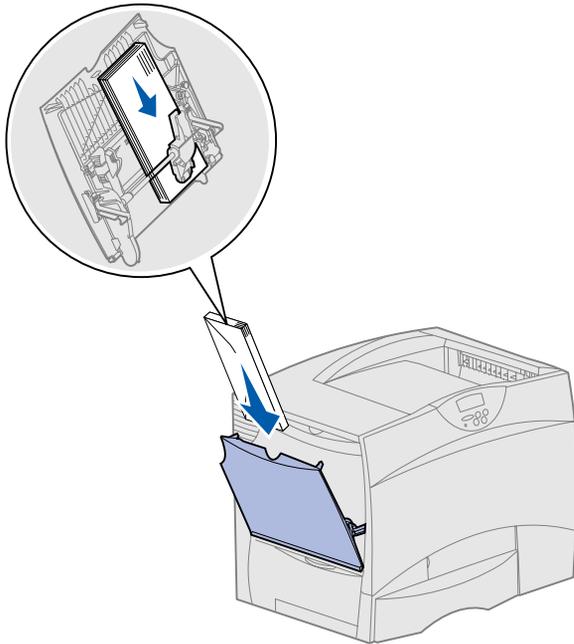

- 4 Arrange the stack of paper or specialty media correctly for the size, type, and print method you are using.
- 5 Place the paper or specialty media, print side up, along the left side of the multipurpose feeder, and then push it in as far as it will easily go.

Do not force the paper or specialty media.

Note: Do not exceed the maximum stack height. Overfilling the feeder may cause jams.

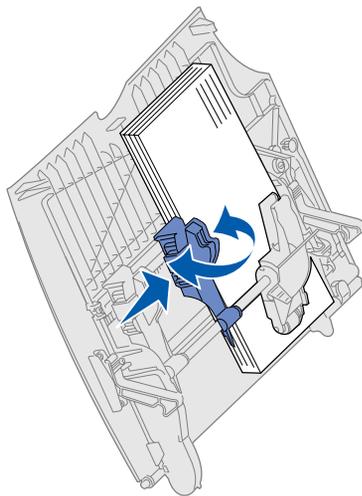

- 6 Squeeze the paper guide lever and slide the guide until it lightly touches the side of the stack.

Step 6: Attach cables and power cord


CAUTION: Do not connect or disconnect a communication port, a teleport, or any other connector during a lightning storm.

The printer can be attached to a network or directly to a computer to print locally.

Attaching a local cable

You can attach your printer locally using either a USB, parallel, or serial connection.

USB

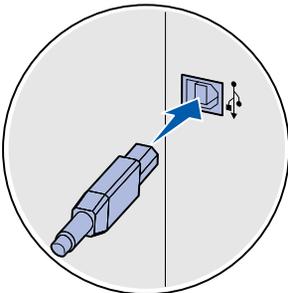

Be sure to match the USB symbol on the cable to the USB symbol on the printer.


A USB port is standard on all models.

Windows 98 SE, Windows Me, Windows 2000, Windows XP, and Windows Server 2003 operating systems support USB connections. Some UNIX, Linux, and Macintosh computers also support USB connections. Refer to your computer operating system documentation to see if your system supports USB.

To attach the printer to a computer:


- 1 Connect the printer to the computer using a USB cable.

A USB port requires a USB cable such as Lexmark part number 12A2405 (2 m [6.5 ft]). Be sure to match the USB symbol on the cable to the USB symbol on the printer.

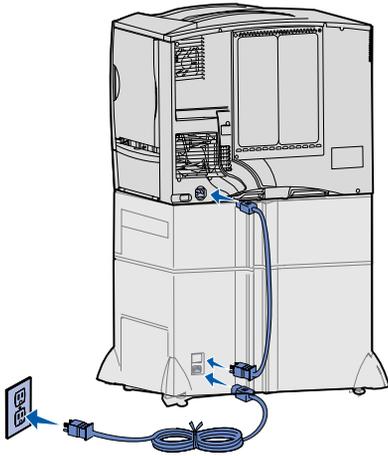

- 2 Plug one end of the printer power cord into the socket at the back of the printer and the other end into a properly grounded outlet.

If you installed an optional 2000-sheet drawer, plug the printer power jumper cord into the back of the drawer, and then plug the drawer's cord into a properly grounded outlet.

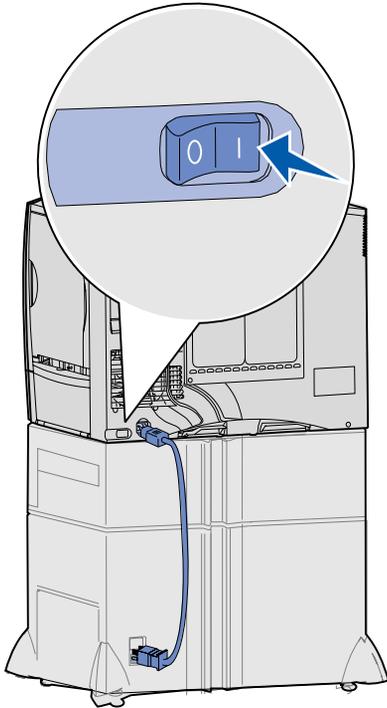

- 3 Turn on your printer.

After the printer completes its internal tests, the **Ready** message indicates that the printer is ready to receive jobs.

If you see a message other than **Ready** on the display, refer to the publications CD for instructions on clearing the message. Look for information about understanding printer messages.

- 4 Go on to “Install drivers for local printing” on page 44.

Parallel

A parallel port is standard on the base model and is available on an option card for network models. See “Installing an option card” on page 28 for more information.

If you install an optional Parallel Interface Card in any of the network models, you need a 1284 A-C parallel cable, such as Lexmark part number 11K4078 (6 ft).

To attach the printer to a computer:

- 1 Connect the printer to the computer using a parallel cable.
- 2 Plug one end of the printer power cord into the socket at the back of the printer and the other end into a properly grounded outlet. (See the illustration on Page 40.)
- 3 Turn on your printer.
- 4 Go on to “Install drivers for local printing” on page 44.

Serial

If you have installed an optional Serial Interface Card, you can locally attach the printer with a serial cable. With serial printing, data is transferred one bit at a time. Although serial printing is usually slower than parallel printing, it is the preferred option when there is a great deal of distance between your printer and computer or a parallel interface is not available.


A serial port requires a compatible serial cable such as Lexmark part number 1038693 (50 ft).

To attach the printer to a computer:


- 1 Connect the printer to the computer using a serial cable.
- 2 Plug one end of the printer power cord into the socket at the back of the printer and the other end into a properly grounded outlet. (See the illustration on Page 40.)
- 3 Turn on your printer.
- 4 Launch the drivers CD and click **View Documentation** for instructions to set up for serial printing.

Attaching a network cable

Ethernet

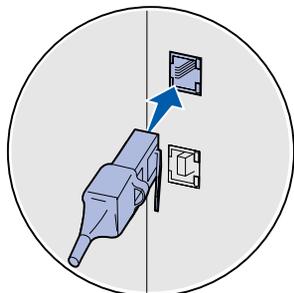

Use Category 5 cable with an RJ-45 connector for the standard network port.

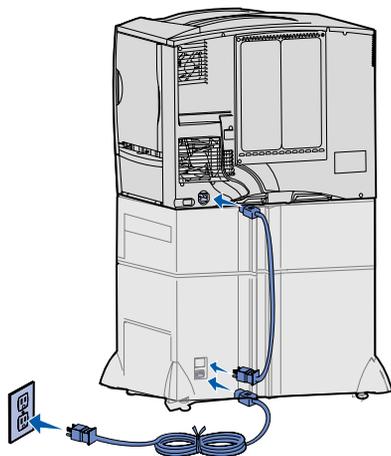

You can attach your printer to a network using standard network cables.


A 10BaseT/100BaseTx Fast Ethernet port is standard on the network model.

To attach the printer to a network:

- 1 Make sure the printer is turned off and unplugged.
- 2 Connect the printer to a LAN drop or hub using standard cabling that is compatible with your network. The printer automatically adjusts for the network speed.

- 3 Plug one end of the printer power cord into the socket at the back of the printer and the other end into a properly grounded outlet.

If you installed an optional 2000-sheet drawer, plug the printer power jumper cord into the back of the drawer, and then plug the drawer's cord into a properly grounded outlet.

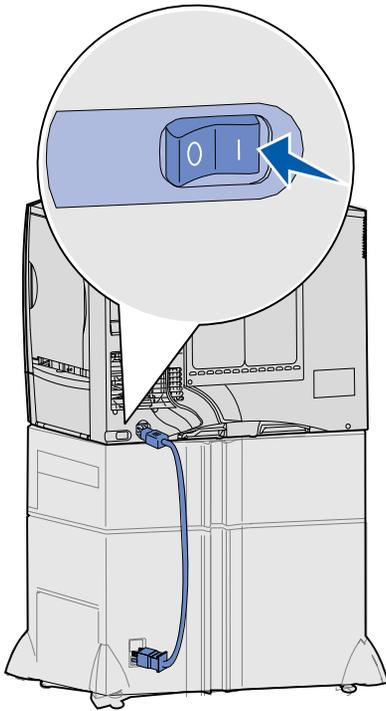

4 Turn on your printer.

After the printer completes its internal tests, the **Ready** message indicates that the printer is ready to receive jobs.

If you see a message other than **Ready** on the display, refer to the publications CD for instructions on clearing the message. Look for information about understanding printer messages.

5 Turn on your computer and any other peripherals.

6 Continue with “Verify printer setup” on page 52.

Fiber optic

Fiber optic is a type of Ethernet, but uses different cables. Various fiber optic Ethernet ports are available on optional MarkNet print server cards that can be installed in your printer.

If you purchased a fiber optic option card, see “Installing an option card” on page 28 for hardware instructions.

802.11b wireless options

Your printer can be converted to wireless networking by using an optional 802.11b Wireless Print Adapter. This adapter is a piece of hardware that plugs into the Ethernet port on your printer.

If you purchased this adapter for your printer, refer to the documentation that shipped with the adapter for installation and configuration.

Attach cables and power cord

Step 7: Install drivers for local printing

Note: For Windows operating systems, you can skip the hardware wizard and use the drivers CD to install your printer drivers. Launch the CD and follow the instructions to install printer software.

A local printer is a printer attached to your computer using a USB or parallel cable. *If your printer is attached to a network instead of your computer, skip this step and go to Step 8: “Verify printer setup” on page 52.*

A printer driver is software that lets your computer communicate with your printer. The procedure to install drivers depends on the operating system you are using.

Select your operating system and cable from the following table to find driver installation instructions.

Operating system	Cable	Go to page...
Windows XP; Windows Server 2003	USB* or Parallel	45
Windows 2000	USB* or Parallel	46
Windows Me	USB* or Parallel	46
Windows 98	USB* or Parallel	47
Windows NT 4.x	Parallel only	48
Windows 95	Parallel only	48
Macintosh	USB only	49
UNIX/Linux	USB or Parallel	51

* If you attach a USB printer cable while your printer and computer are turned on, the Windows hardware wizard launches immediately. Find the instructions for your operating system and use them to answer the plug and play screens.

Windows

Before you install

Note: Installing a custom driver will not replace the system driver. A separate printer object will be created and appear in the Printers folder.

Using Windows XP or Windows Server 2003 with USB or parallel cable

Note: Business versions of Windows XP require that you have administrative access in order to install printer drivers on your computer.

In addition to the following driver installation instructions, you may need to refer to the documentation that shipped with your computer and your Windows software.

Some versions of Windows software may already have a system printer driver for this printer included. This may mean that installation will seem automatic in later versions of Windows. System drivers work well for simple printing, but they contain less functionality than our enhanced custom driver.

To obtain all the features of the custom driver, you will need to install the custom printer driver using the drivers CD that shipped with the printer.

Drivers are also available in downloadable software packages on our Lexmark Web site at www.lexmark.com.

When the Found New Hardware Wizard screen appears:

- 1** Insert the drivers CD. If the CD auto launches, exit the CD. Click **Next**.
- 2** Browse to the location of the printer driver on the drivers CD:
`D:\drivers\win_2000\`
- 3** Click **Next**.
- 4** Disregard the next two messages and click **Continue Anyway**. Your printer has been thoroughly tested and is compatible with Windows XP and Windows Server 2003. The wizard copies all of the necessary files and installs the printer driver.
- 5** Click **Finish** when the software is installed.
- 6** Print a test page to verify printer setup.

Using Windows 2000 with USB or parallel cable

Note: You need administrative access to install printer drivers on your computer.

Using Windows Me with USB or parallel cable

Note: Depending on the software and printers already installed on your computer, your screens may vary from those in the instructions.

When the Found New Hardware Wizard screen appears:

- 1 Insert the drivers CD. If the CD auto launches, exit the CD. Click **Next**.
- 2 Select **Search for a suitable driver**, and then click **Next**.
- 3 Select *only* **Specify a location**, and then click **Next**.
- 4 Browse to the location of the printer driver on the drivers CD.
`D:\Drivers\Win_2000\`
- 5 Click **Open**, and then click **OK**.
- 6 Click **Next** to install the driver that is displayed. *It is okay to disregard the message that the driver is not digitally signed.*
- 7 Click **Finish** when the software is installed.
- 8 Print a test page to verify printer setup.

You must install both a USB port driver and an enhanced custom print driver.

When the Found New Hardware Wizard screen appears:

- 1 Insert the drivers CD. If the CD auto launches, exit the CD. Click **Next**.
- 2 Select **Automatic search for the best driver (recommended)**, and then click **Next**. The wizard searches for a USB port driver. The name of it will be similar to your printer name.
- 3 After the USB port driver is found, click **Finish**.
- 4 Select **Automatic search for the best driver (recommended)**, and then click **Next**. The wizard now searches for a printer driver.
- 5 Select your printer and driver from the list, and then click **OK**. Make sure you select the driver in the correct language you want to use.
`D:\Drivers\WIN_9X\<LANGUAGE>`
- 6 After the printer driver is installed, click **Finish**.
- 7 Use the default printer name or type a unique name for your printer, and then click **Next**.

Install drivers for local printing

- 8 Click **Yes (recommended)**, and then click **Finish** to print a test page.
- 9 After the test page prints, click **Yes** to close the window.
- 10 Click **Finish** to complete the installation and close the wizard. You are now ready to print.

Using Windows 98 with a USB or parallel cable

Note: Depending on the software and printers already installed on your computer, your screens may vary from those in the instructions.

You must install both a USB port driver and an enhanced custom print driver.

When the Add New Hardware Wizard screen appears:

- 1 Insert the drivers CD, and then click **Next**. If the CD auto launches, exit the CD.
- 2 Select **Search for the best driver for your device (recommended)**, and then click **Next**.
- 3 Select *only* **CD-ROM drive**, and then click **Next**.
- 4 After the wizard finds the USB port driver, click **Next**.
- 5 After the USB port driver is installed, click **Finish**.
- 6 Click **Next**.
- 7 Select **Search for the best driver (Recommended)**, and then click **Next**.
- 8 Select to **Specify a location**.
- 9 Browse to the location of the printer driver on the drivers CD.
`D:\Drivers\WIN_9X\<language>`
- 10 Click **OK**.
- 11 After the printer driver is found, click **Next**.
- 12 Use the default printer name or type a unique name for your printer, and then click **Next**.
- 13 Select **Yes** to print a test page, and then click **Finish**. All the necessary files are installed on your computer.
- 14 After the test page prints, click **Yes** to close the message window.
- 15 Click **Finish** to complete the installation. You are now ready to print.

Install drivers for local printing

Using Windows NT with a parallel cable

Note: USB support is not available for Windows NT operating systems.

Note: You need administrative access to install printer drivers on your computer.

Using Windows 95 with a parallel cable

Note: USB support is not available for Windows 95 operating systems.

The easiest way to install a driver is to use the drivers CD that shipped with your printer.

- 1 Insert the drivers CD.
- 2 Click **Install Printer and Software**.
- 3 Click **Printer**.
- 4 Click **Agree** to accept the license agreement.
- 5 Select **Quick Install**, and then click **Next**.
- 6 Select the port you want to use, and then select the printer you are installing.
- 7 Click **Finish** to complete the installation. You are now ready to print.

When the Update Device Driver Wizard screen appears:

- 1 Insert the drivers CD. If the CD auto launches, exit the CD.
If a system-compatible driver is found on your operating system, the Wizard installs it.
*If no compatible system driver is found on your operating system, click **Other Locations**.*
- 2 Browse to the location of the printer driver on the drivers CD:
`D:\drivers\win_9x\english`
- 3 Click **OK**.
- 4 Click **Finish**. The Add Printer Wizard screen appears.
- 5 Use the default printer name or type a unique name for your printer, and then click **Next**.
- 6 Click **Yes** to print a test page.
- 7 Click **Finish**. A test page is sent to the printer once the driver files are copied to your computer. You are now ready to print.

Macintosh

Macintosh OS 8.6 or later is required for USB printing. To print locally to a USB-attached printer, you must create a desktop printer icon (Macintosh 8.6–9.x) or create a queue in Print Center (Macintosh OS X).

Creating a desktop printer icon (Macintosh 8.6–9.x)

Note: A PPD file provides detailed information about the capabilities of a printer to your Macintosh computer.

Note: A PPD for your printer is also available in a downloadable software package on our Lexmark Web site at www.lexmark.com.

- 1** Install a printer PostScript Printer Description (PPD) file on your computer.
 - a** Insert the drivers CD.
 - b** Double-click **Classic**, and then double-click the installer package for your printer.
 - c** Choose the language you want to use, and then click **OK**.
 - d** Click **Accept** after you read the license agreement.
 - e** Click **Continue** after you finish with the Readme file.
 - f** Choose a default paper size.
 - g** On the Easy Install screen, click **Install**. All the necessary files are installed on your computer.
 - h** Click **Quit** when installation is complete.
- 2** Do one of the following:
 - Macintosh 8.6 – 9.0:* Open **Apple LaserWriter**.
 - Macintosh 9.1 – 9.x:* Open **Applications**, and then click **Utilities**.
- 3** Double-click **Desktop Printer Utility**.
- 4** Select **Printer (USB)**, and then click **OK**.
- 5** In the USB Printer Selection section, click **Change**.

If your printer does not appear in the USB Printer Selection list, make sure the USB cable is properly connected and the printer is turned on.
- 6** Select the name of your printer, and then click **OK**. Your printer appears in the original Printer (USB) window.
- 7** In the PostScript Printer Description (PPD) File section, click **Auto Setup**. Make sure your printer PPD now matches your printer.
- 8** Click **Create**, and then click **Save**.

Install drivers for local printing

Creating a queue in Print Center (Macintosh OS X)

Note: A PPD file provides detailed information about the capabilities of a printer to your Macintosh computer.

Note: A PPD for your printer is also available in a downloadable software package on our Lexmark Web site at www.lexmark.com.

9 Specify a printer name, and then click **Save**. Your printer is now saved as a desktop printer.

1 Install a printer PostScript Printer Description (PPD) file on your computer.

a Insert the drivers CD.

b Double-click **Mac OS X**, and then double-click the installer package for your printer.

c On the Authorization screen, choose **Click the lock to make changes**.

d Enter your password, and then click **OK**.

e Click **Continue** on the Welcome screen and again after you view the Readme file.

f Click **Agree** to accept the license agreement.

g Select a Destination, and then click **Continue**.

h On the Easy Install screen, click **Install**. All the necessary files are installed on your computer.

i Click **Close** when installation is complete.

2 Open Finder, click **Applications**, and then click **Utilities**.

3 Double-click **Print Center**.

4 Do one of the following:

If your USB-attached printer appears in the Printer List, you can quit Print Center. A queue has been created for your printer.

If your USB-attached printer does not appear in the Printer List, make sure the USB cable is properly connected and the printer is turned on. After the printer appears in the Printer List, you can quit Print Center.

UNIX/Linux

Local printing is supported on many UNIX and Linux platforms, such as Sun Solaris and Red Hat.

The Sun Solaris and Linux packages are available on the drivers CD and on our Lexmark Web site at www.lexmark.com. The *User's Guide* in each package gives detailed instructions for installing and using Lexmark printers in UNIX and Linux environments.

All the printer driver packages support local printing using a parallel connection. The driver package for Sun Solaris supports USB connections to Sun Ray appliances and Sun workstations.

Visit our Lexmark Web site at www.lexmark.com for a complete list of supported UNIX and Linux platforms.

What do I do next?

Task	Go to page...
After you have installed the printer driver on your computer, you are set up to print to a local printer. <i>We recommend that you also complete "Verify printer setup."</i>	52

Step 8: Verify printer setup

Note: This is also a good time to print *Quick Reference and Clearing Jams information*. See “*Printing Quick Reference information*” on page 53.

To verify printer setup, you should print the setup pages. Setup pages list all the options you purchased or installed. If a feature or an option is not listed, you may need to check your installation.

The network setup page provides information that is needed if you are attaching your printer to a network.

Printing a menu settings page

Note: For more information about using the printer operator panel and changing menu settings, refer to the publications CD.

Print a menu settings page to review the default printer settings and to verify that printer options are installed correctly.


- 1 Make sure the printer is on.
- 2 Press **Menu** until you see Utilities Menu, and then press **Select**.
- 3 Press **Menu** until you see Print Menus, and then press **Select** to print the page.

The message **Printing Menus** appears on the display.

- 4 Verify that the options you installed are correctly listed under “Installed Features.”

If an option you installed is not listed, turn the printer off, unplug the power cord, and reinstall the option.

- 5 Verify the amount of memory installed is correctly listed under “Printer Information.”
- 6 Verify that the paper trays are configured for the sizes and types of paper you loaded.

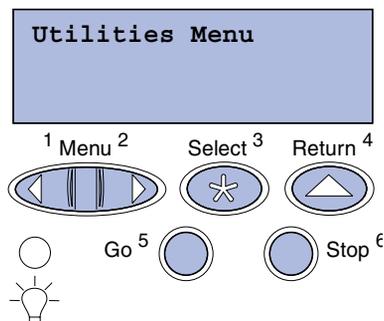

Printing a network setup page

Note: If an optional MarkNet print server is installed, you see Print Net1 Setup on the display.

If the printer is attached to a network, print a network setup page to verify the network connection. This page also provides important information that helps you configure for network printing.

- 1 Make sure the printer is on.
- 2 Press **Menu** until you see Utilities Menu, and then press **Select**.
- 3 Press **Menu** until you see Print Net Setup, and then press **Select**. The network setup page prints and the printer returns to **Ready** status.
- 4 Check the first section on the network setup page and confirm that Status is “Connected.”

If Status is “Not Connected,” your LAN drop may not be active or your network cable may be malfunctioning. Consult your network support person for a solution, and then print another network setup page to verify that you are connected to your network.

Save the network setup page. You will use it in the other steps.

Printing Quick Reference information

Information about using the printer and clearing jams is included on the publications CD that shipped with your printer documentation.

We recommend you print this information and store it in a convenient location near the printer.

To print Quick Reference information stored on the CD:

- 1 Launch the CD.
- 2 Click Quick Reference.
- 3 Print the documents.

To print Quick Reference pages stored in the printer:

- 1 Make sure the printer is on.
- 2 On the operator panel, press **Menu** until you see Help Menu.
- 3 Press **Menu** until you see the topic you want to print, and then press **Select**.

Verify printer setup

Step 9: Configure for TCP/IP

If you have TCP/IP available on your network, we recommend that you assign an IP address to the printer.

Assigning a printer IP address

Note: Instructions for other methods of setting the IP address are in the online documentation on the drivers CD that shipped with your printer. Launch the CD, click **View Documentation** ▶ **Network Printer Install**.

If your network is using DHCP, an IP address is automatically assigned after you connect the network cable to the printer.

- 1 Look for the address under the “TCP/IP” heading on the network setup page you printed in “Printing a network setup page” on page 53.
- 2 Go to “Verifying the IP settings” on page 55 and begin with step 2.

If your network is not using DHCP, then you must manually assign an IP address to the printer.

One of the easiest ways is to use the operator panel:

- 1 Press **Menu** until you see Network Menu, and then press **Select**.
- 2 Press **Menu** until you see Standard Network, and then press **Select**.

Standard Network appears if you purchased a printer with a network port on the printer system board. If you have a MarkNet print server installed in the option card, you see Network Option 1.

- 3 Press **Menu** until you see Std Net Setup (or Network 1 Setup), and then press **Select**.
- 4 Press **Menu** until you see TCP/IP, and then press **Select**.
- 5 Press **Menu** until you see Set IP Address, and then press **Select**.
- 6 Change the address by pressing **Menu** to increase or decrease each number. Press **Select** to move to the next segment. Press **Select** when you are finished.

The message **saved** appears briefly.

Configure for TCP/IP

- 7 Press **Menu** until you see Set IP Netmask, and then press **Select**.
- 8 Repeat step 6 to set the IP Netmask.
- 9 Press **Menu** until you see Set IP Gateway, and then press **Select**.
- 10 Repeat step 6 to set the IP Gateway.
- 11 When you are finished, press **Go** to return the printer to the Ready state.

Verifying the IP settings

Note: On Windows computers, click Start ▶ Programs ▶ Command prompt (or Accessories ▶ Command prompt if using Windows 2000).

- 1 Print another network setup page. Look under the “TCP/IP” heading and make sure the IP address, netmask, and gateway are what you expected. See “Printing a network setup page” on page 53 if you need help.
- 2 Ping the printer and verify that it responds. For example, at a command prompt on a network computer, type “ping” followed by the new printer IP address (for example, 192.168.0.11):

```
ping 192.168.0.11
```

If the printer is active on the network, you receive a reply.

Configuring for Pull Printing

If your printer has an optional Lexmark ImageQuick™ firmware card installed, you can configure for Pull Printing once an IP address is assigned to the printer.

For detailed configuration instructions, refer to the CD that shipped with the Lexmark ImageQuick card.

Step 10: Install drivers for network printing

After you have assigned and verified the TCP/IP settings, you are ready to install the printer on each network computer.

Windows

In Windows environments, network printers can be configured for direct printing or shared printing. Both network printing methods require the installation of a printer driver and the creation of a network printer port.

Supported printer drivers

- Windows system printer driver
- Lexmark custom printer driver

System drivers are built into Windows operating systems. Custom drivers are available on the drivers CD.

Updated system and custom drivers are available on our Lexmark Web site at www.lexmark.com.

Supported network printer ports


- Microsoft IP port—Windows NT 4.0, Windows 2000, Windows XP, and Windows Server 2003
- Lexmark network port—Windows 95/98/Me, Windows NT 4.0, Windows 2000, Windows XP, and Windows Server 2003

For basic printer functionality, you can install a system printer driver and use a system network printer port, such as an LPR or a Standard TCP/IP port. The system printer driver and port let you maintain a consistent user interface for use with all the printers on your network. However, using a custom printer driver and network port provides enhanced functionality, such as printer status alerts.

Follow the steps for your printing configuration and operating system to configure your network printer:

Printing configuration	Operating system	Go to page...
<p>Direct</p> <ul style="list-style-type: none"> Printer is connected directly to the network using a network cable, such as Ethernet. Printer drivers are typically installed on each network computer. 	Windows 95/98/Me, Windows NT 4.0, Windows 2000, Windows XP, or Windows Server 2003	57
<p>Shared</p> <ul style="list-style-type: none"> Printer is connected to one of the computers on the network using a local cable, such as USB. Printer drivers are installed on the computer attached to the printer. During driver installation, the printer is set up to be "shared" so that other network computers can print to it. 	Windows NT 4.0, Windows 2000, Windows XP, or Windows Server 2003	58

Direct printing using Windows 95/98, Me, Windows NT 4.0, Windows 2000, Windows XP, and Windows Server 2003

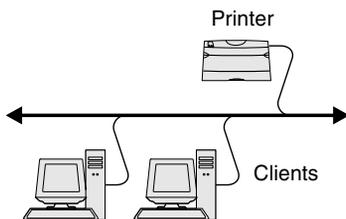


To install a custom printer driver and network port:

- 1** Launch the drivers CD.
- 2** Click **Install Printer and Software**.
- 3** Click **Printer**.
- 4** Click **Agree** to accept the license agreement.
- 5** Select **Quick install**, and then click **Next**.
- 6** Click **Create new port**.
- 7** Click **Add Port**.
- 8** Select **Lexmark TCP/IP Network Port**, and then click **Add**.
- 9** Enter the information to create the port.
 - a** Assign a logical port name.

This can be any name that you associate with the printer, such as `color1-lab4`. After the port is created, this name appears in the list of available ports on the Method of Connection screen.

Note: If you don't know the IP address, print a network setup page and look under the TCP/IP heading. For help, see "Printing a network setup page" on page 53.

Shared printing from a server using Windows NT 4.0, Windows 2000, Windows XP, and Windows Server 2003

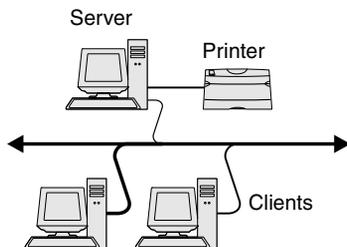

b Enter the IP address in the text box.

c Click **Add Port**.

10 Click **Done** until you return to the Method of Connection screen.

11 Select the newly-created port from the list, and then select the model of the printer you want to install.

12 Click **Finish** to complete the installation.

13 Print a test page to verify printer installation.

After connecting your printer to a Windows NT 4.0, Windows 2000, Windows XP, or Windows Server 2003 computer (which will act as a server), follow these steps to configure your network printer for shared printing:

Step 1: Install a custom printer driver

1 Launch the drivers CD.

2 Click **Install Printer and Software**.

3 Click **Printer**.

4 Click **Agree** to accept the license agreement.

5 Select **Quick install**, and then click **Next**.

6 Select the desired port from the list, and then select the model of the printer you want to install.

7 Click **Finish** to complete the installation.

8 Print a test page to verify printer installation.

Step 2: Share the printer on the network

1 Click **Start** ▶ **Settings** ▶ **Printers**.

2 Select the printer you just created.

3 Click **File** ▶ **Sharing**.

4 Check the **Shared** check box, and then enter a name in the **Shared Name** text box.

Note: If you are missing files, you may be prompted to provide the server operating system CD.

- 5 In the Alternate Drivers section, select the operating systems of all the network clients that will print to the printer.
- 6 Click **OK**.
- 7 Check the following to make sure the printer was successfully shared.
 - The printer object in the Printers folder now has a shared indicator. For example, in Windows NT 4.0, a hand appears under the printer object.
 - Browse Network Neighborhood. Find the host name of the server and look for the shared name you assigned to the printer.

Step 3: Install the printer driver (or subset) on network clients

Using the point and print method

Note: This method is usually the best use of system resources. The server handles driver modifications and the print job processing. This lets network clients return to applications much faster.

With this method, a subset of driver information is copied from the server to the client computer. This is just enough information to send a print job to the printer.

- 1 On the Windows desktop of the client computer, double-click **Network Neighborhood**.
- 2 Locate the host name of the server computer, and then double-click the host name.
- 3 Right-click the shared printer name, and then click **Install**.
- 4 Wait a few minutes for the driver information to be copied from the server computer to the client computer, and for a new printer object to be added to the Printers folder. The time this takes varies based on network traffic and other factors.
- 5 Close Network Neighborhood.
- 6 Print a test page to verify printer installation.

Using the peer-to-peer method

With this method, the printer driver is fully installed on each client computer. Network clients retain control of driver modifications. The client computer handles the print job processing.

- 1 Click **Start ▶ Settings ▶ Printers**.
- 2 Click **Add Printer** to launch the Add Printer wizard.

Note: If this is a new printer, you may be prompted to install a printer driver. If no system driver is available, then you will need to provide a path to available drivers.

- 3 Click **Network Print Server**.
- 4 Select the network printer from the Shared printers list. If the printer is not listed, enter the path of the printer in the text box.

The path will look similar to the following:

```
\\<server host name>\<shared printer name>
```

The server host name is the name of the server computer that identifies it to the network. The shared printer name is the name assigned during the server installation process.

- 5 Click **OK**.
- 6 Select whether you want this printer to be the default printer for the client, and then click **Finish**.
- 7 Print a test page to verify printer installation.

Macintosh

Note: A PostScript Printer Description (PPD) file provides detailed information about the capabilities of a printer to your UNIX or Macintosh computers.

To print to a network printer, each Macintosh user must install a custom PostScript Printer Description (PPD) file and either create a desktop printer on the computer (Mac OS 8.6 to 9.x) or create a print queue in Print Center (Mac OS X). Follow the instructions for your operating system:

Operating system	Go to page...
Mac OS 8.6 to 9.x	61
Mac OS X version 10.1.2 and later	62

Mac OS 8.6 to 9.x

Note: Installing the custom PPD is required only if this is the first time the printer has been set up. If the printer was previously installed, go on to “Step 2: Create a desktop printer” on page 61.

Step 1: Install a custom PPD file

- 1 Insert the drivers CD into your CD-ROM drive.
- 2 Double-click **Classic**.
- 3 Double-click the **Lexmark Installer** icon.
- 4 Select the language of your operating system, and then click **OK**.
- 5 Click **Install** to install the PPD file for your printer.

Step 2: Create a desktop printer

- 1 In the Chooser, select the **LaserWriter 8** driver.
- 2 If you have a routed network, select the default zone from the list. If you don't know which zone to select, look on the Network Setup page under AppleTalk for Zone.
- 3 Select the new printer from the list.
- 4 If you don't know which printer to select, look on the Network Setup page under the AppleTalk heading to find the default name of the printer.
- 5 Click **Create**.
- 6 Make sure there is an icon next to the printer name in the Chooser.
- 7 Close the Chooser window.
- 8 Verify printer installation.
 - a Click the desktop printer icon you just created.
 - b Choose **Printing** ▶ **Change Setup**.
 - If the PPD file displayed in the PostScript Printer Description (PPD) file portion of the menu is correct for your printer, printer setup is complete.
 - If the PPD file displayed in the PostScript Printer Description (PPD) file portion of the menu is not correct for your printer, repeat “Step 1: Install a custom PPD file” on page 62.

Mac OS X version 10.1.2 and later

Step 1: Install a custom PPD file

- 1 Insert the drivers CD into your CD-ROM drive.
- 2 Click **Mac OS X** ▶ **<language>**.
For example, **Mac OS X** ▶ **English**.
- 3 Double-click the installer icon for your printer to run the installer.

Step 2: Create a print queue in Print Center

- 1 Click **Applications** ▶ **Utilities** ▶ **Print Center**.
- 2 Click **Add Printer**.
- 3 Choose **AppleTalk** as your method of connection.
- 4 If you have a routed network, select the zone from the list. If you don't know which zone to select, look on the Network Setup page under AppleTalk for Zone.
- 5 Select the new printer from the list, and then click **Add**.
- 6 Verify printer installation:
 - a Click **Applications** ▶ **TextEdit**.
 - b Choose **File** ▶ **Print** ▶ **Summary**. The Summary window shows the PPD installed for your printer.
 - If the PPD file displayed in the Summary window is correct for your printer, printer setup is complete.
 - If the PPD file displayed in the Summary window is not correct for your printer, delete the print queue from Print Center and repeat "Step 1: Install a custom PPD file" on page 62.

Note: If you don't know which printer to select, look on the Network Setup page under the AppleTalk heading to find the default name of the printer.

UNIX/Linux

Note: The Sun Solaris and Linux packages are available on the drivers CD and on our Lexmark Web site at www.lexmark.com.

Your printer supports many UNIX and Linux platforms, such as Sun Solaris and Red Hat. Visit our Lexmark Web site at www.lexmark.com for a complete list of supported UNIX and Linux platforms.

Lexmark provides a printer driver package for each supported UNIX and Linux platform. The *User's Guide* in each package gives detailed instructions for installing and using Lexmark printers in UNIX and Linux environments.

You can download these packages from our Lexmark Web site. You may also find the driver package you need on the drivers CD.

NetWare

Your printer supports both Novell Distributed Print Services (NDPS) and regular queue-based NetWare environments. For the latest information about installing a network printer in a NetWare environment, launch the drivers CD and click **View Documentation**.

Step 11: Using the publications CD



Viewing and using the CD contents

Note: The publications CD is shipped inside the *Setup Guide*.

The *User's Reference* includes helpful information about using your printer and solving common printing problems. Copies of the *Setup Guide* and *Quick Reference* information are also on the CD.

We recommend that you print the quick reference and clearing jams information and store it near the printer for easy access when needed. See “*Printing Quick Reference information*” on page 53 for printing instructions.

You can also give the publications CD to a system administrator or the Help desk, or you can copy the entire contents of the CD (or just specific topics) to a shared network drive or intranet site.

Copies of the printer documentation are also available on our Lexmark website at www.lexmark.com.

Congratulations!

You are now ready to use your new printer. Save this book if you anticipate purchasing printer options in the future.