



Menus and Messages

March 2005

www.lexmark.com

Lexmark and Lexmark with diamond design are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

© 2005 Lexmark International, Inc.

All rights reserved.

740 West New Circle Road
Lexington, Kentucky 40550

Edition: March 2005

The following paragraph does not apply to any country where such provisions are inconsistent with local law: LEXMARK INTERNATIONAL, INC., PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions. Improvements or changes in the products or the programs described may be made at any time.

Comments about this publication may be addressed to Lexmark International, Inc., Department F95/032-2, 740 West New Circle Road, Lexington, Kentucky 40550, U.S.A. In the United Kingdom and Eire, send to Lexmark International Ltd., Marketing and Services Department, Westhorpe House, Westhorpe, Marlow Bucks SL7 3RQ. Lexmark may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you. You can purchase additional copies of publications related to this product by calling 1-800-553-9727. In the United Kingdom and Eire, call +44 (0)8704 440 044. In other countries, contact your point of purchase.

References in this publication to products, programs, or services do not imply that the manufacturer intends to make these available in all countries in which it operates. Any reference to a product, program, or service is not intended to state or imply that only that product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any existing intellectual property right may be used instead. Evaluation and verification of operation in conjunction with other products, programs, or services, except those expressly designated by the manufacturer, are the user's responsibility.

Lexmark and Lexmark with diamond design are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

Mac and the Mac logo are trademarks of Apple Computer, Inc., registered in the U.S. and other countries.

PCL[®] is a registered trademark of the Hewlett-Packard Company.

PostScript[®] is a registered trademark of Adobe Systems Incorporated.

Other trademarks are the property of their respective owners.

© 2005 Lexmark International, Inc.


All rights reserved.

UNITED STATES GOVERNMENT RIGHTS

This software and any accompanying documentation provided under this agreement are commercial computer software and documentation developed exclusively at private expense.

Contents


Using printer menus	4
Understanding the printer operator panel	5
Menu Groups	7
Supplies Menu	7
Paper Menu	9
Reports	15
Settings	17
Security	31
Network/Ports	32
Help	40
Understanding printer messages	41

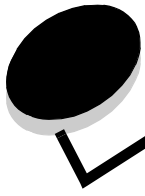

Using printer menus

A number of menus are available to make it easy for you to change printer settings. The diagram shows the menu index on the operator panel, the menus, and items available under each menu. The items in each menu and the values you can select are described in more detail later in this chapter.

Some menu items or values are displayed only if a specific option is installed on the printer. Other menu items may only be effective for a particular printer language. You can select these values at any time, but they only affect printer function when you have the optional equipment or the specified printer language.

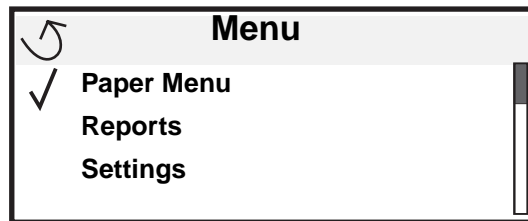

- Supplies Menu**
- Cyan Toner
 - Magenta Toner
 - Yellow Toner
 - Black Toner
 - Color Photo Dev
 - Black Photo Dev
 - Oil Coating Roll
 - Fuser
 - Transfer Belt
 - Staples
 - Hole Punch Box

- Paper Menu**
- Default Source
 - Paper Size/Type
 - Configure MP
 - Substitute Size
 - Paper Weight
 - Paper Loading
 - Custom Types
 - Universal Setup
 - Bin Setup

- Reports**
- Menu Settings Page
 - Device Statistics
 - Network Setup Page
 - Profiles List
 - NetWare Setup Page
 - Print Fonts
 - Print Directory

- Settings**
- Setup Menu
 - Finishing Menu
 - Quality Menu
 - Utilities Menu
 - PDF Menu
 - PostScript Menu
 - PCL Emul Menu
 - HTML Menu
 - Image Menu


- Security**
- Max Invalid PIN
 - Job Expiration

- Help**
- Print All
 - Color Quality
 - Print Quality
 - Supplies Guide
 - Media Guide
 - Menu Map
 - Information Guide
 - Connection Guide
 - Moving Guide




- Network/Ports**
- TCP/IP
 - IPv6
 - Standard Network and Network <x>
 - Standard USB and USB <x>
 - Parallel and Parallel <x>
 - Serial <x>
 - NetWare
 - AppleTalk
 - LexLink

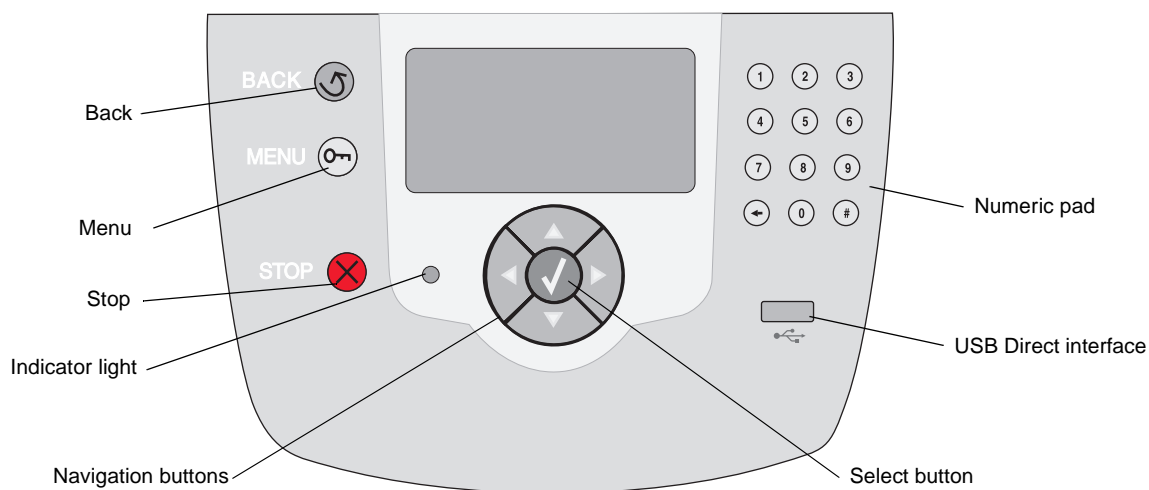



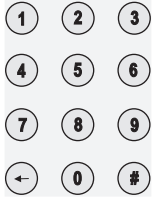
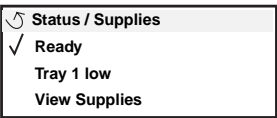
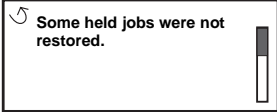

Understanding the printer operator panel

The printer operator panel is a 4-line, back-lit, gray scale display that can show both graphics and text. The Back, Menu, and Stop buttons are located to the left of the operator panel, the navigation buttons are located below the panel, and the numeric pad is located to the right of the panel.



The use of the buttons and the layout of the display panel is described in the following table.

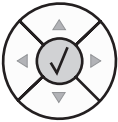Button	Function										
Back 	Press the Back button to return to the last screen viewed. Note: Changes made on a screen will not be applied if you press the Back button.										
Menu 	Press the Menu button to open the menu index. Note: The printer must be in the Ready state to access the menu index. A message indicating the menus are unavailable will appear if the printer is not ready.										
Stop 	Press the Stop button to stop the mechanical operation of the printer. After pressing Stop , the message stopping is displayed. When the printer has stopped, the status line in the operator panel will show stopped , and a list of options will appear.										
Indicator light	A two-toned LED is used on the operator panel, one color being green and the other being red. The lights indicate whether the printer power is on, the printer is busy, idle, processing a job, or requires operator intervention. <table border="0" style="width: 100%; margin-top: 10px;"> <thead> <tr> <th style="text-align: left;">Status</th> <th style="text-align: left;">Indicates</th> </tr> </thead> <tbody> <tr> <td>Off</td> <td>Power is off</td> </tr> <tr> <td>Solid green</td> <td>Printer is on, but idle</td> </tr> <tr> <td>Blinking green</td> <td>Printer is warming up, processing data, or printing a job.</td> </tr> <tr> <td>Solid red</td> <td>Operator intervention is required.</td> </tr> </tbody> </table>	Status	Indicates	Off	Power is off	Solid green	Printer is on, but idle	Blinking green	Printer is warming up, processing data, or printing a job.	Solid red	Operator intervention is required.
Status	Indicates										
Off	Power is off										
Solid green	Printer is on, but idle										
Blinking green	Printer is warming up, processing data, or printing a job.										
Solid red	Operator intervention is required.										

Button	Function
<p>Navigation buttons</p> 	<p>The Up and Down buttons are used to move up and down lists.</p>  <p>When navigating through a list using the Up or Down button, the cursor moves one line at a time. Pressing the Down button changes the screen to the next whole page.</p> <hr/> <p>The Left and Right buttons are used to move within a screen, such as moving from one menu index item to another. They are also used to scroll through text that will not fit on the screen.</p>  <hr/> <p>The Select button is used to initiate action on a selection. Press Select when the cursor is next to the selection you want, such as following a link, submitting a configuration item, or to start or cancel a job.</p> 
<p>USB Direct interface</p>	<p>The host USB Direct interface on the operator panel is used to plug in a USB flash memory device and print PDF files.</p> <p>Note: A USB port is located on the back of the printer to connect a PC or other peripheral.</p>
<p>Numeric pad</p> 	<p>The numeric pad consists of numbers, a pound (#) sign, and a backspace button. The 5 button has a raised bump for non-visual orientation.</p> <p>The numbers are used to enter numeric values for items like quantities or PINs. The backspace is used to delete the number to the left of the cursor. Pressing the backspace multiple times will delete additional entries.</p> <p>Note: The pound (#) sign is not used.</p>
<p>Display panel</p>  <p>Tell Me More screen</p>  <p>Show me screen</p> 	<p>The display panel shows messages and graphics describing the current state of the printer and indicating possible printer problems you must resolve.</p> <p>The top line of the display is the header line. If applicable, it will contain the graphic indicating the Back button can be used. It will also display the current status and the Supplies (Warnings) status. If multiple warnings are present, each warning will be separated by a comma.</p> <p>The other three lines of the display are the body of the screen. This is where you view printer status, supplies messages, Show me screens, and make selections.</p>

Menu Groups

Note: An asterisk (*) next to a value indicates the default setting.

Supplies Menu

Items listed under the Supplies Menu are view-only supply status options.

Menu selection	Purpose	Values	
Cyan Toner	Review cyan toner status.	Low	
		Invalid	
		Replace Cartridge	
		Missing or Defective	
		OK	
Magenta Toner	Review magenta toner status.	Low	
		Invalid	
		Replace Cartridge	
		Missing or Defective	
		OK	
Yellow Toner	Review yellow toner status.	Low	
		Invalid	
		Replace Cartridge	
		Missing or Defective	
		OK	
Black Toner	Review black toner status.	Low	
		Invalid	
		Replace Cartridge	
		Missing or Defective	
		OK	
Color Photo Dev	Review the color photodeveloper status.	Life Warning	
		Replace Photo Dev	
		Missing	
		OK	
		Abnormal	
Black Photo Dev	Review the black photodeveloper status.	Life Warning	
		Replace Photo Dev	
		Missing	
		OK	
		Abnormal	

Menu selection	Purpose	Values	
Oil Coating Roll	Review the oil coating roll status.	Life Warning	
		Replace	
		Missing	
		OK	
		Abnormal	
Fuser	Review the fuser status.	Life Warning	
		Replace	
		Missing	
		OK	
Transfer Belt	Review the transfer belt status.	Life Warning	
		Replace	
		Missing	
		OK	
Staples	Review the staples status in the optional finisher.	Low	
		Empty	
		Missing	
		OK	
Hole Punch Box	Review the hole punch box status in the optional finisher.	Full	
		Missing	
		OK	

Paper Menu

Use the “Paper” Menu to define the paper loaded in each paper tray, the default paper source, and the output bin.

Default Source

Menu selection	Purpose	Values	
Default Source	Identifies the default paper source.	Tray <x>	If you loaded the same size and type of paper in two paper sources (and the Paper Size and Paper Type menu items are correctly set), the trays are automatically linked. When one paper source is empty, paper automatically feeds from the next linked source.
		MP Feeder	
		Manual Paper	
		Manual Env	

Paper Size/Type

This menu selection is used to set the size and type of media loaded into an input tray. Setting the paper size and type is a two-step process. In the first menu selection, *Size* appears in bold letters. After you select the media size, the screen will change, and *Type* appears in bold letters. You can then select the media type.

Note: Only installed paper sources are displayed.

Menu selection	Purpose	Values	
Tray <x> Size/Type	Identifies the default paper size for each paper source. Note: For trays with automatic size sensing, only the value detected by the hardware is displayed.	A4* (non-US) A5 JIS B5 Letter* (US) Legal Executive JIS B4 A3 11x17 Folio Statement Universal	If you loaded the same size and type of paper in two paper sources (and the Paper Size and Paper Type menu items are correctly set), the trays are automatically linked. When one paper source is empty, paper automatically feeds from the next linked source.
Tray <x> Size/type	Identifies the type of paper installed in each paper source. Note: If a user-defined name is available, it is displayed instead of Custom Type <x> . If two or more custom types share the same name, the name only appears once in the Paper Type list.	Plain Paper* Card Stock Transparency Glossy Labels Vinyl Labels Bond Letterhead Preprinted Colored Paper Custom Type <x>	Use this menu item to: <ul style="list-style-type: none"> Optimize print quality for the specified paper. Select paper sources through your software application by selecting type and size. Automatically link paper sources. Any sources containing the same type and size of paper are automatically linked by the printer if you have set the Paper Size and the Paper Type to the correct values.

Menu selection	Purpose	Values	
MP Feeder Size/Type	Identifies the size of paper installed in the multipurpose feeder.	A4* (non-US) A5 JIS B5 Letter* (US) Legal Executive JIS B4 A3 11x17 Folio Statement Universal 7 3/4 Envelope 10 Envelope DL Envelope C5 Envelope Other Envelope	The multipurpose feeder is only displayed on the operator panel when Configure MP is set to Cassette.
MP Feeder Size/Type	Identifies the type of paper installed in the multipurpose feeder. Note: If a user-defined name is available, it is displayed instead of Custom Type <x> . If two or more custom types share the same name, the name only appears once in the Paper Type value list.	Plain Paper* Card Stock Transparency Glossy Labels Vinyl Labels Bond Envelope Letterhead Preprinted Colored Paper Custom Type <x>	The multipurpose feeder is only displayed on the operator panel when Configure MP is set to Cassette.
Manual Paper Size/Type	Identifies the paper size being manually loaded.	A4* (non-US) A5 JIS B5 Letter* (US) Legal Executive JIS B4 A3 11x17 Folio Statement Universal	

Menu selection	Purpose	Values	
MP Feeder Size/Type	Identifies the size of paper installed in the multipurpose feeder.	A4* (non-US) A5 JIS B5 Letter* (US) Legal Executive JIS B4 A3 11x17 Folio Statement Universal 7 3/4 Envelope 10 Envelope DL Envelope C5 Envelope Other Envelope	The multipurpose feeder is only displayed on the operator panel when Configure MP is set to Cassette.
MP Feeder Size/Type	Identifies the type of paper installed in the multipurpose feeder. Note: If a user-defined name is available, it is displayed instead of Custom Type <x> . If two or more custom types share the same name, the name only appears once in the Paper Type value list.	Plain Paper* Card Stock Transparency Glossy Labels Vinyl Labels Bond Envelope Letterhead Preprinted Colored Paper Custom Type <x>	The multipurpose feeder is only displayed on the operator panel when Configure MP is set to Cassette.
Manual Paper Size/Type	Identifies the paper size being manually loaded.	A4* (non-US) A5 JIS B5 Letter* (US) Legal Executive JIS B4 A3 11x17 Folio Statement Universal	

Menu selection	Purpose	Values
Manual Paper Size/ Type	Identifies the paper type being manually loaded.	Plain Paper* Card Stock Transparency Glossy Labels Vinyl Labels Bond Letterhead Preprinted Colored Paper Custom Type <x>
Manual Envelope Size/ Type	Identifies the envelope size being manually loaded.	7 3/4 Envelope 10 Envelope*(US) DL Envelope* (non-US) C5 Envelope Other Envelope
Manual Envelope Size/ Type	Identifies the envelope type being manually loaded.	Envelope* Custom Type <x>

Configure MP

This menu selection is used to configure the multipurpose feeder as another paper tray or manual feeder. If you link the multipurpose feeder with another tray, you can have the printer pull paper from the multipurpose feeder before taking paper from another tray.

Menu selection	Purpose	Values
Configure MP	Determines when the printer selects paper loaded in the multipurpose feeder.	Cassette* Manual First

Substitute Size

This menu selection is used to determine whether the printer can substitute another size paper if the requested paper size is not currently installed in any of the printer input sources. If, for example, Substitute Size is set to Letter/A4, and only letter size paper is installed in the printer. When a request is received to print on A4 paper, the printer will substitute letter for A4 and print the job instead of displaying a change paper request.

Menu selection	Purpose	Values
Substitute Size	Substitutes the specified paper size if the requested size is not loaded.	Off Statement/A5 Letter/A4 11x17/A3 All Listed* <ul style="list-style-type: none"> The Off value indicates no size substitutions are allowed. The All Listed value indicates that all available substitutions are allowed.

Paper Weight

This menu selection is used to set the paper weight for each of the defined media types. This allows the printer to optimize the print quality for the media weight.

Menu selection	Purpose	Values	
Plain Weight	Identifies the relative weight of the paper loaded in a specific source, and ensures the toner adheres properly to the printed page.	Light Normal* Heavy	
Transparency Weight			
Glossy Weight			
Labels Weight			
Vinyl Labels			
Bond Weight			
Envelope Weight			
Letterhead Weight			
Preprinted Weight			
Colored Weight			
Card Stock			
Custom <x> Weight	Identifies the relative weight of the custom paper loaded in a specific source.	Light Normal* Heavy	Shown if the custom type is supported in the specified input source.

Paper Loading

This menu selection is used to set the loading orientation for each paper type. This lets you load an input source with preprinted media, and then notify the printer that the media is loaded for duplex printing. You can then use your application software to indicate simplex printing. When simplex printing is selected, the printer automatically inserts blank pages to print the simplex job correctly.

Note: Paper Loading is only available if a duplex unit is installed.

Menu selection	Purpose	Values	
Glossy Loading	Properly handles preprinted paper whether the job is a duplexed or single-sided job.	Duplex Off*	
Vinyl Labels Loading			
Bond Loading			
Letterhead Loading			
Preprinted Loading			
Colored Loading			
Card Stock Loading	Properly handles preprinted card stock whether the job is a duplexed or single-sided job.	Duplex Off*	Shown if Card Stock is supported in the specified input source.
Custom <x> Loading	Properly handles preprinted custom paper whether the job is a duplexed or single-sided job.	Duplex Off*	Shown if the custom type is supported in the specified input source.

Custom Types

This menu selection is used to define a name for each custom paper type. You can assign names using a utility such as MarkVision or from the operator panel.

Menu selection	Purpose	Values	
Custom Type N	Specifies the type of paper associated with each Custom Type available in the Paper Type menu.	Paper* Card Stock Transparency Glossy Labels Vinyl Labels Envelope	The custom type media must be supported in the input source you designate in order to assign a user-defined name. Once the name is assigned, the name (truncated to 16 characters) will be displayed instead of Custom Type x .

Universal Setup

This menu selection is used to specify the height and width of the Universal Paper Size. By specifying the height and width for Universal Paper Size, the printer will use the Universal setting exactly like other paper sizes, including support for duplex and n-up.

Menu selection	Purpose	Values	
Units of Measure	Determines the unit of measure used to enter the Universal Height and Width.	Inches Millimeters	Inches is US default; Millimeters is international default.
Portrait Width	Sets the portrait width of the universal media. Note: If the value set exceeds the maximum width, the printer will use the maximum value allowed in inches or millimeters.	3 inches to 48 inches in 0.01 inch increments 76 mm to 1220 mm in 1 mm increments	Shows either inches or mm from Units of Measure setting; 14 inches is the US default, and 365 mm is the international default.
Portrait Height	Sets the portrait height of the universal media. Note: If the value set exceeds the maximum height, the printer will use the maximum value allowed in inches or millimeters.	3 inches to 48 inches in 0.01 inch increments 76 mm to 1220 in 1 mm increments	Shows either inches or mm from Units of Measure setting; 14 inches US default, 356 international default.
Feed Direction	Specifies the feed direction of the Universal Paper Size.	Short Edge* Long Edge	Long Edge is only shown if the longest edge is shorter than the Maximum Physical Width of the printer.

Bin Setup

This menu selection is used to specify the output bin where you want your printed material to go to.

Note: Bin Setup is only displayed when at least one optional output bin is installed.

Menu selection	Purpose	Values	
Output Bin	Specifies the default bin for printed material.	Standard Bin*	<ul style="list-style-type: none"> If a user-defined name is available, it is displayed instead of Bin <x>. The name is truncated to 14 characters. If two or more bins share the same name, the name only appears once in the Output Bin value list.
		Bin <x>	

Menu selection	Purpose	Values	
Configure Bins	Determines which output bin(s) the printer uses for a particular job.	Mailbox*	Sends print jobs to the output bin designated for that user.
		Link	Links two or more bins together as though they were one large bin. When one linked bin is full, the printer starts filling the next linked bin, and continues with each additional linked bin.
		Type Assignment	Sends each job to the output bin specified for that paper type.
Assign Type/Bin	Sends print jobs to a specific output bin based on the requested paper type. Note: If a user-defined name is available, it is displayed instead of Custom <x> Bin . The name is truncated to 14 characters. If two or more bins share the same name, the name only appears once in the Assign Type/Bin value list.	Plain Paper Bin	Disabled*
		Card Stock Bin	Standard Bin
		Transparency Bin	Bin 1
		Glossy Paper Bin	Bin 2
		Labels Bin	Note: Only installed output bins will be displayed. If Configure Bins is set to Type Assignment then the default is the Standard Bin.
		Vinyl Labels Bin	
		Bond Bin	
		Envelope Bin	
		Letterhead Bin	
		Preprinted Bin	
		Colored Bin	
Custom <x> Bin (<x> represents 1 through 6)			

Reports

Menu Settings Page

This menu selection prints a menu settings page.

Menu selection	Purpose	Values
Menu Settings Page	Prints information relating to the default printer settings and verifies that printer options are installed correctly.	After selecting this item, the page will print and the printer will return to Ready .

Device Statistics

This menu selection displays the printer statistics.

Menu selection	Purpose	Values
Device Statistics	Prints information relating to the printer statistics.	After selecting this item, the page will print and the printer will return to Ready .

Network Setup Page

This menu selection prints a network setup page.

Menu selection	Purpose	Values
Network Setup Page Network <x> Setup Page will appear if additional network options are installed.	Prints information relating to network settings and verifies the network connection. Note: This page also provides information that helps you configure for network printing.	After selecting this item, the page will print, and the printer will return to Ready .

Profiles List

This menu selection prints a list of profiles stored on this printer.

Menu Selection	Purpose	Values
Profiles List	Prints a list of profiles stored on the printer.	After selecting this item, the page will print, and the printer will return to Ready .

NetWare Setup Page

This menu selection prints information relating to the internal print server.

Menu selection	Purpose	Values
NetWare Setup Page	Prints information relating to the internal print server and the network settings defined by the Network <x> Setup menu item in the Network Menu.	After selecting this item, the page will print, and the printer will return to Ready .

Print Fonts

This menu selection prints a list of the fonts stored in the printer.

Menu selection	Purpose	Values
Print Fonts	Prints a sample of all the fonts available for the selected printer language.	PCL Fonts Prints a sample of all printer fonts available for PCL emulation.
		PS Fonts Prints a sample of all printer fonts available for PostScript emulation.

Print Directory

This menu selection prints the directory listing. The directory listing is a list of the resources that are stored on a formatted optional flash memory card or hard disk.

Menu selection	Purpose	Values
Print Directory	Prints a list of the resources that are stored on the optional flash memory card or hard disk. Note: Print Directory is available only when either a nondefective flash or disk is installed and formatted, and Job Buffer Size is not set to 100%.	After selecting this item, the page will print, and the printer will return to Ready .

Settings

Setup Menu

Use this menu selection to configure a variety of printer features.

Menu selection	Purpose	Values	
Display Language	Determines the language of the text displayed on the operator panel.	English	Note: All values may not be available.
		Français	
		Deutsch	
		Italiano	
		Español	
		Dansk	
		Norsk	
		Nederlands	
		Svenska	
		Português	
		Suomi	
		Russian	
		Polski	
		Hungarian	
		Turkish	
Czech			
Simplified Chinese			
Traditional Chinese			
Korean			
Japanese			
Power Saver	Specifies the amount of time (in minutes) the printer waits after a job is printed before it goes into a reduced power state.	1...240	<p>Specifies the amount of time after a print job before the printer goes into Power Saver mode. (Your printer may not support the entire range of values.)</p> <p>The factory default Power Saver setting depends on your printer model. Print the menu settings page to determine the current Power Saver setting. When the printer is in Power Saver mode, it is still ready to receive print jobs.</p> <p>Select 1 to put the printer in Power Saver mode one minute after it finishes a print job. This uses much less energy, but requires more warm-up time for the printer. Select 1 if your printer shares an electrical circuit with room lighting and you notice lights flickering.</p> <p>Select a high value if your printer is in constant use. Under most circumstances, this keeps the printer ready to print with minimum warm-up time. Select a value between 1 and 240 minutes if you want a balance between energy consumption and a shorter warm-up period.</p>

Menu selection	Purpose	Values	
Standby Mode	Specifies the amount of time (in minutes) the printer stays in Standby Mode before it goes into a power save.	1...to the current Power Saver value	The default setting is 15 minutes and can be adjusted in 1 minute increments.
Alarms	Controls whether the printer sounds an alarm when the printer requires operator intervention.	Alarm Control: Off Single* Continuous	Off —Printer does not sound an alarm. Single* —Printer sounds three quick beeps. Continuous —Printer repeats three beeps every 10 seconds. Note: Staple and hole punch alarms appear only when an optional finisher is installed.
		Toner Alarm: Off* Single Continuous	
		Staple Alarm: Off* Single Continuous	
		Hole Punch Alarm: Off* Single Continuous	
Timeouts	Specifies the amount of time (in seconds) the printer waits to return to the home screen, receive an end-of-job message, or receive additional bytes of data from the computer. Note: Wait Timeout is only available when you use PostScript emulation. This menu value has no effect on PCL emulation print jobs.	Screen Timeout: 15–300 (30*)	Disabled —Disables Screen Timeout. 15–300 —Specifies the amount of time the printer waits before returning to the home screen. 30* is the default setting.
		Print Timeout Disabled 1–255 (90*)	Disabled —Disables Print Timeout. 1–25 —Specifies the amount of time the printer waits for an end-of-job message before canceling the remainder of the print job. Note: When the timer expires, any partially formatted page still in the printer is printed, and other input ports are examined to see if data exists. 90* is the default setting.
		Wait Timeout: Disabled 15...65535 (40*)	Disabled —Disables Wait Timeout. 15...65535 —Specifies the amount of time the printer waits for additional data before it cancels the job. 40* is the default setting.

Menu selection	Purpose	Values	
Print Recovery	Specifies whether the printer continues from certain offline situations, reprints jammed pages, or waits until the entire page is processed and ready to be printed.	Auto Continue: Disabled* 5–255	Lets the printer automatically continue from certain offline situations when not resolved within the specified time period. 5–255 —Specifies the amount of time the printer waits.
		Jam Recovery: On Off Auto*	Specifies whether the printer reprints jammed pages. On —Printer reprints jammed pages. Off —Printer does not reprint jammed pages. Auto* —Printer reprints a jammed page unless the memory required to hold the page is needed for other printer tasks.
		Page Protect: Off* On	Successfully prints a page that may otherwise generate Complex Page errors. Off* —Prints a partial page of data if memory is insufficient to process the entire page. On —Ensures that an entire page is processed before it prints. Note: If, after selecting On, you still cannot print the page, you may also have to reduce the size and number of fonts on the page, or increase the installed printer memory. Note: For most print jobs, you do not need to select On. When On is selected, printing may be slower.
Printer Language	Specifies the default printer language used to communicate data from the computer to the printer. Note: Setting a printer language as the default does not prevent a software application from sending print jobs that use the other language.	PCL Emulation PS Emulation*	PCL emulation —Uses a PCL interpreter for incoming host communications. PostScript emulation —Uses a PS interpreter for incoming host communications.
Download Target	Specifies the storage location for downloaded resources. Storing downloaded resources in flash memory or on a hard disk is permanent storage rather than the temporary storage that RAM provides. The resources remain in the flash memory or on the hard disk even when the printer is turned off.	RAM*	All downloaded resources are automatically stored in printer memory (RAM).
		Flash	All downloaded resources are automatically stored in flash memory.
		Disk	All downloaded resources are automatically stored on the hard disk.
Job Accounting	Specifies to store or not store statistical information about your most recent print jobs on the hard disk. The statistics include whether the job printed with or without errors, the print time, the job size (in bytes), the requested paper size and paper type, the total number of printed pages, and the number of copies requested. Note: Job Accounting is only displayed when a hard disk is installed, is neither defective nor Read/Write or Write protected, and Job Buffer Size is not set to 100%.	Off*	Printer does not store job statistics on disk.
		On	Printer stores job statistics for the most recent print jobs.

Menu selection	Purpose	Values	
Quick Start	Allows the printer to start printing pages at 17 PPM as soon as it gets warm enough.	Off On*	It will continue to warm up to the 32/36 PPM temperature and will switch to the faster mode as soon as possible.
Resource Save	Specifies what the printer does with downloaded resources, such as fonts and macros stored in RAM, if the printer receives a job that requires more memory than is available.	Off*	Printer retains downloaded resources only until memory is needed. It then deletes those resources associated with the inactive printer language.
		On	Printer retains all downloaded resources for all printer languages during language changes and printer resets. If the printer runs out of memory, 38 Memory Full is displayed.
Factory Defaults	Returns printer settings to the factory default values.	Restore	<ul style="list-style-type: none"> All menu items are returned to the factory default values except: <ul style="list-style-type: none"> Display Language. All settings in the Parallel Menu, Serial Menu, Network Menu, and USB Menu. All downloaded resources (fonts, macros, and symbol sets) in printer memory (RAM) are deleted. (Resources residing in flash memory or on the hard disk are unaffected.)
		Do Not Restore*	User-defined settings remain.

Finishing Menu

Use this menu selection to define how the printer delivers the printed output.

Menu selection	Purpose	Values	
Duplex	Sets duplexing as the default for all print jobs. Note: You must have an optional duplex unit installed. Note: Select Duplex from the printer driver to duplex only specific jobs.	Off*	Prints on one side of the paper.
		On	Prints on both sides of the paper.
Duplex Bind	Defines the way duplexed pages would be bound, and how the printing on the back of the sheet (even-numbered pages) is oriented in relation to the printing on the front (odd-numbered pages). Note: You must have an optional duplex unit installed.	Long Edge*	Assumes binding along the long edge of the page (left edge for portrait orientation and top edge for landscape orientation).
		Short Edge	Assumes binding along the short edge of the page (top edge for portrait orientation and left edge for landscape orientation).
Copies	Sets the number of copies you want for the printer default value. Note: Set the number of copies required for a specific job from the printer driver.	1...999 (1*)	Values selected from the printer driver always override values selected from the operator panel.
Blank Pages	Specifies whether to include application-generated blank pages as part of your printed output.	Do Not Print*	Does not print application-generated blank pages as part of your job.
		Print	Prints application-generated blank pages as part of your job.

Menu selection	Purpose	Values	
Collation	Keeps the pages of a print job stacked in sequence when printing multiple copies of the job.	Off*	Prints each page of a job the number of times specified by the Copies menu item. For example, if you set Copies to 2, and send three pages to print, the printer prints page 1, page 1, page 2, page 2, page 3, page 3.
		On	Prints entire job the number of times specified by the Copies menu item. For example, if you set Copies to 2, and send three pages to print, the printer prints page 1, page 2, page 3, page 1, page 2, page 3.
Separator Sheets	Inserts blank separator sheets between jobs, between multiple copies of a job, or between each page of a job.	None*	Does not insert separator sheets.
		Between Copies	Inserts a blank sheet between each copy of a job. If Collation is Off, a blank page is inserted between each set of printed pages (all page 1's, all page 2's, and so on). If Collation is On, a blank page is inserted between each collated copy of the job.
		Between Jobs	Inserts a blank sheet between jobs.
		Between Pages	Inserts a blank sheet between each page of a job. This is useful if you are printing transparencies or want to insert blank pages in a document for notes.
Separator Source	Specifies the paper source that holds separator sheets.	Tray <x> (Tray 1*)	Selects separator sheets from the specified tray.
		MP Feeder	Selects separator sheets from the multipurpose feeder. Note: You must also set Configure MP to Cassette.
Multipage Print	Prints multiple-page images on one side of a sheet of paper. Also called <i>n-up</i> or <i>Paper Saver</i> .	Off*	Prints 1 page image per side.
		2 Up	Prints 2 page images per side.
		3 Up	Prints 3 page images per side.
		4 Up	Prints 4 page images per side.
		6 Up	Prints 6 page images per side.
		9 Up	Prints 9 page images per side.
		12 Up	Prints 12 page images per side.
		16 Up	Prints 16 page images per side.

Menu selection	Purpose	Values													
Multipage Order	Determines the positioning of multiple page images when using Multipage Print. The positioning depends on the number of images and whether the images are portrait or landscape in orientation.	Horizontal*													
		Vertical													
		Rev Horizontal													
		Rev Vertical													
	For example, if you select 4-Up multipage printing and portrait orientation, the results differ depending on the Multipage Order value you select:														
<table border="1" style="width: 100%; text-align: center;"> <thead> <tr> <th style="width: 25%;">Horizontal Order</th> <th style="width: 25%;">Vertical Order</th> <th style="width: 25%;">Reverse Horizontal Order</th> <th style="width: 25%;">Reverse Vertical Order</th> </tr> </thead> <tbody> <tr> <td>1 2</td> <td>1 3</td> <td>2 1</td> <td>3 1</td> </tr> <tr> <td>3 4</td> <td>2 4</td> <td>4 3</td> <td>4 2</td> </tr> </tbody> </table>				Horizontal Order	Vertical Order	Reverse Horizontal Order	Reverse Vertical Order	1 2	1 3	2 1	3 1	3 4	2 4	4 3	4 2
Horizontal Order	Vertical Order	Reverse Horizontal Order	Reverse Vertical Order												
1 2	1 3	2 1	3 1												
3 4	2 4	4 3	4 2												
Multipage View	Determines the orientation of a multiple-page sheet.	Auto*	Lets the printer choose between portrait and landscape orientation.												
		Long Edge	Sets the long edge of the paper as the top of the page (landscape).												
		Short Edge	Sets the short edge of the paper as the top of the page (portrait).												
Multipage Border	Prints a border around each page image when using Multipage Print.	None*	Does not print a border around each page image.												
		Solid	Prints a solid line border around each page image.												
Staple Job	Sets stapling as the default for all print jobs. Note: Only displayed when an optional finisher is installed. Note: Select stapling from the printer driver if you want to staple only specific jobs.	Off*	Does not staple print jobs.												
		On	Staples each print job sent to the printer.												
Hole Punch	Punches holes along the edge of the paper. Note: Only displayed when an optional finisher is installed.	Off*	Does not hole punch print jobs.												
		On	Hole punches each print job sent to the printer.												
Offset Pages	Offsets the output of each print job or each copy of a print job, making it easier to separate the documents stacked in the finisher output bin. Note: Only displayed when an optional finisher is installed.	None*	Stacks all sheets directly on top of each other.												
		Between Copies	Offsets each copy of a print job.												
		Between Jobs	Offsets each print job.												

Quality Menu

Use this menu selection to change settings that affect print quality and save toner.

Menu selection	Purpose	Values	
Print Mode	To determine whether images are printed in a monochrome grayscale or in color.	Color*	
		Black Only	
Color Correction	To adjust the printed color to better match the colors of other output devices or standard color systems. Due to the differences between additive and subtractive colors, certain colors that appear on the monitor are impossible to duplicate on the printer.	Auto*	Applies different color conversion tables to each object on the printed page, depending on the type of object and how the color for each object is specified.
		Off	No color correction is implemented.
		Manual	Allows customization of the color conversion tables applied to each object on the printed page, depending on the type of object and how the color for each object is specified. Customization is performed using the selections available under the Manual Color menu item.
Print Resolution	Selects the quality of printed output.	2400 IQ*	
Toner Darkness	Lighten or darkens printed output and conserves toner.	1 to 5	4* is the default setting. Select a lower number to lighten the printed output or save toner.
Color Saver	To conserve toner in graphics and images yet maintain high quality text. The amount of toner used to print graphics and images is reduced; however, text is printed with default toner usage. If selected, this setting overrides Toner Darkness settings. Color Saver is not supported in PPDS, and partially supported by the PCL emulation driver.	On*	
		Off	
RGB Brightness	To assist in making brightness, contrast, and saturation adjustments to color output.	-6, -5, -4, -3, -2, -1, 0*, 1, 2, 3, 4, 5, 6	-6 is maximum decrease 6 is maximum increase 0 is the default setting
RGB Contrast	These functions do not affect files where CMYK color specifications are being used. See Frequently asked questions (FAQ) about color printing in the <i>User's Guide</i> on the publications CD for more information on color specifications.	0*, 1, 2, 3, 4, 5	0 is the default setting 5 is maximum increase
RGB Saturation		0*, 1, 2, 3, 4, 5	0 is the default setting 5 is maximum increase
Color Balance		To provide users with the ability to make subtle color adjustments to printed output by increasing or decreasing the amount of toner being used for each color plane individually.	Cyan
		Magenta	-5 is maximum decrease
		Yellow	5 is maximum increase
		Black	
		Reset Defaults	Sets values for Cyan, Magenta, Yellow, and Black to 0 (zero).

Menu selection	Purpose	Values	
Color Samples	<p>To assist users in selecting colors to be printed. Users can print color samples pages for each of the RGB and CMYK color conversion tables used in the printer.</p> <p>The color samples pages consist of a series of colored boxes along with the RGB or CMYK combination that creates the color observed for each particular box. These pages can be useful in helping users decide which RGB or CMYK combinations to use in their software applications to create the desired printed color output.</p> <p>The printer Embedded Web Server interface, which is only available on network models, offers users more flexibility. It lets users access the printing of Detailed Color Samples.</p>	sRGB Display	Prints RGB samples using sRGB Display color conversion tables.
		sRGB Vivid	Prints RGB samples using sRGB Vivid color conversion tables.
		Display — True Black	Prints RGB samples using Display — True Black color conversion tables.
		Vivid	Prints RGB samples using Vivid color conversion tables.
		Off—RGB	Color conversion is implemented.
		US CMYK	Prints CMYK samples using US CMYK color conversion tables.
		Euro CMYK	Prints CMYK samples using Euro CMYK color conversion tables.
		Vivid CMYK	Prints CMYK samples using Vivid CMYK color conversion tables.
		Off—CMYK	No color conversion is implemented.
Manual Color	<p>To let users customize the RGB or CMYK color conversions applied to each object on the printed page. Color conversion of the data specified using RGB combinations can be customized based on object type (text, graphics, or image) through the printer operator panel.</p>	RGB Image	<p>sRGB Display*: Applies a color conversion table to produce output that approximates the colors displayed on a computer monitor.</p> <p>sRGB Vivid: Increases color saturation for the sRGB Display color conversion table. Preferred for business graphics and text.</p> <p>Display — True Black: Applies color conversion table to produce output that approximates the colors displayed on a computer monitor while using only black toner for neutral gray colors.</p> <p>Vivid: Applies a color conversion table that produces brighter, more saturated colors.</p> <p>Off: No color conversion is implemented.</p>
		RGB Text	sRGB Display
		RGB Graphics	<p>sRGB Vivid*</p> <p>Display - True Black</p> <p>Vivid</p> <p>Off</p>
		CMYK Image CMYK Text CMYK Graphics	<p>US CMYK* (country/region-specific factory default values): Applies a color conversion table to approximate SWOP color output.</p> <p>Euro CMYK* (country/region-specific factory default values): Applies color conversion table to approximate EuroScale color output.</p> <p>Vivid CMYK: Increases color saturation for the US CMYK color conversion table.</p> <p>Off: No color conversion is implemented.</p>

Menu selection	Purpose	Values	
Enhance Fine Lines	A selection to enable a print mode preferable for certain files containing fine line detail, such as architectural drawings, maps, electronic circuit diagrams, and flow charts. Enhance Fine Lines is not a menu item. This setting is only available on the PCL emulation driver or PostScript driver or on the printer Embedded Web Server.	On	In the driver, enable the check box.
		Off*	In the driver, disable the check box.

Utilities Menu

Use this menu selection to change printer settings, remove jobs, set up printer hardware, and troubleshoot printer problems.

Menu selection	Purpose	Values	
Factory Defaults	Returns printer settings to the factory default values.	Do Not Restore*	User-defined settings remain.
		Restore Now	All menu items are returned to the factory default values except: <ul style="list-style-type: none"> • Display Language. • All settings in the Parallel Menu, Serial Menu, Network Menu, and USB Menu. • Resources residing in flash memory or on the hard disk. Note: All downloaded resources (fonts, macros, and symbol sets) in printer memory (RAM) are deleted.
Remove Held Jobs	Removes confidential and held jobs from the printer hard disk.	Confidential Held Not Restored All	Selecting a menu value only affects jobs that are resident in the printer. Bookmarks, jobs on USB flash memory devices, and other types of held jobs are not affected.
Format Flash	Formats the flash memory. Warning: Do not turn off the printer while the flash is formatting.	Yes	Deletes any data stored in flash memory and prepares the flash memory to receive new resources.
		No	Cancel the request to format the flash memory and leaves current resources stored in flash memory.
Defragment Flash	Retrieves lost storage area from resources that were deleted from flash memory. Warning: Do not turn off the printer while the flash is defragmenting.	Yes	Transfers all resources stored in flash memory to printer memory and then reformats the flash memory option. When the format operation is complete, the resources are loaded back into flash memory.
		No	Cancel the request to defragment the flash memory.
Format Disk	Formats the printer hard disk. Warning: Do not turn off the printer while the hard disk is formatting.	Yes	Deletes any data stored on the hard disk and prepares the device to receive new resources.
		No	Cancel the request to format the hard disk and leaves current resources stored on the disk.
Job Acct Stat	Prints a listing of all job statistics stored on the hard disk, or clears all statistics on the disk.	Print	Prints all statistics available for the most recent print jobs.
		Clear	Deletes all accumulated job statistics from the hard disk.

Menu selection	Purpose	Values	
Hex Trace	Helps isolate the source of a print job problem.	Activate	With Hex Trace selected, all data sent to the printer is printed in hexadecimal and character representation. Control codes are not executed. Note: To exit Hex Trace, turn the printer off, or reset the printer from the Job Menu.
Print Alignment	Provides access to the Print Alignment menu where you can print an alignment page, or change the cyan, magenta, or yellow alignment values.	Print Alignment Page	Pressing Select will print the alignment page.
		Cyan	X = -80 – 80
		Magenta	Y = -127 – 127
		Yellow	
Coverage Estimator	Provides an estimate of the percent coverage of cyan, magenta, yellow, and black on a page. The estimate is printed on a separator page.	Off*	Percent coverage is not printed.
		On	Prints the estimated percentage of coverage for each color on a page.

PDF Menu

Use this menu selection to change printer settings that affect PDF jobs.

Menu selection	Purpose	Values	
Scale to Fit	Scales page content to fit the selected media size.	Yes No*	Yes —Scales the page to fit the selected print media. No* —Does not scale the page; printed text or graphics will be cropped if larger than the selected print media.
Annotations	Specifies whether to print annotations in the PDF.	Do Not Print* Print	Do Not Print* —Does not print PDF annotations. Print —Prints PDF annotations.

PostScript Menu

Use this menu selection to change printer settings that affect jobs using the PostScript printer language.

Menu selection	Purpose	Values	
Print PS Error	Prints a page defining the PostScript emulation error when an error occurs.	Off*	Discards the print job without printing an error message.
		On	Prints an error message before it discards the job.
Font Priority	Establishes the font search order. Note: Font Priority is only displayed when a formatted flash or hard disk is installed, is neither defective nor Read/Write or Write protected, and Job Buffer Size is not set to 100%.	Resident*	Printer searches printer memory for the requested font before searching flash memory or hard disk.
		Flash/Disk	Printer searches the hard disk and flash memory for the requested font before searching printer memory.
Image Smoothing	Enhances the contrast and sharpness of low-resolution bitmapped images (such as images downloaded from the World Wide Web) and smooths their color transitions. Note: Image Smoothing has no effect on images that are 300 dpi or higher resolution.	Off*	Uses default resolution when printing all images.
		On	Enhances low resolution images, such as graphics with a resolution of 72 dpi.

PCL Emul Menu

Use this menu selection to change printer settings that affect jobs using the PCL emulation printer language.

Menu selection	Purpose	Values	
Font Source	Determines the set of fonts displayed in the Font Name menu item.	Resident*	Displays all fonts resident in printer RAM when the printer ships from the factory.
		Disk	Displays all fonts downloaded to printer RAM.
		Flash	Displays all fonts stored in flash memory.
		Download	Displays all fonts stored on the printer hard disk.
		All	Displays all fonts available to the printer from all sources.
Font Name	Identifies a specific font from the specified font source.	R0 Courier*	The font name and font ID for all fonts in the selected font source are displayed. The font source abbreviation is R for resident, F for flash, K for disk, and D for download.
Symbol Set	Determines the symbol set for a specified font name.	10U PC-8* (US) (country/region-specific factory default values)	A symbol set is a set of alphabetic and numeric characters, punctuation, and special symbols used when printing with a selected font. Symbol sets support the different requirements for languages or specific applications, such as math symbols for scientific text. Only the symbol sets supported for the selected font name are displayed.
		12U PC-850* (non-US) (country/region-specific factory default values)	

Menu selection	Purpose	Values	
Emulation Settings	Changes the point size for scalable typographic fonts.	Point Size: 1.00–1008.00 (12*)	Point size refers to the height of the characters in the font. One point equals approximately 1/72 of an inch. You can select point sizes from 1 to 1008 in increments of 0.25 points. Note: Point Size is only displayed for typographic fonts.
	Specifies the font pitch for scalable monospaced fonts.	Pitch: 0.08–100.00 (10*)	Pitch refers to the number of fixed-space characters in a horizontal inch of type. You can select a pitch from 0.08 to 100 characters per inch (cpi) in increments of 0.01 cpi. For nonscalable monospaced fonts, the pitch is displayed but cannot be changed. Note: Pitch is only displayed for fixed, or monospaced, fonts.
	Determines how text and graphics are oriented on the page.	Orientation: Portrait* Landscape	Portrait prints text and graphics parallel to the short edge of the paper. Landscape prints text and graphics parallel to the long edge of the paper.
	Determines the number of lines that print on each page.	Lines per Page: 1–255 60* (US) 64* (non-US)	The printer sets the amount of space between each line (vertical line spacing) based on the Lines per Page, Paper Size, and Orientation menu items. Select the correct Paper Size and Orientation before changing Lines per Page.
	Sets the width of the logical page for A4 size paper.	A4 Width: 198 mm* 203 mm	Note: The 203 mm setting makes the logical page wide enough to print eighty 10-pitch characters.
	Specifies whether the printer automatically performs a carriage return after a line feed control command.	Auto CR after LF: Off* On	Off —Printer does not perform a carriage return after a line feed control command. On —Printer performs a carriage return after a line feed control command.
	Specifies whether the printer automatically performs a line feed after a carriage return control command.	Auto LF after CR: Off* On	Off —Printer does not perform a line feed after a carriage return control command. On —Printer performs a line feed after a carriage return control command.

Menu selection	Purpose	Values	
Tray Renumber	Configures the printer to work with printer drivers or applications that use different source assignments for the paper trays. Note: See the <i>Technical Reference</i> for more information about assigning source numbers.	Assign MP Feeder: Off* None 0–199	Off —Printer uses factory default paper source assignments. None —Paper source ignores the Select Paper Feed command. 0–199 —Select a numeric value to assign a custom value to a paper source.
		Assign Tray [x]: Off* None 0–199	Off —Printer uses factory default paper source assignments. None —Paper source ignores the Select Paper Feed command. 0–199 —Select a numeric value to assign a custom value to a paper source.
		Assign Man Paper: Off* None 0–199	Off —Printer uses factory default paper source assignments. None —Paper source ignores the Select Paper Feed command. 0–199 —Select a numeric value to assign a custom value to a paper source.
		Assign Man Env: Off* None 0–199	Off —Printer uses factory default paper source assignments. None —Paper source ignores the Select Paper Feed command. 0–199 —Select a numeric value to assign a custom value to a paper source.
		View Factory Def	Displays the factory default value assigned to each paper source.
		Restore Defaults	Select Yes to return all tray assignments to factory default values.

HTML Menu

This menu selection is used to change the printer HTML settings.

Menu selection	Purpose	Values	
Font Name	Sets the default font for HTML documents. Note: Times will be used in HTML documents that do not specify a font.	Albertus MT Antique Olive Apple Chancery Arial MT Avant Garde Bodoni Bookman Chicago Clarendon Cooper Black Copperplate Coronet Courier Eurostile Garamond Geneva Gill Sans Goudy Helvetica Hoefler Text	Intl CG Times Intl Courier Intl Univers Joanna MT Letter Gothic Lubalin Graph Marigold MonaLisa Recut Monaco New CenturySbk New York Optima Oxford Palatino StempelGaramnd Taffy Times TimesNewRoman Univers Zapf Chancery
Font Size	Sets the default font size for HTML documents.	1 pt–255 pt (12 pt*)	You can select point sizes from 1 to 255 points in 1 point increments.
Scale	Scales the default font for HTML documents.	1%–400% (100%*)	You can select scale sizes from 1 to 100% in 1% increments.
Orientation	Sets the page orientation for HTML documents.	Portrait* Landscape	Portrait* —Prints text and graphics parallel to the short edge of the paper. Landscape —Prints text and graphics parallel to the long edge of the paper.
Margin	Sets the page margin for HTML documents.	8 mm–255 mm (19 mm*)	You can set the margin from 8 to 255 mm in 1 mm increments.
Backgrounds	Specifies whether to print backgrounds in HTML documents.	Print* Do not print	Print* —Prints HTML backgrounds. Do Not Print —Does not print HTML backgrounds.

Image Menu

This menu selection is used to change the size or orientation of a printed image, or to invert a printed image.

Menu selection	Purpose	Values	
Auto Fit	Selects optimal paper size, scaling, and orientation.	On* Off	Note: When set to On, this setting overrides the scaling setting and can override the orientation setting for some images.
Invert	Inverts bi-tonal monochrome images.	On Off*	Note: Does not apply to GIF or JPEG.

Menu selection	Purpose	Values	
Scaling	Scales the image to fit media size.	Anchor Top Left Best Fit* Anchor Center Fit Height / Width Fit Height Fit Width	Note: When the Auto Fit setting is set to On, Scaling is automatically set to Best Fit.
Orientation	Sets the image orientation.	Portrait* Landscape Rev Portrait Rev Landscape	Portrait* —Prints text and graphics parallel to the short edge of the paper. Landscape —Prints text and graphics parallel to the long edge of the paper.

Security

This menu selection is used to set security levels on individual print jobs requiring a PIN and securing an installed hard disk.

Menu selection	Purpose	Values	
Max Invalid PIN	Limits the number of times an invalid pin number can be entered.	Off* 2 3 4 5 6 7 8 9 10	<ul style="list-style-type: none"> This menu selection only appears if a hard disk option is installed. The printer counts the number of times in a row an invalid pin for a user name is entered. Once the limit is reached, the jobs for that user name are deleted.
Job Expiration	Limits the amount of time a confidential job stays in the printer before it is deleted.	Off* 1 hour 4 hours 24 hours 1 week	

Network/Ports

TCP/IP

This menu section is use to view and change the Transmission Control Protocol/Internet Protocol settings.

Note: This menu is not displayed for non-network models.

Menu selection	Purpose	Values	
TCP/IP	Sets the network option to TCP/IP (Transmission Control Protocol/Internet Protocol) Note: This menu is not displayed for non-network models.	Activate	On* Off
		View Hostname	View only
		Address	4 field IP address
		Netmask	
		Gateway	
		Enable DHCP	On* Off
		Enable RARP	
		Enable BOOTP	
		AutoIP	
		Enable FTP/TFTP	
		HTTP Server Enabled	
		WINS Server Address	4 field IP address
		DNS Server Address	

IPv6

Use this menu setting to view or change Internet Protocol Version 6 settings.

Note: This menu is not displayed for non-network models.

Menu selection	Purpose	Values	
IPv6	Sets the network to IPv6 (Internet Protocol Version 6).	Enable IPv6	Yes* No
		View Hostname	View only
		View Address	
		View Router Address	
		Enable DHCPv6	Yes* No

Standard Network and Network <x>

Use this menu selection to change printer settings affecting jobs sent to the printer through a network port (either Standard Network or Network <x>).

Menu selection	Purpose	Values	
PCL SmartSwitch	Configures the printer so it automatically switches to PCL emulation when a print job received through the network port requires it, regardless of the default printer language.	On*	Printer examines data on the network interface and selects PCL emulation if the data indicates that is the required printer language.
		Off	Printer does not examine the incoming data. The printer uses PostScript emulation to process the job if PS SmartSwitch is On, or uses the default printer language specified in the "Setup" Menu if PS SmartSwitch is Off.
PS SmartSwitch	Configures the printer so it automatically switches to PostScript emulation when a print job received through the network port requires it, regardless of the default printer language.	On*	Printer examines data on the network interface connection and selects PostScript emulation if the data indicates that is the required printer language.
		Off	Printer does not examine the incoming data. The printer uses PCL emulation to process the job if PCL SmartSwitch is On, or uses the default printer language specified in the "Setup" Menu if PCL SmartSwitch is Off.
NPA Mode	Specifies whether the printer performs the special processing required for bidirectional communication, following the conventions defined in the Network Printing Alliance (NPA) Protocol. Note: Changing this menu item automatically resets the printer.	Off	Printer does not perform NPA processing.
		Auto*	Printer examines the data to determine the format and then processes it appropriately.
Network Buffer	Configures the size of the network input buffer. Note: Changing the Network Buffer menu item automatically resets the printer.	Auto*	Printer automatically calculates the Network Buffer size (recommended setting).
		3K to maximum size allowed (1k increments)	User specifies the Network Buffer size. The maximum size depends on the amount of memory in the printer, the size of the other link buffers, and whether Resource Save is set to On or Off. To maximize the range for the Network Buffer size, disable or reduce the size of the parallel, serial, and USB buffers.
Job Buffering	Temporarily stores jobs on the printer hard disk before printing. Note: Changing this menu item automatically resets the printer.	Off*	Does not buffer jobs to the hard disk.
		On	Buffers print jobs to the hard disk.
		Auto	Buffers print jobs only if the printer is busy processing data from another input port.
Mac Binary PS	Configures the printer to process Macintosh binary PostScript print jobs.	On	Printer processes raw binary PostScript print jobs from computers using the Macintosh operating system. Note: This setting often causes Windows print jobs to fail.
		Off	Printer filters PostScript print jobs using standard protocol.
		Auto*	Printer processes print jobs from computers using either Windows or Macintosh operating systems.

Standard USB and USB <x>

Use this menu selection to change printer settings affecting a Universal Serial Bus (USB) port (USB <x>).

Menu selection	Purpose	Values	
PCL SmartSwitch	Configures the printer so it automatically switches to PCL emulation when a print job received through the USB port requires it, regardless of the default printer language.	On*	Printer examines the data on the USB port and selects PCL emulation if the data indicates that is the required printer language.
		Off	Printer does not examine the incoming data. The printer uses PostScript emulation to process the job if PS SmartSwitch is On, or uses the default printer language specified in the Setup Menu if PS SmartSwitch is Off.
PS SmartSwitch	Configures the printer so it automatically switches to PostScript emulation when a print job received through the USB port requires it, regardless of the default printer language.	On*	Printer examines data on the USB interface and selects PostScript emulation if the data indicates that is the required printer language.
		Off	Printer does not examine the incoming data. The printer uses PCL emulation to process the job if PCL SmartSwitch is On, or uses the default printer language specified in the Setup Menu if PCL SmartSwitch is Off.
NPA Mode	Specifies whether the printer performs the special processing required for bidirectional communication, following the conventions defined in the Network Printing Alliance (NPA) Protocol. Note: Changing this menu item automatically resets the printer.	Off	Printer performs NPA processing. If data is not in NPA format, it is rejected as bad data.
		On	Printer does not perform NPA processing.
		Auto*	Printer examines the data to determine the format and then processes it appropriately.
USB Buffer	Configures the size of the USB input buffer. Note: Changing the USB Buffer menu item automatically resets the printer.	Disabled	Job buffering is disabled. Any jobs already buffered on the disk are printed before normal processing of incoming jobs resumes.
		Auto*	Printer automatically calculates the USB Buffer size (recommended setting).
		3K to maximum size allowed	User specifies the USB Buffer size. The maximum size depends on the amount of memory in the printer, the size of the other link buffers, and whether Resource Save is set to On or Off. To maximize the range for the USB Buffer size, disable or reduce the size of the parallel, serial, and network buffers.
Job Buffering	Temporarily stores jobs on the printer hard disk before printing. Note: Changing the Job Buffering menu item automatically resets the printer.	Off*	Does not buffer print jobs to the hard disk.
		On	Buffers print jobs to the hard disk.
		Auto	Buffers print jobs only if the printer is busy processing data from another input port.

Menu selection	Purpose	Values	
Mac Binary PS	Configures the printer to process Macintosh binary PostScript print jobs.	Off	Printer processes raw binary PostScript print jobs from computers using the Macintosh operating system. Note: This setting often causes Windows print jobs to fail.
		On	Printer filters PostScript print jobs using standard protocol.
		Auto*	Printer processes print jobs from computers using either Windows or Macintosh operating systems.
ENA Address	Sets the USB port ENA Address.	4 field IP address	Shown only if an ENA is attached through the USB port.
ENA Netmask	Sets the USB port ENA Netmask.		
ENA Gateway	Sets the USB port ENA Gateway.		
USB flash memory device	Enables or disables the USB Direct interface.	Disabled	
		Auto*	

Parallel and Parallel <x>

Use this menu selection to change printer settings affecting jobs sent to the printer through a parallel port (either Std Parallel or Parallel <x>).

Menu selection	Purpose	Values	
PCL SmartSwitch	Configures the printer so it automatically switches to PCL emulation when a print job received through the parallel port requires it, regardless of the default printer language.	On*	Printer examines data on the parallel interface and selects PCL emulation if the data indicates that is the required printer language.
		Off	Printer does not examine the incoming data. The printer uses PostScript emulation to process the job if PS SmartSwitch is On, or uses the default printer language specified in the Setup Menu if PS SmartSwitch is Off.
PS SmartSwitch	Configures the printer so it automatically switches to PostScript emulation when a print job received through the parallel port requires it, regardless of the default printer language.	On*	Printer examines data on the parallel interface and selects PostScript emulation if the data indicates that is the required printer language.
		Off	Printer does not examine the incoming data. The printer uses PCL emulation to process the job if PCL SmartSwitch is On, or uses the default printer language specified in the Setup Menu if PCL SmartSwitch is Off.
NPA Mode	Specifies whether the printer performs the special processing required for bidirectional communication, following the conventions defined in the Network Printing Alliance (NPA) Protocol. Note: Changing this menu item automatically resets the printer.	On	Printer performs NPA processing. If data is not in NPA format, it is rejected as bad data.
		Off	Printer does not perform NPA processing.
		Auto*	Printer examines data, determines the format, and then processes it appropriately.

Menu selection	Purpose	Values	
Parallel Buffer	Configures the size of the parallel input buffer. Note: Changing this menu item automatically resets the printer.	Disabled	Disables job buffering. Any jobs already buffered on the disk are printed before normal processing of incoming jobs resumes.
		Auto*	Printer automatically calculates the Parallel Buffer size (recommended setting).
		3K to maximum size allowed	User specifies the Parallel Buffer size. The maximum size depends on the amount of memory in the printer, the size of the other link buffers, and whether Resource Save is set to On or Off. To maximize the range for the Parallel Buffer size, disable or reduce the size of the serial and USB buffers.
Job Buffering	Temporarily stores jobs on the printer hard disk before printing. Note: Changing this menu item automatically resets the printer.	Off*	Does not buffer print jobs to the hard disk.
		On	Buffers print jobs to the hard disk.
		Auto	Buffers print jobs only if the printer is busy processing data from another input port.
Advanced Status	Enables bidirectional communication through the parallel port.	Off	Disables parallel port negotiation.
		On*	Enables bidirectional communication through the parallel interface.
Protocol	Specifies the parallel interface protocol.	Standard	May resolve some parallel interface problems.
		Fastbytes*	Provides compatibility with most existing parallel interface implementations (recommended setting).
Honor Init	Determines whether the printer honors hardware initialization requests from the computer. The computer requests initialization by activating the INIT signal on the parallel interface. Many personal computers activate the INIT signal each time the computer is turned on and off.	Off*	Printer does not honor hardware initialization requests from the computer.
		On	Printer honors hardware initialization requests from the computer.
Parallel Mode 2	Determines whether the parallel port data is sampled on the leading or trailing edge of strobe.	On*	Samples parallel port data on the leading edge of strobe.
		Off	Samples parallel port data on the trailing edge of strobe.
Mac Binary PS	Configures the printer to process Macintosh binary PostScript print jobs.	On	Printer processes raw binary PostScript print jobs from computers using the Macintosh operating system. Note: This setting often causes Windows print jobs to fail.
		Off	Printer filters PostScript print jobs using standard protocol.
		Auto*	Printer processes print jobs from computers using either Windows or Macintosh operating systems.

Serial <x>

Use this menu selection to change printer settings affecting jobs sent to the printer through an optional serial port.

Menu selection	Purpose	Values	
PCL SmartSwitch	Configures the printer so it automatically switches to PCL emulation when a print job received through the serial port requires it, regardless of the default printer language.	On* Off	On* —The printer examines the data at the serial interface and selects PCL emulation if the data indicates that is the required printer language. Off —The printer does not examine the incoming data. The printer uses PostScript emulation to process the job if PS SmartSwitch is On, or uses the default printer language specified in the Setup Menu if PS SmartSwitch is Off.
PS SmartSwitch	Configures the printer so it automatically switches to PostScript emulation when a print job received through the serial port requires it, regardless of the default printer language.	On* Off	On* —The printer examines the data at the serial interface and selects PostScript emulation if the data indicates that is the required printer language. Off —The printer does not examine the incoming data. The printer uses PCL emulation to process the job if PCL SmartSwitch is On, or uses the default printer language specified in the Setup Menu if PCL SmartSwitch is Off.
NPA Mode	Specifies whether the printer performs the special processing required for bidirectional communication, following the conventions defined in the Network Printing Alliance (NPA) Protocol. Note: Changing this menu item automatically resets the printer.	On	Printer performs NPA processing. If data is not in NPA format, it is rejected as bad data.
		Off	Printer does not perform NPA processing.
		Auto*	Printer examines the data to determine the format and then processes it appropriately.
Serial Buffer	Configures the size of the serial input buffer. Note: Changing the Serial Buffer menu item automatically resets the printer.	Disabled	Disables job buffering. Any jobs already buffered on the disk are printed before normal processing of incoming jobs resumes.
		Auto*	Printer automatically calculates the Serial Buffer size (recommended setting).
		3K to maximum size allowed	User specifies the Serial Buffer size. The maximum size depends on the amount of memory in the printer, the size of the other link buffers, and whether Resource Save is set to On or Off. To maximize the range for the Serial Buffer size, disable or reduce the size of the parallel and USB buffers.
Job Buffering	Temporarily stores jobs on the printer hard disk before printing. Note: Changing the Job Buffering menu item automatically resets the printer.	Off*	Does not buffer print jobs to the hard disk.
		On	Buffers print jobs to the hard disk.
		Auto	Buffers print jobs only if the printer is busy processing data from another input port.
Serial Protocol	Selects the hardware and software handshaking values for the serial interface.	DTR*	Hardware handshaking.
		DTR/DSR	Hardware handshaking.
		XON/XOFF	Software handshaking.
		XON/XOFF/DTR	Combined hardware and software handshaking.
		XONXOFF/DTRDSR	Combined hardware and software handshaking.

Menu selection	Purpose	Values	
Robust XON	Determines whether the printer communicates availability to the computer. This menu item only applies to the serial port if Serial Protocol is set to XON/XOFF.	Off*	Printer waits to receive data from the computer.
		On	Printer sends a continuous stream of XONs to the host computer to indicate that the serial port is ready to receive more data.
Baud	Specifies the rate at which data can be received through the serial port. Note: 138200, 172800, 230400, and 345600 baud rates are displayed in the STANDARD SERIAL menu. These values are not displayed in the SERIAL OPTION 1, SERIAL OPTION 2, or SERIAL OPTION 3 menus.	1200	
		2400	
		4800	
		9600*	
		19200	
		38400	
		57600	
		115200	
		138200	
		172800	
		230400	
		345600	
Data Bits	Specifies the number of data bits that are sent in each transmission frame.	7	
		8*	
Parity	Sets the parity for serial input and output data frames.	Even	
		Odd	
		None*	
		Ignore	
Honor DSR	Determines whether the printer uses the Data Set Ready (DSR) signal. DSR is one of the handshaking signals for most serial interface cables. The serial interface uses DSR to distinguish data sent by the computer from data created by electrical noise in the serial cable. This electrical noise can cause stray characters to print. Select On to prevent stray characters from printing.	Off*	All data received by the serial port is treated as valid data.
		On	Only data received while the DSR signal is high is treated as valid.

NetWare

Use this menu selection to view or change the printer NetWare settings.

Menu selection	Purpose	Values
View Login Name	Displays the assigned NetWare login name.	Selecting View Login Name displays the NetWare name on the operator panel.
View Print Mode	Displays the assigned NetWare print mode.	Selecting View Print Mode displays the NetWare print mode on the operator panel.
View Network Number	Displays the assigned NetWare number.	Selecting View Network Number displays the NetWare network number on the operator panel.

Menu selection	Purpose	Values	
Activate	Activates or deactivates the NetWare feature.	On Off	On —Activates the NetWare feature. Off —Deactivates the NetWare feature.
Ethernet 802.2	Sets the Ethernet 802.2 value On or Off.	On* Off	
Ethernet 802.3	Sets the Ethernet 802.3 value On or Off.	On* Off	
Ethernet Type II	Sets the Ethernet Type II value On or Off.	On* Off	
Ethernet SNAP	Sets the Ethernet SNAP value On or Off.	On* Off	
Packet Burst	Sets the Packet Burst value On or Off.	On Off *	
NSQ/GSQ Mode	Sets the NSQ/GSQ Mode value On or Off.	On Off *	

AppleTalk

Use this menu selection to view or change the printer AppleTalk settings.

Menu selection	Purpose	Values	
View Name	Displays the assigned AppleTalk name.	Selecting View Name displays the AppleTalk name on the operator panel.	
View Address	Displays the assigned AppleTalk address.	Selecting View Name displays the AppleTalk address on the operator panel.	
Activate	Activates or deactivates the AppleTalk feature.	On Off	On —Activates the AppleTalk feature. Off —Deactivates the AppleTalk feature.
Set Zone *	Provides a list of zones from network.	Default will be default zone for the network. If no default zone exists on the network, the * will be the default.	

LexLink

Use this menu selection to view your LexLink name or change your LexLink activation.

Menu selection	Purpose	Values	
View Nickname	Displays the assigned LexLink nickname.	Selecting View Nickname displays the LexLink nickname on the operator panel.	
Activate	Activates or deactivates the LexLink feature.	On Off	On —Activates the LexLink feature. Off —Deactivates the LexLink feature.

Help


This menu selection is used to print some or all of the resident Help Menu Pages. These pages contain information about printer connectivity, print quality, paper tips, and supplies.

Note: If the operator panel is set to other language, the document will be printed in English.

The Help Pages can be printed in the following languages.

English	Danish	Finnish
French	Norwegian	Russian
German	Dutch	Polish
Italian	Swedish	Korean
Spanish	Portuguese	Simplified Chinese
Traditional Chinese		

Menu selection	Purpose	Values
Print All	Prints all "Help" menu topics.	After selecting this item, the "Help" menu pages will print, and the printer will return to Ready .
Color Quality	Prints the Color Quality topic.	After selecting this item, the "Help" menu topic will print, and the printer will return to Ready .
Print Quality	Prints the Print Quality topic.	
Printing Guide	Prints the Printing Guide topic.	
Supplies Guide	Prints the Supplies Guide topic.	
Media Guide	Prints the Media Guide topic.	
Menu Map	Prints the Menu Map topic.	
Information Guide	Prints the Information Guide topic.	
Connection Guide	Prints the Connection Guide topic.	
Moving Guide	Prints the Moving Guide help menu topic.	

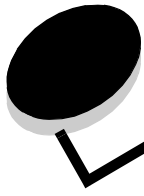

Understanding printer messages

The printer operator panel displays messages describing the current state of the printer and indicates possible printer problems you must resolve. This topic provides a list of all printer messages, explains what they mean, and tells you how to clear the messages.

The following table lists the messages in alphanumerical order. You can also locate a message using the index.

Message	Action
Activating Menu Changes	Wait for the message to clear.
All Photo Dev Life Warning	<ul style="list-style-type: none"> • Select Continue to clear the message and print without replacing the photodevelopers. • Replace all photodevelopers.
Black Photo Dev Life Warning	<ul style="list-style-type: none"> • Select Continue to clear the message and print without replacing the black photodeveloper. • Replace the black photodeveloper.
Busy	Wait for the message to clear, or cancel the print job.
Calibrating	Wait for the message to clear.
Cancel not available	Wait for the message to clear.
Cancelling	Wait for the message to clear.
Change <src> <Custom Type Name>	<ul style="list-style-type: none"> • Select Continue if you have changed the media. • Select Use current to print on media currently in the printer. • Cancel the current job.
Change <src> <Custom String>	
Change <src> <size>	
Change <src> <type> <size>	
Clearing job accounting statistics	Wait for the message to clear.
Close front door	Close the front door to clear the message.
Close side door	Close the side door to clear the message.
Close tray <x> top cover	Close the finisher door to clear the message.
Check finisher installation	Close the finisher door to clear the message.
Copies	Enter the desired number of copies.
Defragmenting Flash DO NOT POWER OFF	<p>Warning: Do not turn the printer off while this message is displayed.</p> <p>Wait for the message to clear.</p>
Delete	<ul style="list-style-type: none"> • Select Continue to delete the specified job. • Press Stop to cancel the operation.
Delete all	<ul style="list-style-type: none"> • Select Continue to delete all confidential jobs. • Press Stop to cancel the operation.

Message	Action
Delete all confidential jobs	<ul style="list-style-type: none"> Select Continue to delete all held jobs. Press Stop to cancel the operation.
Deleting	Wait for the message to clear.
Disabling DLEs	Wait for the message to clear.
Disabling Menus	<p>Wait for the message to clear.</p> <p>Note: While the menus are disabled, you cannot change the printer settings from the operator panel.</p>
Disk corrupted	<p>The printer has attempted a disk recovery process, and cannot repair the disk.</p> <ul style="list-style-type: none"> Select Continue to reformat the disk and delete all files currently stored on the disk. Select Do not reformat to clear the message without reformatting the disk.
Disk Recovery x/5 yyy%	<p>Warning: Do not turn the printer off while this message is displayed.</p> <p>The printer is attempting to recover the hard disk. Disk recovery takes place in five phases; the operator panel displays the percent complete of the current phase.</p> <p>Wait for the message to clear.</p>
Empty hole punch box	<ul style="list-style-type: none"> Empty the hole punch box, and if necessary, reset the hole punch counter. Select Continue to clear the message and print without using the hole punch feature.
Enabling Menus	Wait for the message to clear.
Encrypting Disk yyy% DO NOT POWER OFF	<p>Warning: Do not turn the printer off while this message is displayed.</p> <p>The printer is encrypting the hard disk. The percent complete is displayed.</p> <p>Wait for the message to clear.</p>
Engine Warming	Wait for the message to clear.
Enter PIN	Enter the PIN you identified in the driver when you sent the confidential job to the printer.
Enter PIN to lock	Enter the correct pin number to lock the operator panel and prevent menu changes.
Error printing from USB drive	Wait for the message to clear.
Error reading USB drive	Wait for the message to clear.
Flushing buffer	Wait for the message to clear.
Formatting Disk yyy% DO NOT POWER OFF	<p>Warning: Do not turn the printer off while this message is displayed.</p> <p>The printer is formatting the hard disk. The percent complete is displayed.</p> <p>Wait for the message to clear.</p>
Formatting Flash DO NOT POWER OFF	<p>Warning: Do not turn the printer off while this message is displayed.</p> <p>Wait for the message to clear.</p>
Fuser Life Warning	<ul style="list-style-type: none"> Select Continue to clear the message and print without installing a new fuser. Install a new fuser.
Insert Staple Cartridge	<ul style="list-style-type: none"> Install a staple cartridge to clear the message. Select Continue to clear the message and print without using the staple feature.
Insert Tray <x>	Insert the specified tray into the printer.
Insert hole punch box	<ul style="list-style-type: none"> Install the hole punch box. Select Continue to clear the message and print without using the hole punch feature.
Internal System Error Reload Bookmarks	<ul style="list-style-type: none"> Reload the Bookmarks. Select Continue to clear the message and continue printing.
Internal System Error, Reload Security Certificates	<ul style="list-style-type: none"> Reload the Security Certificates. Select Continue to clear the message and continue printing.

Message	Action
Invalid Network Code	Download valid code to the internal print server. Note: You can download network code while this message is displayed.
Invalid Engine Code	Download valid engine code to the printer. Note: You can download engine code while this message is displayed.
Invalid PIN	Enter the correct PIN.
Load manual feeder with <Custom Type>	<ul style="list-style-type: none"> • Load the specified paper in the manual feed tray or multipurpose feeder. • Select Continue to ignore the manual feed request and print on paper already installed in one of the input sources. <p>If the printer finds a tray that has paper of the correct type and size, it feeds paper from that tray. If the printer cannot find a tray with the correct paper type and size, it prints on whatever paper is installed in the default input source.</p> <ul style="list-style-type: none"> • Cancel the current job.
Load manual feeder with <Custom String>	
Load manual feeder with <size>	
Load manual feeder with <size> <type>	
Load <src> with <Custom Type Name>	<ul style="list-style-type: none"> • Load the input source with the correct type and size media. • Cancel the current job.
Load <src> with <Custom String>	
Load <src> <size>	
Load <src> <type> <size>	
Load Staples	<ul style="list-style-type: none"> • Install a new staple cartridge in the stapler. • Select Continue to clear the message and print without stapling. • Cancel the current job.
Maintenance	Replace the maintenance items and, if necessary, reset the printer maintenance counter.
Menus are Disabled	The printer menus are disabled. You cannot change the printer settings from the operator panel. Note: You can still cancel a job, print a confidential job, or print a held job. <ul style="list-style-type: none"> • Contact your system support person.
Network	A network interface is the active communication link.
Network <x>	
Network <x>, <y>	A network interface is the active communication link, where <x> represents the active communication link, and <y> represents the channel.
No DRAM installed	Turn the printer off, and install DRAM.
No held jobs	Wait for the message to clear.
No jobs found	Note: The four-digit personal identification number (PIN) you entered is not associated with any confidential print job. <ul style="list-style-type: none"> • Select Try again to enter another PIN. • Select Cancel to exit the Enter PIN screen.
No jobs to cancel	Wait for the message to clear.
No recognized file types	Wait for the message to clear. Note: The only supported file type is PDF.
Parallel	A parallel interface is the active communication link.
Parallel <x>	
Port disabled Remove USB drive	Wait for the message to clear.
Power Saver	<ul style="list-style-type: none"> • Send a job to print. • Press Select to warm the printer to normal operating temperature and display the Ready message.

Message	Action
Printer locked, enter PIN to unlock	The operator panel has been locked. Enter the correct PIN number.
Printing	Wait for the message to clear.
Printing from USB drive DO NOT REMOVE	Warning: Do not turn the printer off or remove the USB drive while this message is displayed. Wait for the message to clear.
Printer busy Continue Quit	Select Continue to read the information from the USB drive. Select Quit to cancel the information retrieval process.
Programming System Code	Warning: Do not turn the printer off while this message is displayed. Wait for the message to clear and the printer to reset.
Programming Flash	Warning: Do not turn the printer off while this message is displayed. Wait for the message to clear.
Programming Disk	Warning: Do not turn the printer off while this message is displayed. Wait for the message to clear.
Reading USB drive DO NOT REMOVE	Wait for the message to clear.
Ready	Send a job to print.
Remote Management Active DO NOT POWER OFF	The printer settings are being configured, and the printer was taken offline to ensure it is not currently printing and processing jobs. Wait for the message to clear.
Remove all color supplies	The printer has been set to Black Only mode. <ul style="list-style-type: none"> Remove all color cartridges and color photoconductor units. Select Continue to clear the message and print in Black Only mode. Cancel the current job.
Remove paper from bin <x>	Remove the stack of paper from the specified bin(s).
Remove paper from all bins	Remove the paper from all output bins.
Remove paper from <linked set bin name>	The printer automatically senses media removal and resumes printing. If removing the media does not clear the message, select Continue .
Remove paper from standard output bin	Remove the paper from the standard bin.
Replace oil coating roll	<ul style="list-style-type: none"> Select Continue to clear the message and print without installing a new oil coating roll. Replace the oil coating roll.
Requested Env Not Supported	This message occurs when the finisher is attached and an envelope size other than B5 and C5. See the finisher <i>User Guide</i> for instructions to print on other envelopes.
Resetting Active Bin	Wait for the message to clear.
Resetting Fuser Count	Wait for the message to clear.
Resetting the Printer	Wait for the message to clear.
Restore Held Jobs	<ul style="list-style-type: none"> Select Continue to restore all Print and Hold jobs on the hard disk. Select Do not restore to delete Print and Hold jobs.


Message	Action
Restoring Factory Defaults	<p>Wait for the message to clear.</p> <p>Note: When factory default settings are restored:</p> <ul style="list-style-type: none"> • All downloaded resources (fonts, macros, symbol sets) in the printer memory are deleted. • All menu settings return to the factory default setting <i>except</i>: <ul style="list-style-type: none"> – The Display Language setting in the “Setup” Menu. – All settings in the “Parallel” Menu, “Serial” Menu, “Network” Menu, “Infrared” Menu, “LocalTalk” Menu, “USB” Menu, and “Fax” Menu.
Restoring held job(s) x/y	<ul style="list-style-type: none"> • Wait for the message to clear. • Select Quit restoring to delete unrestored Print and Hold jobs. <p>Note: x represents the number of the job being restored, and y represents the total number of jobs to be restored.</p>
Serial <x>	A serial interface is the active communication link.
Some held jobs were lost	<ul style="list-style-type: none"> • Select Continue to clear the message and continue printing. The printer frees memory by deleting the oldest held job and continues deleting held jobs until there is enough printer memory to process the job. • Cancel the current job.
Staples Empty	<ul style="list-style-type: none"> • Install a new staple cartridge.
Staples Low	<ul style="list-style-type: none"> • Select Continue to clear the message and continue printing without stapling. • Cancel the current job.
Standard Bin Full	Remove the stack of paper from the bin to clear the message.
Submitting selection	Wait for the message to clear.
Transfer Belt Life Warning	<ul style="list-style-type: none"> • Select Continue to clear the message and print without installing a new transfer belt. • Replace the transfer belt and, if necessary, reset the printer internal counter for the transfer belt.
Tray <x> Empty	Load paper in the tray to clear the message.
Tray <x> Low	Add paper to the tray to clear the message.
Tray <x> Missing	Insert the tray into the printer.
Tray <x> Too Full	Open the specified tray, and remove some of the media.
USB	The printer is processing data through the specified USB port.
USB <x>	
USB drive removed	<ul style="list-style-type: none"> • Wait for the message to clear. • Insert the USB drive.
View supplies	Displays the current level of all printer supplies.
Waiting	<p>The printer has received a page of data to print, but is waiting for an End of Job command, a Form Feed command, or additional data.</p> <ul style="list-style-type: none"> • Press Select to print the contents of the buffer. • Cancel the current job.
1565 Emul Error Load Emul Option	<p>The printer automatically clears the message in 30 seconds, and then disables the download emulator on the firmware card.</p> <p>Download the correct download emulator version from the Lexmark Web site.</p>
30 Coating roll missing	Install the coating roll, and close the top cover.
30 <color> print unit missing	Install the specified print unit, and close the top cover.
32 Replace unsupported <color> cartridge	Remove the toner cartridge, and install a supported one.

Message	Action
34 Incorrect media	<ul style="list-style-type: none"> • Load the appropriate media in the selected source. • Select Continue to clear the message and print the job using a different paper source.
34 Short Paper	<ul style="list-style-type: none"> • Select Continue to clear the message and continue printing. The printer does not automatically reprint the page that prompted the message. • Check tray length and width guides to ensure paper is properly fitted in the tray. • Make sure the print job is requesting the correct size of paper. • Adjust the Paper Size setting for the size paper you are using. If MP Feeder Size is set to Universal, make sure the paper is large enough for the formatted data. • Cancel the current job.
35 Insufficient memory to support Resource Save feature	<ul style="list-style-type: none"> • Select Continue to disable Resource Save and continue printing. • To enable Resource Save after you get this message: <ul style="list-style-type: none"> – Make sure the link buffers are set to Auto, then exit the menus to activate the link buffer changes. – When Ready is displayed, enable Resource Save. • Install additional memory.
37 Insufficient memory to collate job	<ul style="list-style-type: none"> • Select Continue to print the portion of the job already stored and begin collating the rest of the job. • Cancel the current job.
37 Insufficient memory for Flash Memory Defragment operation	<ul style="list-style-type: none"> • Select Continue to stop the defragment operation and continue printing. • Delete fonts, macros, and other data in printer memory. • Install additional printer memory.
37 Insufficient memory, some held jobs were lost	<p>The printer was unable to restore some or all of the confidential or held jobs on the hard disk.</p> <p>Select Continue to clear the message.</p>
38 Memory Full	<ul style="list-style-type: none"> • Select Continue to clear the message and continue printing. The job may not print correctly. • Cancel the current job. • Install additional printer memory.
39 Page is too complex to print	<ul style="list-style-type: none"> • Select Continue to clear the message and continue printing. The job may not print correctly. • Cancel the current job. • Install additional printer memory.
40 Tray <x> size sense error	<ul style="list-style-type: none"> • Select Continue to clear the message and continue printing. The job may not print correctly. • Cancel the current job. • Turn the printer off, check high capacity feeder connectors, then turn the printer on. If the error recurs, contact a service technician.
41 Open bin 1 exit tray	<ul style="list-style-type: none"> • Open the bin 1 exit tray located on the left side of the printer. • Cancel the current job. • Select Continue to clear the message and print to another output bin.
50 PPDS font error	<ul style="list-style-type: none"> • Select Continue to clear the message and continue printing. The job may not print correctly. • Cancel the current job.
51 Defective flash detected	<p>Select Continue to clear the message and continue printing.</p> <p>You must install different flash memory before you can download any resources to flash.</p>

Message	Action
52 Not enough free space in flash memory for resources	<ul style="list-style-type: none"> • Select Continue to clear the message and continue printing. Downloaded fonts and macros not previously stored in flash memory are deleted. • Delete fonts, macros, and other data stored on the flash memory. • Install a larger capacity flash memory card.
53 Unformatted flash detected	<p>Select Continue to clear the message and continue printing.</p> <p>You must format the flash memory before you can store any resources on it. If the error message remains, the flash memory may be defective and require replacing.</p>
54 Serial option <x> error	<ul style="list-style-type: none"> • Make sure the serial link is set up correctly, and you are using the appropriate cable. • Make sure the serial interface parameters (protocol, baud, parity, and data bits) are set correctly on the printer and host computer. • Select Continue to clear the message and continue printing. The job may not print correctly. • Turn the printer off and then on to reset the printer.
54 Network <x> software error	<ul style="list-style-type: none"> • Select Continue to clear the message and continue printing. The job may not print correctly. • Program new firmware for the network interface. • Reset the printer.
54 Standard network software error	
55 Unsupported option in slot <x>	<ol style="list-style-type: none"> 1 Turn the printer off. 2 Remove the unsupported option. 3 Turn the printer on.
56 Parallel port <x> disabled	<ul style="list-style-type: none"> • Select Continue to clear the message. The printer discards any data received through the parallel port. • Make sure the Parallel Buffer menu item is not set to Disabled.
56 Standard parallel port disabled	
56 Serial port <x> disabled	<ul style="list-style-type: none"> • Select Continue to clear the message. The printer discards any data received through the serial port. • Make sure the Serial Buffer menu item is not set to Disabled.
56 USB port <x> disabled	<ul style="list-style-type: none"> • Select Continue to clear the message. The printer discards any data received through the USB port. • Make sure the USB Buffer menu item is not set to Disabled.
56 Standard USB port disabled	<ul style="list-style-type: none"> • Select Continue to clear the message. The printer discards any data received through the USB port. • Make sure the USB Buffer menu item is not set to Disabled.
58 Input config error	<p>One of the input trays failed, and the large capacity feeder is now configured incorrectly. The large capacity feeder must be installed as Tray 3 or Tray 5.</p> <ol style="list-style-type: none"> 1 Turn off and unplug the printer. 2 Replace or remove the failed input tray. 3 Plug in the printer, and turn it on. <p>If the error recurs, contact a service technician.</p>
58 Too many flash options installed	<ol style="list-style-type: none"> 1 Turn off and unplug the printer. 2 Remove the excess flash memory. 3 Plug in the printer, and turn it on.
58 Too many bins attached	<ol style="list-style-type: none"> 1 Turn off and unplug the printer. 2 Remove the additional bins. 3 Plug in the printer, and turn it on.
61 Remove defective disk	<ul style="list-style-type: none"> • Select Continue to clear the message and continue printing. • Install a different hard disk before you perform any operations that require a hard disk.

Message	Action
62 Disk full	<ul style="list-style-type: none"> • Select Continue to clear the message and continue processing. Any information not previously stored on the hard disk is deleted. • Delete fonts, macros, and other data stored on the hard disk. • Install a larger hard disk.
63 Unformatted disk	<ul style="list-style-type: none"> • Select Continue to clear the message and continue printing. • Format the disk. <p>If the error message remains, the hard disk may be defective and require replacing.</p>
64 Unsupported disk format	<ul style="list-style-type: none"> • Select Continue to clear the message and continue printing. • Format the disk. <p>If the error message remains, the hard disk may be defective and require replacing.</p>
80 Fuser life warning	<ul style="list-style-type: none"> • Select Continue to clear the message and continue printing. • Replace the fuser.
80 Belt life warning	<ul style="list-style-type: none"> • Select Continue to clear the message and continue printing. • Replace the transfer belt.
80 Replace belt	<ul style="list-style-type: none"> • Select Continue to clear the message and continue printing. • Replace the transfer belt.
80 Replace fuser	<ul style="list-style-type: none"> • Select Continue to clear the message and continue printing. • Replace the fuser.
81 Engine code CRC failure	<ul style="list-style-type: none"> • Select Continue to clear the message and discard the code. • Retransmit the microcode data from the host computer.
84 Color photo developer life warning	<ul style="list-style-type: none"> • Select Continue to clear the message and continue printing. • Replace all color photodevelopers.
84 Black photo developer life warning	<ul style="list-style-type: none"> • Select Continue to clear the message and continue printing. • Replace the black photodeveloper.
84 Replace color photo developers	<ul style="list-style-type: none"> • Select Continue to clear the message and continue printing. • Replace all color photodevelopers.
84 Replace black photo developer	<ul style="list-style-type: none"> • Select Continue to clear the message and continue printing. • Replace the black photodeveloper.
84 Replace all photo developers	<ul style="list-style-type: none"> • Select Continue to clear the message and continue printing. • Replace all the photodevelopers.
84 <color> photo developer abnormal	Replace the specified photodeveloper.
85 Replace oil coating roll	<ul style="list-style-type: none"> • Select Continue to clear the message and continue printing. • Replace the oil coating roll.
86 Abnormal coating roll	Replace the coating roll.
88 <color> Toner is low	<ul style="list-style-type: none"> • Replace the specified toner cartridge. • Select Continue to clear the message and continue printing.
88 Replace <color> toner	<ul style="list-style-type: none"> • Replace the specified toner cartridge. • Select Continue to clear the message and continue printing.
200.yy Paper jam	<ol style="list-style-type: none"> 1 Clear the paper path. 2 After clearing the paper path, select Continue to resume printing.
24x.yy Paper jam	<ol style="list-style-type: none"> 1 Clear the paper path. 2 After clearing the paper path, select Continue to resume printing.

Message	Action
249.yy Paper jam	<ol style="list-style-type: none"> 1 Clear the paper path. 2 After clearing the paper path, select Continue to resume printing.
250.yy Paper jam	<ol style="list-style-type: none"> 1 Clear the paper path. 2 After clearing the paper path, select Continue to resume printing.
900-999 Service <message>	<ol style="list-style-type: none"> 1 Turn the printer off, and check all cable connections. 2 Turn the printer back on. <p>If the service message recurs, call for service, and report the message number and description of the problem.</p>

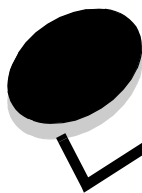

Index

Numerics

1565 Emul Error Load Emul Option 45
200.yy Paper jam 48
249.yy Paper jam 49
24x.yy Paper jam 48
250.yy Paper jam 49
30 <color> print unit missing 45
30 Coating roll missing 45
32 Replace unsupported <color> cartridge 45
34 Incorrect Media 46
34 Short Paper 46
37 Insufficient memory for Flash Memory Defragment operation 46
37 Insufficient memory to collate job 46
37 Insufficient memory, some held jobs were lost 46
38 Memory Full 46
39 Page is too complex to print 46
40 Tray size sense error 46
41 Open bin 1 exit tray 46
51 Defective flash detected 46
52 Not enough free space in flash memory for resources 47
53 Unformatted flash detected 47
54 Network software error 47
54 Serial option error 47
54 Standard network software error 47
55 Unsupported option in slot 47
56 Parallel port disabled 47
56 Serial port disabled 47
56 Standard parallel port disabled 47
56 Standard USB port disabled 47
56 USB port disabled 47
58 Input config error 47
58 Too many bins attached 47
58 Too many flash options installed 47
61 Remove defective disk 47
62 Disk full 48
63 Unformatted disk 48
64 Unsupported disk format 48
80 Belt life warning 48
80 Fuser life warning 48
80 Replace belt 48
80 Replace fuser 48
81 Engine code CRC failure 48
84 <color> photo developer abnormal 48
84 Black photo developer life warning 48
84 Color photo developer life warning 48
84 Replace all photo developers 48

84 Replace black photo developer 48
84 Replace color photo developers 48
85 Replace oil coating roll 48
86 Abnormal coating roll 48
88 <color> Toner is low 48
88 Replace <color> toner 48
900–999 Service 49

A

accounting statistics 25
Activate, AppleTalk 39
Activate, LexLink 39
Activate, network 39
Activating Menu Changes 41
Advanced Status, parallel 36
Alarms 18
All Photo Dev Life Warning 41
allel 43
Annotations 26
AppleTalk 39
Assign Type/Bin 15
Auto Fit 30
automatic size sensing 9

B

Back button 5
Backgrounds, HTML 30
Baud 38
bins
 assigning 15
 configuring 15
 output 14
Black Photo Dev 7
Black Photo Dev Life Warning 41
Black Toner 7
Blank Pages 20
Busy 41
button
 back 5
 menu 5
 stop 5
button, navigation 6

C

Calibrating 41
Cancel not available 41
Cancelling Job 41

Index

Change 41, 41, 41
Check finisher installation 41
Clearing job accounting statistics 41
Close front door 41
Close side door 41
Close tray 41
Collation, enabling 21
Color Balance 23
Color Correction 23
Color Photo Dev 7
Color Quality, help 40
Color Samples 24
Color Saver 23
Configure Bins 15
Configure MP 12
Connection Guide, help 40
Copies 41
Copies, specifying number 20
Coverage Estimator 26
Custom Paper Type 14
custom paper type 14
Cyan Toner 7

D

Data Bits 38
Default Source 9
defaults, factory 20
Defragment Flash 25
Defragmenting Flash 41
Delete 41
Delete all 41
Delete all confidential jobs 42
Deleting 42
Device Statistics 15
diagram, menu 4
directory printing 16
Disabling DLEs 42
Disabling Menus 42
Disk corrupted 42
disk format 25
Disk Recovery x/5 yyy% 42
Display Language 17
display panel 6
Download Target 19
duplex binding 20
duplex enabling 20

E

Empty hole punch box 42
Emulation Settings, PCL 28
ENA Address, USB 35
ENA Gateway, USB 35
ENA Netmask, USB 35
Enabling Menus 42
Encrypting Disk yyy% 42
Engine Warming 42

Enhance Fine Lines 25
Enter PIN 42
Enter PIN to lock 42
Error printing from USB drive 42
Error reading USB drive 42
Ethernet 802.2, netware 39
Ethernet 802.3, netware 39
Ethernet SNAP, netware 39
Ethernet Type II, netware 39

F

Factory Defaults 20, 25
Feed Direction 14
Finishing Menu 20
flash defragmenting 25
flash formatting 25
Flushing buffer 42
Font Name, HTML 30
Font Name, PCL 27
font printing 16
Font Priority 26
Font Size, HTML 30
Font Source, PCL 27
Format Disk 25
Format Flash 25
Formatting Disk 42
Formatting Disk yyy% 42
Formatting Flash 42
Fuser Life Warning 42

H

held jobs, removal 25
help
 Color Quality 40
 Connection Guide 40
 Information Guide 40
 Media Guide 40
 Menu Map 40
 Moving Guide 40
 Print All 40
 Print Quality 40
 Printing Guide 40
 Supplies Guide 40
Help Menu 40
Hex Trace 26
Hole Punch Box 8
hole punch enabling 22
Honor DSR 38
Honor Init, parallel 36
HTML backgrounds 30
HTML font name 30
HTML font size 30
HTML margins 30
HTML Menu 30
HTML orientation 30
HTML scaling 30

Index

I

Image Menu 30
image orientation 31
image scaling 31
Image Smoothing 26
Information Guide, help 40
Insert hole punch box 42
Insert Staple Cartridge 42
Insert Tray <x> 42
Insufficient memory to support Resource Save feature 46
Internal System Error Reload Bookmarks 42
Internal System Error, Reload Security Certificates 42
Invalid Engine Code 43
Invalid Network Code 43
Invalid PIN 43
Invert 30
IPv6 32

J

Job Accounting 19
job accounting 19
job accounting statistics 25
Job Buffering, network 33
Job Buffering, parallel 36
Job Buffering, serial 37
Job Buffering, USB 34
Job Expiration 31

L

language, display 17
language, printer 19
LexLink 39
Load Manual <Custom String> 43
Load Manual <Custom Type> 43
Load Manual <size> 43
Load Manual <size> <type> 43
Load Staples 43
Load, src with, Custom String 43
Load, src with, Custom Type Name 43
Load, src, size 43
Load, src, type, size 43
loading paper 13

M

Mac Binary PS, network 33
Mac Binary PS, parallel 36
Mac Binary PS, USB 35
Magenta Toner 7
Maintenance 43
Manual Color 24
Manual Envelope Size 12
Manual Envelope Type 12
Manual Paper Size 10, 11
Manual Paper Type 12
Margin, HTML 30

Max Invalid PIN 31
Media Guide, help 40
Menu button 5
menu diagram 4
Menu Map, help 40
Menu Settings Page 15
Menus are Disabled 43
Moving Guide, help 40
MP Feeder Size 10, 11
MP Feeder Type 10, 11
Multipage Border 22
Multipage Order 22
Multipage Print 21
Multipage View 22

N

Navigation buttons 6
Netware Menu 38
Netware Setup Page 16
Network <x> 43
Network Buffer 33
Network interface 43
network option 33
Network Ports 32
Network Setup Page 16
No DRAM installed 43
No held jobs 43
No jobs found 43
No jobs to cancel 43
No recognized file types 43
NPA Mode, network 33
NPA Mode, parallel 35
NPA Mode, serial 37
NPA Mode, USB 34
NSQ/GSQ mode, netware 39
numeric pad 6
numpad 6

O

Offset Pages 22
Oil Coating Roll 8
operator panel 5
Orientation, HTML 30
Orientation, Image Menu 31
Output Bin 14

P

Packet Burst, netware 39
pad, numeric 6
panel, display 6
panel, operator 5
Paper Loading 13
paper menu 9
Paper Size 9
Paper Type 9

Index

- paper type, custom 14
- Paper Weight 13
- Parallel Buffer 36
- Parallel interface 43
- Parallel Menu 35
- Parallel Mode 2 36
- parallel option 35
- Parity 38
- PCL emulation settings 28
- PCL font name 27
- PCL font source 27
- PCL Menu 27
- PCL SmartSwitch, network 33
- PCL SmartSwitch, parallel 35
- PCL SmartSwitch, serial 37
- PCL SmartSwitch, USB 34
- PCL symbol set 27
- PCL tray renumber 29
- PDF Menu 26
- Port disabled Remove USB drive 43
- Portrait Height 14
- Portrait Width 14
- PostScript Menu 26
- Power Saver 17, 43
- Print All, help 40
- Print Directory 16
- Print Fonts 16
- Print Mode 23
- Print PS Error 26
- Print Quality help 40
- Print Recovery 19
- Print Resolution 23
- Printer busy 44
- Printer Language 19
- Printer locked, enter PIN to unlock 44
- Printing 44
- printing annotations 26
- Printing from USB drive 44
- Printing Guide, help 40
- Profiles List 16
- Programming Disk 44
- Programming Flash 44
- Programming System Code 44
- Protocol, parallel 36
- PS SmartSwitch, network 33
- PS SmartSwitch, parallel 35
- PS SmartSwitch, serial 37
- PS SmartSwitch, USB 34

Q

- Quality Menu 23
- Quick Start 20

R

- Reading USB drive 44
- Ready 44

- Remote Management Active 44
- Remove all color supplies 44
- Remove Held Jobs 25
- Remove paper from all bins 44
- Remove paper from bin 44
- Remove paper from standard output bin 44
- Replace oil coating roll 44
- Reports 15
- Resetting Active Bin 44
- Resetting Fuser Count 44
- Resetting the Printer 44
- Resource Save 20
- Restore Held Jobs 44
- restoring defaults 20
- Restoring Factory Defaults 45
- Restoring Held Job xxx/yyy 45
- RGB Brightness 23
- RGB Contrast 23
- RGB Saturation 23
- Robust XON 38

S

- samples, color 24
- saving power 17
- Scale to Fit 26
- Scale, HTML 30
- Scaling, Image Menu 31
- Security 31
- Separator Sheets 21
- Separator Source 21
- Serial <x> 45
- Serial and Serial Option Ports 37
- Serial Buffer 37
- Serial Menu 37
- Serial Protocol 37
- Set Zone, AppleTalk 39
- settings 17
- Setup Menu 17
- setup network 16
- Some held jobs were lost 45
- Standard Bin Full 45
- standard network 33
- Staple Job 22
- Staples 8
- Staples Empty 45
- Staples Low 45
- statistics 19
- statistics, job accounting 25
- Stop button 5
- Submitting selection 45
- Substitute Size 12
- Supplies Guide, help 40
- Supplies Menu 7
- Symbol Set, PCL 27

T

TCP/IP 32
Timeouts 18
Toner Darkness 23
top cover 41
Transfer Belt 8
Transfer Belt Life Warning 45
Tray Size 9
Tray Type 9
Tray <x> Empty 45
Tray <x> Low 45
Tray <x> Missing 45
Tray Renumber, PCL 29
twork 43

U

Units of Measure 14
Universal Paper Size 14
USB 45
USB <x> 45
USB Buffer 34
USB Direct interface 35
USB drive removed 45
Utilities Menu 25

V

View Address, AppleTalk 39
View Login Name, netware 38
View Name, AppleTalk 39
View Network Number, netware 38
View Nickname, LexLink 39
View Print Mode, netware 38
View supplies 45

W

Waiting 45

Y

Yellow Toner 7