

Printing

Paper handling

Maintenance

Troubleshooting

Administration


Index

If necessary, refer to the *Setup Guide* for instructions on accessing the printer system board.

- 1 Locate the memory option you want to remove.

Warning: Electronic components are easily damaged by static electricity. Touch something metal on the printer before you touch the memory option.

- 2 Push out on the latches at each end of the connector.

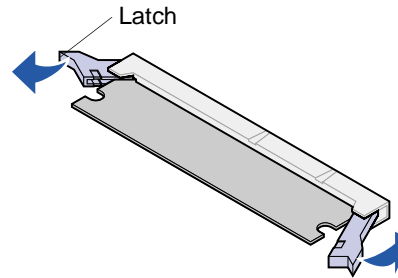

Printing

Paper handling


Maintenance

Troubleshooting

Administration

Index

- 3 Pull the memory option out of the connector.

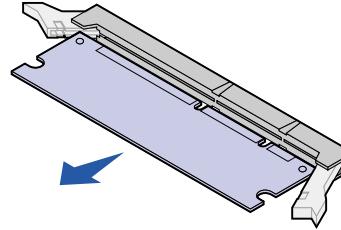

- 4 Place the memory option in its original packaging. If you did not save the packaging, wrap it in paper and store it in a box.
- 5 If you need to install a replacement memory option or other option on the system board, refer to the *Setup Guide*.
- 6 Refer to the *Setup Guide* for instructions on closing the printer system board cover. ▲

