

Printing

Paper handling

Maintenance

Troubleshooting

Administration

Index

Order a new fuser assembly when toner fog or background shading appears on printed pages. See **Ordering supplies** for information on ordering a fuser assembly.

Complete the following steps to replace the fuser assembly. Refer to the documentation that comes with the fuser assembly for detailed installation information.

**CAUTION!** The fuser assembly is hot! Turn the printer off and wait twenty minutes before changing the fuser assembly.

- 1 Turn the printer off, unplug the printer power cord, and wait twenty minutes.
- 2 Remove the top cover and all installed output options. If a duplex unit is installed, remove it.
- 3 Remove the fuser cover.
- 4 Lift up and remove the fuser cleaner.
- 5 Open the rear access door and remove the redrive.
- 6 Remove the old fuser assembly.

**Note:** For best results, use Lexmark supplies with the printer. If you are in the U.S. or Canada, call 1-800-438-2468 for information about Lexmark Authorized Supplies Dealers in your area. In other countries, contact the place where you bought your printer.



Printing

Paper handling

Maintenance

Troubleshooting

Administration

Index

- 7 Install the new fuser assembly and replace the redrive.
- 8 Close the rear access door and replace the fuser cover.
- 9 If you have a duplex unit, reinstall it. Reinstall all output options and the printer top cover.
- 10 Plug the printer power cord into a properly grounded electrical outlet.
- 11 **Reset the maintenance counter.** ▲

