

Printing

Paper handling

Maintenance


Troubleshooting

Administration

Index

The **Staples Low** message appears when the stapler is low on staples. Once the message appears, the stapler can only staple 40 more times. Then, you need to replace the staple cartridge.

- 1 Open the finisher door (Door K).

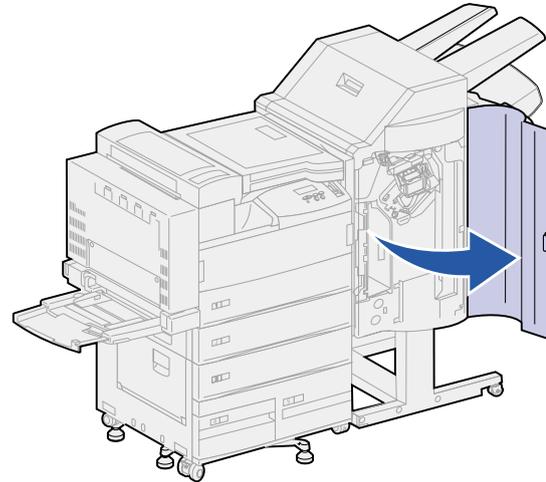

Printing

Paper handling


Maintenance

Troubleshooting

Administration

Index

2 Push down the lever on the stapler.

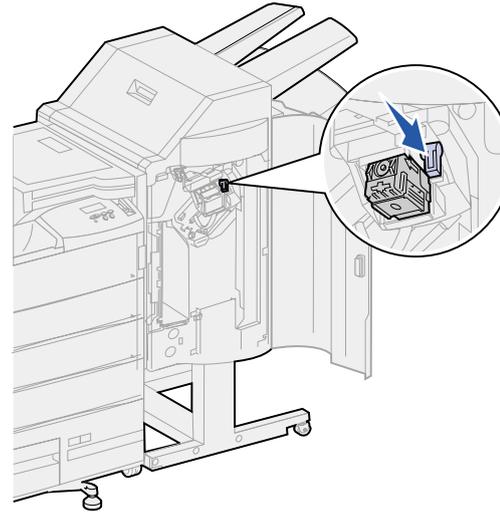

The staple cartridge holder is released.



Printing

Paper handling


Maintenance

Troubleshooting

Administration

Index

3 Pull the staple cartridge holder up slightly, and then straight out.

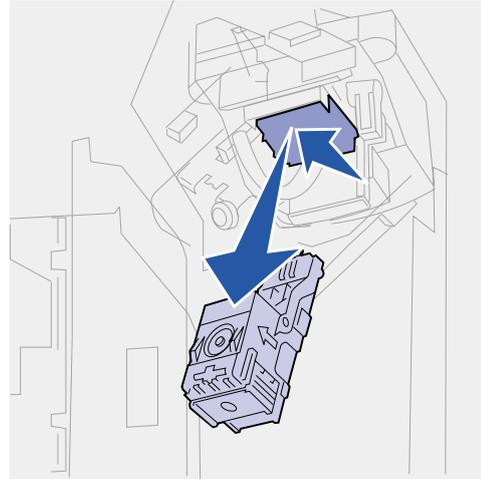

Printing

Paper handling


Maintenance

Troubleshooting


Administration

Index

4 Remove and discard the empty staple cartridge.

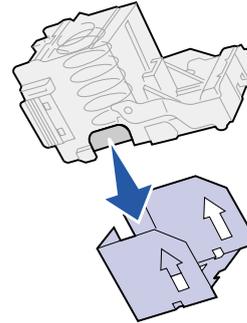

5 Insert the new staple cartridge into the staple cartridge holder.

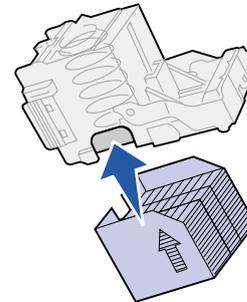

Printing

Paper handling


Maintenance

Troubleshooting

Administration

Index

6 Peel the protective tape from the staple cartridge. Discard the tape.

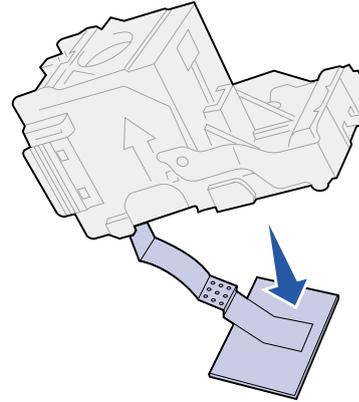

Printing

Paper handling


Maintenance

Troubleshooting

Administration

Index

- 7 Lift the staple cartridge holder up slightly to clear the edge of the cartridge housing and slide the staple cartridge holder into its housing until it *snaps* into place.

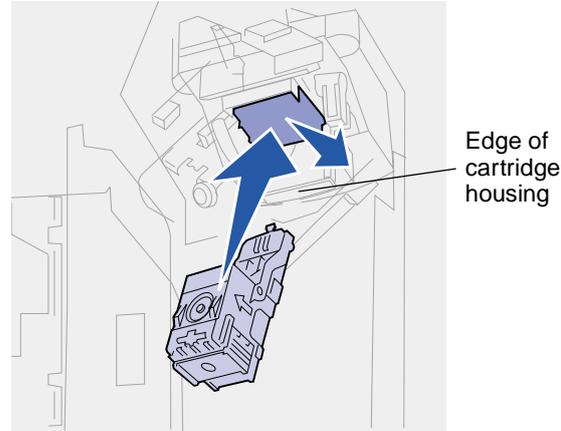

Note: When the staple cartridge holder is correctly placed, the lever on the stapler moves to its original position.

- 8 Close the finisher door (Door K). ▲

