1 Remove envelopes from the envelope feeder.
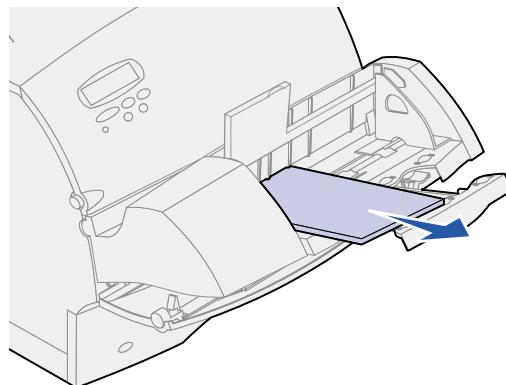
2 Push the envelope support to the closed position.
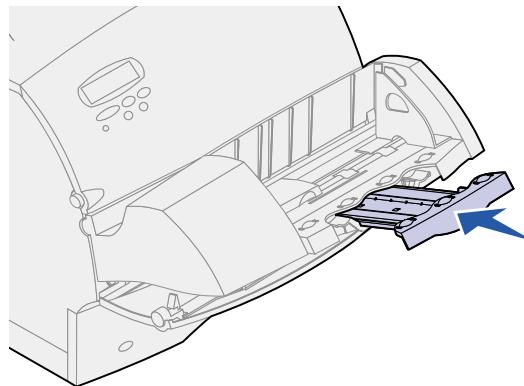
3 Open the printer upper front door.

4 Pull the envelope feeder up slightly and straight out of the printer. Set it aside.
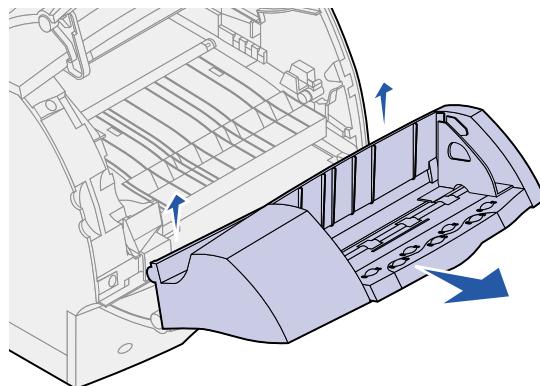
5 Close both front doors.

6 Refer to the *Setup Guide* when you are ready to reattach options. ▲